

 



Ax2 	Bx4 	Cx1 	Dx3 
Ex4 	Fx12  6x16x1.5mm	Gx4  8x50mm	Hx4 
Ix4  8x16mm	Jx1 	Kx12  6x25mm	Lx8  8x18x1.5mm
SPARE(Ersatzteile)			
Ex1 	Fx1  6x16x1.5mm	Gx1  8x50mm	Hx1 
Ix1  8x16mm	Kx1  6x25mm	Lx1  8x18x1.5mm	


1

Note: Please use screw K (M6*25MM)

Hinweis: Bitte verwenden Sie Schraube K(M6*25MM)

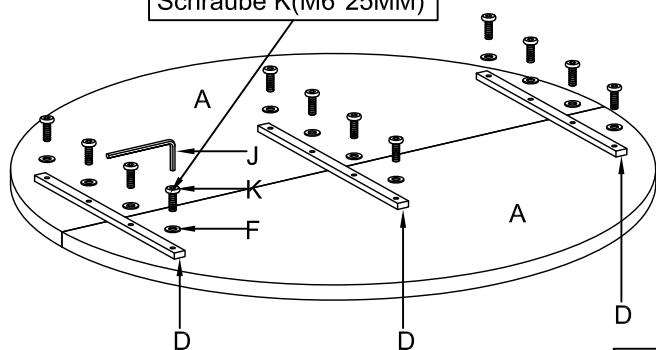

2

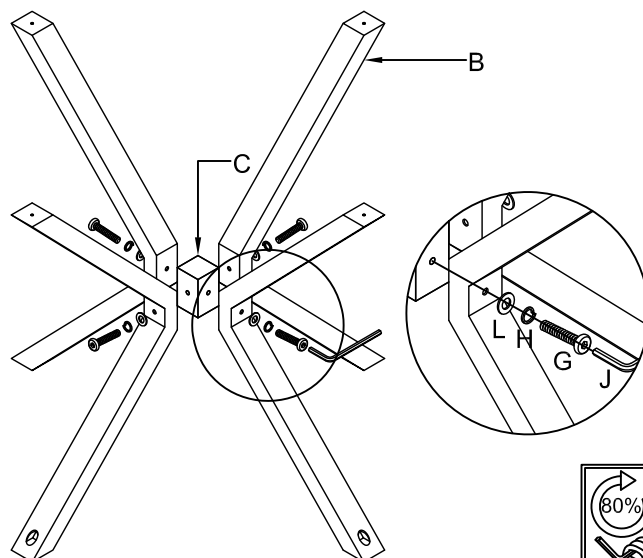

3

Note: Please use screw I (M8*16MM)

Hinweis: Bitte verwenden Sie Schraube I(M8*16MM)

