




ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

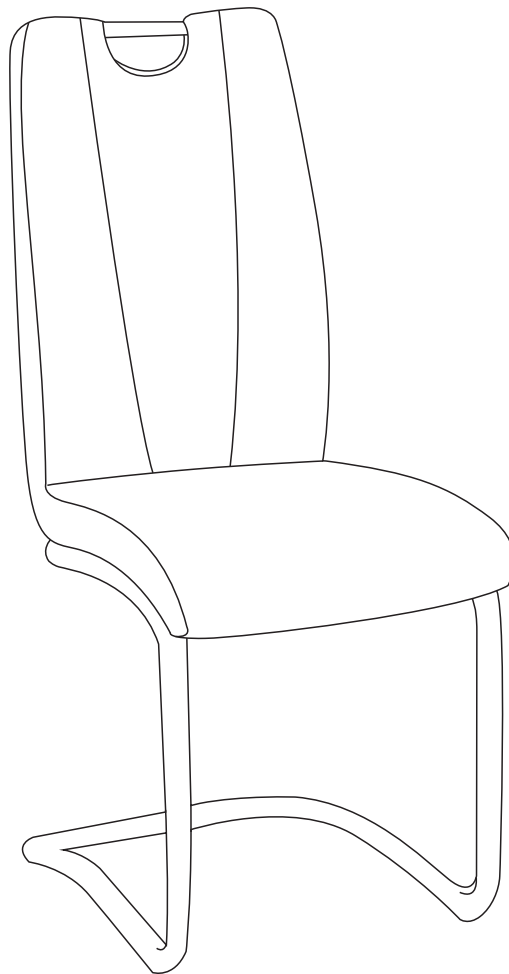

193812
DINING CHAIR

ITEM:193812



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

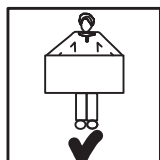

ASSEMBLY TIME 3 MINUTES

PARTS IDENTIFICATION

Z	PART NAME	FIGURE	QTY
A	SEAT AND BACK		1PC
B	BASE		1PC

HARDWARE IDENTIFICATION

	HARDWARE NAME	FIGURE	QTY
1	BOLT 6*18mm		4PCS
2	ALLEN WRENCH ϕ 18mm		4PCS
3	WASHER 5mm		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:193812



ASSEMBLY INSTRUCTIONS



STEP 1

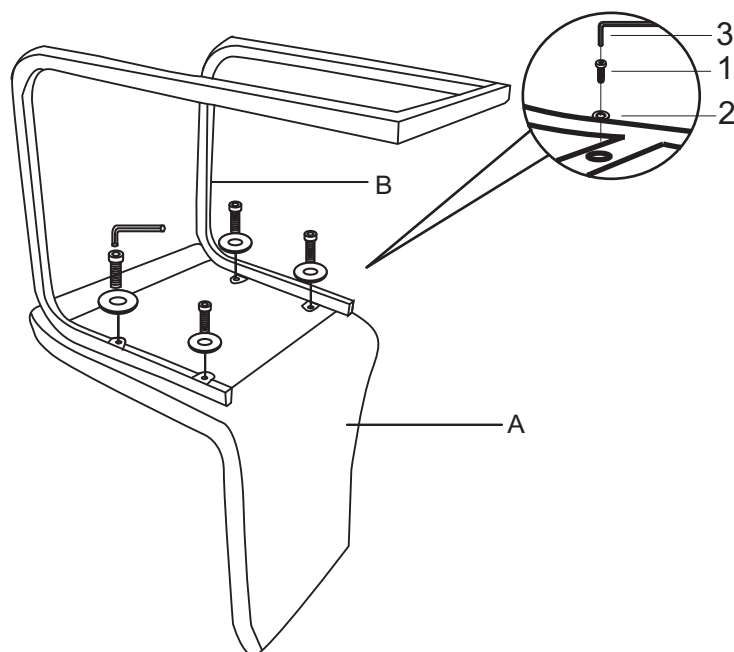

STEP 2

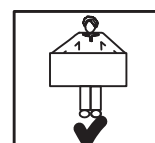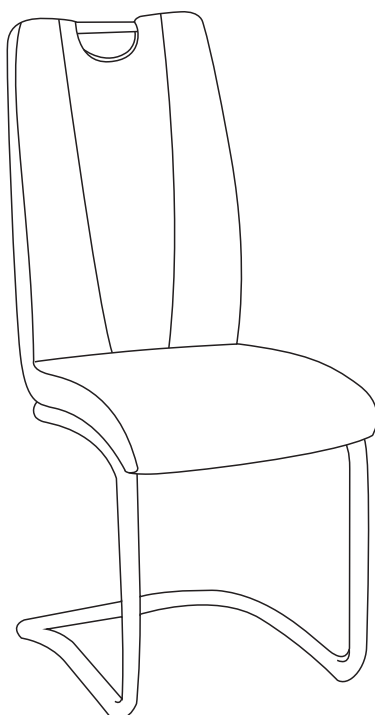

COASTERFURNITURE.COM

ITEM: 193812

ASSEMBLY INSTRUCTIONS



ness of the metal ex:1.2mm)

