 
 


 


 



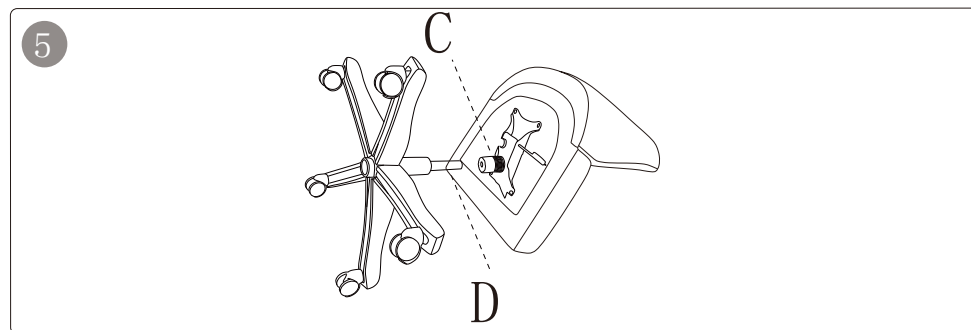
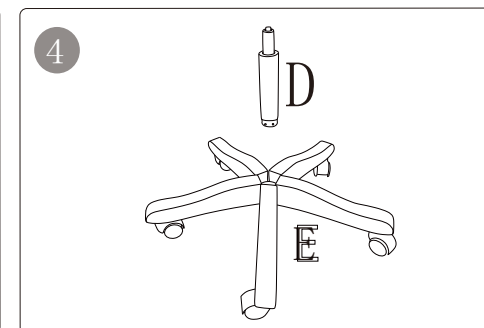
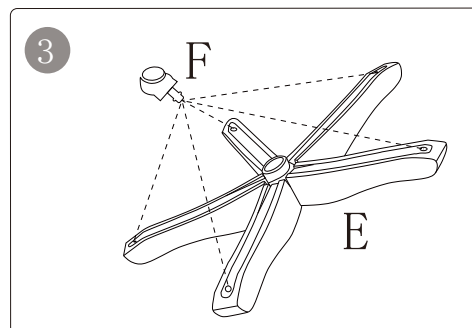
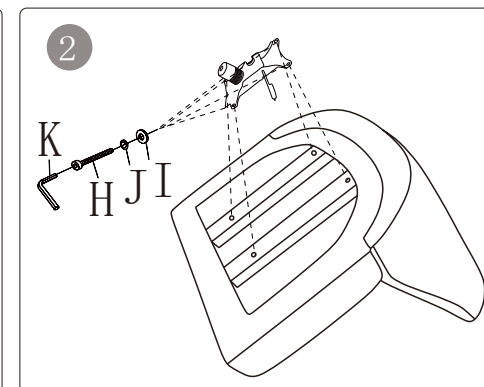
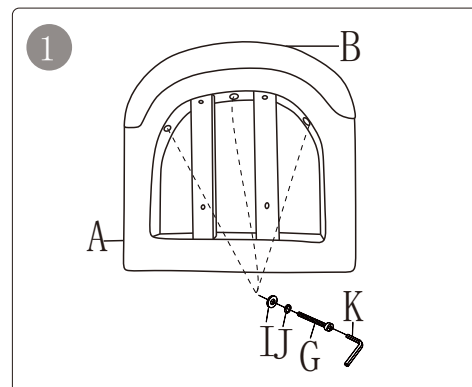


Instruction

NO	DESCRIPTION		QTY
A	Chair Seat		1
B	Chair Back		1
C	Plate		1
D	Gas spring/lift		1
E	Castor		1
F	Wheel		5
G	Screw1	$\Phi 5/16" * 3-1/8" L$ 	3
H	Screw2	$\Phi 5/16" * 1-9/16" L$ 	4
I	Flat Washer	$\Phi 5/16" * 22mm$ 	7
J	Lock Washer	$\Phi 5/16"$ 	7
K	Allen Wrench	$\Phi 5mm$ 	1

Installation




- 1 Assemble the backrest (B) and cushion (A) with the screws (G) and washers (I and J) as shown.
- 2 Use screws (H) and washers (I and J) to assemble the seat cushion and plate as shown
- 3 Snap the wheels (F) into each groove of the castor (E)
- 4 D and E can be inserted in line with the holes.
- 5 As shown, turn the chair upside down, align the holes, and assemble the gas spring/lift with the plate

Instruction Manual

User Guide

Make life better

Warm tips: We are proud of high-quality products and satisfactory service, but the goods may encounter special circumstances during transportation, if you receive the goods with missing or damaged parts, please take photos and contact our customer service before returning the goods , we will customize a solution that satisfies you, thank you.

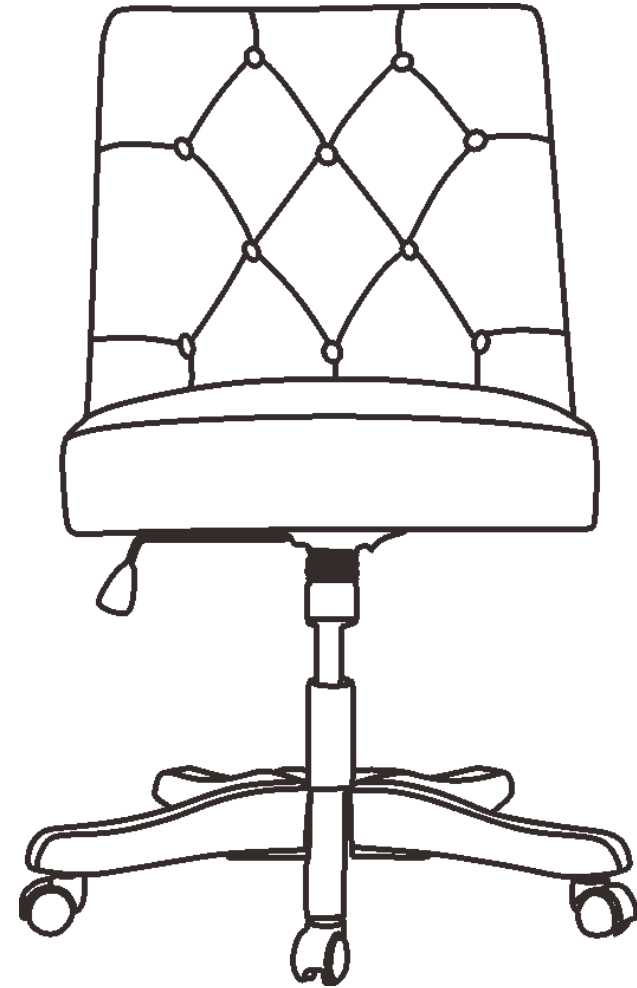

OFFICECHAIR