 


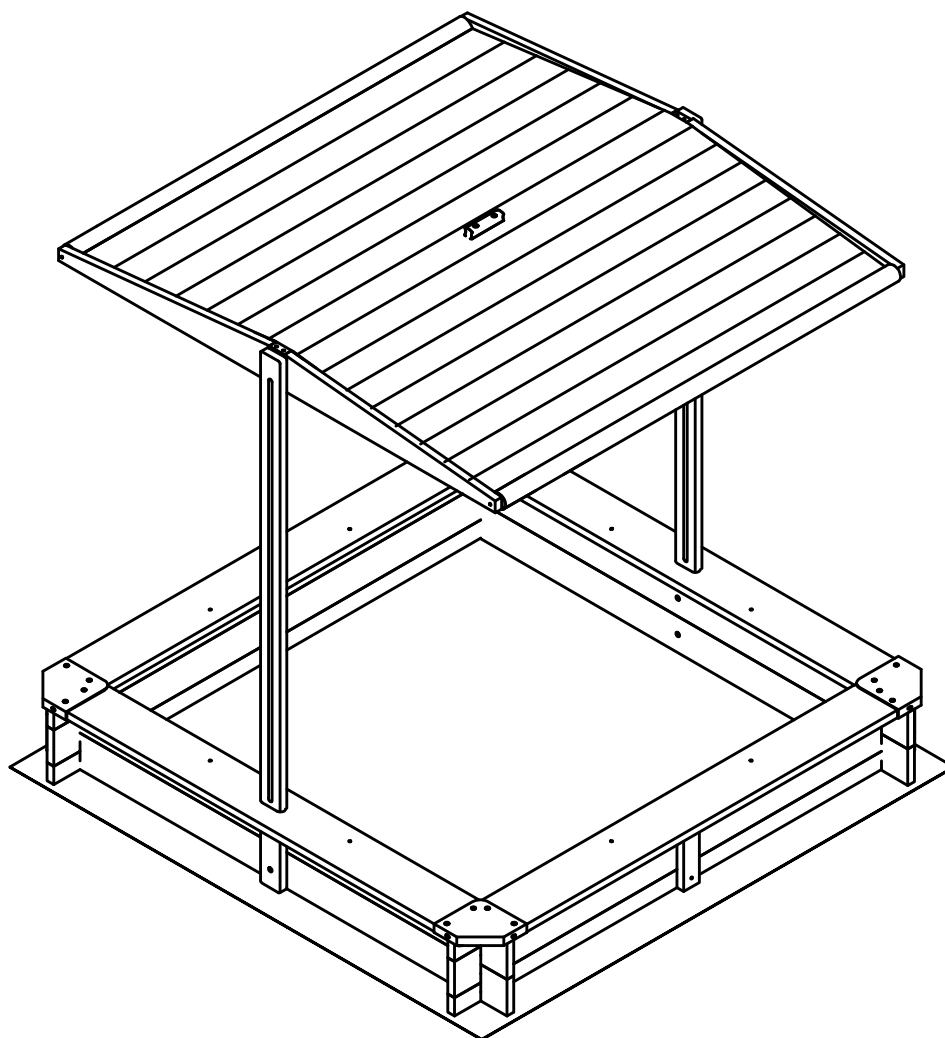

WARNING:

CHOKING HAZARD-Small parts
Not for children under 3 yrs



WARNING:

Adult assembly required, Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state. Keep unassembled parts away from children.

INSTRUCTION MANUAL

 
Kids Sandbox

1. Toy must be assembled by an adult before use exactly in accordance with the instructions.
2. Children must not use this product until properly installed.
3. Check all parts are present before you start to assemble the product. Place small parts on a tray or similar to ensure they are not lost. The manufacturing process can very occasionally result in sharp edges/waste material so please take care when assembling this product.
4. If any parts are missing do not use the product until the replacement parts are fitted.
5. Ensure your product is sited on level ground. Failure to do this may put additional stress on connections and joints and in time could cause them to fail.
6. Avoid locating this product in full sun.
7. Remove all packaging before giving to your children.
8. Equipment should be checked by an adult at the beginning of each season and at regular intervals during the usage season to ensure it is safe. Pay special attention to all connections and fastenings.
9. Parts may need to be replaced if they show signs of wear and tear. Replace any defective parts in accordance with these instructions.
10. Due to the natural characteristics of timber, it is vital to check your playframe regularly for splintering, lifting of surface layers of wood or exposure of rough wood. Affected areas must be rubbed down using coarse sandpaper to restore a smooth, safe surface.
11. Any changes to this toy eg changing or adding an accessory, must be done in accordance with our instructions. Failure to do this will render your guarantee null and void and may make your product unsafe.
12. Ensure children's clothing is appropriate for the play activity.
13. Never place toys near a fire.
14. In high winds, ensure outdoor toys are moved to a sheltered position and/or securely staked down.
15. The age recommendation for this product is clearly stated on the packaging and in these instructions. Please adhere to it at all times. Adult supervision is required at all times to ensure children play safely.
16. When you dispose of this equipment please do so responsibly.

① 1170MM X4



② 1170MM X4




One Hole in the
middle

③ 1170MM X2



 ④ 1115MM X2



⑤ 1115MM X2



⑥ 160MM X2



 
⑦ 1170MM X2



⑧ 1110MM X2



⑨ 1035MM X1













⑩ 1005MM X2





⑪ 80MM X1



          Hardware

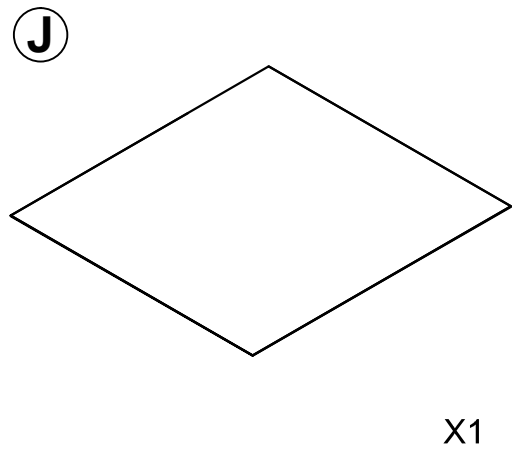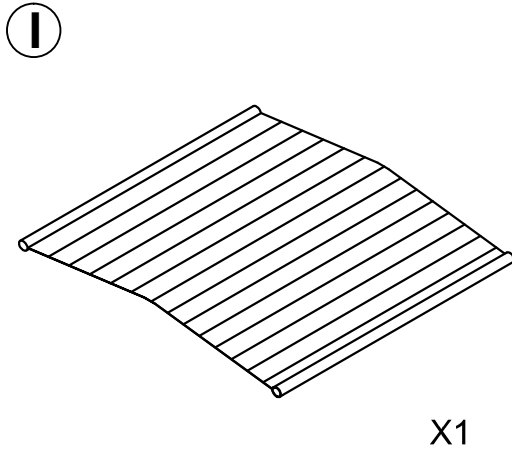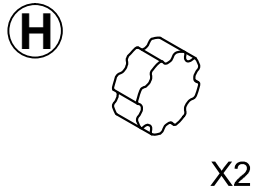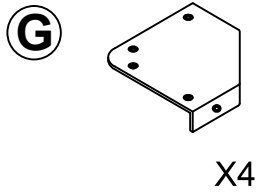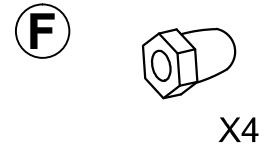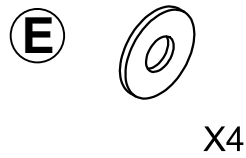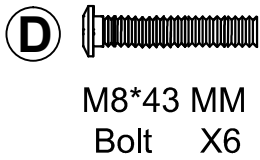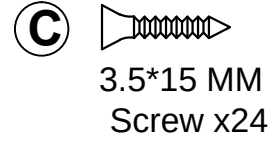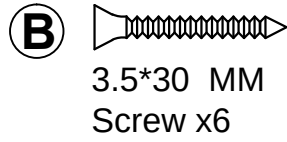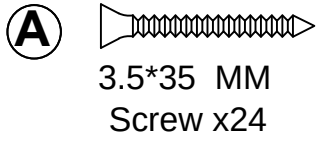

TOOLS REQUIRED


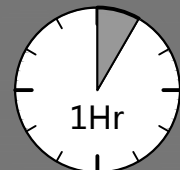 
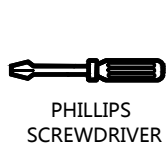 


1

① 1170MM X2

② 1170MM X2

 
 
 
③ 1170MM X2

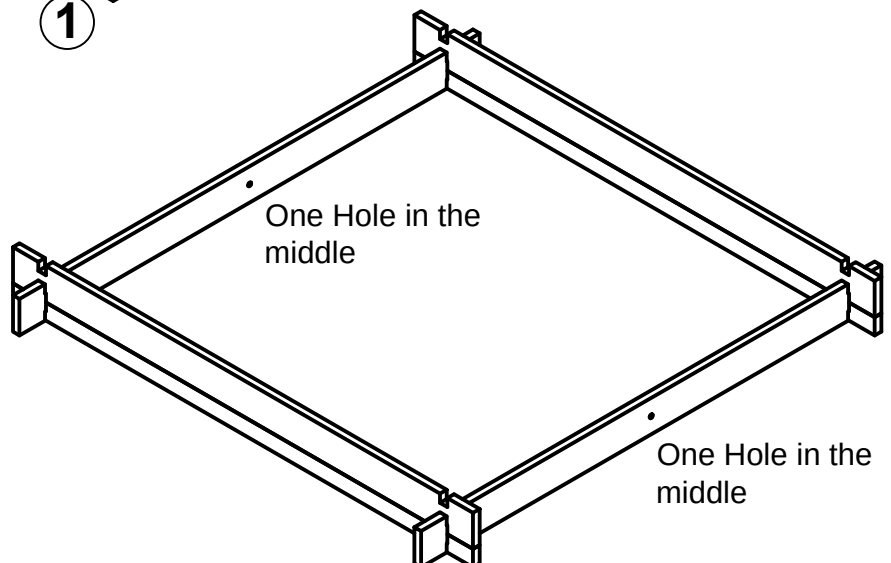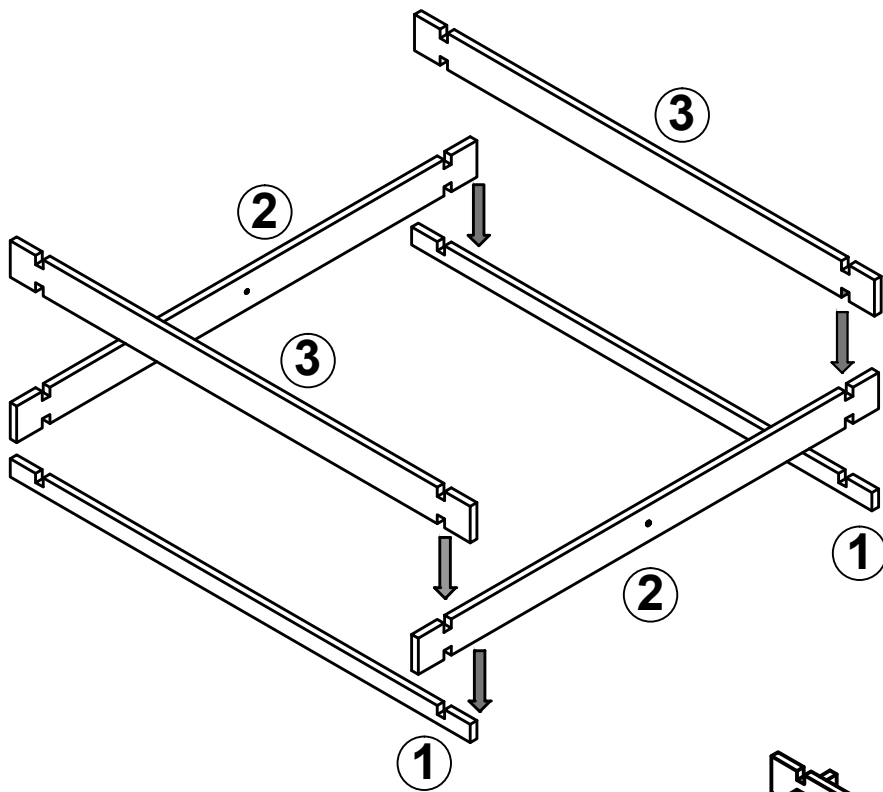

2

① 1170MM X2

   ② 1170MM X2

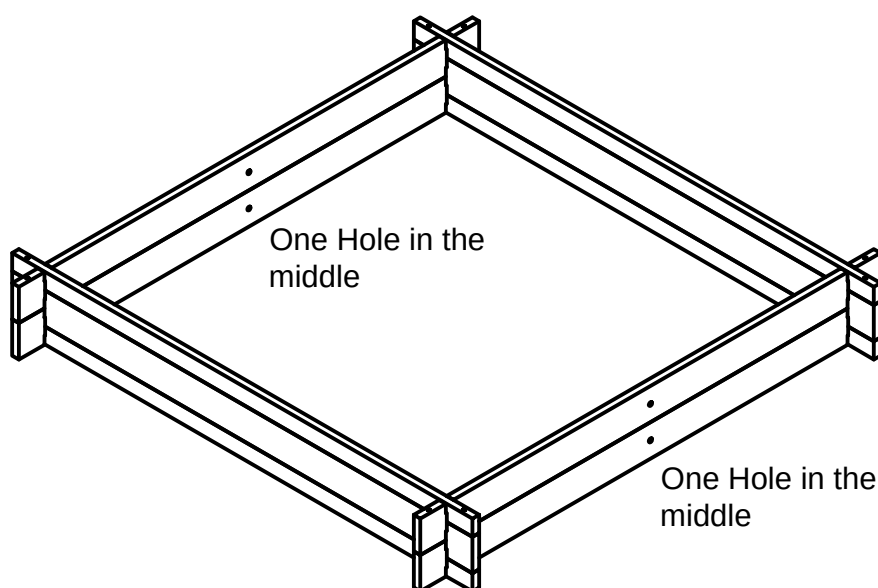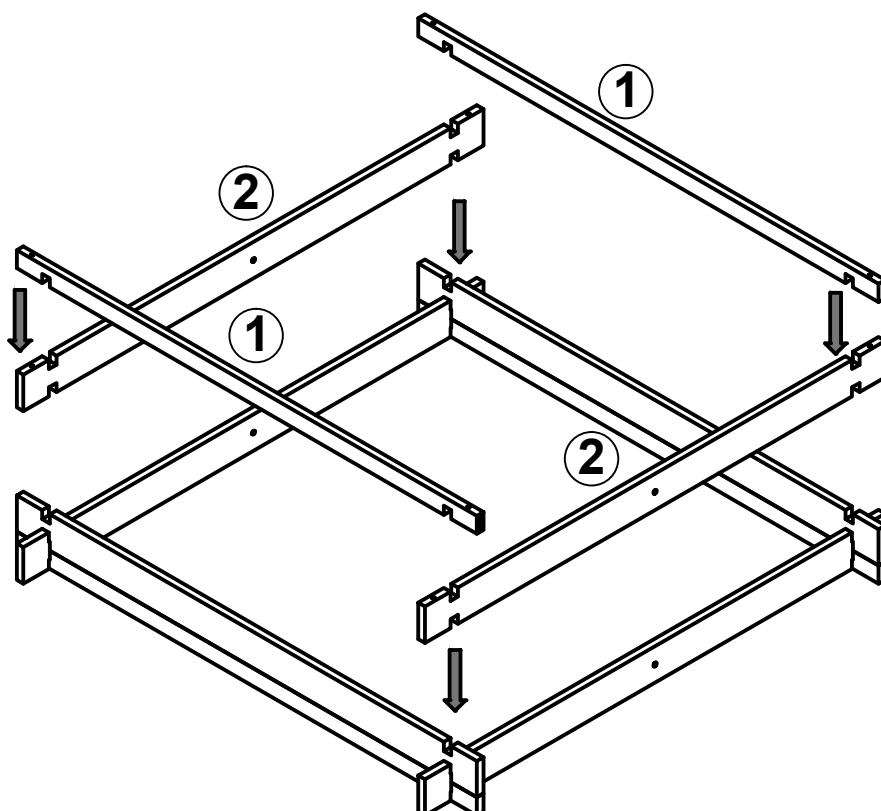



6

3

⑥ 160MM X2



  Ⓑ 
3.5*30 MM
Screw x4

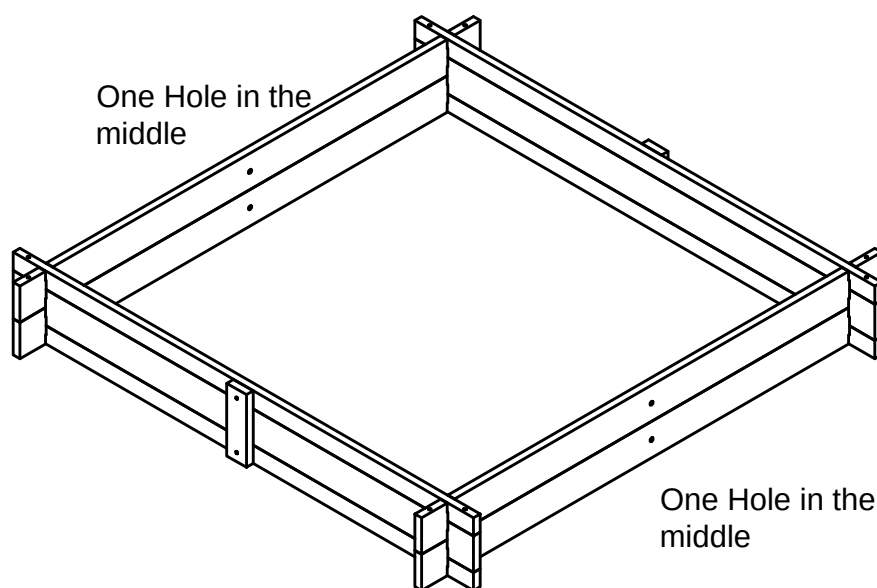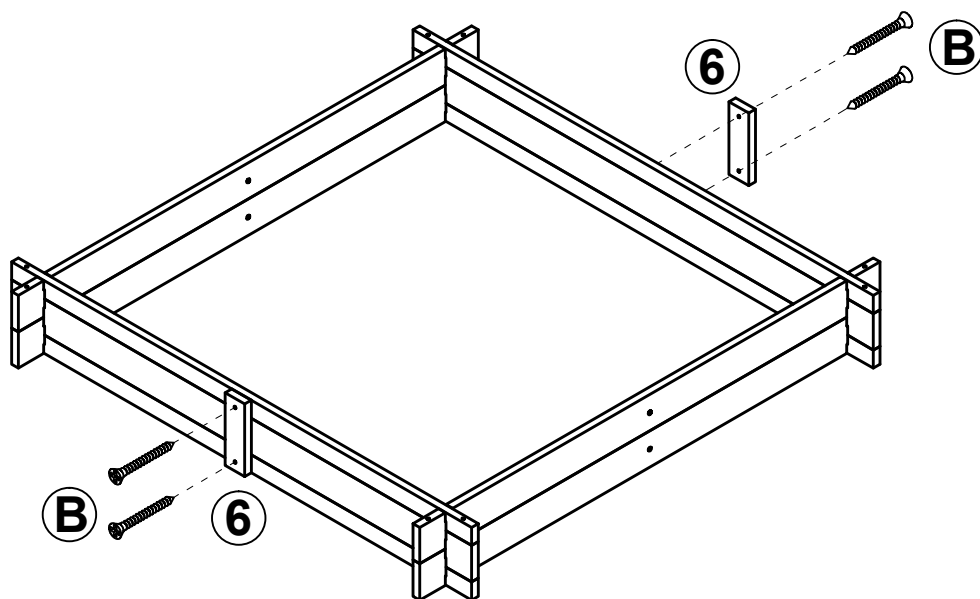

7

4

④ 1115MM X2

⑤ 1115MM X2

 
 


A



3.5*35 MM


Screw x16

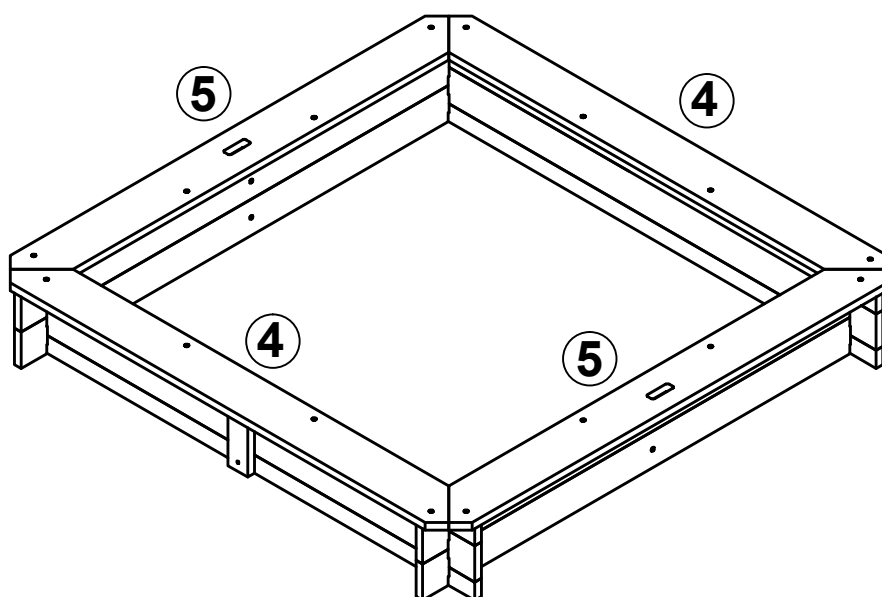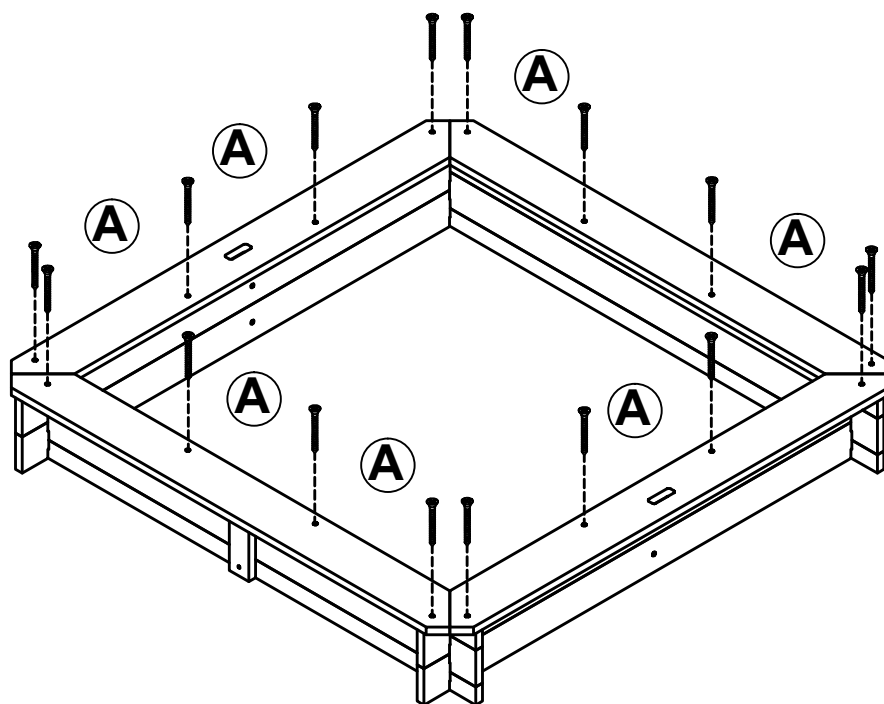

⑧

5

 Ⓒ


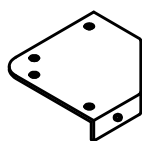


X4

Ⓒ



  3.5*15 MM
Screw x24

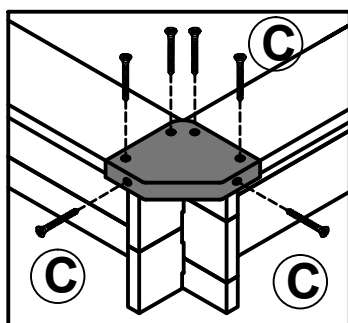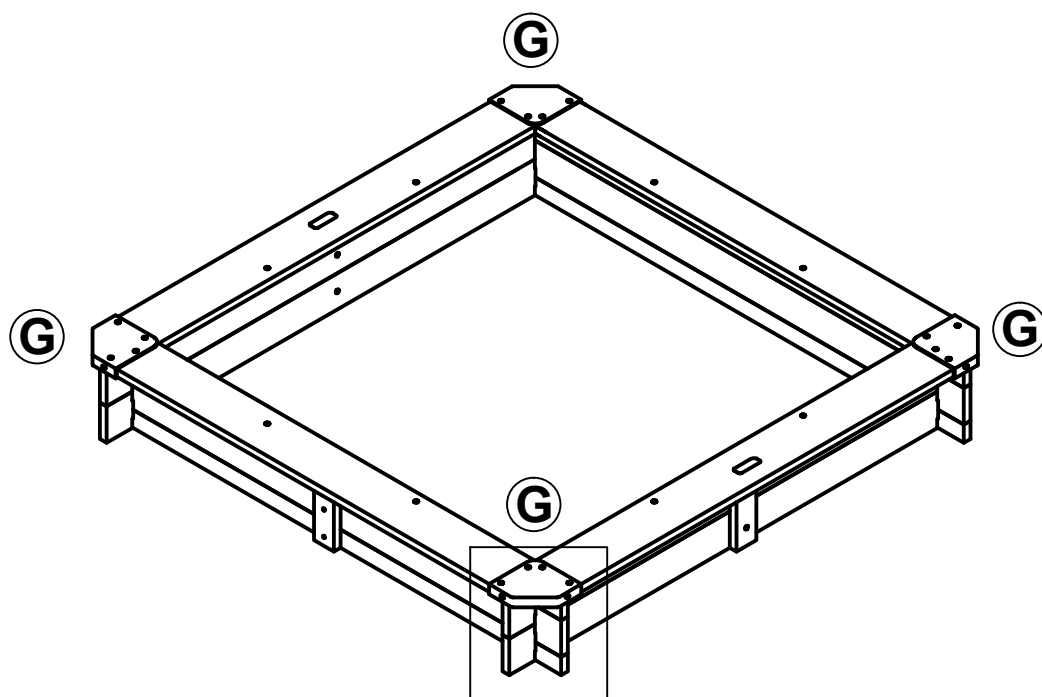

6

⑦ 1170MM X2



 
M8*43 MM
Bolt X4



X4



X4

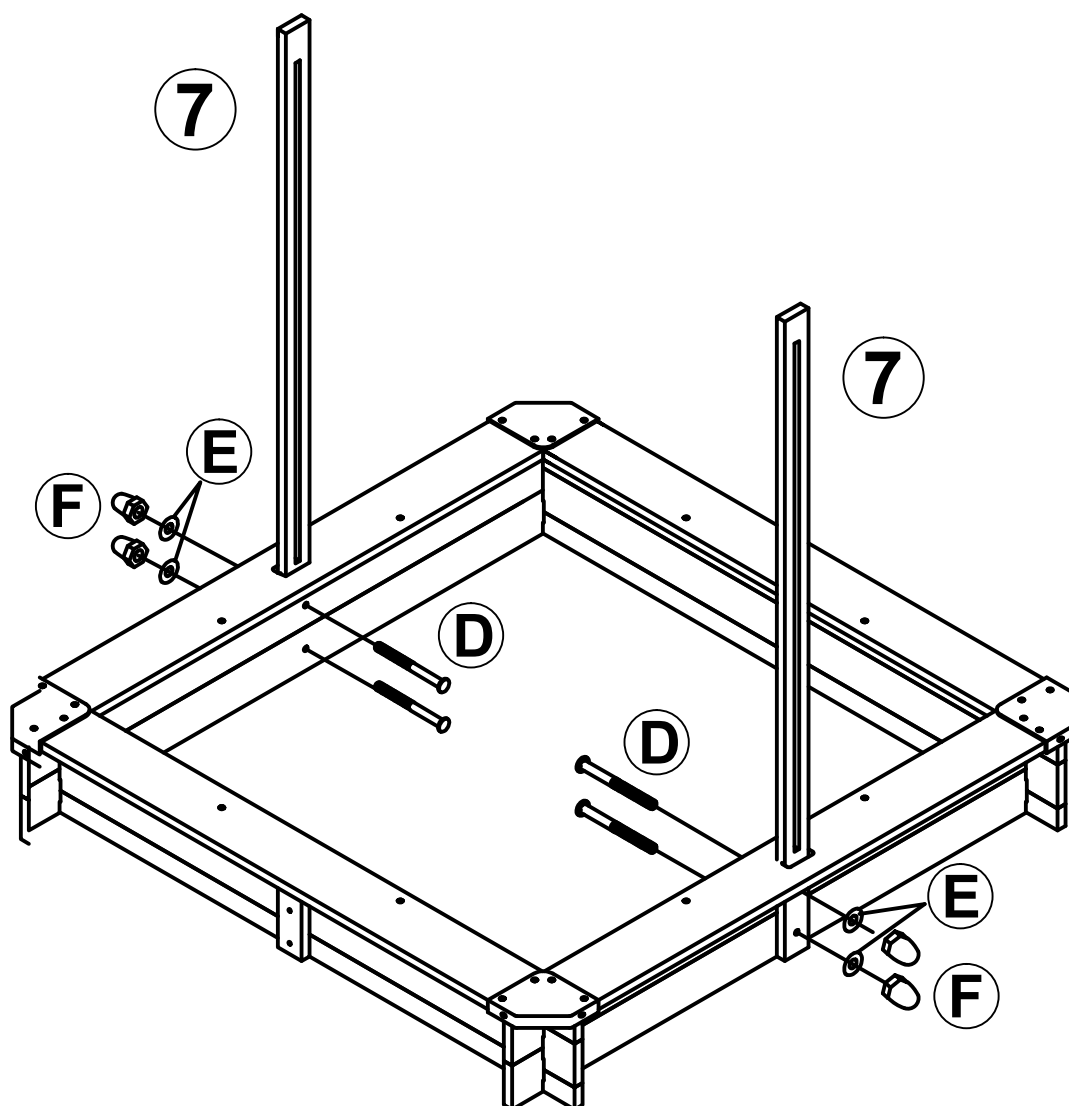


7

⑧ 1110MM X1



 ⑨ 1035MM X1




⑩ 1005MM X2



Ⓐ



 3.5*35 MM
Screw x4

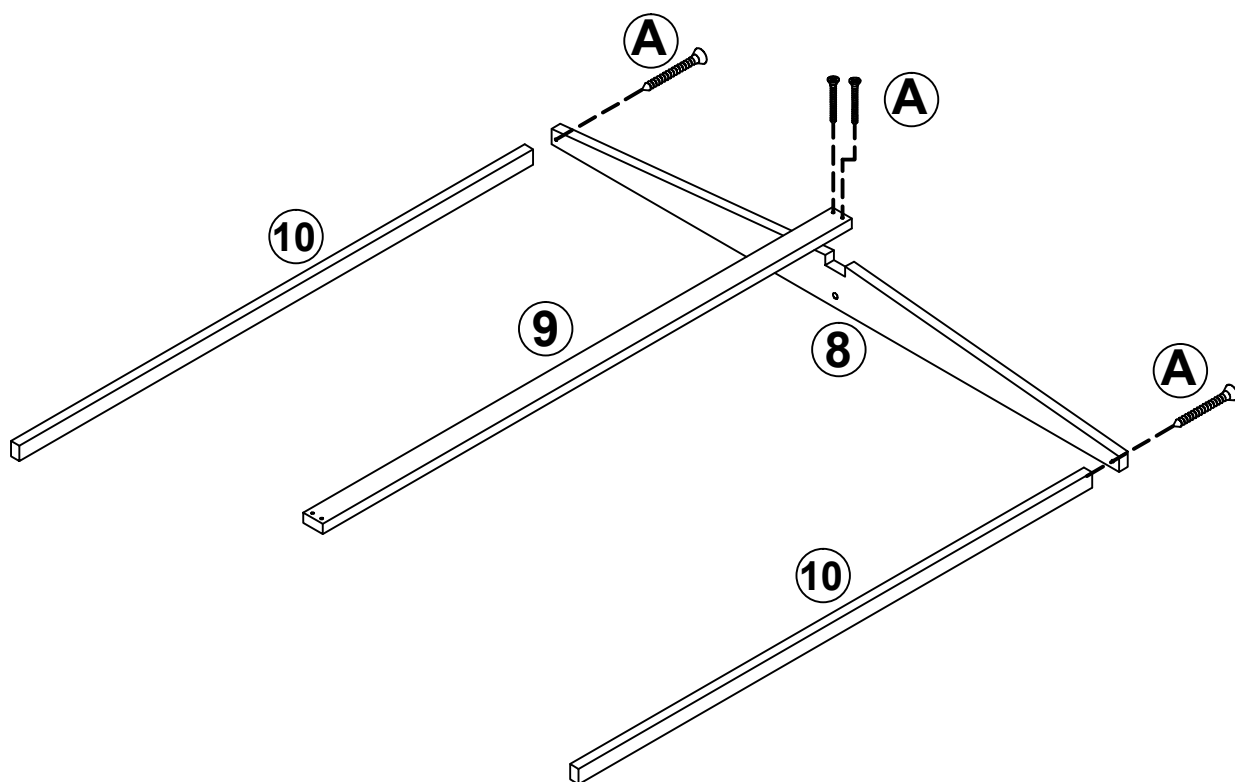


8

⑧ 1110MM X1



 ①


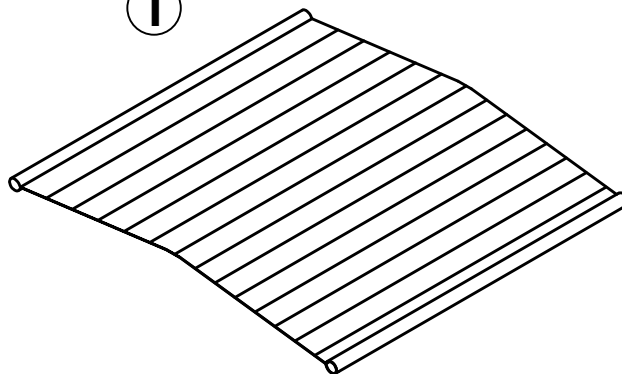


X1

Ⓐ



  3.5*35 MM
Screw x4

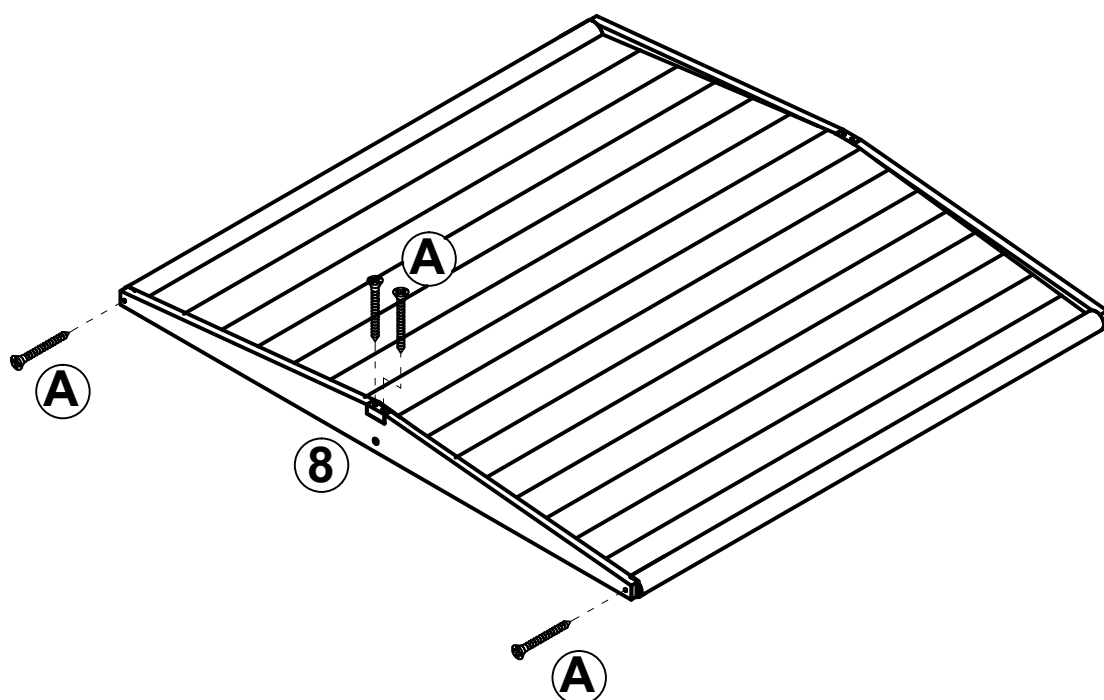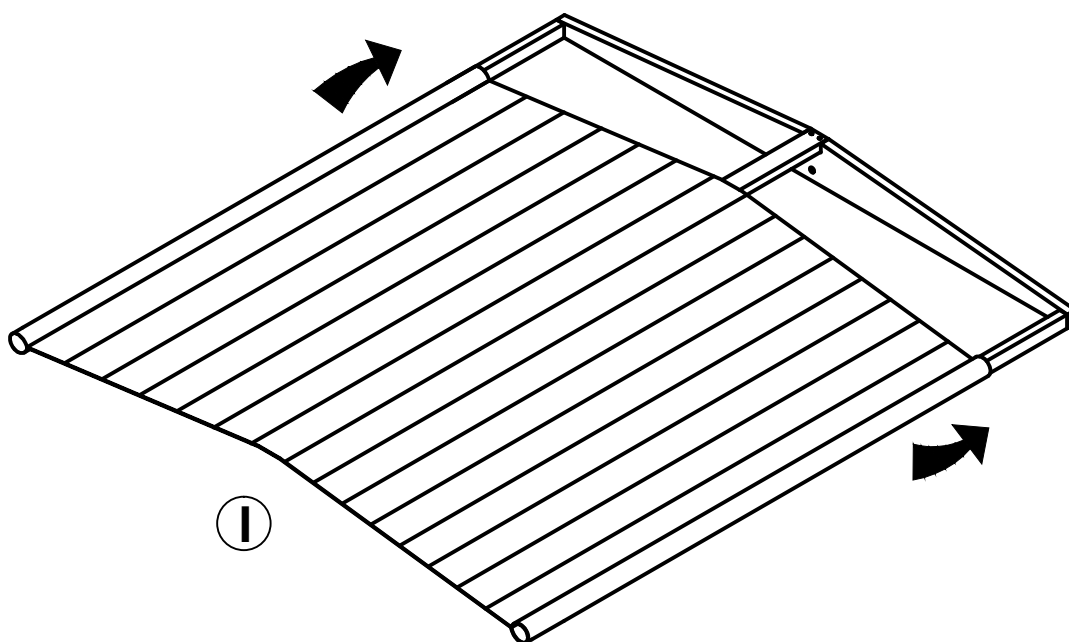

9

D

 


M8*43 MM
Bolt X2

H




X2

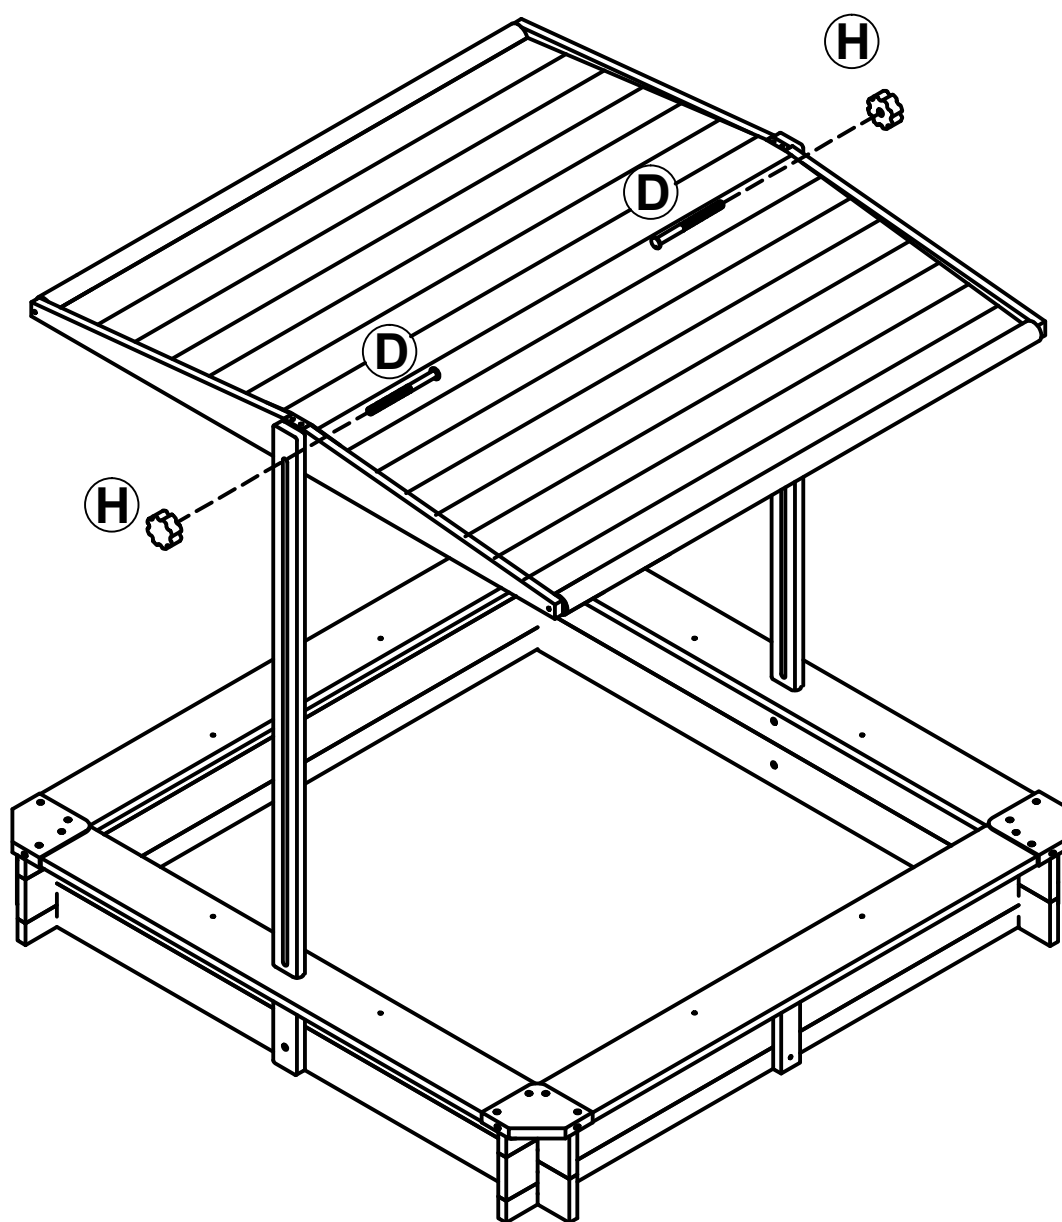

10

 ⓐ

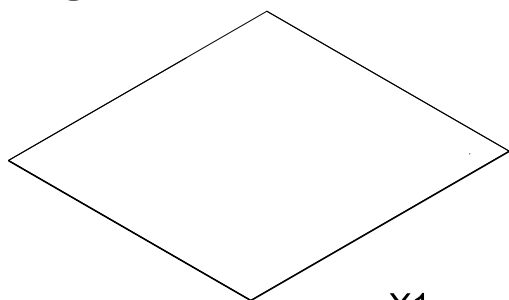

X1

 
ⓑ 80MM X1

 


Ⓒ



3.5*30 MM
Screw x2

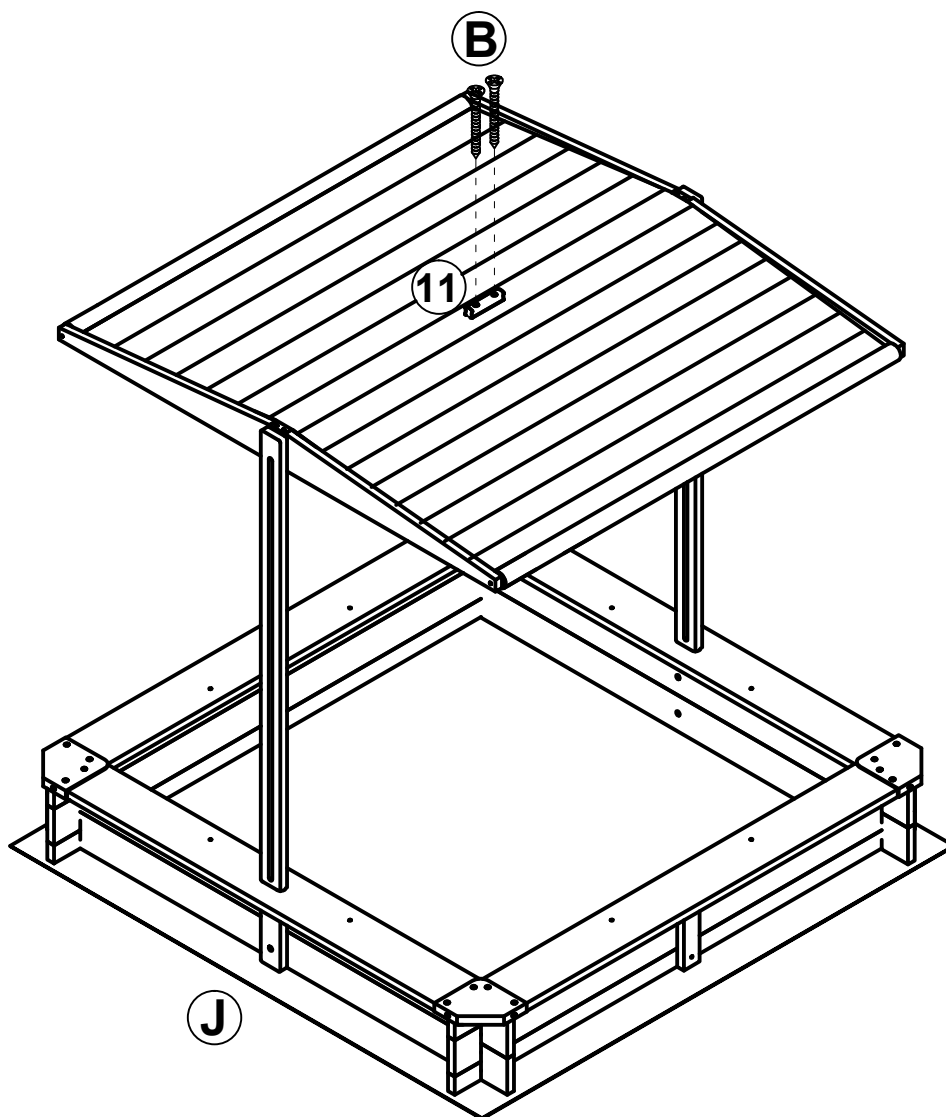

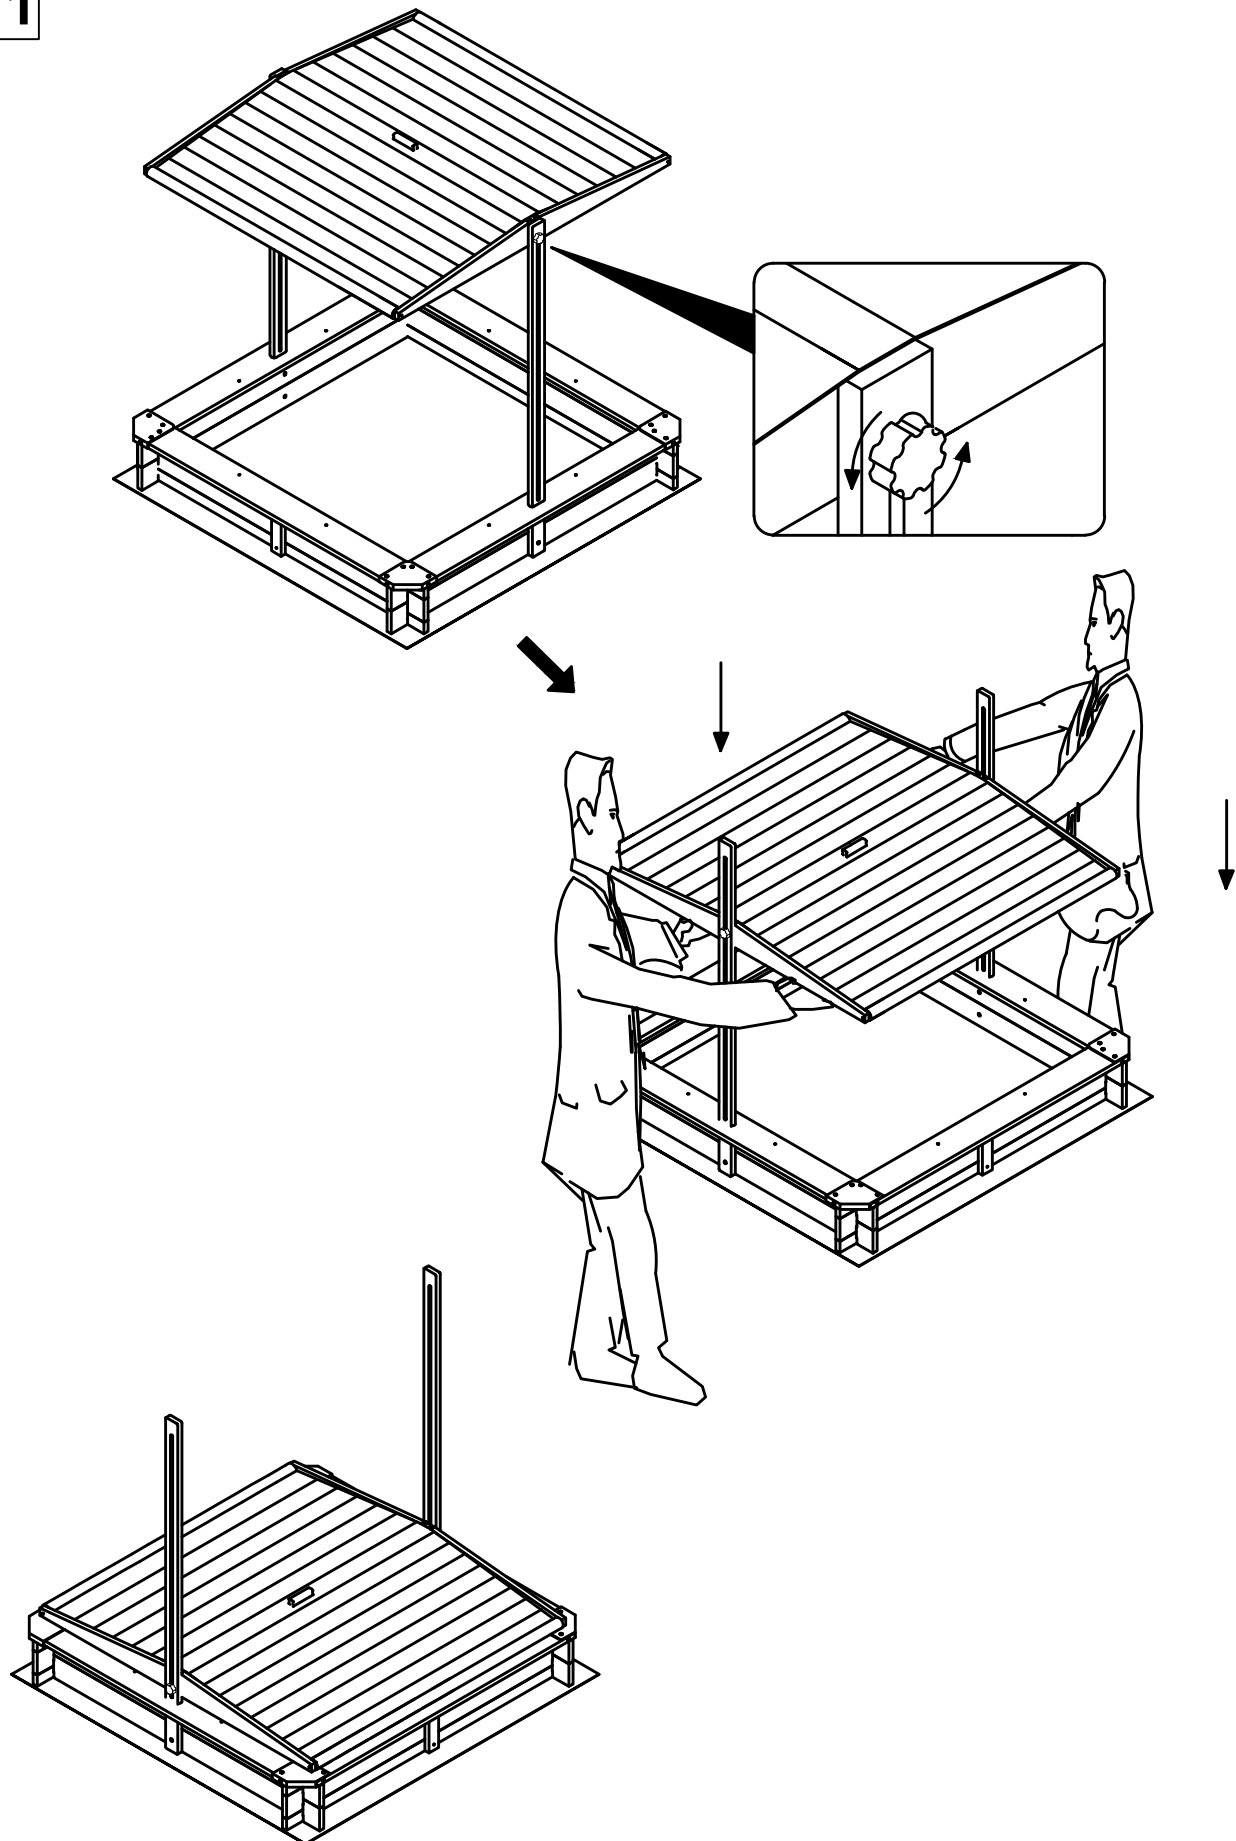

Safety Information



DANGER: Please keep children out of the assembly area during assembly.



CAUTION: Use the product on flat ground only.



WARNING: Do not stand on the product. Do not sit on the product.

Warranty

ONE YEAR LIMITED WARRANTY WHAT IS COVERED

We warrant the product to be free from defects in material or workmanship for a period of one year from the date of original retail purchase. The word "defect" is defined as imperfections that impair the use of the product.

Defects resulting from misuse abuse or customer negligence will void this warranty.

DISCLAIM CONDITIONS

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use.

This warranty does not cover defects due to alteration or accidents.

This warranty does not cover scratches, scuffs or other cosmetic damages that may result from normal use of the product.

Please Contact Us if You Need Any Helps :

patioseat@gmail.com

We Will Reply at Very First Time During Mon.~Fri.