


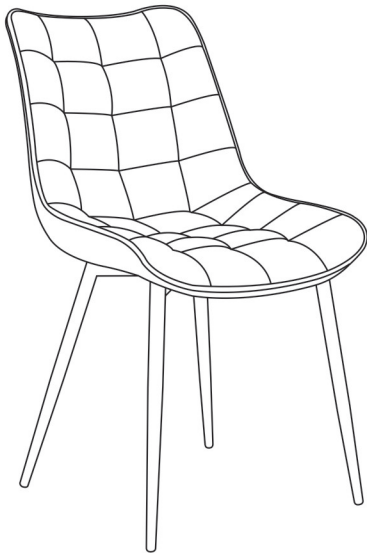











Installation & Assembly




Ax1 	Bx1 	Cx1 	Dx1  6x20mm
Ex4  6x35mm	Fx5 	Gx1 	Hx4 

SPARE (Ersatzteile)

Dx1  6x20mm	Ex1  6x35mm	Fx1 	Hx1 
--	--	--	--

STEP1

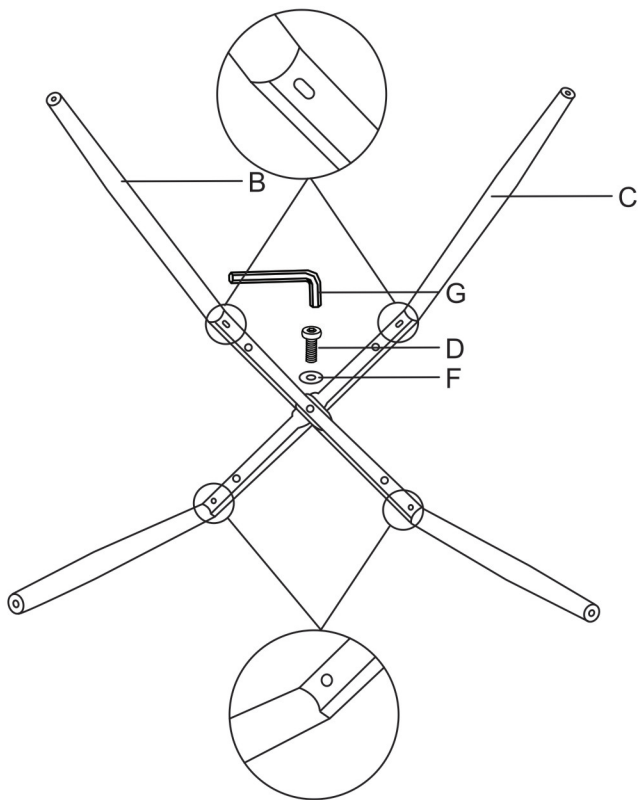

STEP2

