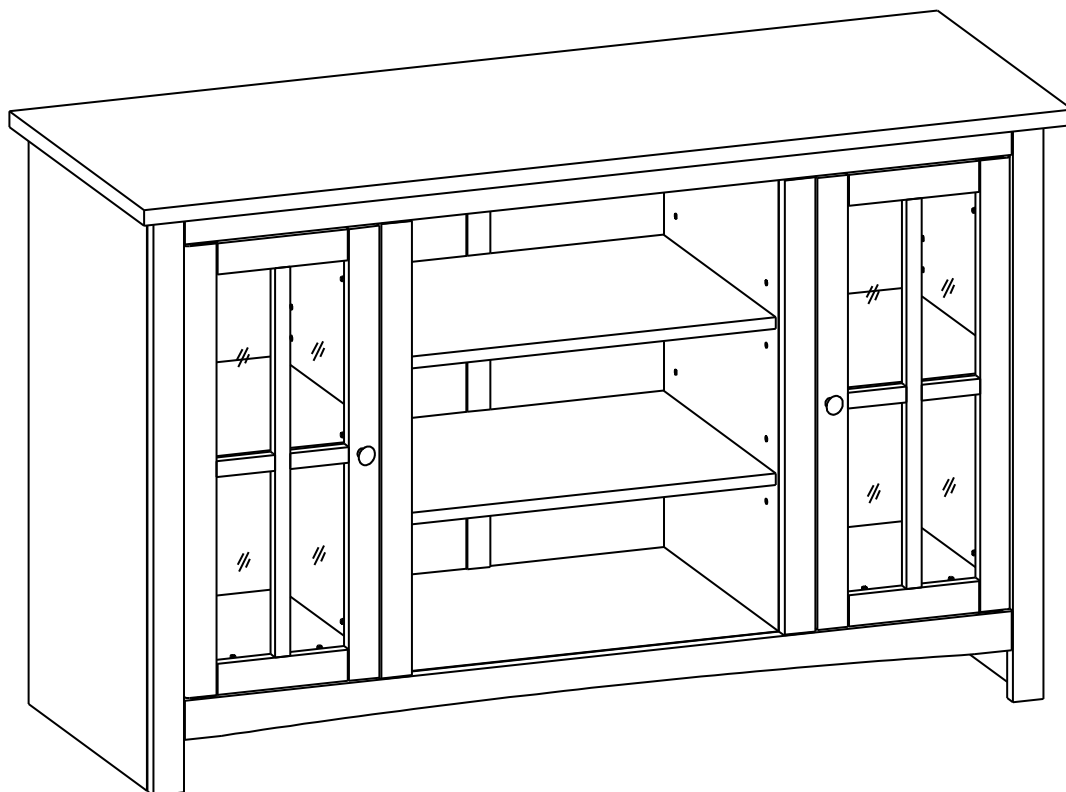 


ASSEMBLY INSTRUCTIONS



WARNING!

Serious or fatal injuries can occur from furniture tip over. Use tip over restraint (provided) to secure this product to the wall.

Description : 48 IN TV STAND

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect.

IMPORTANT NOTE:

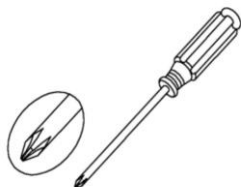 
- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

WARNING:

Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your product. Protect the surface of the product with cloth if you are using any product with rubber feet or base.

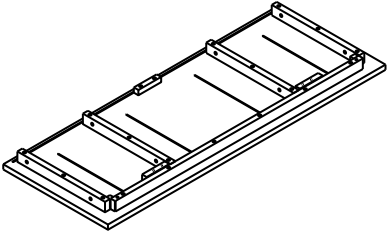 
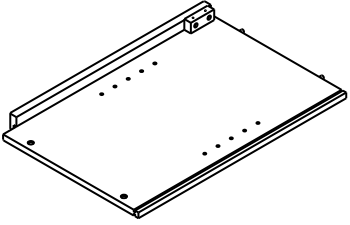 
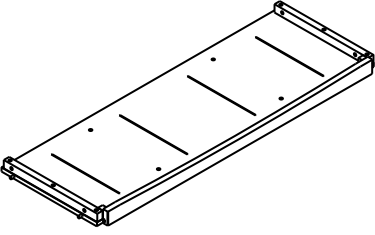 
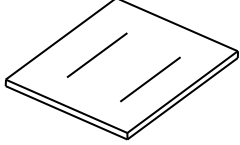 
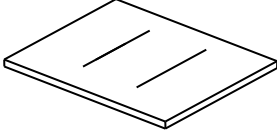 
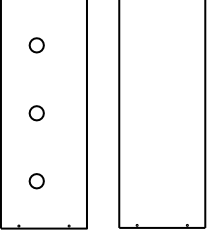 
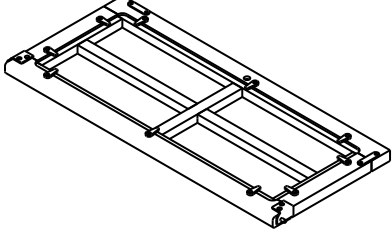 
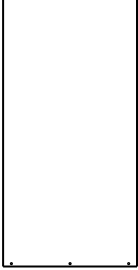 
 

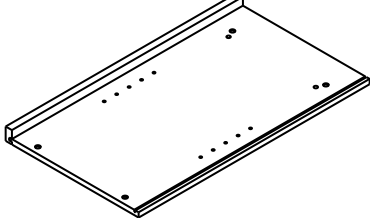 
ASSEMBLY TOOLS REQUIRED

NOT INCLUDED




 

 

 
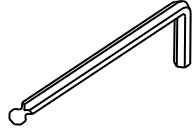 
 

 
 
 
 
 

 
 
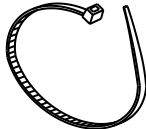 
PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

| NO | Description | Qty | Sketch | NO | Description | Qty | Sketch |
|----|------------------|-----|---|----|-------------------------|-----|---|
| A | Top | 1 |  | G | Vertical Panel (L-R) | 2 |  |
| B | Bottom Panel | 1 |  | H | Side Shelf | 2 |  |
| C | Center Shelf | 2 |  | I | Center Back panel (L-R) | 2 |  |
| D | Door (L-R) | 2 |  | J | Side Back panel | 2 |  |
| E | Glass | 2 |  | K | H - Connector | 1 |  |
| F | Side Panel (L-R) | 2 |  | | | | |

HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

| NO | Description | Qty | Sketch | NO | Description | Qty | Sketch |
|----|--|-----|---|----|---------------------------------------|-----|---|
| 1 | Bolt (M6 x 35mm) | 16 |  | 9 | Short Pan head screw (M3 x 15mm) | 8 |  |
| 2 | Spring Washer (Φ6.5 x 11mm) | 16 |  | 10 | Short Pan head screw (M3.5 x 15mm) | 10 |  |
| 3 | Flat Washer (Φ6.5 x 19mm) | 16 |  | 11 | Long Screw (M4 x 25mm) | 2 |  |
| 4 | Allen key (M4 x 30mm x 110mm) | 1 |  | 12 | Shelf support bracket | 16 |  |
| 5 | Medium Pan head screw *Metal knob: (M4x22mm) *Wooden knob: (M4x25mm) | 2 |  | 13 | Short Screw (M3.5 x 15mm) | 16 |  |
| 6 | Wooden Knob (Φ38 x 30mm) GOES WITH UNFINISHED ITEM ONLY. | 2 |  | 14 | Short Pan head screw (M4 x 15mm) | 2 |  |
| | OR | | | 15 | Long Pan head screw (M4 x 50mm) | 2 |  |
| | Metal Knob (Φ30 x 30mm) GOES WITH FINISHED ITEM ONLY. | 2 |  | | | | |
| | THIS PRODUCT ONLY INCLUDES 2 KNOBS | | | | | | |
| 7 | Door pin (Φ5.2/Φ13x1.2mm) (Φ7x10mm) | 4 |  | 16 | Steel Tip Bracket | 4 |  |
| 8 | Magnet | 4 |  | 17 | Flat Nylon Tie | 2 |  |

NOTE: WARNING LABEL (INCLUDED)

WARNING

Serious or fatal crushing injuries can occur from furniture tipover. To help prevent tipover:

- Install tipover restraint provided.
- Place heaviest items in the lower drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

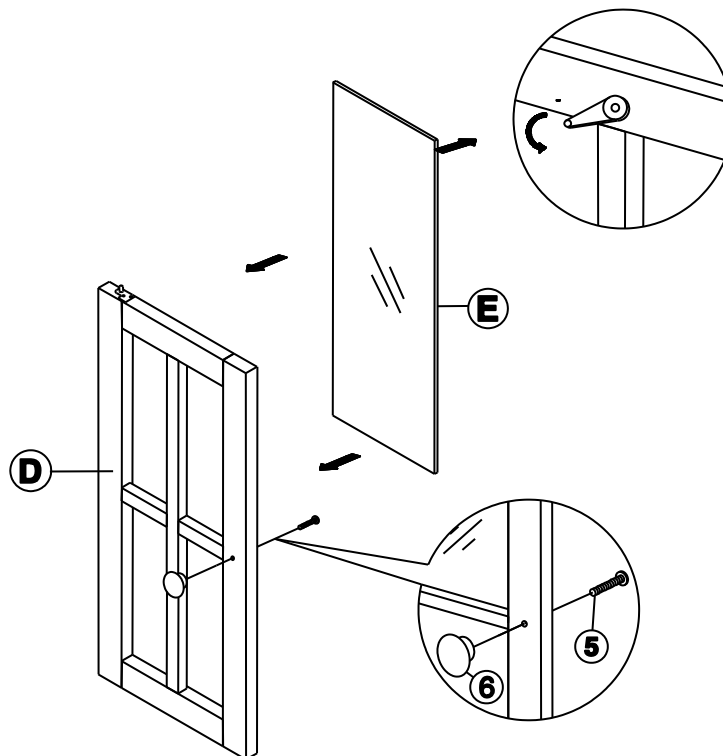 
Use of tipover restraints may only reduce, but not eliminate, the risk of tipover.

This is permanent label. Do not remove.

STEP 1

Attach glasses (E) to back of doors (D), and lock it.

Attach knobs (6) to doors (D) with pan head screws (5) as shown below. Tighten with a screwdriver.




STEP 2

Attach vertical panels (G) to top (A) and bottom panel (B) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (4).


Attach doors (D) to top (A) and bottom (B) with door pins (7) as shown below.

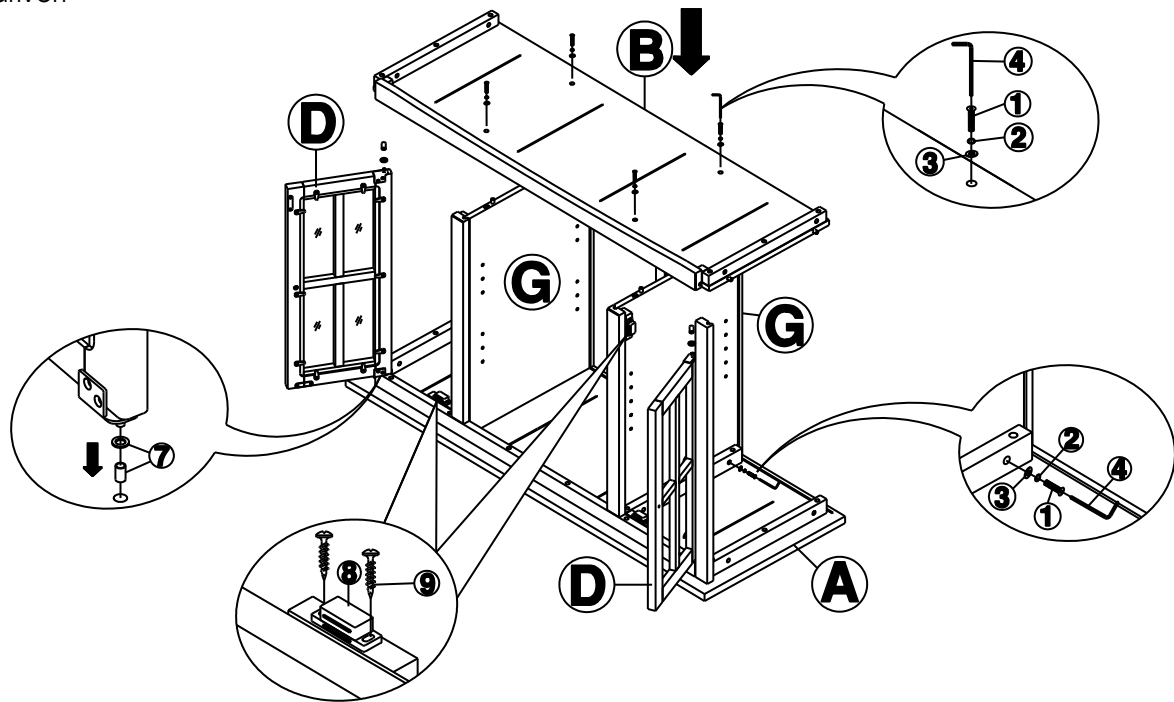 Attach magnets (8) to top (A) vertical panels (G) with screws (9) as shown below. Tighten with a screwdriver.



STEP 3

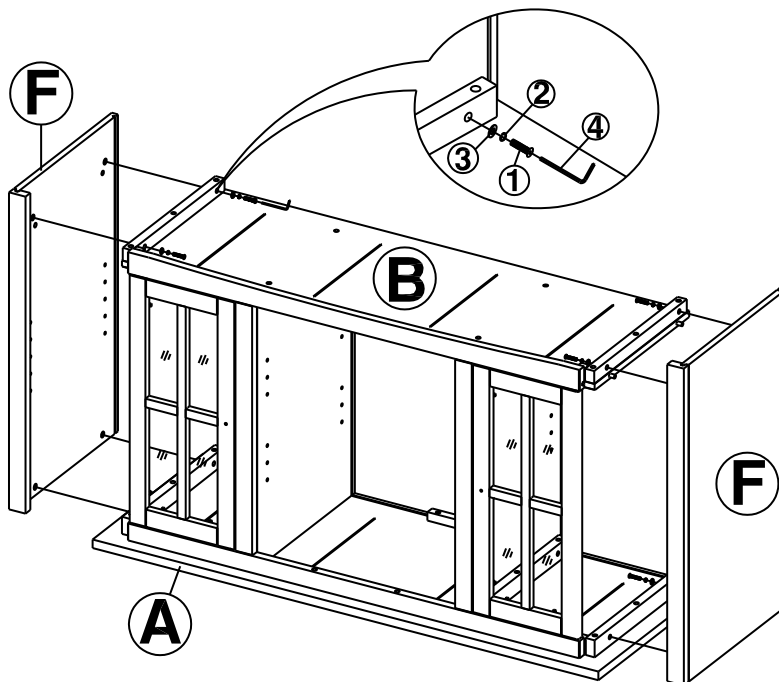 
Attach side panels (F) to the unit with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (4).



STEP 4


Attach H-connector (K) to the top (A) and bottom panel (B) with screws (11) as shown below. Tighten with a screwdriver.

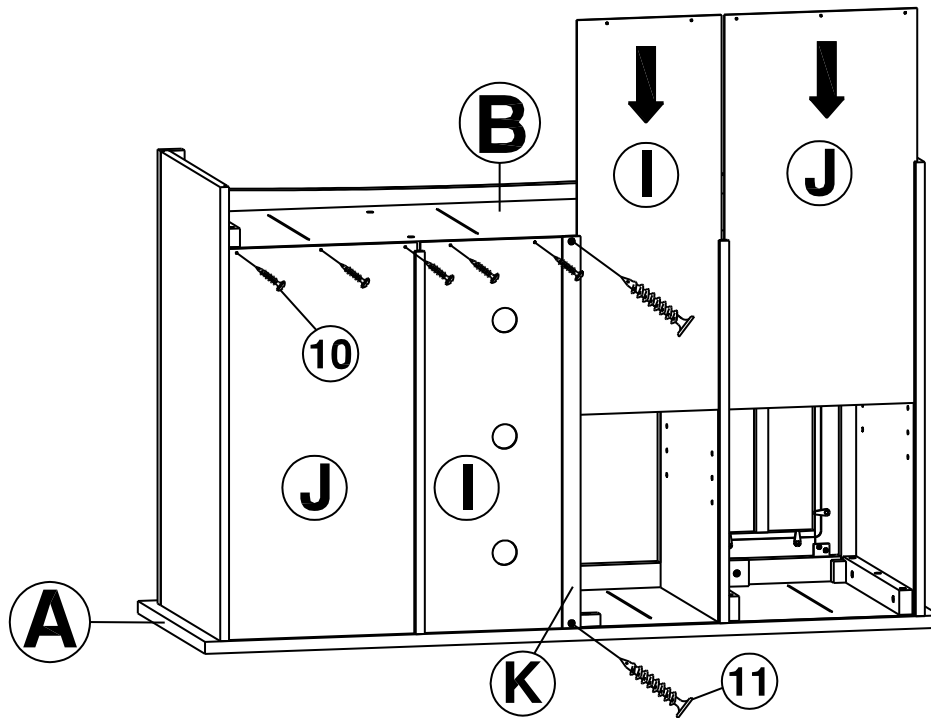 Slide back panels (I) and (J) into the grooves as shown below. Then attach back panels to the bottom panel (B) with pan head screws (10). Tighten with a screwdriver.



STEP 5

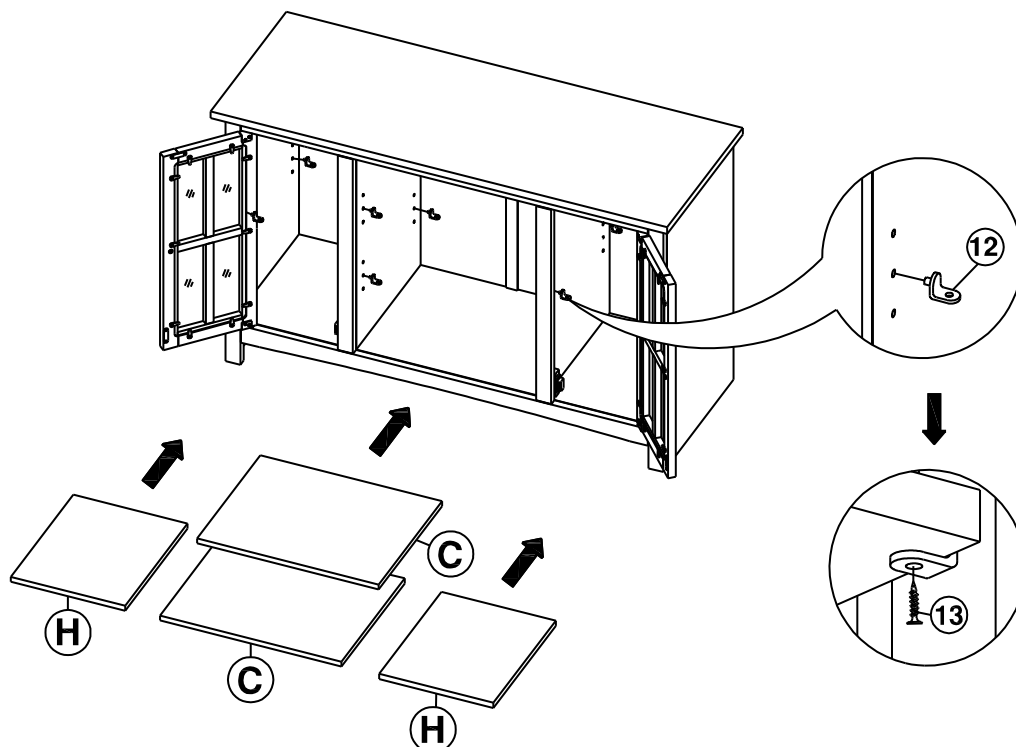 Insert brackets (12) into the unit as shown below. Place shelves (C) and (H) on the brackets and attach with screws (13). Tighten with a screwdriver.



STEP 6

Attach brackets (16) to the back of the unit with screws (14) through the smaller holes in the brackets as shown below.

Important!

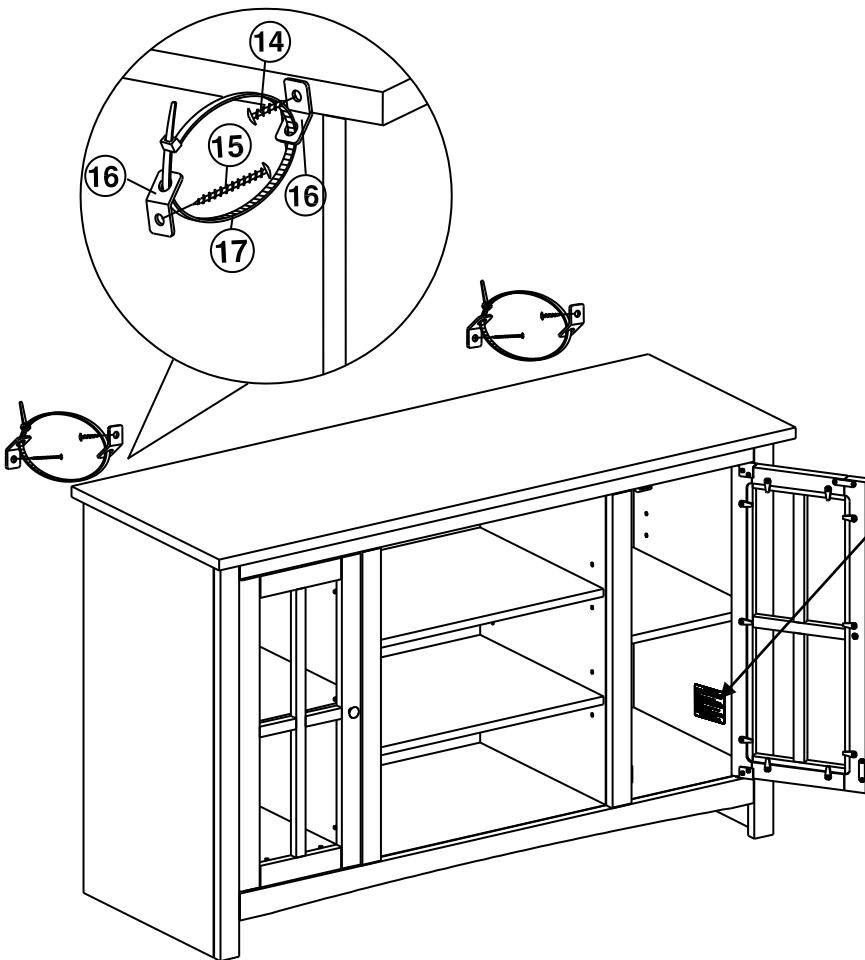 
Properly attach the other brackets (16) to the wall in an area of ***drywall or plaster with a wood stud***: Mark the attachment point(s) with a pencil at the appropriate height **positioned over the wood stud(s) in the wall**.

Place the unit into position so both mounting brackets are vertically in line.

Properly attach the other brackets (16) to the wall stud with screws (15) through the smaller holes as shown below.

Lace the end of flat nylon ties (17) through the larger holes in each mounting bracket. Bring both ends together and slide the flat ends through the locking ends and draw it through until all slack is removed.

Confirm that the strap is securely laced and locked.



⚠ WARNING

Serious or fatal crushing injuries can occur from furniture tipover. To help prevent tipover:

- Install tipover restraint provided.
 - Place heaviest items in the lower drawers.
 - Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
 - Never allow children to climb or hang on drawers, doors or shelves.
 - Never open more than one drawer at a time.
- Use of tipover restraints may only reduce, but not eliminate, the risk of tipover.**

This is permanent label. Do not remove.