 


4 LIGHT KITCHEN ISLAND PENDANT CHANDELIER

ASSEMBLY INSTRUCTIONS

 
REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT
TO DAMAGE ANY COMPONENTS.

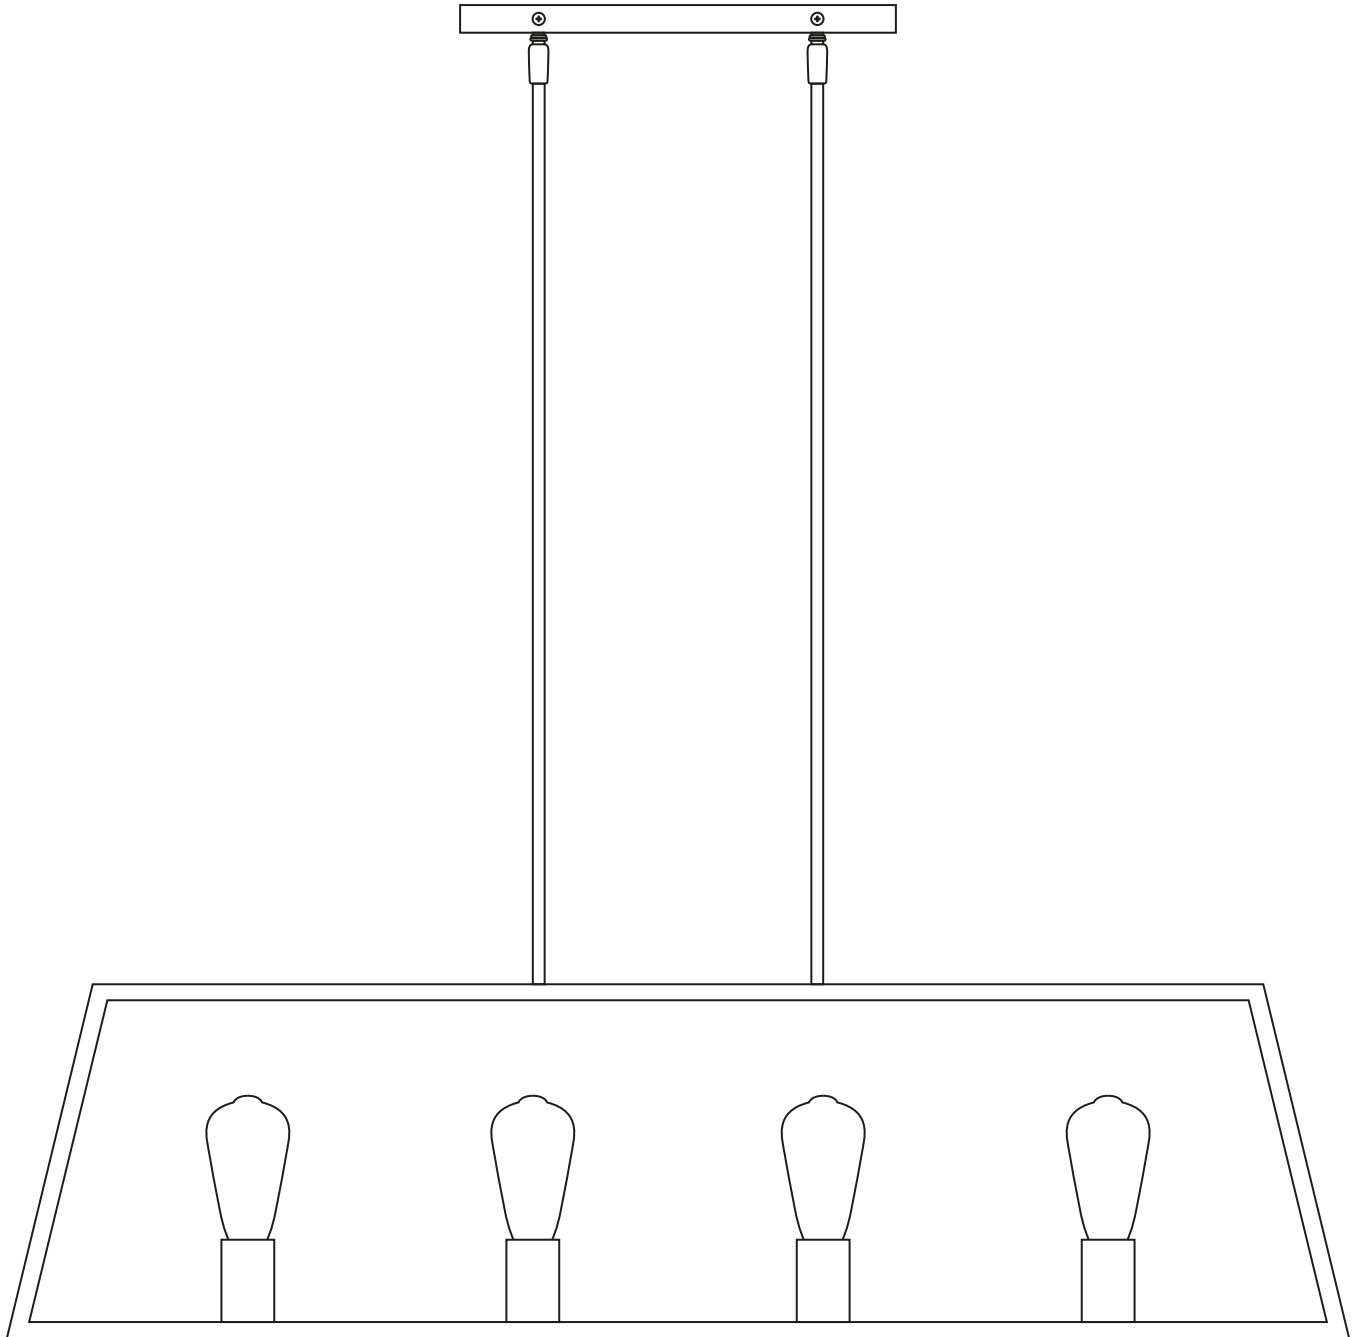


PROFESSIONAL INSTALLATION RECOMMENDED

4 LIGHT KITCHEN ISLAND PENDANT CHANDELIER

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.

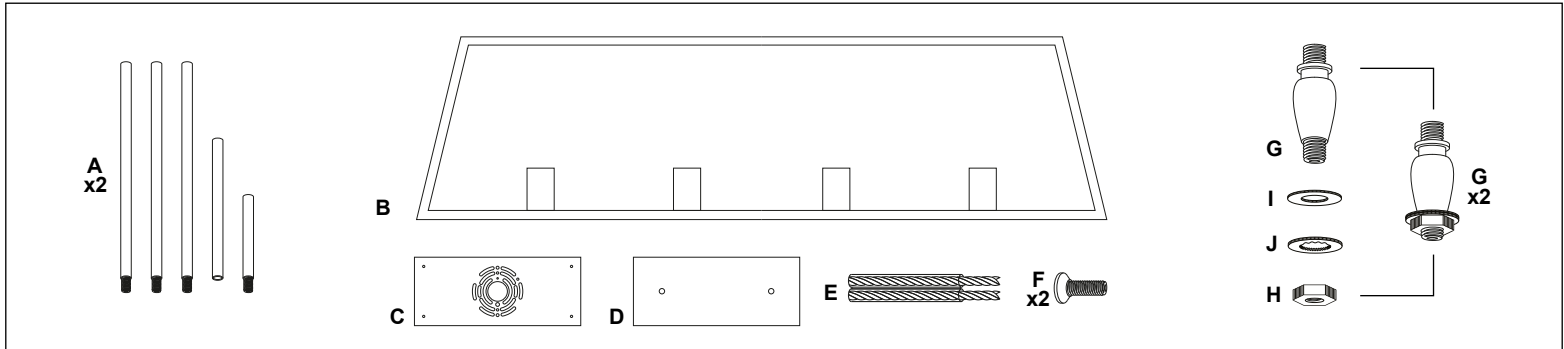

1. Measure area and determine desired hanging height. Product comes with two (2) sets of three (3) 12", one (1) 8" and one (1) 4" hard stems [A] for adjustable hanging height. Determine the stems you will use to achieve desired height. Threads are removable from the stems and thread removal may make it easier to thread wire.
2. Thread wire [E] from frame [B] through one side only of the light fixture through the first stem [A]. Continue to add stems on that side, threading the wire and screwing each stem together and repeat as necessary to achieve desired hanging height.
3. On non - wire side, continue to add stems, screwing each stem together. Repeat as necessary to achieve desired hanging height.
4. Detach mounting plate [C] from canopy [D].
5. Locate two (2) canopy stem connectors [G]. Remove nut [H], lock washer [I] and washer [J] from both connectors.
6. Screw the finished side of the canopy stem connector [G] into stem assembly on each side, threading wire through the connector on the appropriate side.
7. Thread wire [E] through canopy [D] on one side.
8. Place canopy holes over stem assembly threads. Place washer [J], then lock washer [I] over thread. Secure with nut [H]. Be sure to thread wire through washers and nut on wired side. Repeat on second side.
9. Install light to ceiling. We recommend installation by a qualified electrical professional. Canopy screws [F] are used to tighten light to ceiling.
10. Install bulbs 60W max (included).

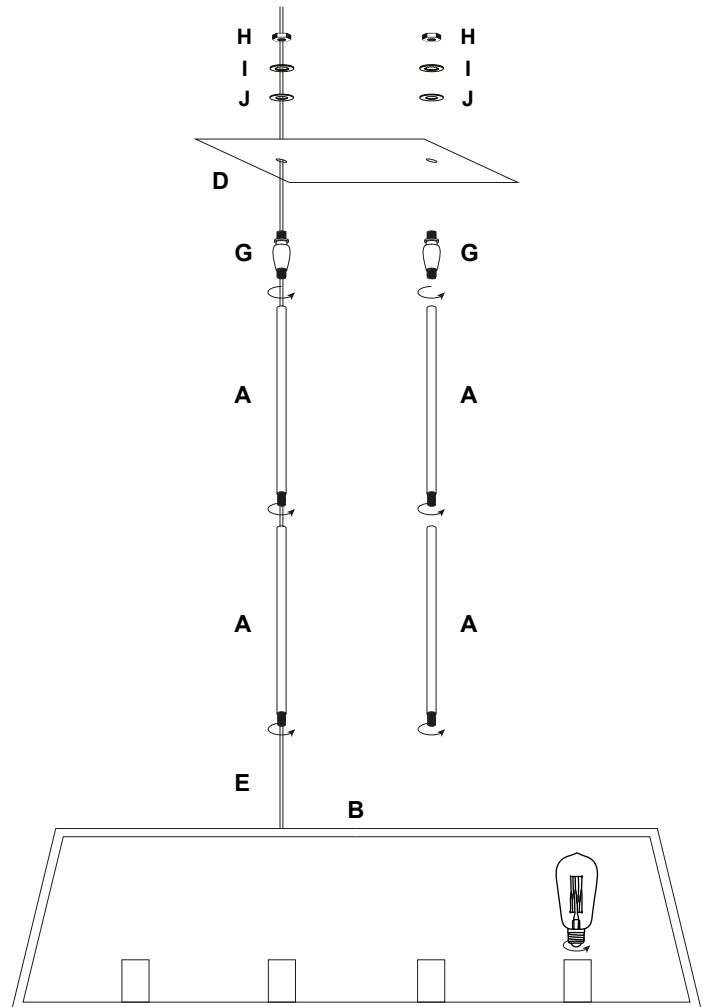 

Note: Turn off switch before replacing a bulb. Make sure the bulb has sufficient time to cool down.