

Pandora's Box with 3000 Games

Your arcade machine is already fully set up and ready to plug in and play. On the back you will notice the black toggle switch connected to the power receptacle. Plug the provided power cord into the machine first and then into the wall. Once plugged in, switch the toggle switch in the on position and your game will be ready to play in about 30 seconds.

On the back of your tabletop machine, you will notice the red Test (top) and Service (bottom) buttons. For your full size machine, open the coin door with the key provided to find the Test and Service button. These are used for adjusting the settings or to help troubleshoot if necessary. However, your game board also has a button on it to go directly to the settings.

To select the game press the 1 Player A button. Once the game loads it should give directions on the screen, for example "Press 1 Player or 2 Player to start". These directions may differ between the various games. **In Free Play mode you cannot exit the games.** You will have to use up the lives for it to go back to the main screen to select the next game. If you switch it to Coin Play mode in the settings, you should be able to exit most games. The Service button also can be used to pause the game.

Your volume control is located inside the back of your machine on the left edge of the game board. Use the key provided to open the back panel. **Always be careful not to touch the power supply box on the right side when the machine is turned on, it has exposed wires that could cause electrical shock.** Locate the bright blue game board box on the left side of the shelf. Feel to the left edge of the board for a small black scrolling wheel and move it back and forth to adjust the volume. Always make sure the cabinet is closed when powering up your machine. Refer to a qualified technician for any repairs. Our team tests every machine before it ships out, however, it is possible that during shipping wires may come loose from their connections. If you find that something is not working, please refer to the troubleshooting guide and call us if you need additional help. We hope you enjoy your new arcade machine!

Thank you for your business,

Suncoast Arcade

www.SuncoastArcade.com

727-692-9762

