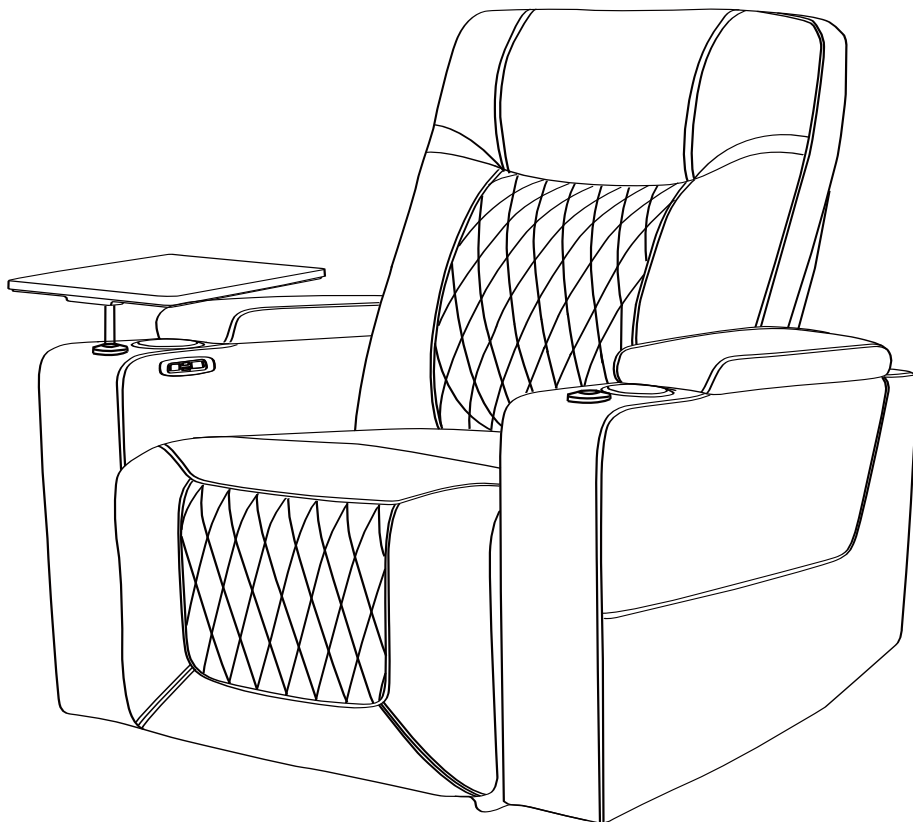 


Operation Instructions



PP307483&PP307484
Power Recliner

**UK
CA**

The chair set is delivered with **2 boxes**. We recommend assembling the set after you receive all the boxes.

PRODUCT FEATURES

- **Power Reclining**

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including:

- Always unplug the power chair from the power source after use, and before cleaning.
- Do not touch power chair if large amounts of liquid have spilled on it. Unplug immediately.
- The chair should never be open unattended when plugged in. Unplug from the outlet when not in use or before putting on or taking off parts or attachments.
- Do not use outdoors.
- Do not carry this appliance by the attached power cord; do not use it as a handle.
- Keep the cord away from heated surfaces.
- Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
- This unit is not a toy. Children should not use or play with it.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use near eyes or other highly sensitive areas.
- To disconnect, press the OFF button, make sure all functions are stopped, then remove the plug from the outlet.
- Use this appliance only for its intended use as described in this manual. Do not use attachments that haven't been provided with the unit. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety, children should be supervised to ensure that they do not play with the appliance.

HEALTH CAUTION

- If you have any concerns regarding to your health, consult your doctor before using this product.
- Individuals with pacemakers should not use this product.
- If you have pain in muscle or joint after using for a prolonged period of time, discontinue using and consult your doctor. Persist pain could be a symptom of a more serious condition.

MAINTAINANCE INSTRUCTIONS

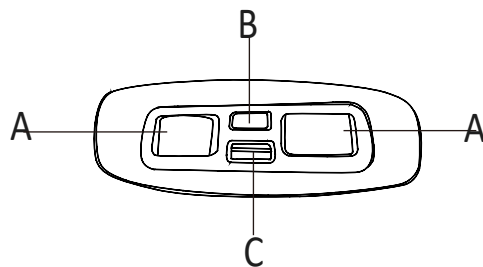 
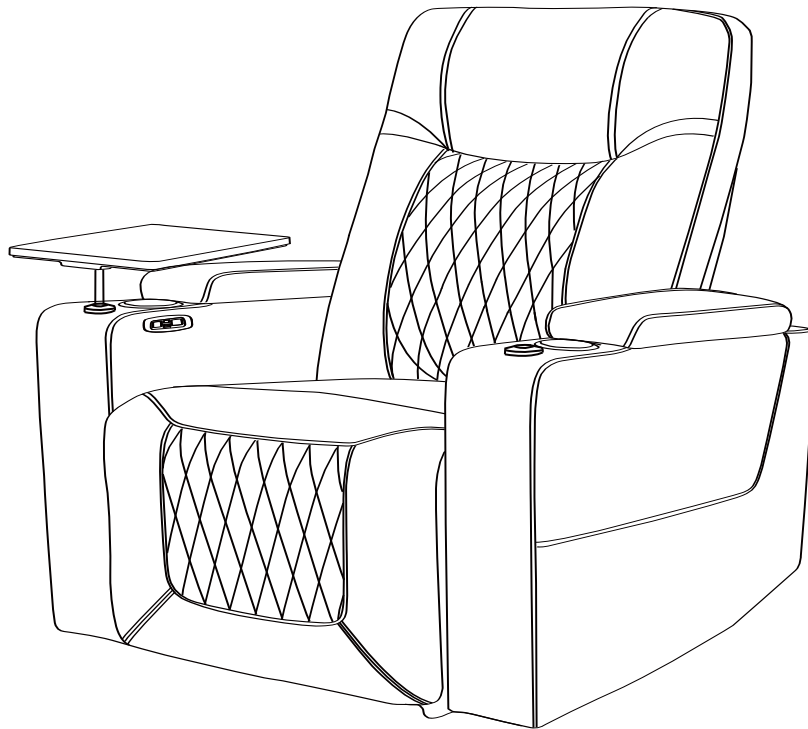 
TO STORE:

Place unit in its box or safety dry and cool place. Avoid putting chair in contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap attached power cord around the unit. DO NOT pull the unit by power cord.

TO CLEAN:

- Ensure the unit is unplugged from the power source, and allow the unit to cool down before cleaning.
- Do not use any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat with clean, dry cloth.

OPERATING INSTRUCTION



Press the A button to reline the sofa
Press the B button to control the light
C button is use to connect USB

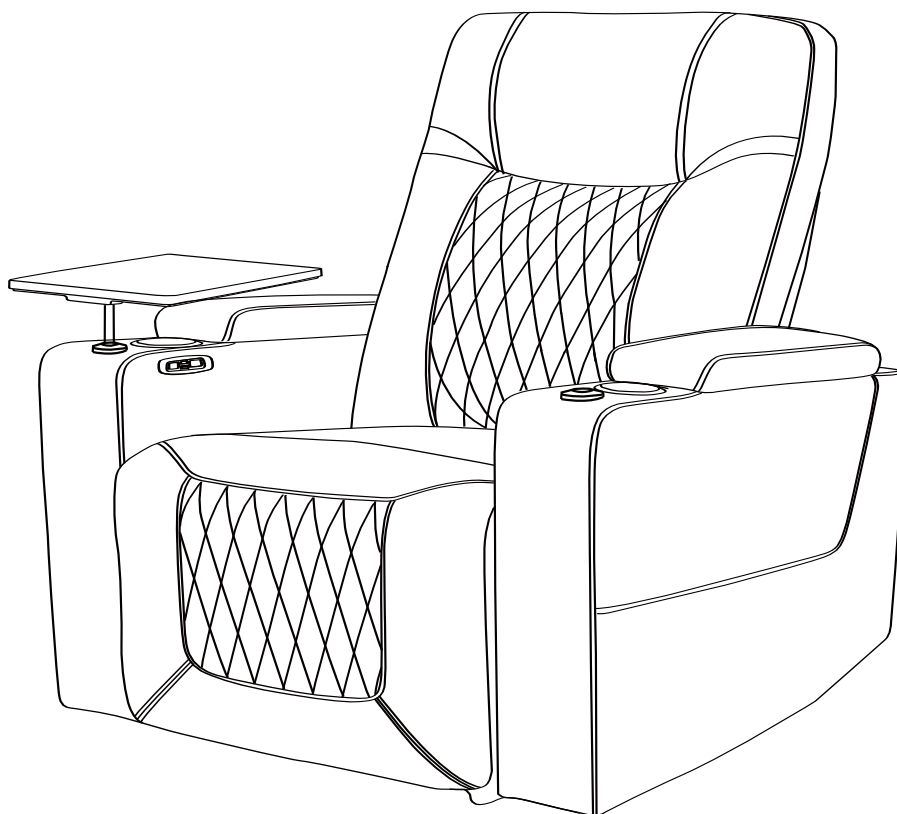 
TECHNICAL SPECIFICATIONS

Model:PP307491 & PP307492

Rated Voltage:100V-240V~

Rated Frequency:50Hz/60Hz

Assembly Instructions






Please read the following instructions prior to assembling this product:








1. To avoid damage, assemble this product on a not-abrasive surface such as carpet.
2. Make sure all bolts are tightly fastened before use.
3. For home use or light commercial use only.
4. Please make sure you have all parts before assembly.

GENERAL ASSEMBLY INFORMATION GUIDE

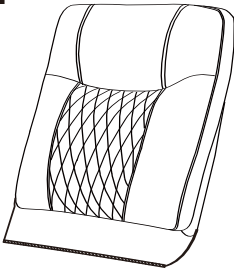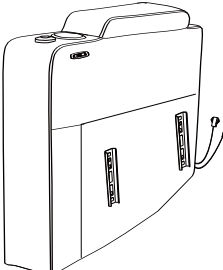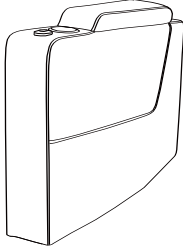   Parts List (BOX-1:PP307483)


A*1	B*1	C*1
		
QTY 1pc	QTY 1pc	QTY 1pc

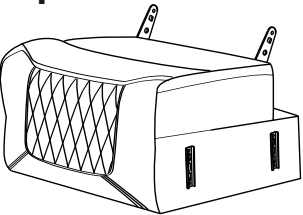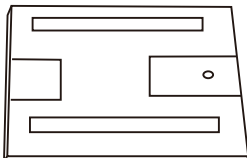  
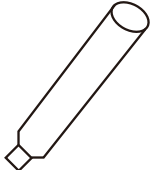 
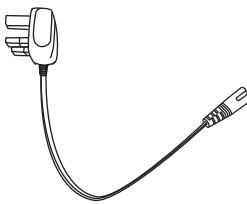 
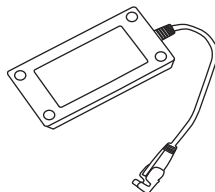 
 
 
Parts List (BOX-2:PP307484)

D*1	E*1	F*1
		
QTY 1pc	QTY 1pc	QTY 1pc
G*1	H*1	I*1
		
QTY 1pc	QTY 1pc	QTY 1pc
J*2	K*2	L*1
		
M8*55mmL	Φ 22*Φ 8*2mmT	6MM
QTY 2pcs	QTY 2pcs	QTY 1pc

Step 1

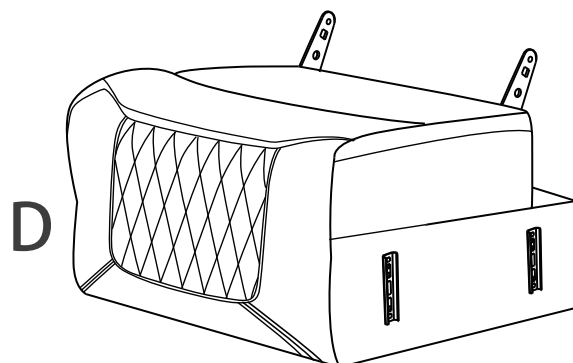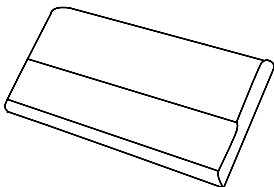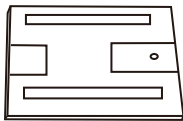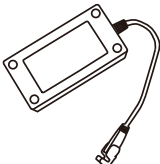       
- ① Place the Seat (D) on its back on a flat smooth surface.
Take out the bag which holds a rectangle box.
- ② Take out the below spare parts from the top of the seat .



	 QTY 1pc E	 QTY 1pc F	 QTY 1pc G
	 QTY 1pc H  QTY 2pcs K	 QTY 1pc I  QTY 1pc L	 QTY 2pcs J


Step 2

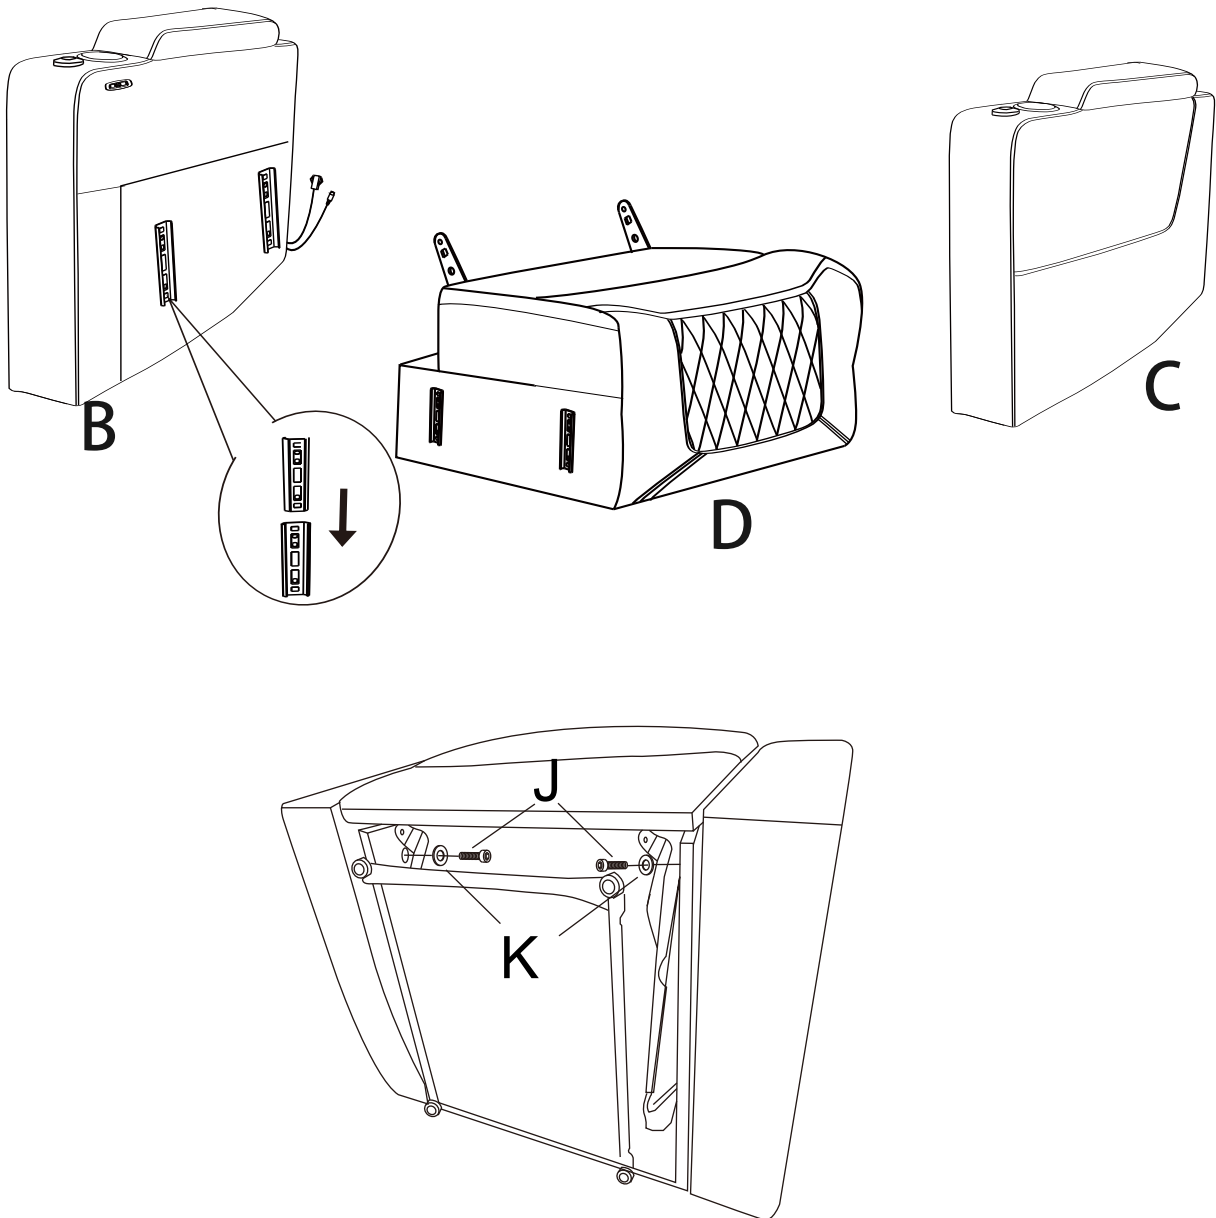 - ① Attach handrest (B&C) to seat (D) by aligning the metal grooves on handrest to brackets on sides of the seat (D) as shown.
- ② Ensure the handrest (B&C) slides down fully over the brackets on the right side and left side of the seat (D) respectively.
- ③ Connect the screw (J) & gasket (K) with the seat & handrest .




Step 3

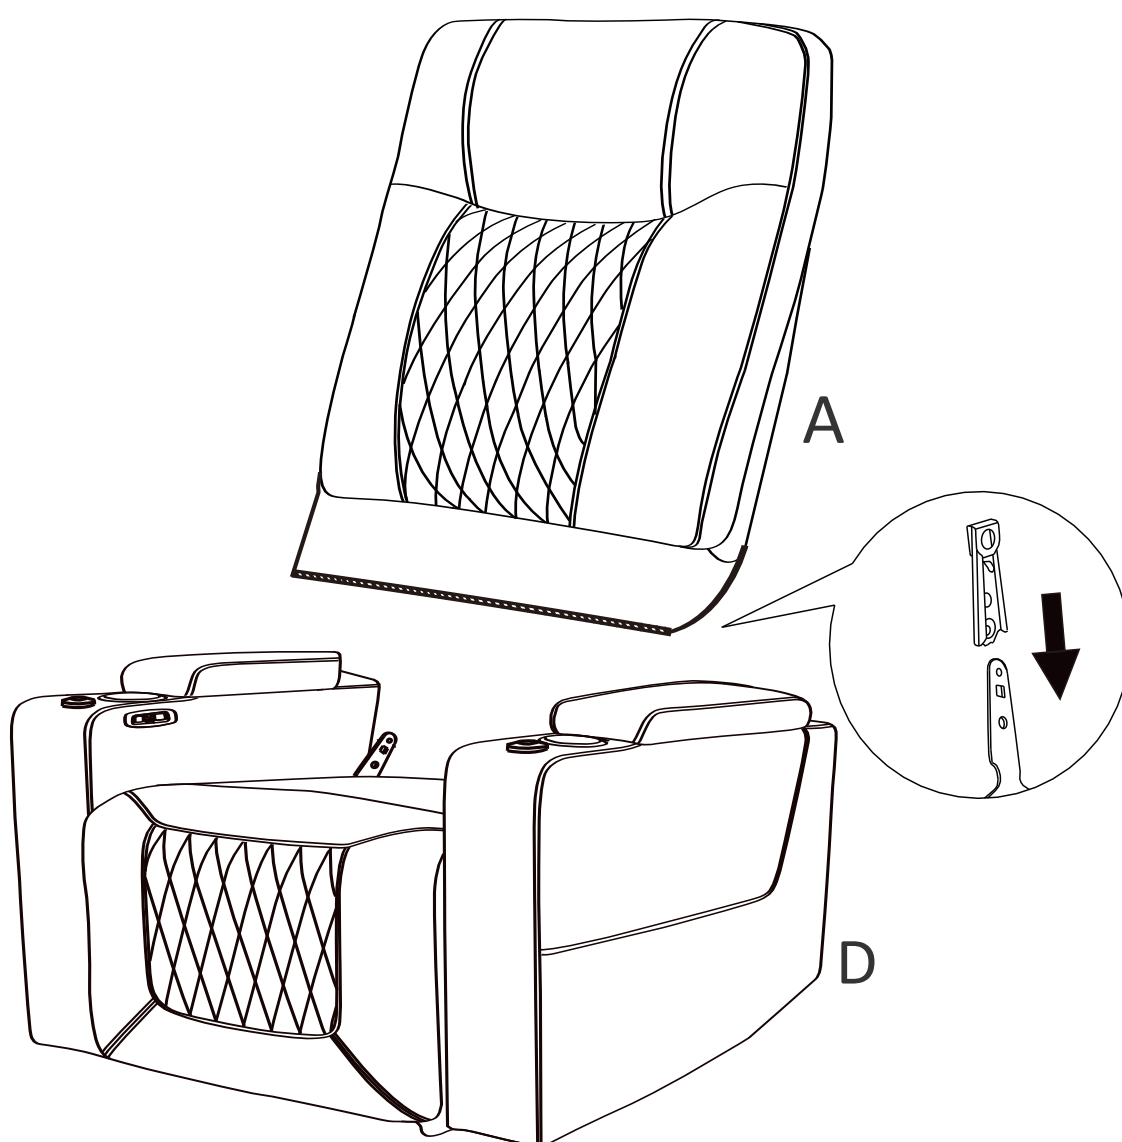 Ensure the backrest (A) slides down fully over the brackets on the seat(D).







Step 4

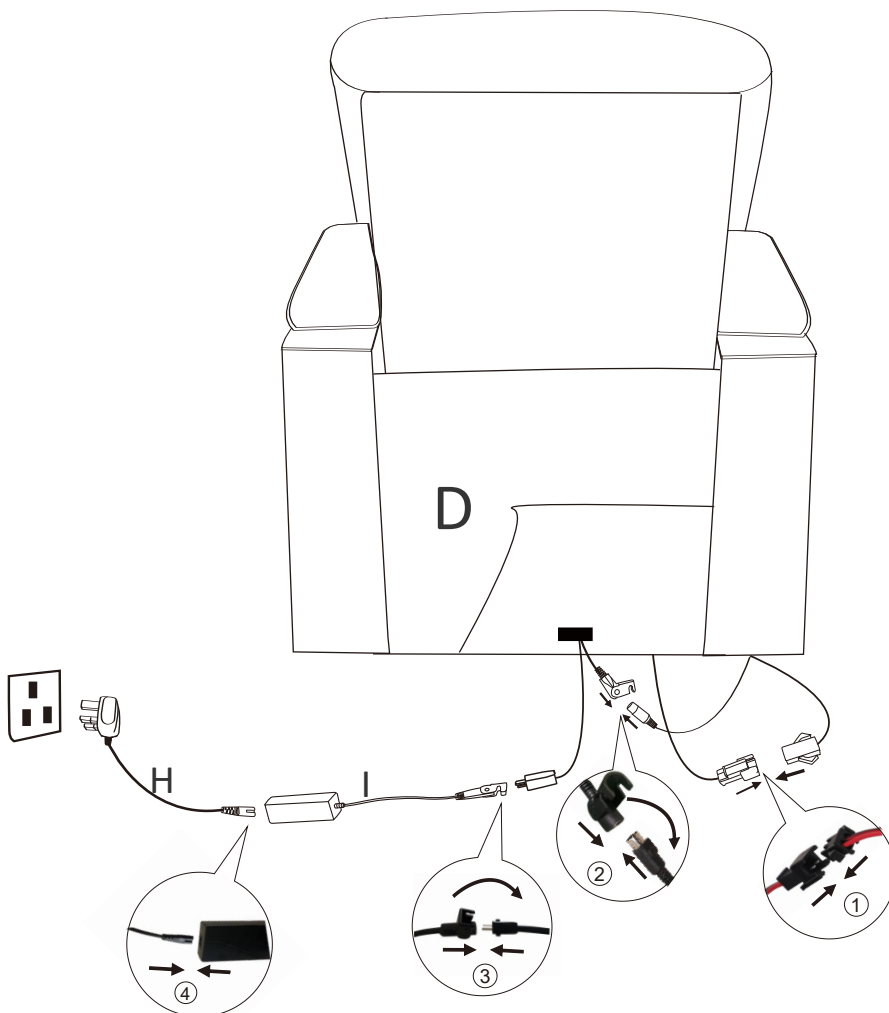 - ① The connecting wire of the motor is at this position, the next step is to connect the transformer(I) with the wire plug (H) and insert the wire plug into a wall outlet for power.
- ② The connecting wire of the light strip is at this position, the next step is to connect this wire .
- ③ Die Verbindungsleitung der Lichtleiste befindet sich an dieser Position, verbinden Sie diese beiden Leitungen.



Step 5

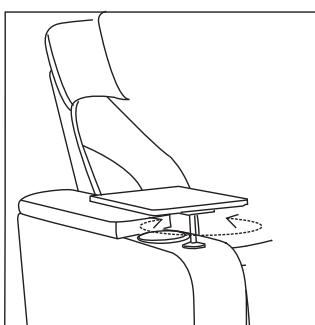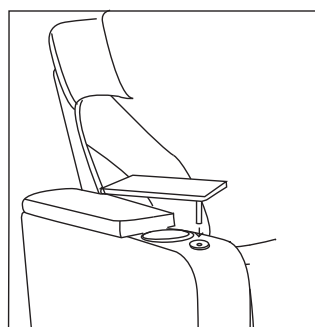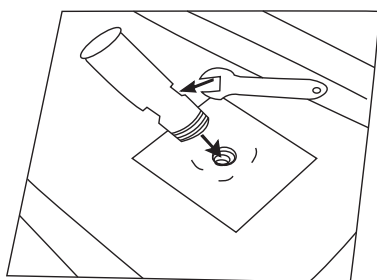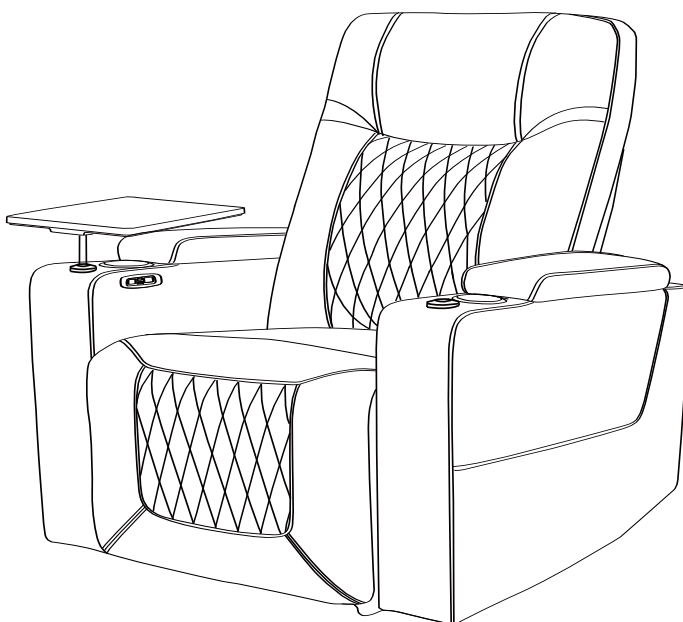    - ① Gently screw the post into the back of swivel tray table (E) ,tighten it by wrench (F) provided,the next step is place the post into the accessory dock which is loacted on the right or left armrest top.



Warnings

- Sit down in the chair gently. To avoid tipping over, do not throw yourself into the chair. Move the chair into the reclining position slowly, making sure that no children or pets are in close proximity. Do not allow children to play on or around the chair, particularly when it is in an open position.
- Close the recliner completely before getting out of it.
- Never sit on the footrest when it is open, even if it is a child.
- To eliminate the risk of tipping over, do not sit on the arms or footrest of the chair.
- This chair is designed to be used by 1 adult at a time.
- Maximum weight capacity is 330LBS, Do not allow any person who over 330LBS to sit on the recliner.
- Please forbid people with the following ailments from using this sofa: Those people with severe symptoms of heart disease, high blood pressure, cerebral thrombosis and others who are sensitive to heat or completely insensitive to heat, those with brittle bones or have issues with waist support pregnant women, children and others where it has been determined they are not suitable to use this product under the guidance of doctors.
- To fully recline the sofa, ensure the sofa well, you need to put the sofa at least 100cm away from the wall or any other obstacle.
- Product cannot touch water, fire, etc. Product can also not come in contact with sharp objects (knives, nails, etc.)

Maintenance Manual Instructions

- To avoid dropping, you should carry the sofa carefully.
- If you find dirt and or stains on the chair, spray the sofa with a sofa specific cleaner then use a sponge or cloth to wipe the dirt away. Do not use water, soapy water or cleaner with waxed wooden areas. Take care to wipe the sofa carefully and gently.
- Do not put the sofa in an area with direct sunlight and do not put the sofa directly in front of an air conditioner, this will fade the upholstery and make it brittle.

How to Disassemble

Please find a strong tool to prod the small piece of metal grooves, then the backrest will be pulled out. The tool is not included.

LED Light

If you can't let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
2. Please check the remote control, it need you to tear down the plastic septum before use it.
3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.
4. Please note that for transportation safety, the remote control does not contain batteries; the battery model is: CR2025

