

**SMART BATHROOM
CORE TECHNOLOGY
SMART TOILET**

User manual

Thank you for using this product. In order to make it more convenient and correct for you to use this product, please read the User Manual carefully and keep all the information properly.

CONTENTS

Safety Precautions / Precautions /02

Name of each part /03

Annex /05

Instructions /06

Terms and Conditions /07

Cleaning and maintenance methods /08

Installation Notes /09

Technical indicators /11

Apply for repair confirmation /12

warranty card /13

- In order to allow you to use this product correctly, please read this manual carefully.
- If you have any questions, please contact your local dealer or agent.

【 The rated voltage of this product is 110V ~ , be sure to confirm before use 】

● SAFETY PRECAUTIONS / PRECAUTIONS












For the safety of you and others, to avoid unnecessary harm and loss, please strictly follow the following tips to properly use this product.

WARNING


Warns you how to avoid personal injury.

ATTENTION

Indicates that you must observe or avoid some operation to prevent damage to the equipment or other items.

MARK	DESCRIPTION
 Do not disassemble	 This figure shows [forbidden]. Left shows [Do not disassemble].
 Must be obeyed	 This diagram shows the content that is mandatory. The figure on the left shows [Must be obeyed].
 WARNING	
	Do not disassemble, repair or modify the product yourself, otherwise it may cause malfunction.
	Do not pour water or detergent on the product body or power plug, as this may cause electric shock or malfunction.
	Do not use a wet hand to plug the power plug, it may be an electric shock.
	Make sure the water used is clean. Water pressure in line with the requirements.
 Must be obeyed	<ol style="list-style-type: none"> 1. This product is an electrical product, do not place it in a place where it is easy to be sprayed or moist. 2. Make sure that the product's power outlet must be 110V ~ 60Hz. 3. The product's power outlet must be grounded. 4. Please use a socket that can load 1000W. 5. Remote control battery with two 1.5V dry batteries.
 ATTENTION	<ol style="list-style-type: none"> 1. Do not step on the body and seat cover. 2. Do not use banana water, gasoline, pharmaceuticals and detergents or insecticides to wipe the product. 3. For a long time sitting only on the toilet, please adjust the temperature to low, to avoid the end of the temperature burns. 4. In the product is not water supply, do not reverse the product, will cause the heating tube dry failure. 5. Persons with physical, perceptual, mental deficiencies or lack of experience and common sense (including children) Guardians use the case, is strictly prohibited children play the device.



● NAME OF EACH PART

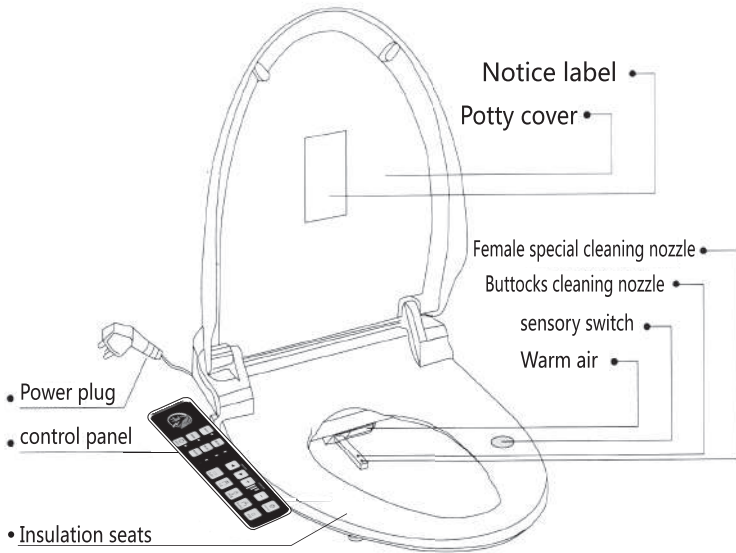

PANEL DESCRIPTION:



● NAME OF EACH PART

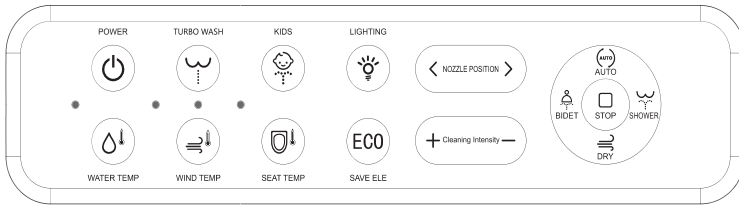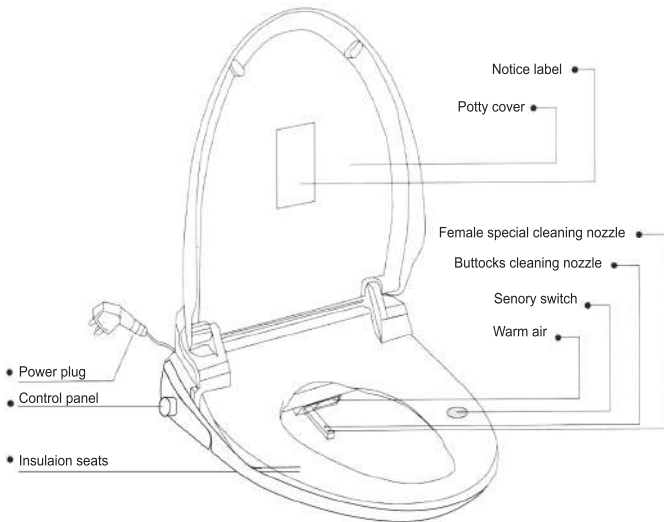

Remote control instructions:

Press the power button to switch the toilet power on and off.

Press the child wash button to enter the hip wash function without sitting on the toilet. Press again to switch to the move wash function during use.

Press the right direction button to switch between female wash and hip wash during use. The temperature and water pressure status are displayed by small red lights. The more lights, the higher the temperature and water pressure. (For other buttons, please refer to page 6 for instructions)

Knob instructions:


When the standby white light is on, after the seat clockwise to the end of the blue light, female cleaning; Counter-clockwise to the end of the green light, buttock cleaning; Push inside and the red light will turn on.

Remote control pairing steps:

Method: In the standby state, turn in the direction of female cleaning to the bottom and hold for 5 seconds. After hearing the buzzer drip, let go and press any key of the remote control to pair successfully. If it does not succeed, repeat the above steps.

● Attachments

Tee, water pipe, adjusting plate 2 pieces, expansion column 2 pieces, fixed base plate, Sealing ring, user manual

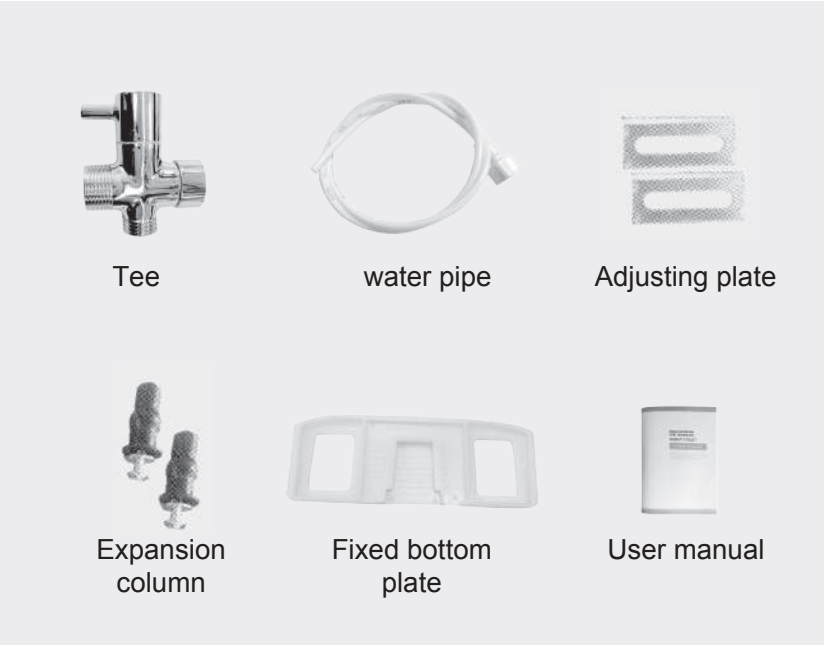

INSTRUCTIONS

Button operation panel instructions

Stop

Press the stop button in the process of use, it will stop running.
When getting up from the heating toilet, it will also stop automatically.
(no induction switch is not included).

Hip cleaning

Press this button to run for 1 minute and then stop automatically.
Press the button again during operation to move the nozzle for cleaning more areas.
Press the cleaning intensity button to adjust the strength of the water flow during operation.

• Female special cleaning

Press this button to run for 1 minute and then stop automatically.
Press the button again during operation to move the nozzle for cleaning more areas.
Press the cleaning intensity button to adjust the strength of the water flow during operation.

• Dry

Press this button to start the warm air drying function, it will stop automatically after 3 minutes.
Press the wind temperature button to gradually change the temperature from normal to low, medium, and high during operation.

• Full automatic

Press this button to activate the automatic cleaning function
(switch between hip wash in static and move mode, then dry for 3 minutes).

• Assistance

Press the assist button to enter the massage cleaning function.
Press the [stop] button to stop during the process.

• Cleaning strength

Water flows out from the cleaning outlet, and the strength can be seen on the control panel.
Press this button to adjust the water flow between strong, medium, and weak according to personal preference during cleaning.

• Cleaning position

This button adjusts the nozzle forward and backward. When extended, it is at the middle position of the original value.
Pressing the forward button during cleaning can extend the nozzle by 5mm based on the original value, and pressing the backward button can retract the nozzle by 5mm. There are 2 levels for forward and backward adjustment.

• Water temperature

This button adjusts the water temperature,
Which is divided into: normal temperature/low temperature/medium temperature/high temperature,
four gear cycle, which can be adjusted according to one's own preferences.

• Seat temperature

This button adjusts the seat temperature,
Which is divided into: normal temperature/low temperature/medium temperature/high temperature,
four gear cycle, which can be adjusted according to one's own preferences.

• Power saving

This button is the power-saving switch. When the power-saving indicator is on, it enters power-saving mode
(the seat temperature is intelligently adjusted by the system).

• Power supply

This key is the power supply on/off key.

• Children's Wash

After pressing, whether the human body touches the sensing area or not, it directly enters the hip washing function, and then presses again to enter the mobile cleaning .

Note: For models with a sensor switch, the toilet cleaning and drying functions cannot be activated if no one is sitting on the seat.

● Instructions for use

There's water coming out around the nozzle

Just sitting on the toilet seat and during the cleaning process, there may be water around the nozzle, which is the design needs of this product, not a fault.

※ In addition to the above conditions, if the water flow is not stopped, please close the water supply corner valve, pull the power plug out of the socket, and contact the purchased sales store or after-sales service department by telephone or fax.



The radio and television feel noisy

This product may interfere with radio and television reception. In this case, move the radio and TV to an undisturbed location.

The radio and television feel noisy

This product at the beginning of use, using the drying function will feel a slight odor, soon this odor will disappear.

With an induction window

When you do not sit on the toilet seat, even if you mistakenly press the open key, the cleaning water will not spray out, because this product is equipped with a seat induction window, so when you do not sit on the toilet seat, the buttocks cleaning, women's special cleaning, warm air drying and other functions do not work.

In addition, when the toilet cover is covered or the toilet cover is covered, the inappropriate cover will cause the induction window to run or not run.

※ In case of power failure while sitting on the toilet seat, even if the power supply is restored immediately, functions such as hip cleaning will not work. At this time, please get up from the stool and sit down again after 1 to 2 seconds.

Power-saving function

The following actions can effectively save energy.

- Do not blindly set the temperature of the seat and warm water too high, should be adjusted to not affect the comfort level.
- Please adjust the temperature according to the temperature of spring, summer, autumn and winter.
- Try to use the power saving features.
- Please cut off the power supply when going out for a long time.

※ When freezing is possible, please take anti-freezing measures.

Condensation time

Due to the difference in temperature or humidity between the room temperature and the surface temperature of the toilet seat and cover, water droplets (condensation) may appear on the surface of the toilet seat and cover.

To prevent condensation, ventilate adequately. When condensation occurs, wipe it with a dry cloth.

※ Dew will leave marks on the ground or damage the ground.

Close the toilet seat and cover slowly

In order to prevent the toilet seat and toilet cover from closing suddenly, the product has a slow lowering function, so that it can be closed slowly.

※ Please note that forced shutdown will cause a fault.



Other

- Make sure to avoid washing when installing the toilet;
- When the water flow of the spray rod is in the same setting, the water flow is obviously slow or small, please replace the filter in the waterway in time to ensure the water flow.
- Please use the new hose that comes with the appliance, not the original and old components It can be reused.

● Cleaning and maintenance method

Daily Er Cleaning and Maintenance

Toilet seat, toilet cover, protective cover type (plastic parts) cleaning and maintenance methods

- Wipe with a damp, soft cloth.
If the dirt is not removed in time, it will become difficult to clean. You can often wipe the dirt with a soft damp cloth.
In addition, scrubbing with water can prevent static electricity. Static electricity can cause fouling and blackening.

- Look out** When cleaning and maintaining the toilet seat, please do not use chloride-containing cleaners, acidic cleaners, disinfectants.
- ※ Otherwise, the product will fail or be damaged.
- Do not wipe with dry cloth or toilet paper.**
- ※ Otherwise, it is easy to scratch.



About antibacterial section

The nozzle, toilet seat and toilet cover are made of antibacterial resin, and the switch panel of the operation department is made of antibacterial film.

Warn

- Do not spray water or detergent on toilet seats and power plugs.**
- ※ Otherwise, it may cause electric shock and fire.



Look out

- When cleaning and maintaining plastic parts, do not use inappropriate cleaning agents (such as toilet cleaning agents, household cleaning agents, bleach, benzene, paint thinner, detergent powder, cresol).**
- ※ Otherwise, plastic partial cracking will cause personal injury and electric shock start a fire.



- Look out** When cleaning and maintenance, you must press the power button to confirm that the power display light is off.
When cleaning the nozzle, please do it in the power on state.

● Installation instructions


Please be sure to correctly install according to this instruction manual. Before installation, please check the following parts in the parts package:

Warn


● Installation Step 1. You will use:




①. Remove the old toilet cover and wipe the toilet clean. After removing the expansion glue post screw, put the rubber into the toilet fixing hole.

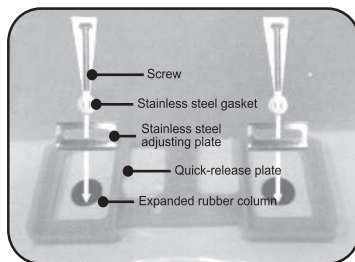

②. Place the fixed base plate, stainless steel adjusting plate, stainless steel gasket and the expansion rubber column hole in turn.

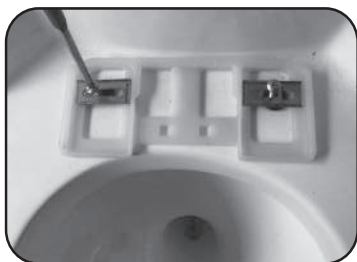

③. Lock the stainless steel screws, do not turn too tight at the beginning, fix the bottom plate left and right center position, turn the stainless steel screws tight, so that it does not shake.

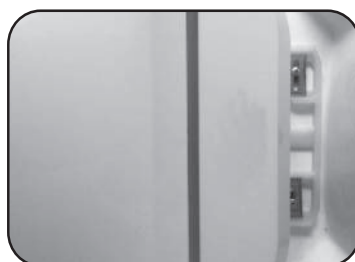

④. When installing the cover plate on the toilet, hold the side of the body with one hand and push it slowly parallel with the other hand until it is pushed.

Disassembly method



When separating the main cover plate from the ceramic, press the sliding rod next to the product name plate with the right hand inside, and then drag it outward, and the main cover plate can be pulled out. See the figure for the specific direction.

Warm reminder

1. First through the water after electricity, to prevent long-term flooding.
2. Turn off the power supply and water supply before disassembling.

● Installation step 2. You will need:



1. First take out the tee in the hose into the corresponding hole. One end of the tee is connected to the water source, and the other



2. Insert the other end of the feed pipe into the corresponding socket of the toilet.

Explain:

This step is to prepare for connecting the toilet to the water source, just like giving half of the tap water to the smart toilet! This way, there will be clean water in the toilet seat cover.

Tips:

After connecting the water pipe, if the new product has water flowing from the wand, please plug in the power and it will automatically reset and stop the water flow.

Please pay attention when the main body and the water pipe are installed

1. After the water supply pipe is installed, remember to turn the angle valve back to the open state.
2. After the main body of the toilet seat cover and the water supply pipe are installed, please connect the water first and then turn on the power.
3. If you need to disassemble the main body, please close the angle valve first, then turn off the power, and then reverse the steps for connecting the water supply pipe.

1. Daily cleaning of the wand

In standby mode, extend the wand slightly to a position suitable for cleaning, and use a toothbrush to clean the rear wash and feminine wash water outlets. After cleaning, restart the power once to retract the wand into the main body.



2. Cleaning the toilet water line

It is recommended to do it once a month. Use a damp cloth to press the seat sensing area (except for models without a sensing switch) until you hear a beep, then use a basin or plastic plate to block the direction of the water outlet of the wand (to prevent water from splashing on the body) and press the seat to clean until it stops automatically and retracts.

WARNING

1. The accessories of the smart toilet seat cover have been adjusted at the factory, and it is strictly forbidden to disassemble them privately. If there is any problem, please contact the local dealer or our after-sales service department.
2. All the contents of this user manual are based on the latest information of the product at the time of printing. The company reserves the right to make changes without further notice.
3. If the power cord is damaged, for safety reasons, it must be replaced by a professional from the manufacturer, its repair department, or a similar department.

● TECHNICAL INDICATORS

specification		110-120~ 60Hz 1000W
Water supply	Way	Connect directly to the water pipe
	Use pressure	0.08-0.75MPa (0.8-7.5kgf/cm ²)
Cleaning device	Butt wash water	0.75L/min
	Female cleaning water	0.9L/min
	Temperature adjustment	Normal/low temperature about 33 C/medium temperature about 36 C/high temperature about 40 C
	Heating power	1000W
	Safety devices	Dual switch for temperature control and protection, water temperature sensor
Seat heating device	Temperature adjustment	Normal/low temperature about 33 C/medium temperature about 36 C/high temperature about 40 C
	Heating power	45W
	Safety devices	Temperature Fuse
Heater drying heating device	Temperature adjustment	Wind temperature 32-48 C
	Heating power	250W
	Safety devices	Thermosensitive device
Other safety devices		Leakage protector
Power cord length		1.5m

- WARMTH: IF YOU HAVE ANY CHANGES, YOU WILL NOT BE NOTIFIED.

● Request maintenance confirmation

Condition	Condition	Condition
No start at all	The power is off or the power socket is not connected	Make sure the power plug is plugged in
		Remove the power plug and reinsert it
Rinse water is not flowing or flowing smoothly	Whether the water supply is off or the water supply valve is closed	Check the water source and open the water supply valve
	Whether the water filter is blocked	Please clean the filter
	Whether the nozzle is blocked by scale	Please clean the nozzle with a toothbrush
Leak	The connection of the water supply pipe is tight	Please tighten the connection of the water supply pipe
Water temperature, seat ring cool	Whether the water temperature and seat ring temperature are adjusted to normal temperature	Please readjust the temperature

Smart bathroom core technology