

IMPORTANT SAFETY INSTRUCTIONS


- To avoid injury or damage, mount only on a surface that is sturdy.
- To avoid electric shock, make sure the electricity is turned off at the main circuit breaker panel. If you are replacing an existing fixture, turn off the following in order: fixture, wall switch, and main fuse or breaker box.
Note: Some types of fuses must be unscrewed to shut the power off.
- If you are unclear as to how to proceed, please consult a licensed electrician.

UNPACK THE FIXTURE: Check the contents of the box. Box should contain all items on the parts diagram.

INSTALLATION INSTRUCTIONS

1. Measure Canopy (D) height with measuring tape. Adjust hex nut on Nipple (E) furthest away from Mounting Plate (A) to the height of measured Canopy (D) plus 1/4" to allow Nipple (E) to protrude through Canopy (D) during installation.
2. Secure Mounting Plate (A) to the junction box (not included) using Mounting Screws (B) provided. Ensure Mounting Plate (A) is positioned with Nipple (E) pointing away from the junction box.
3. Place Canopy (D) against the ceiling by inserting Nipple (E) through the appropriate hole located on Canopy (D). Adjust Nipple (E) and hex nut until 1/4" of the threaded portion is visible. Remove Canopy (D) and set it aside.
Note: If 1/4" of Nipple (E) is not visible, remove Canopy (D) and re-adjust the hex nut on Nipple (E) to proper length.
4. Secure Center Rod (J) to the top of Socket Assembly (K) and Fixture (M) to the top of Center Rod (J). Secure Pendant Loop (I) to the top of Fixture (M). Pull through any necessary Wire (H).
5. Assemble one end of Chain (G) to Pendant Loop (I) by opening Quick Link (L) closing it around Pendant Loop (I).
6. With chain pliers, remove excess Chain (G) to achieve hanging length. Once Chain (G) is to desired length, use wire cutters to cut Wire (H) 10" beyond the length of Chain (G) to allow for easier wire connection.

7. Weave Wire (H) upwards through every 4-5 links in Chain (G).
8. Secure top of Chain (G) to the loops on Canopy (D) with Quick Link (L). Carefully lift Fixture (M) (with the help of a friend). Insert the end of Wire (H) through the loop on Canopy (D) into the junction box.
9. Using the wire graph below, connect the appropriate wires from the fixture to the corresponding wires in the electrical junction box (not included) and secure Wire Connectors (C).

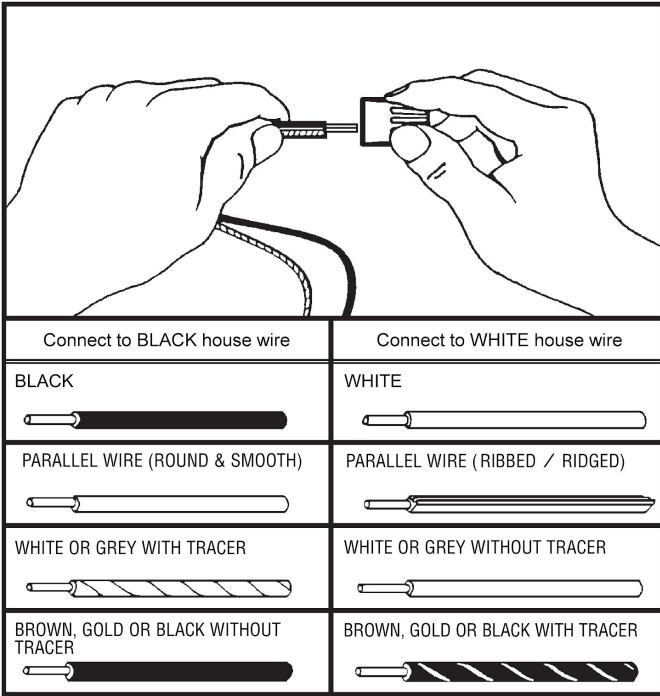

- A. Connect the ground wire (bare copper or green) from your fixture to the:
 - 1) ground wire in the junction box, or
 - 2) ground screw in the junction box
- B. Connect the BLACK house wire to fixture hot wire that corresponds to diagram (black, round & smooth, white/grey with tracer, brown/gold without tracer).
- C. Connect the WHITE house wire to fixture neutral wire that corresponds to diagram (white, ribbed/ridged, white/grey without tracer, brown/gold with tracer).

10. Place all Wires (H) and Wire Connectors (C) back into the junction box.
11. Place Canopy (D) against the ceiling, ensuring Nipple (E) is protruding through the hole in Canopy (D). Secure the fixture in place to Nipple (E) with Decorative Cap (F).
Note: If the fixture does not sit flush against the ceiling, remove Fixture (M) and readjust Nipple (E) and hex nut.
12. Install bulbs (not included) into the sockets.

Enjoy your new fixture!

HELPFUL TOOLS: Safety Goggles, Screwdriver, Wire Cutter/Stripper, Ladder, Measuring Tape

