 
 
 


80038 Product Installation Instructions

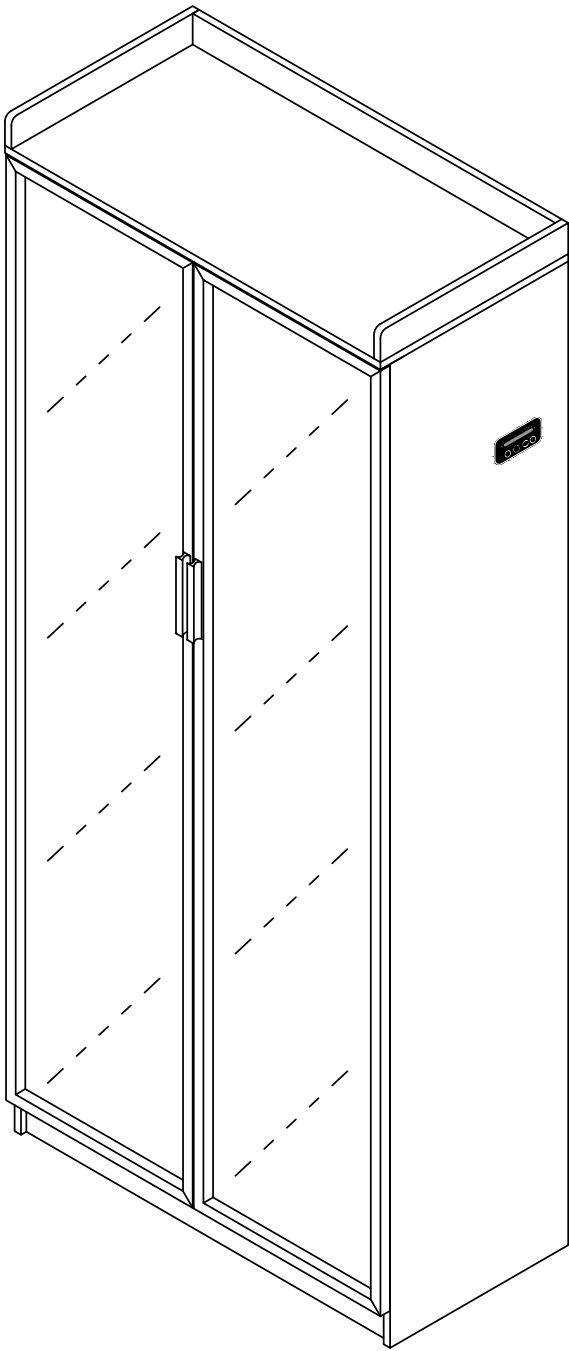


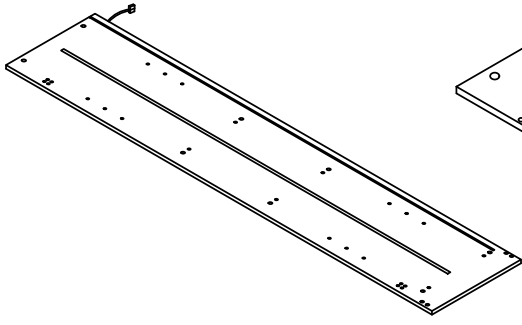


Ax1

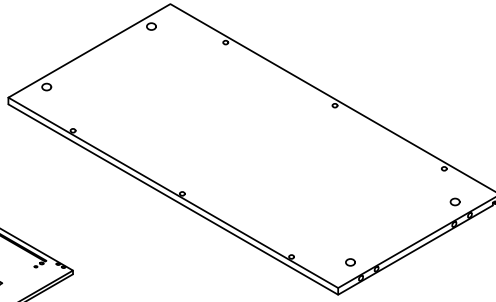

 
Bx1

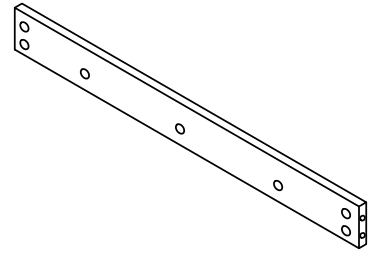


Cx2

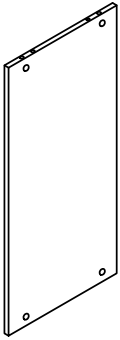 


Dx2

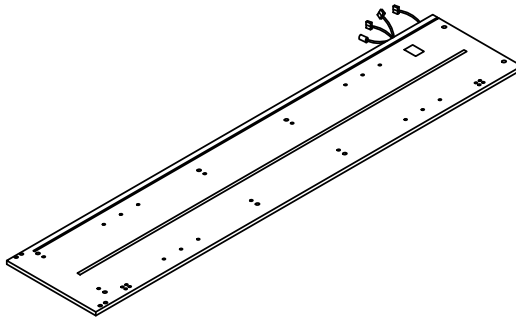 


Ex1

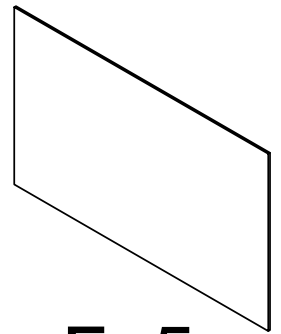 


Fx5

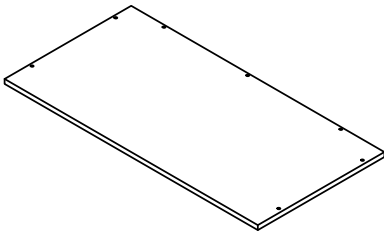 


Gx1

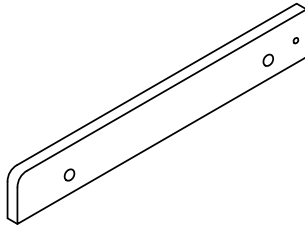 


Hx1

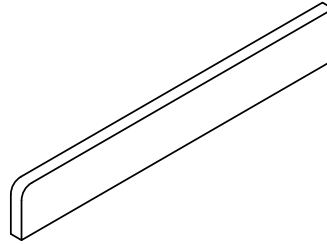 


Ix1

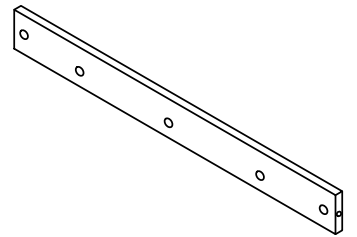 


Jx1

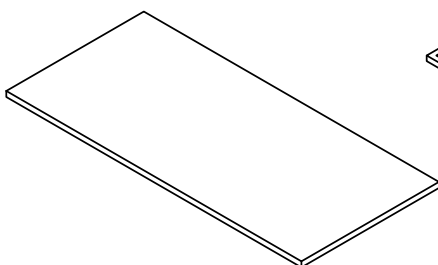 


Kx2

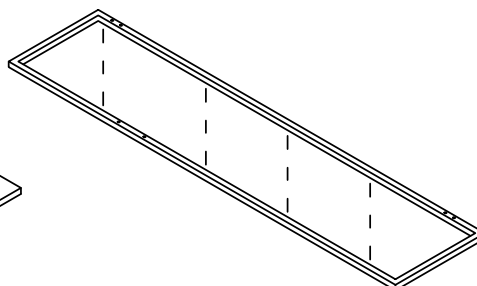 












Lx1

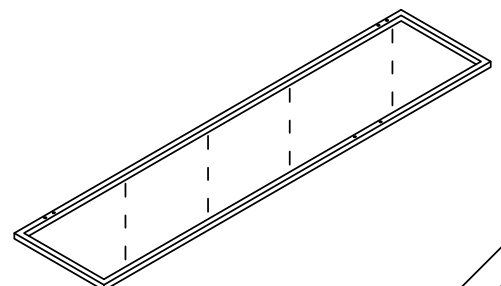 


Mx1





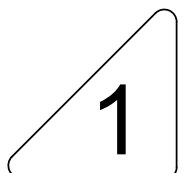 



1

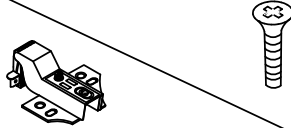           ①		Two in one screw (6x28mm)	39pcs +4pcs
②		Two in one nut (10x12mm)	39pcs +4pcs
③		Wood chipping (6x30mm)	16pcs +4pcs
④		Handle & screw (4x18mm)	4pcs +2pcs 2pcs
⑤		Non-slip pads (50x10x2mm)	6pcs +2pcs
⑥		Backboard card strip(675mm)	2pcs
⑦		Fixing clip & screw (3x16mm)	10pcs +4pcs
⑧		Foot nail	4pcs
⑨		Laminate Support Nail	8pcs +2pcs
⑩		Hinge & Screw (4x10mm)	8pcs +2pcs 4pcs
⑪		Screw (3. 5x12mm)	16pcs +4pcs
⑫	Anti-toppling hardware  x2  x2 (3. 5x14mm)  x2  x2 (4x45mm)  x4		
	AC/DC Adapter (12V=3. 0A)	1pcs	
 1pcs  Double-head screwdriver, use as required			
			2

      Product structure decomposition

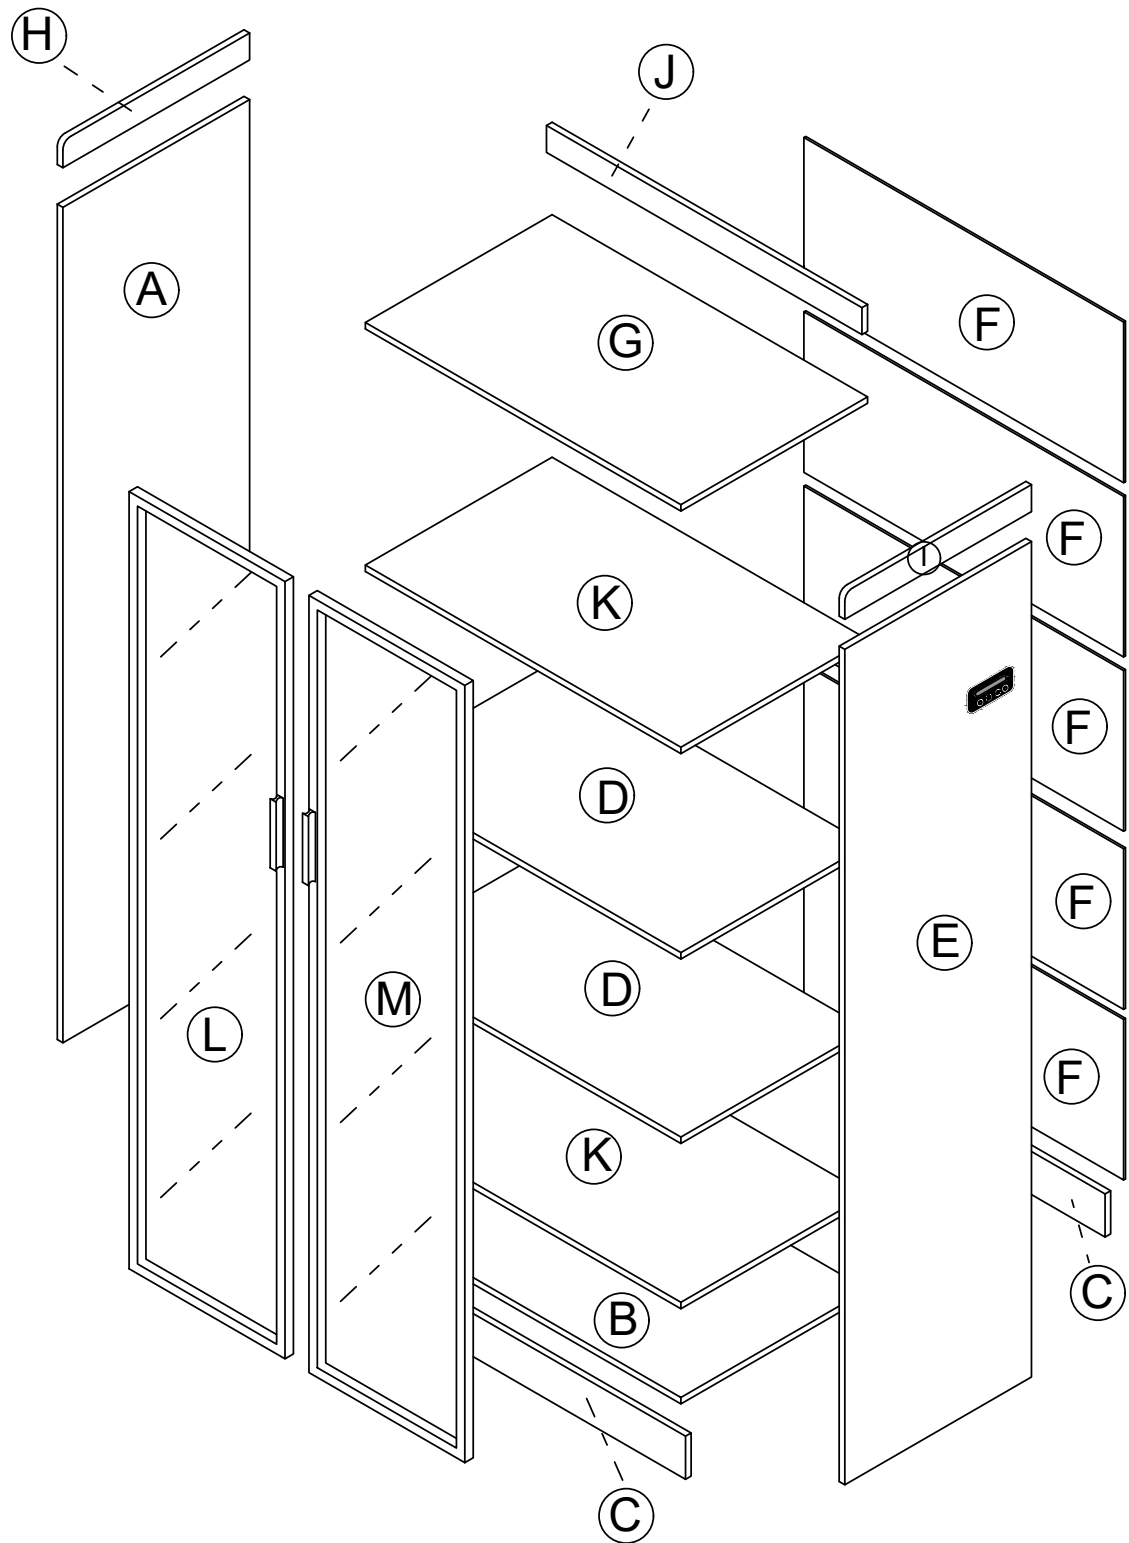


①		39pcs	③		16pcs	⑥		2pcs
②		39pcs	⑤		6pcs	⑦		10pcs
⑧		4pcs	⑨		8pcs			

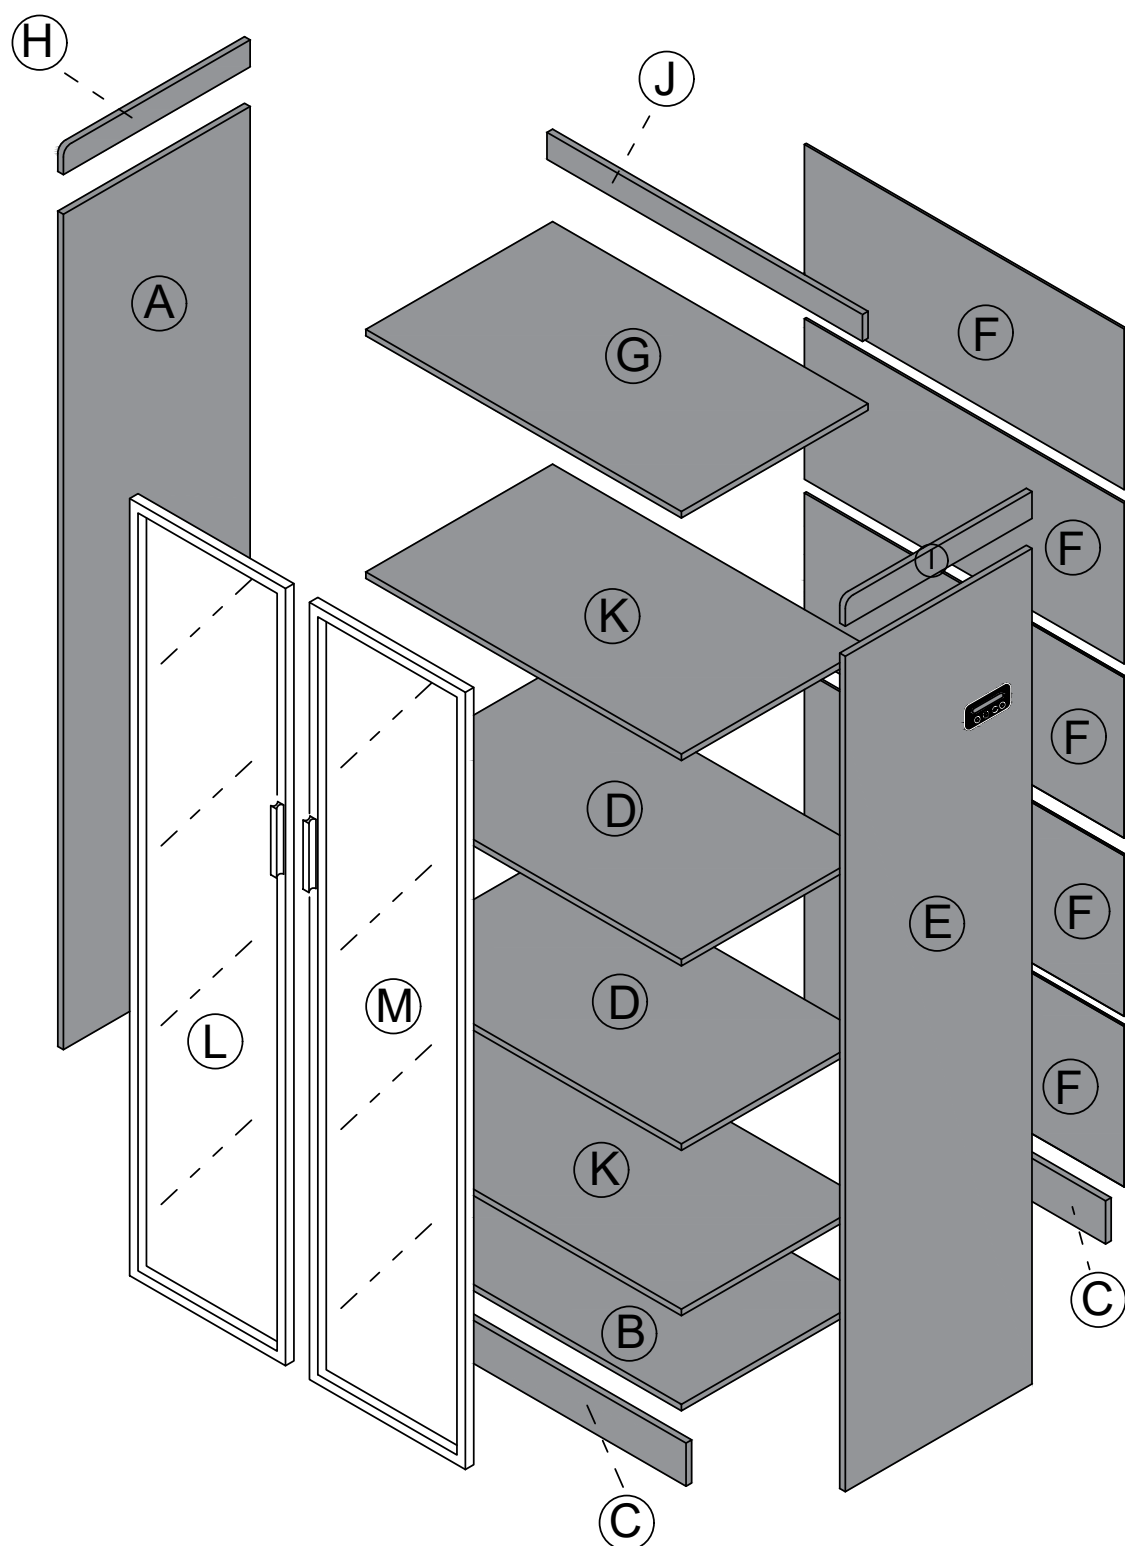 


Use parts ① and ②


 
Step1

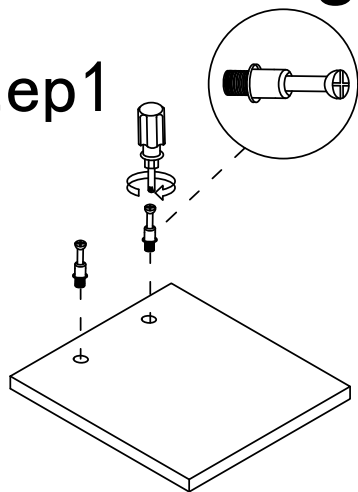

 
Step2

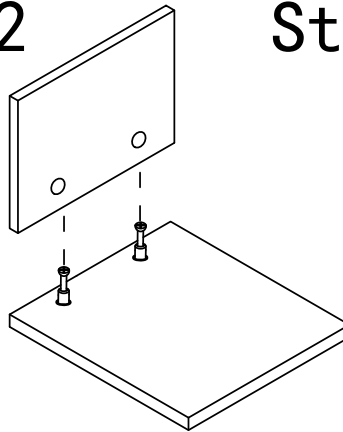

  Step3

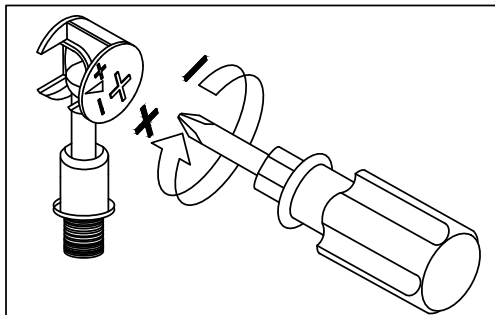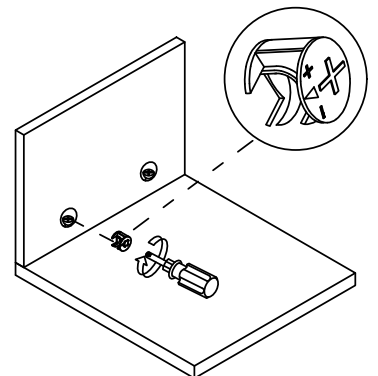



 
Use a screwdriver to lock in the direction of the "+" sign

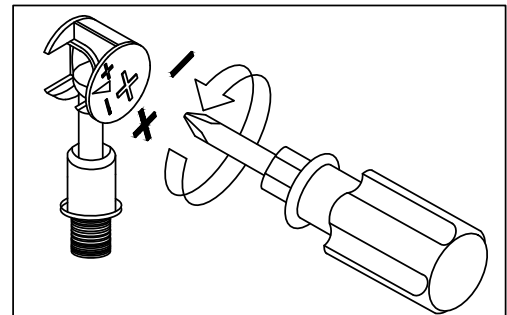



Disassemble along the direction of "-" sign

   Step 1

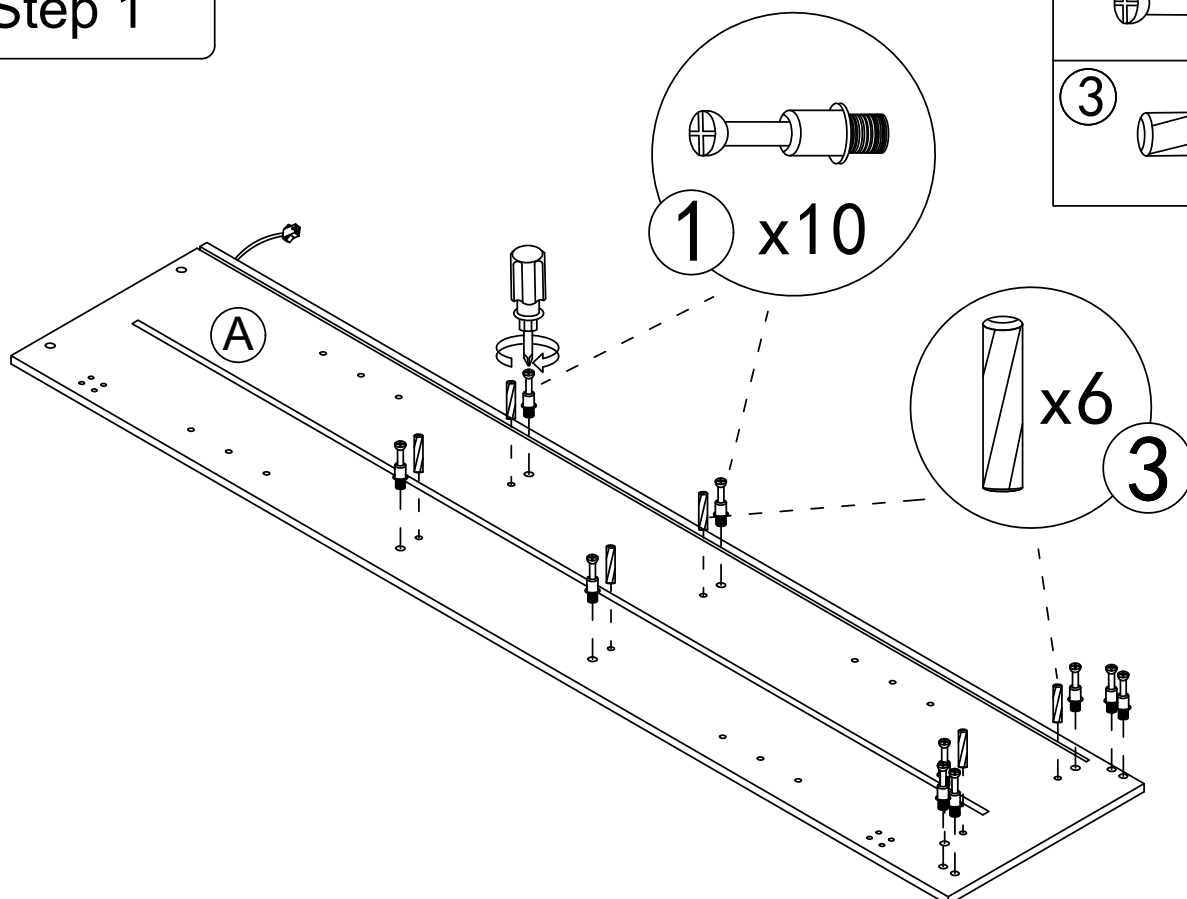


- ①  x10
- ③  x6

  Step 2

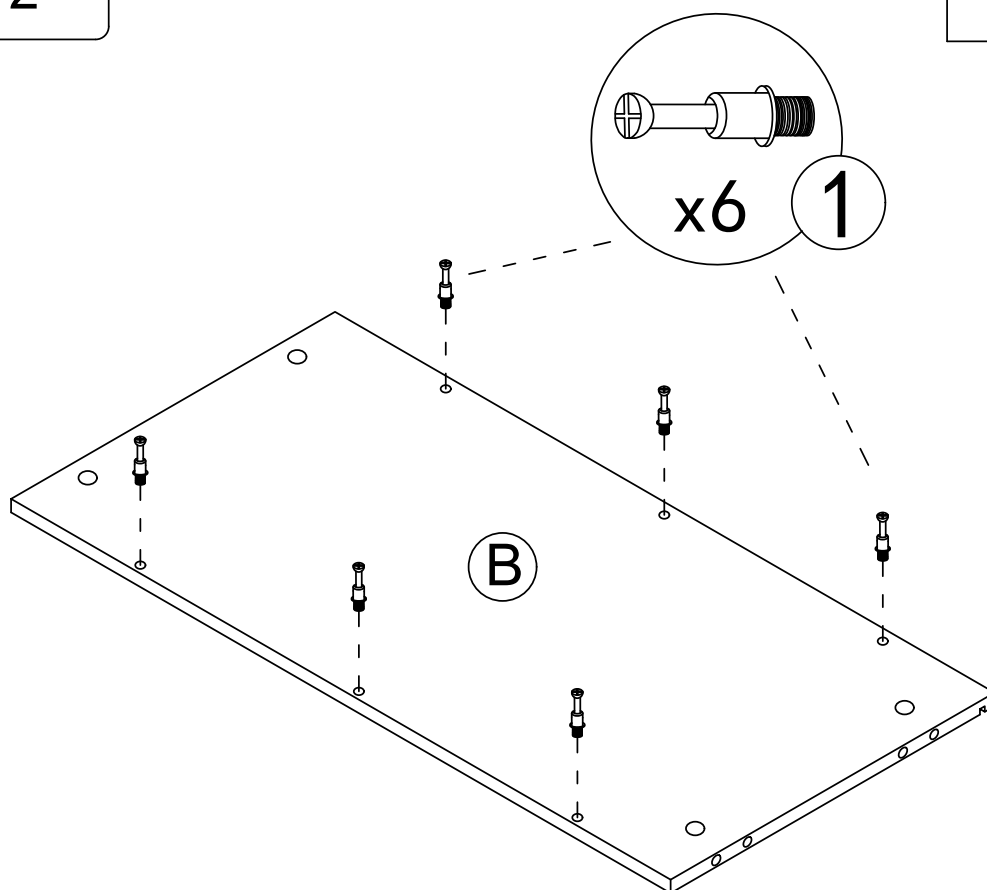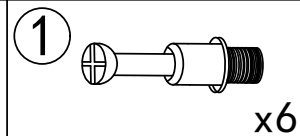

 Step 3

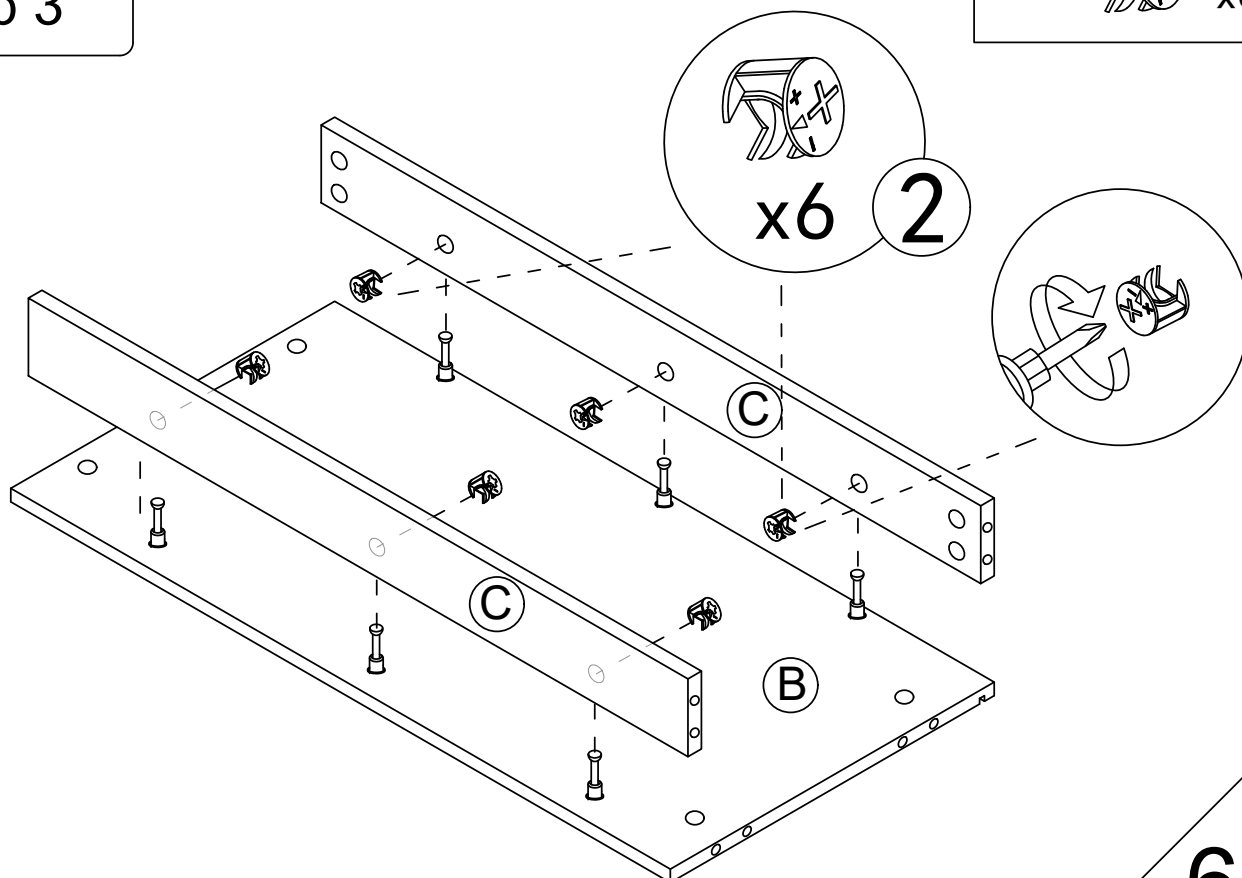


Step 4

2



 x6

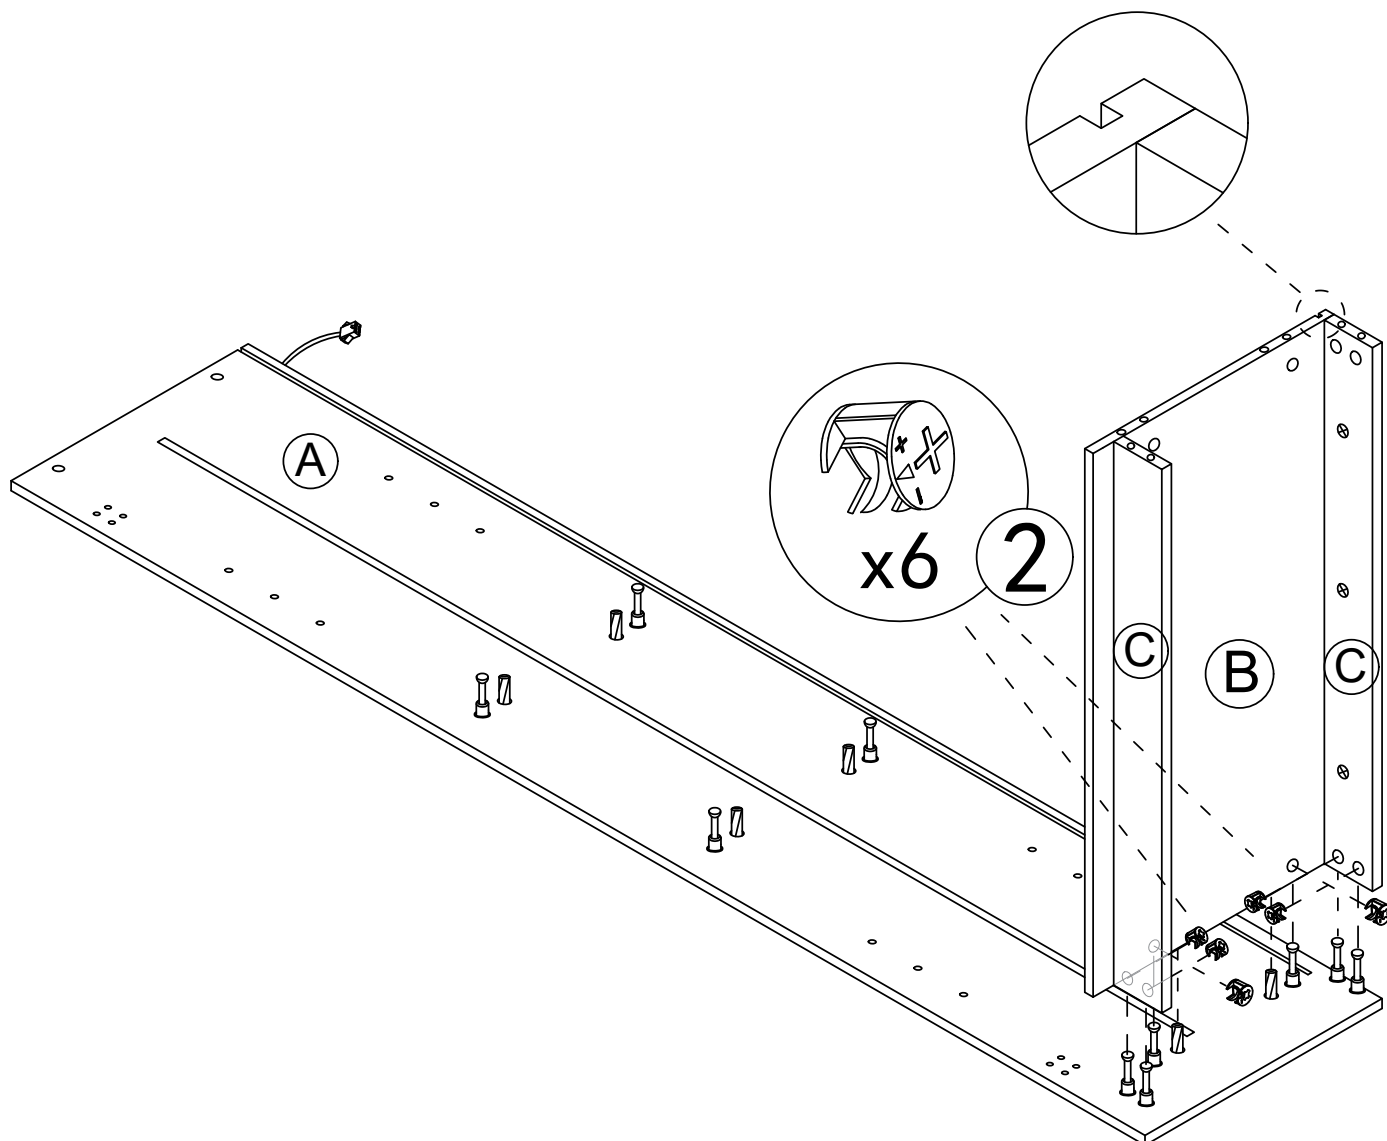


Step 5


2



 
x4

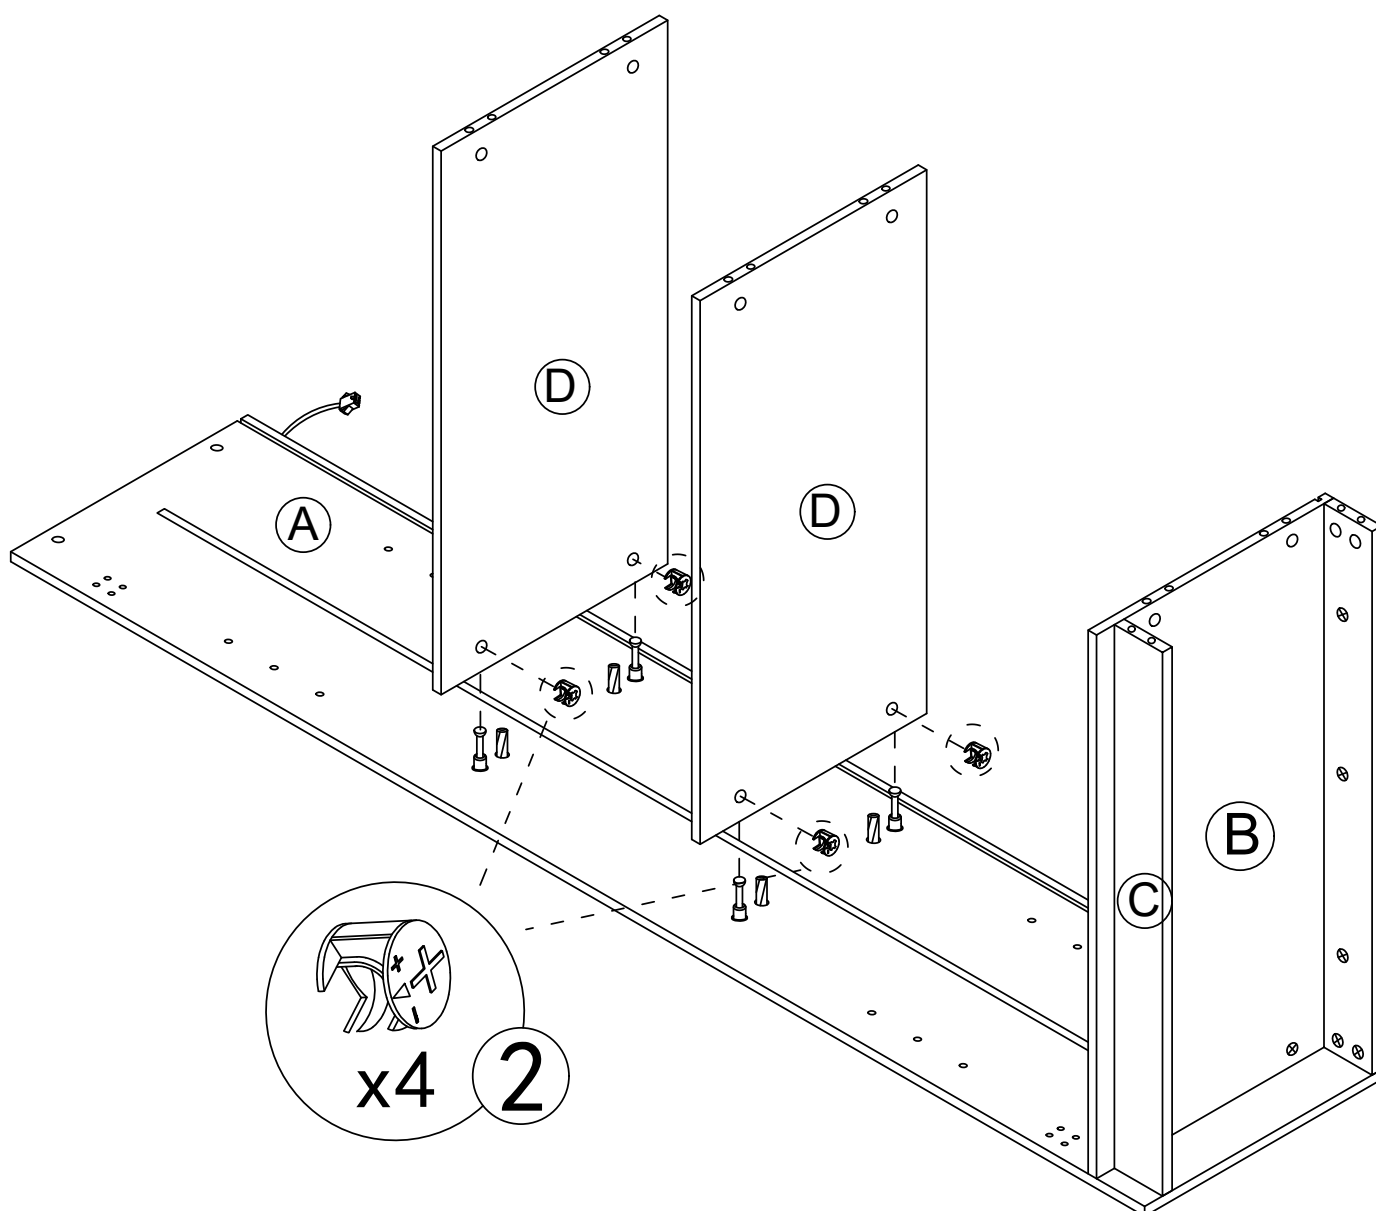

 Step 6

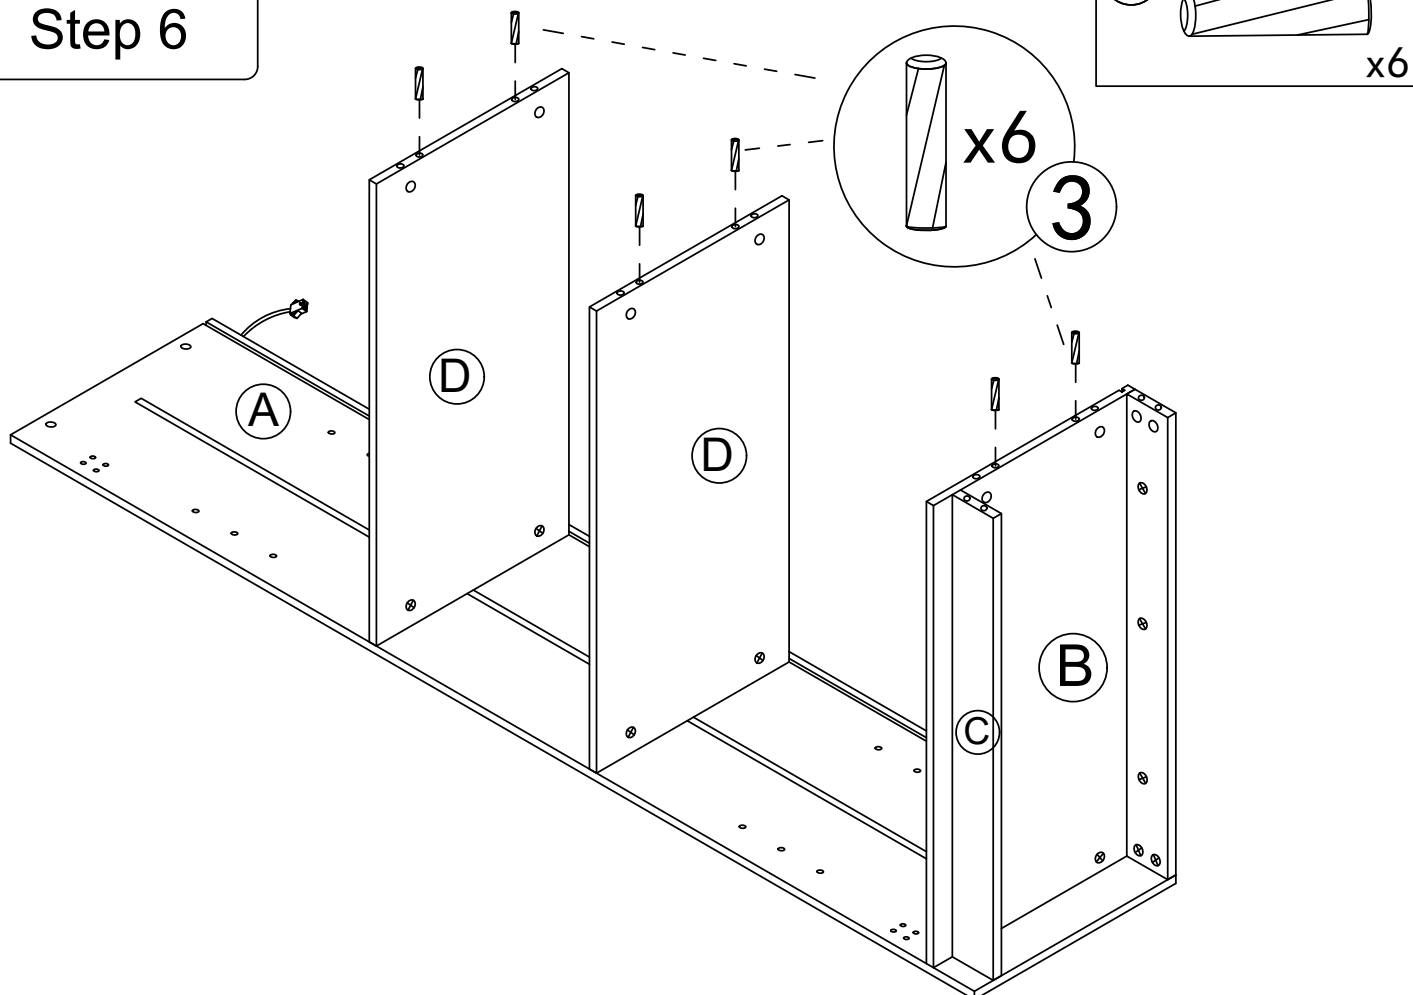

 Step 7

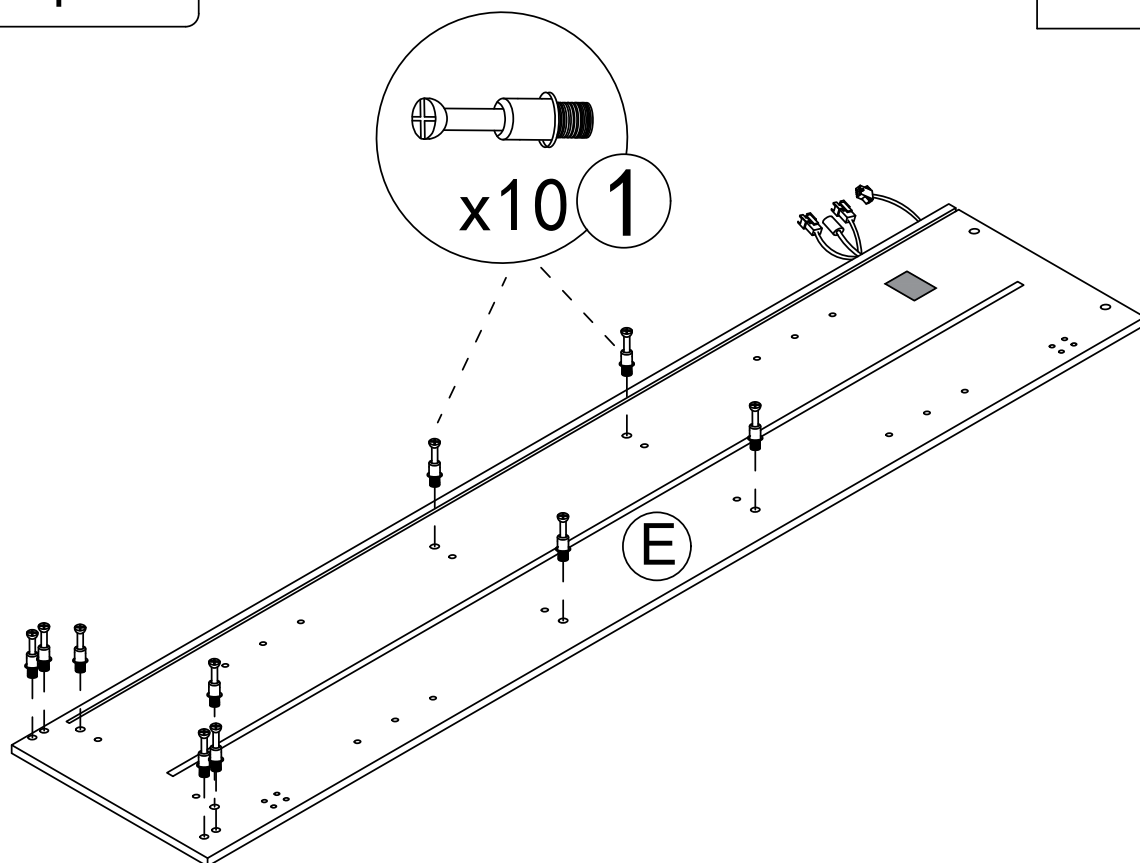


Step 8

2




 x10

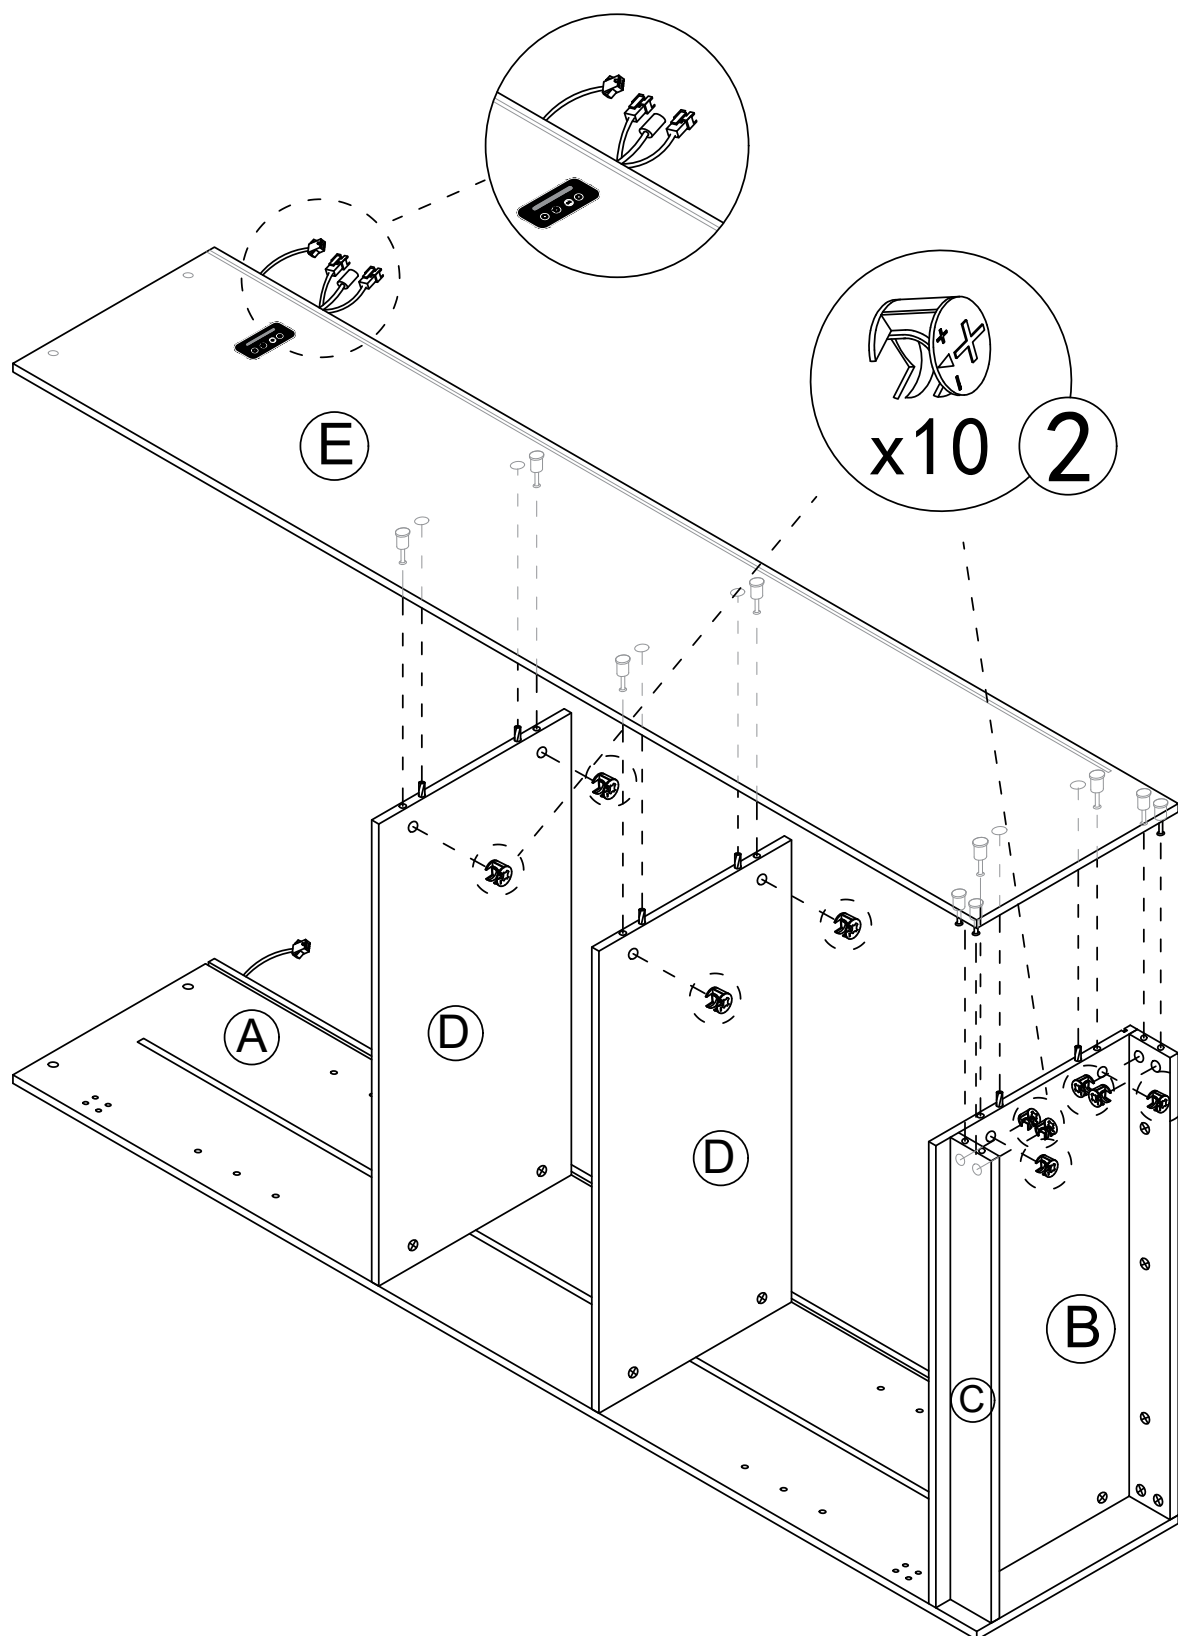


Step 9

 5

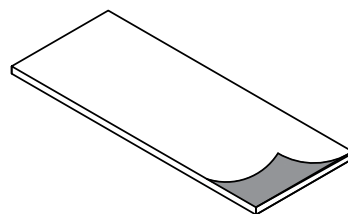

x6

 
Tear off release paper and stick the black foot pad on the board

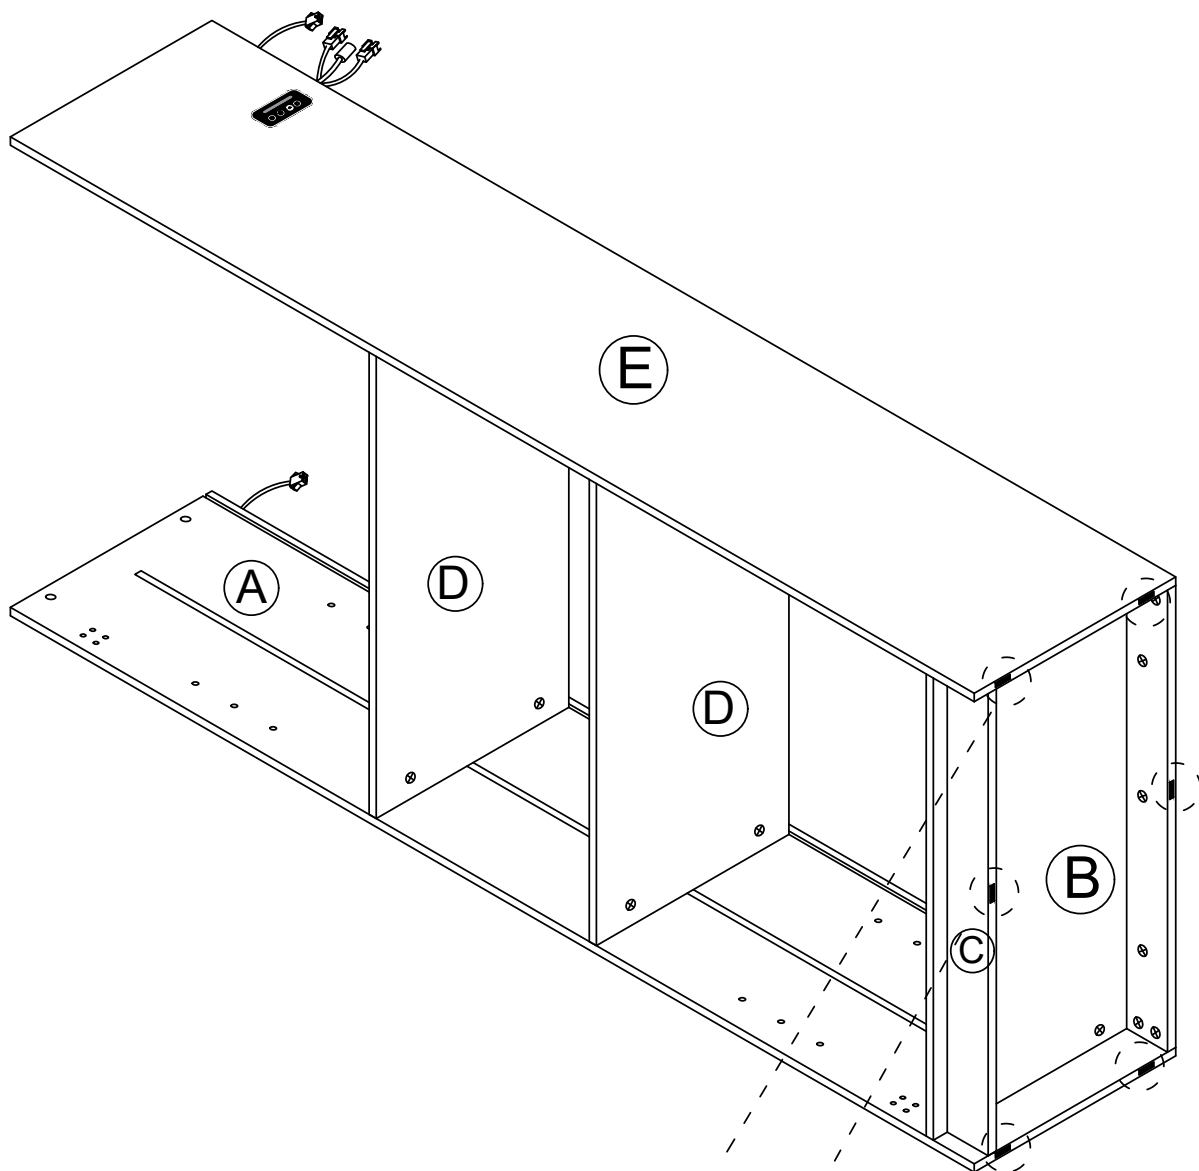

x6

5

 Step 10

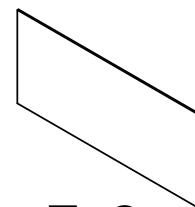

Fx2

 
6




x1

Clip in the two backboards


Insert the board into the slot

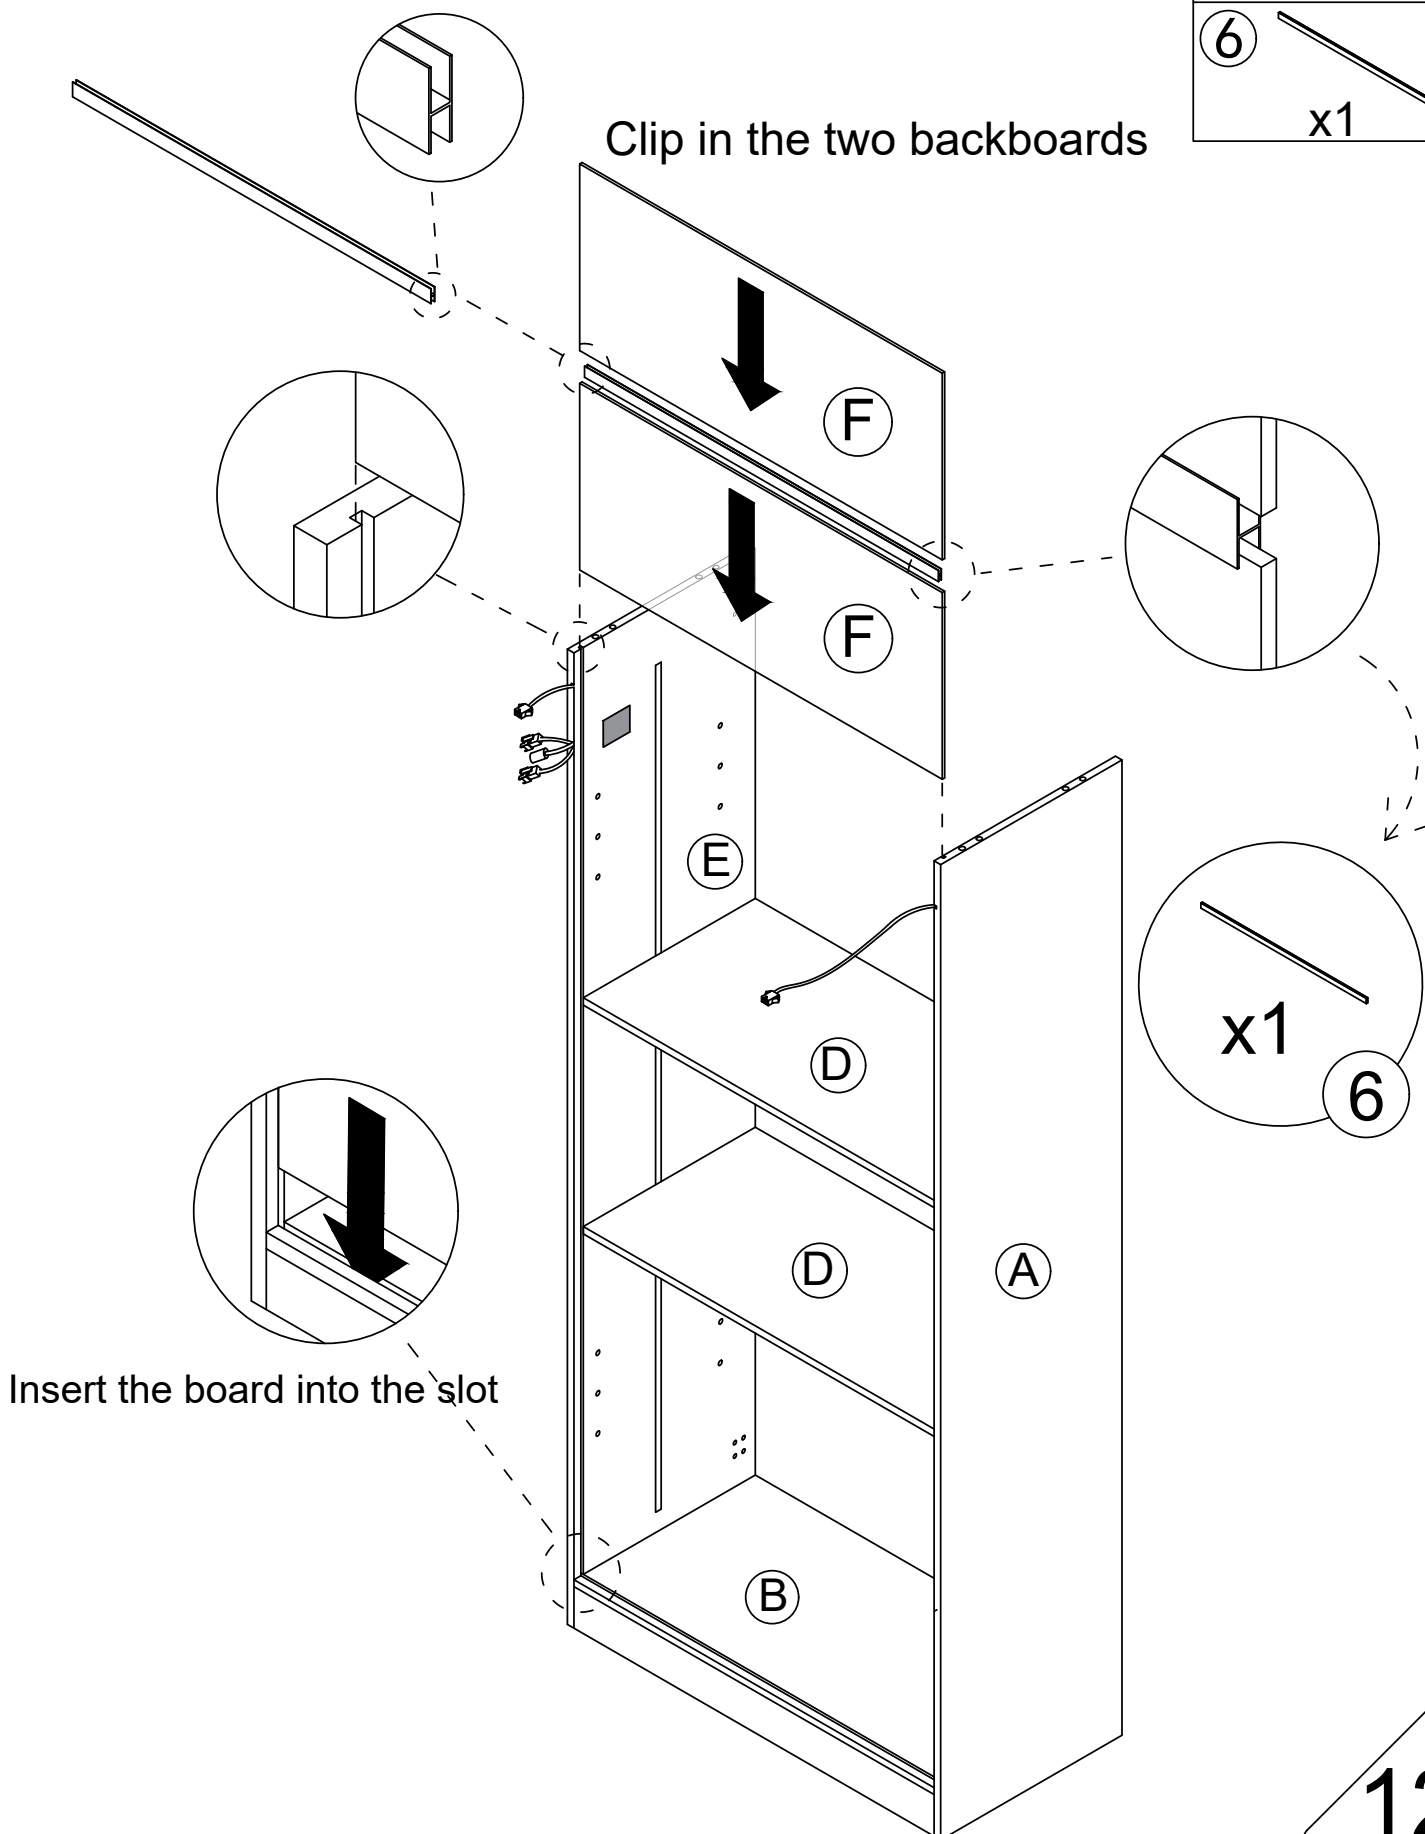

 Step 11

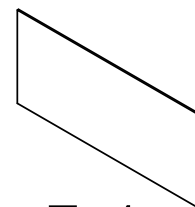


Fx1

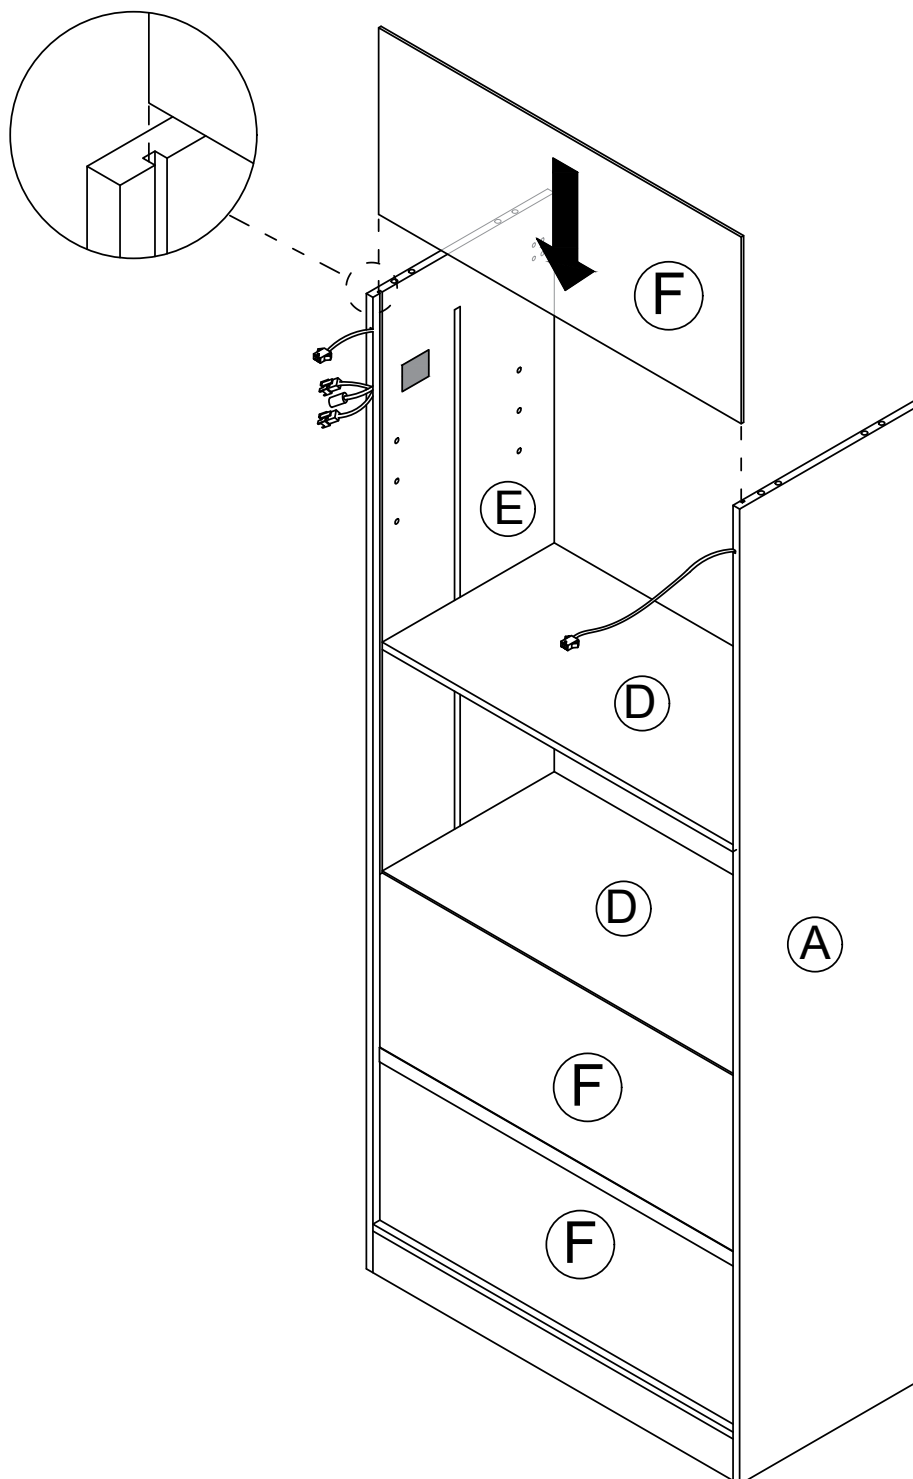 


Step 12

 Clip in the two backboards


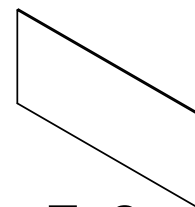


Fx2



 
6





x1

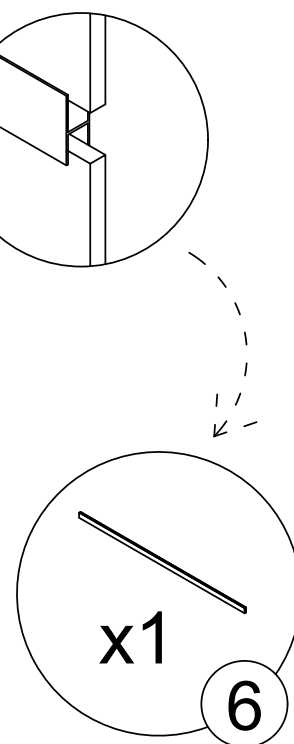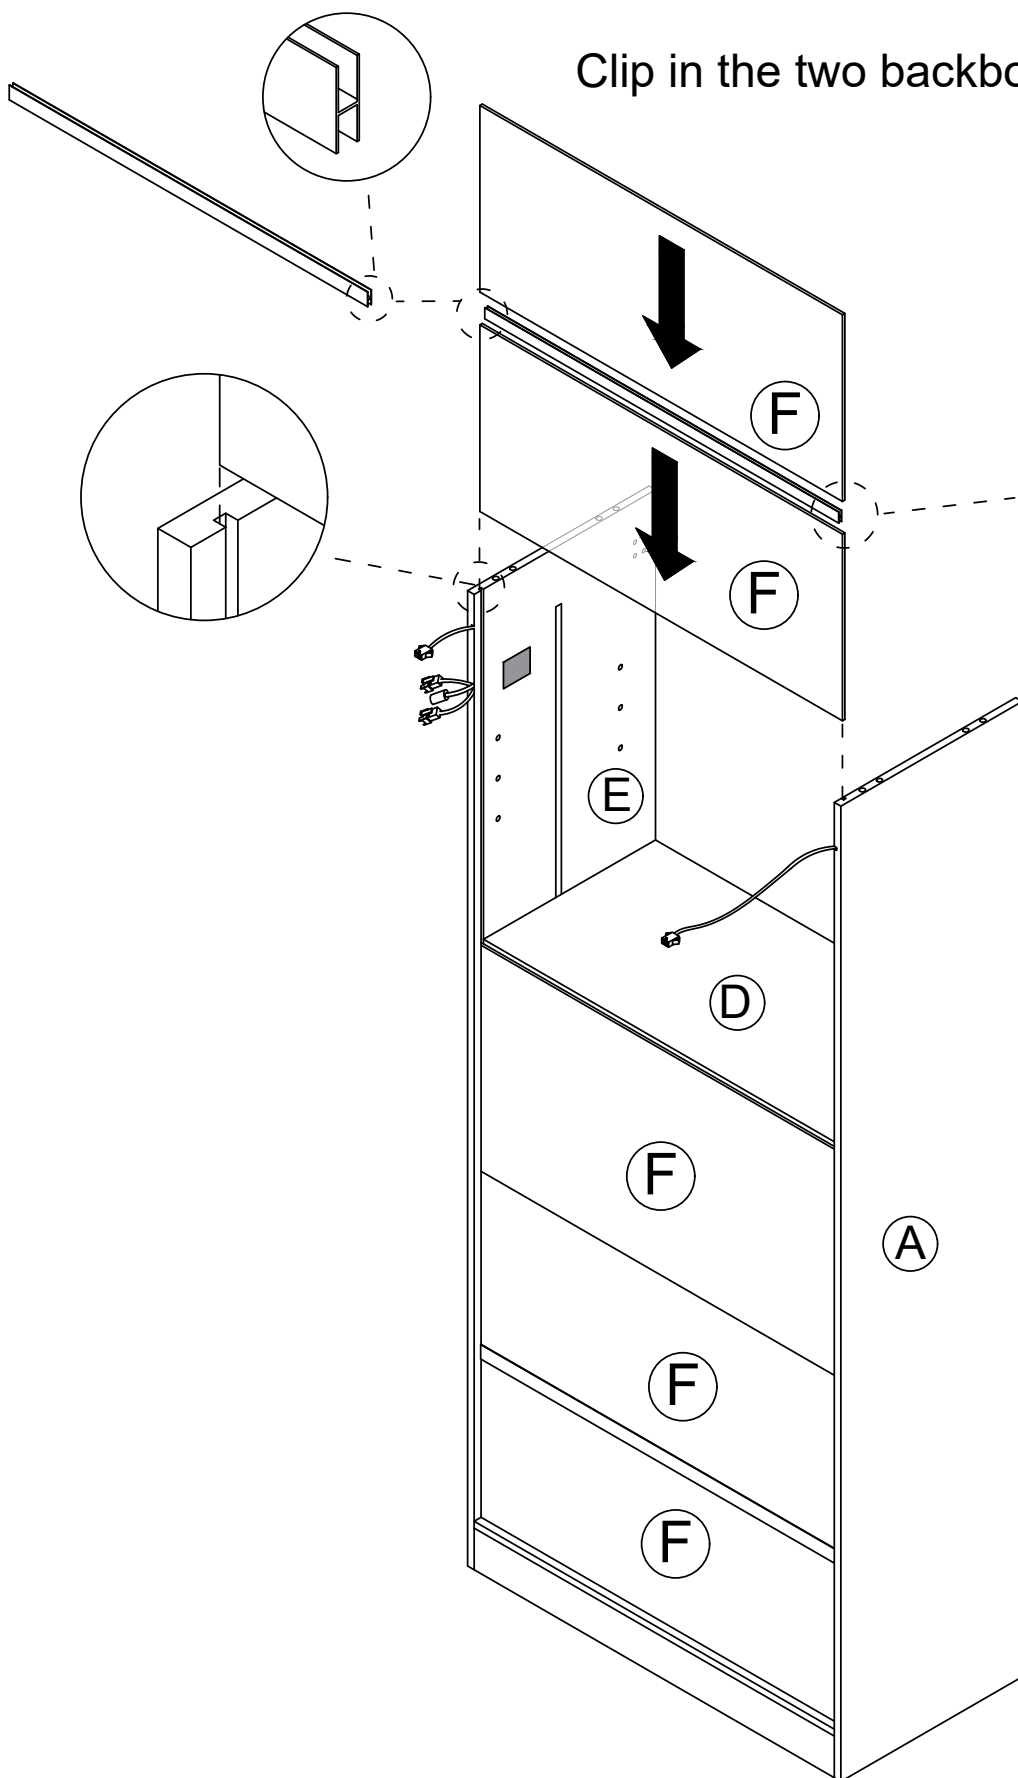  

   Step 13

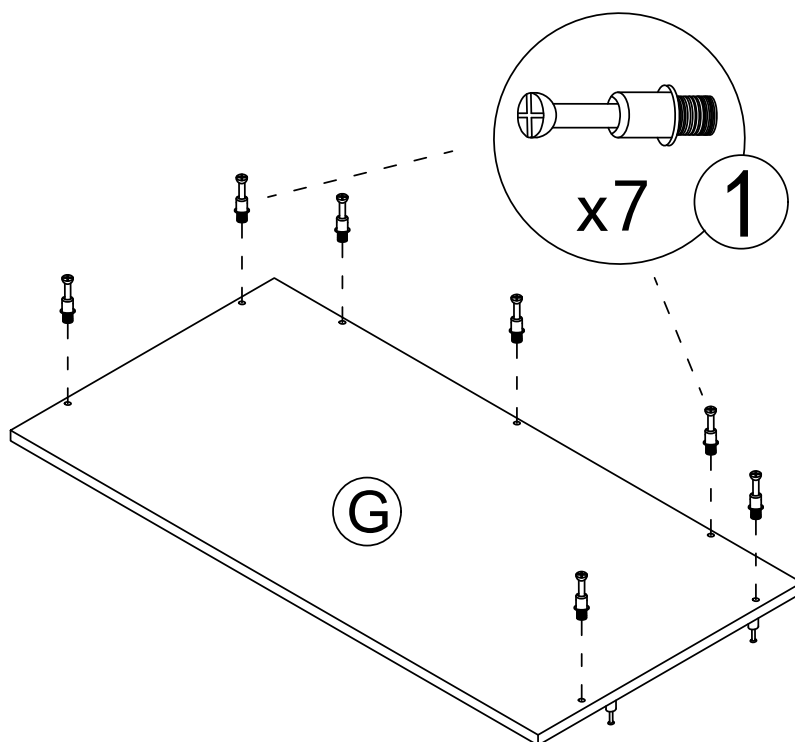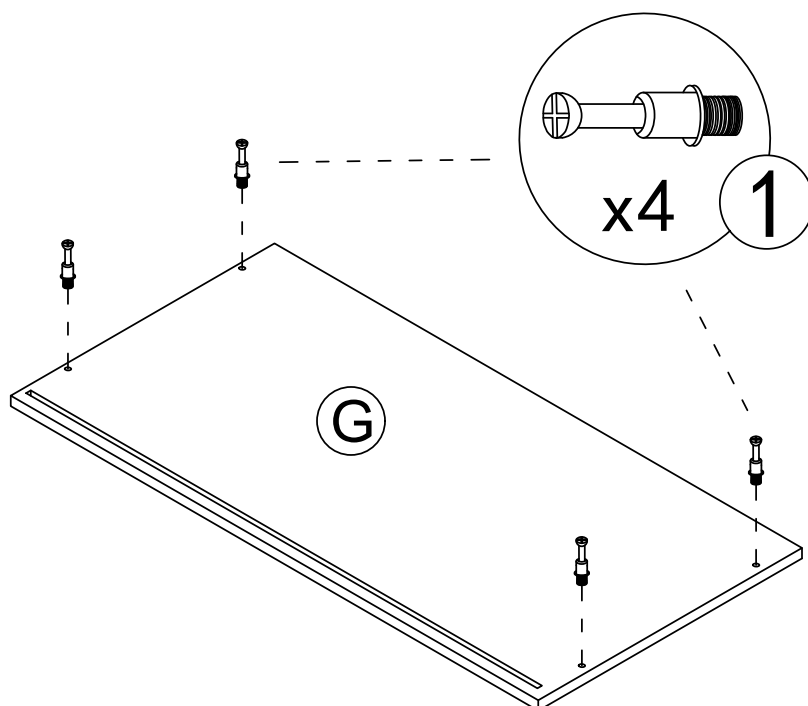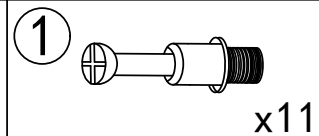

  
Step 14

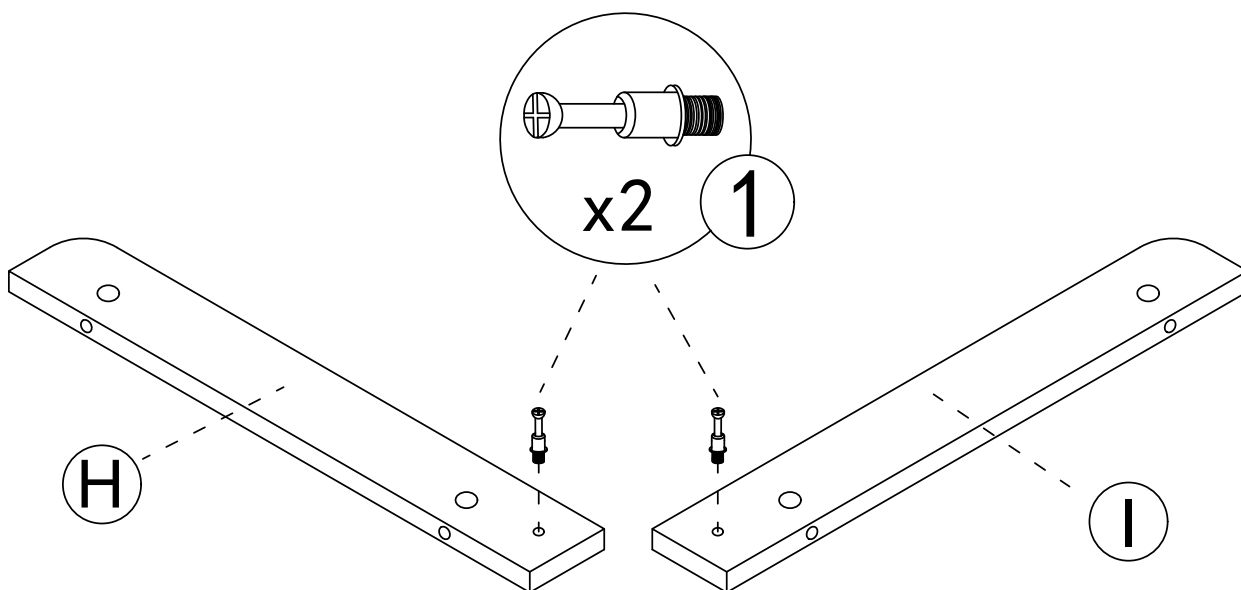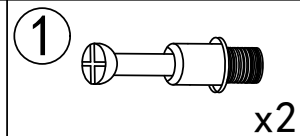

Step 15





 Pay attention to the hole position

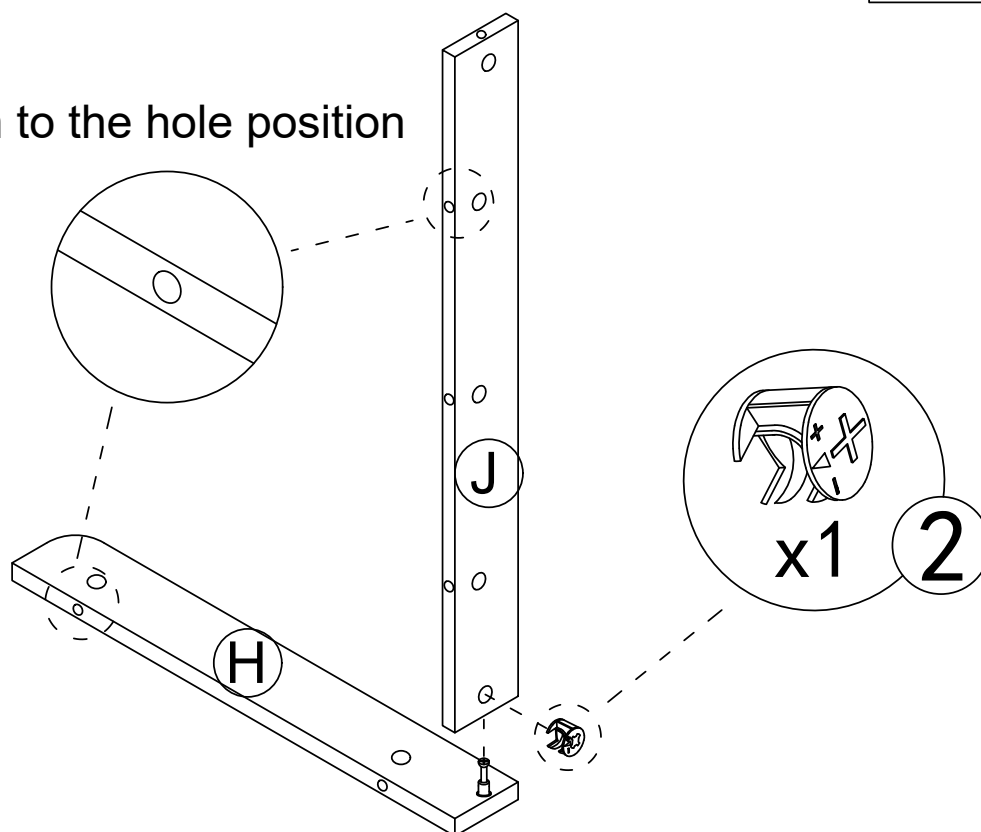



Step 16

  2

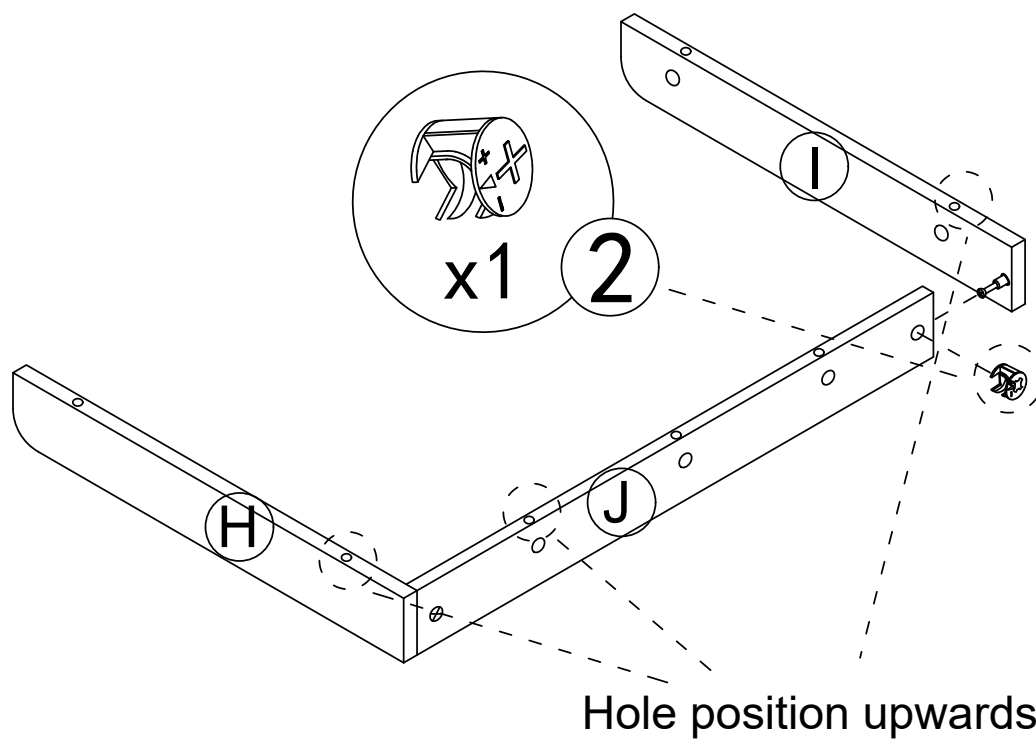



Step 17

  2

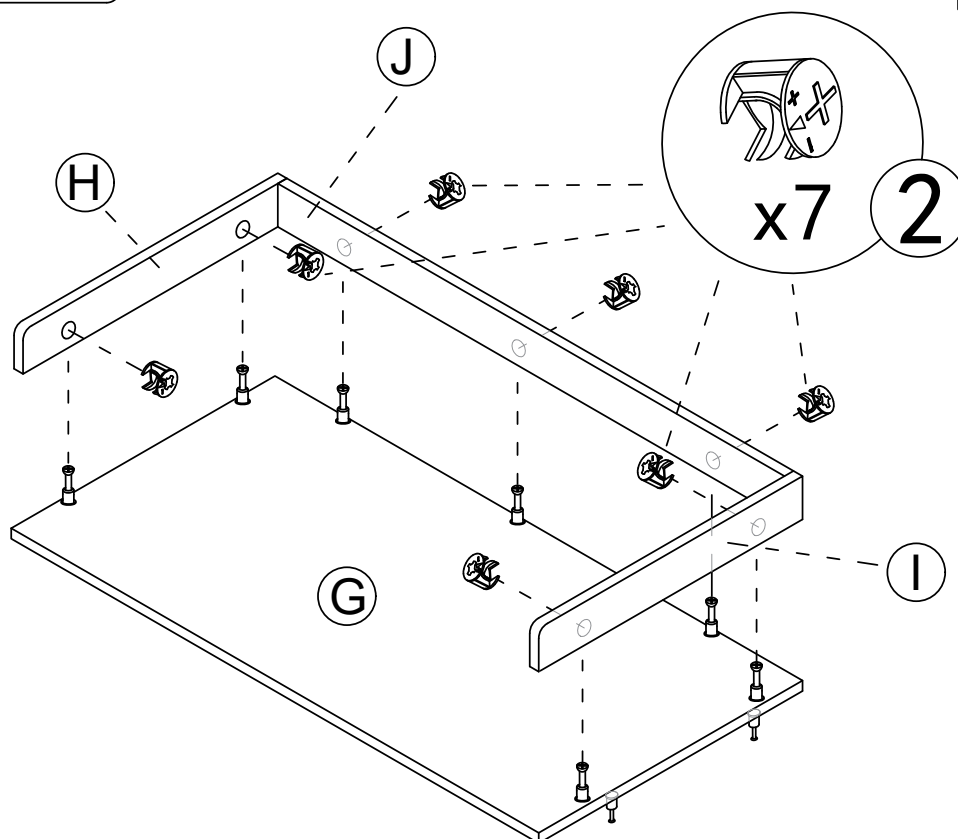

  Step 18

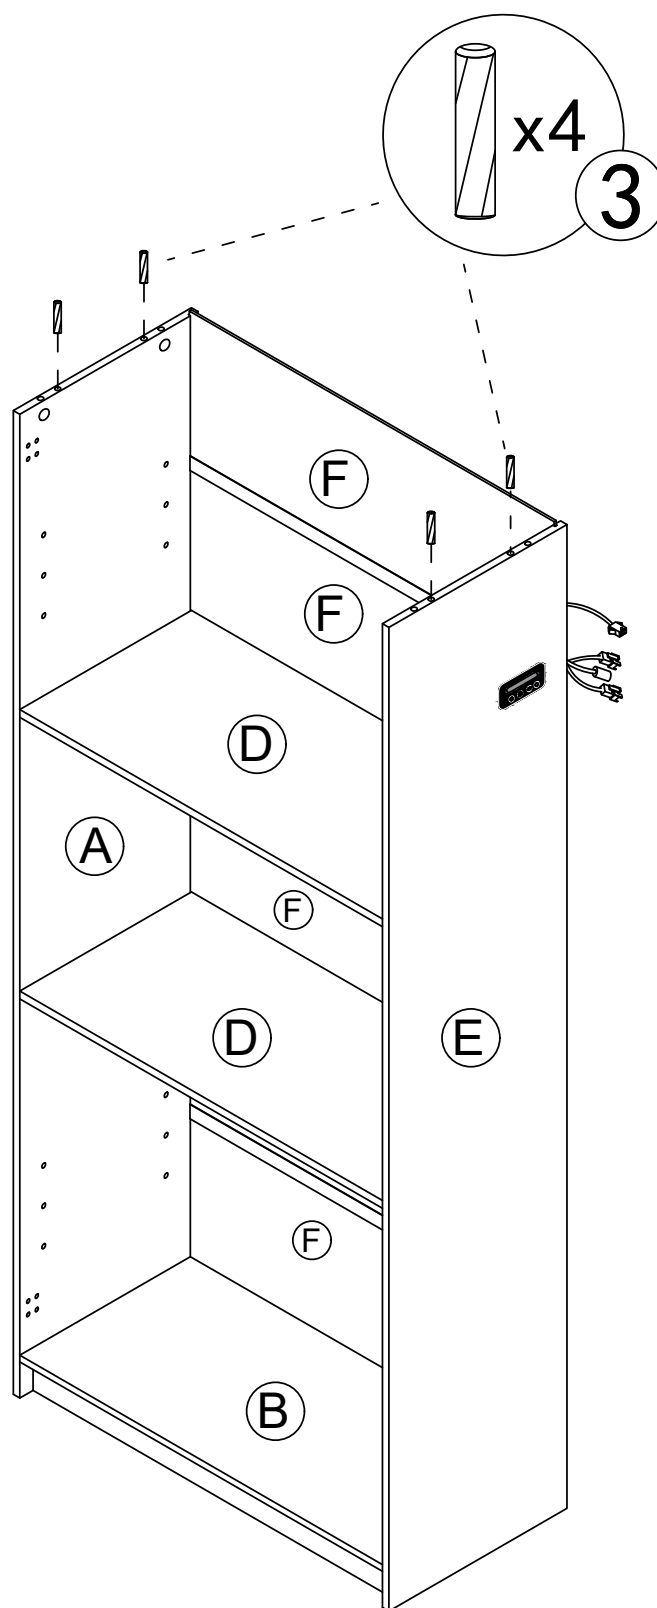
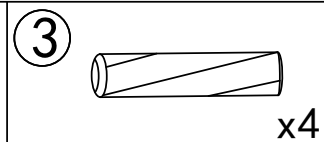


Step 19

2




  x4

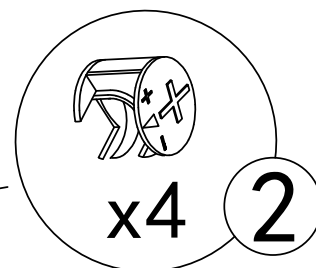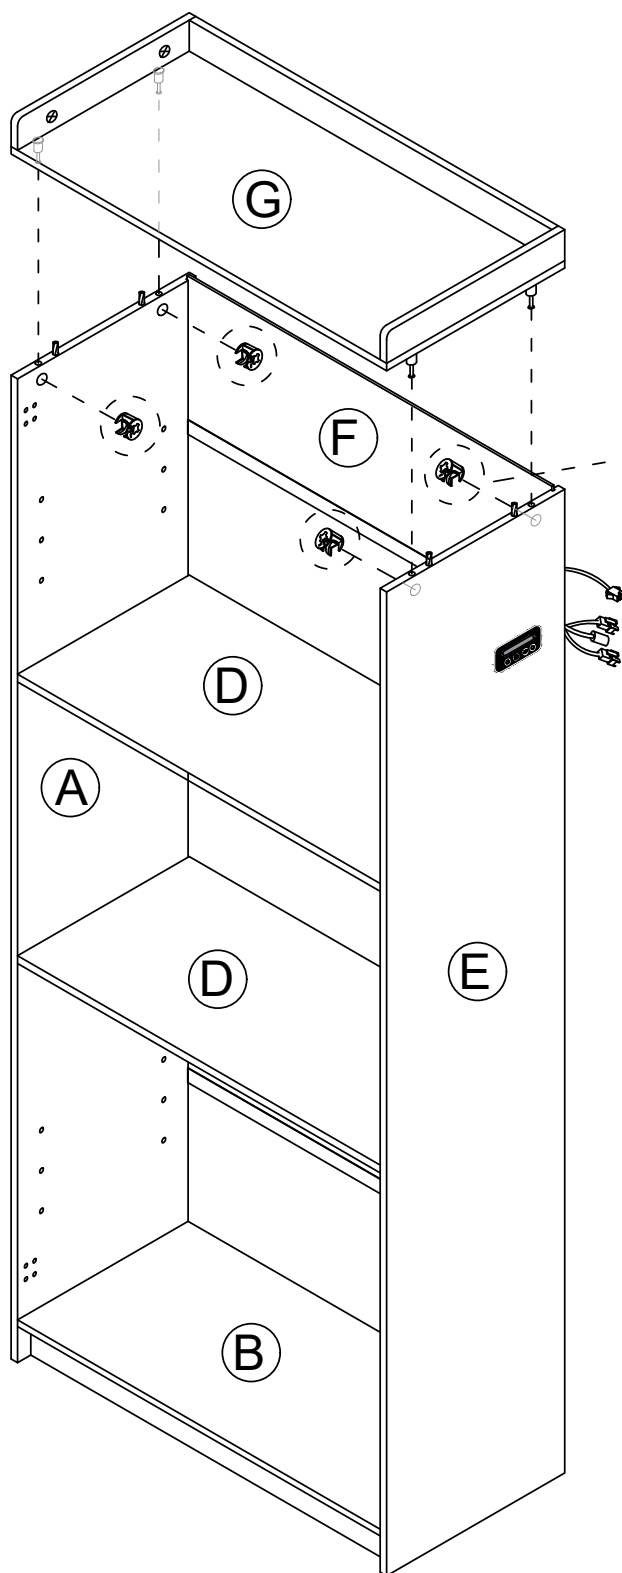



Step 20

 7



x10

  7 x10

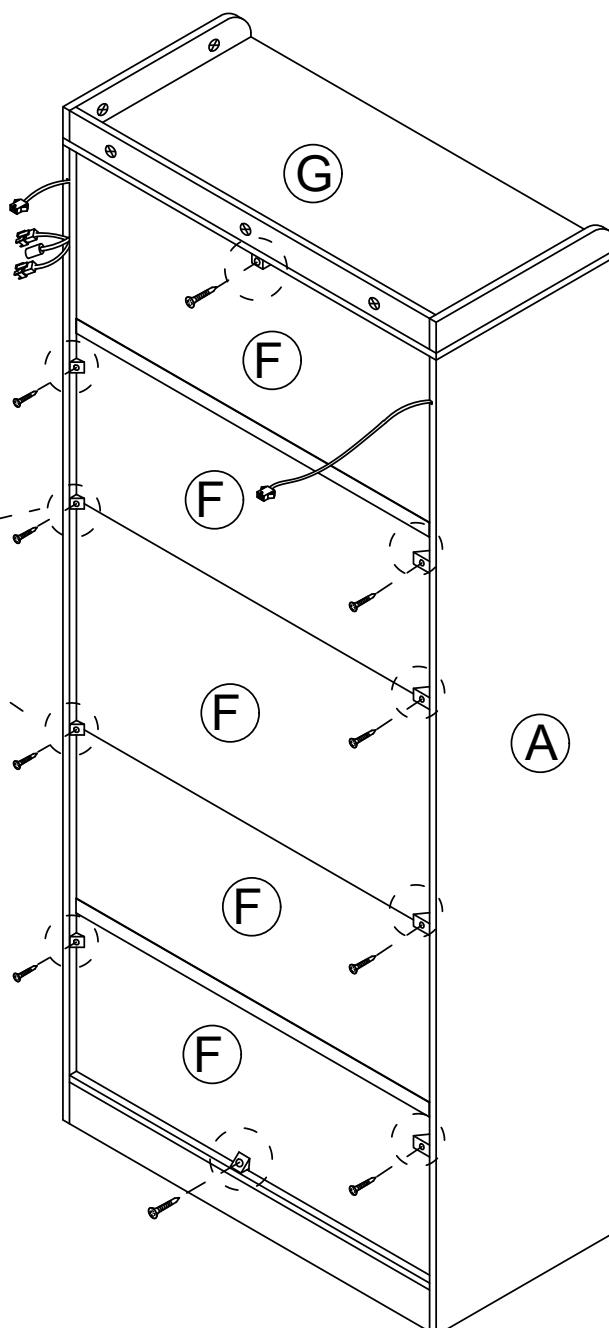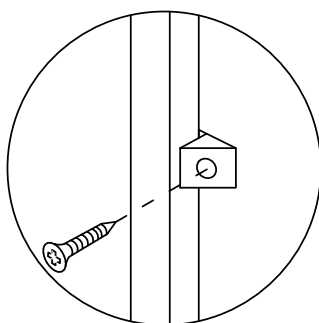


Step 21

8




x4

 
Use a hammer to drive the nail into the gap of the wooden board and fix the back board

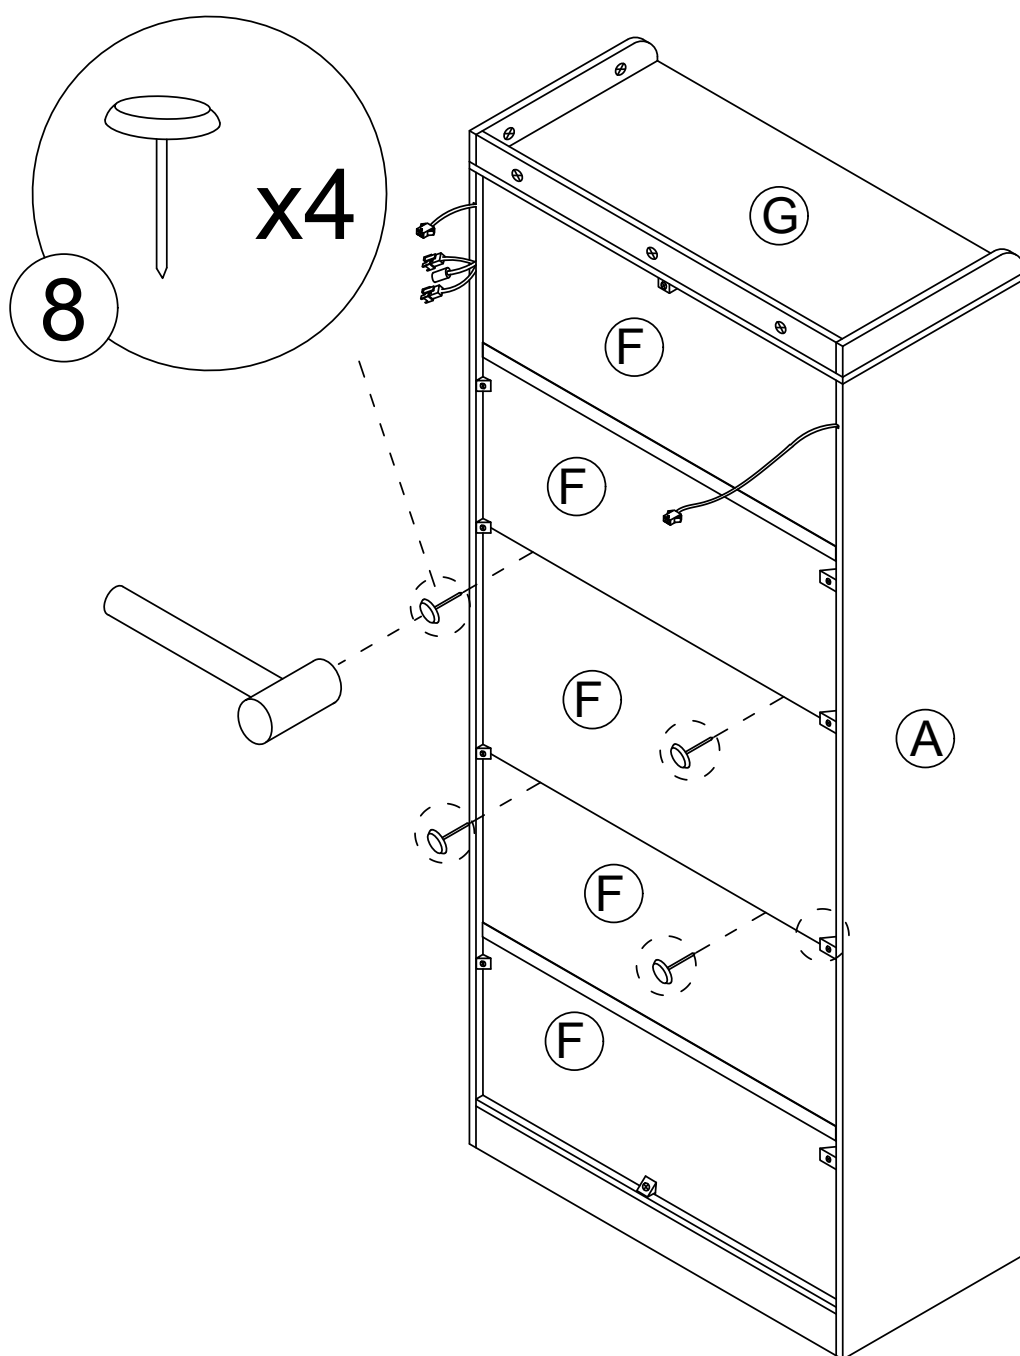


 Step 22


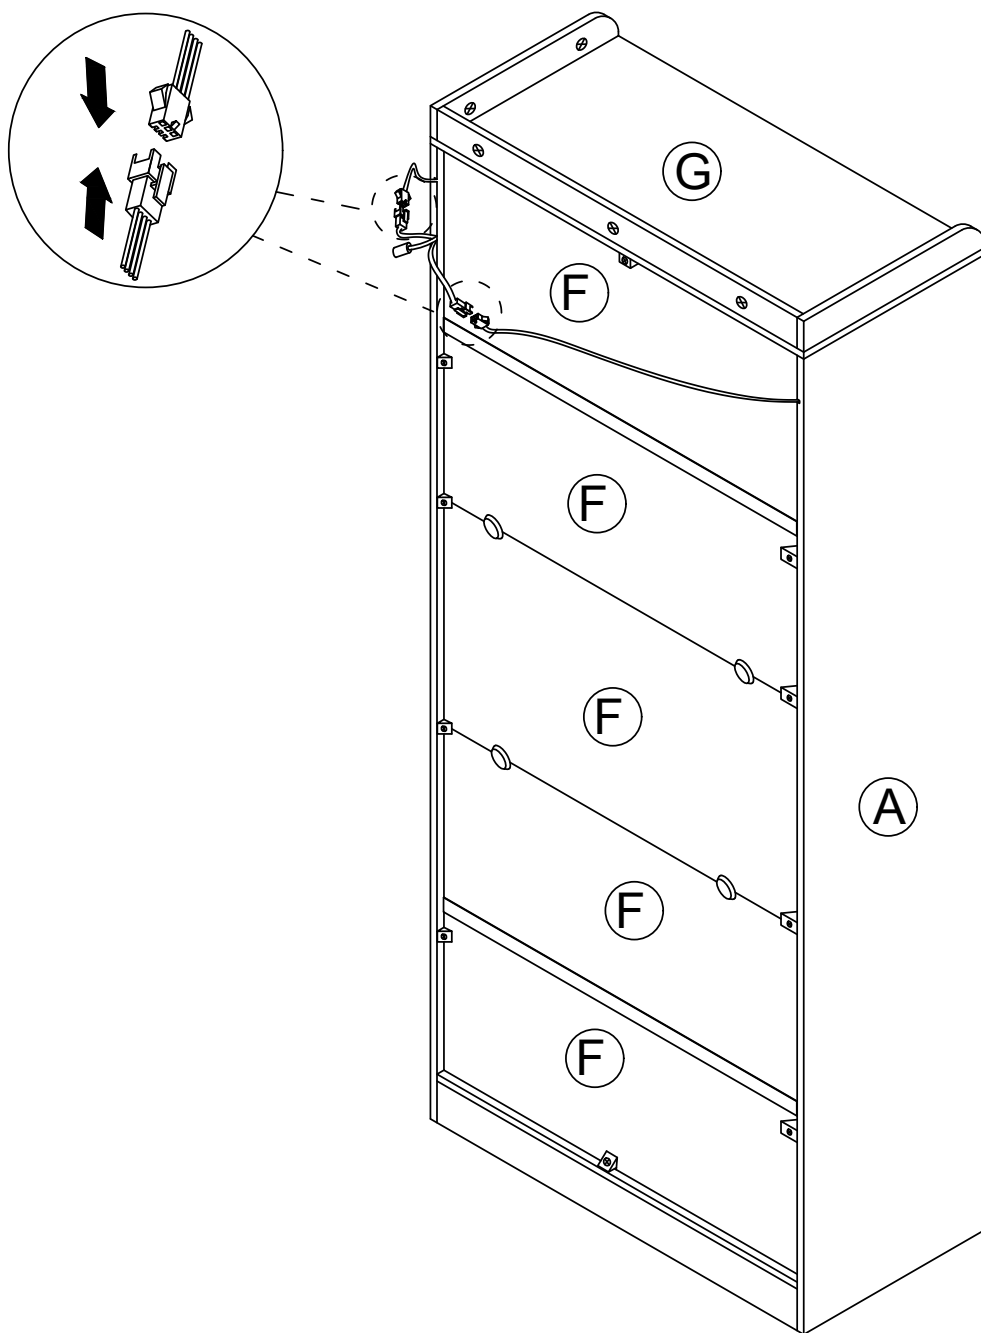


 Step 23


9  x8

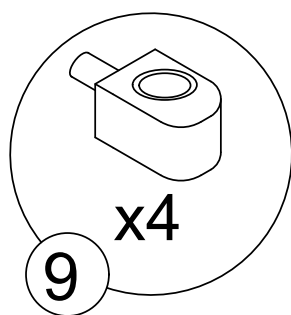 

  
Adjust the height according to
the actual situation

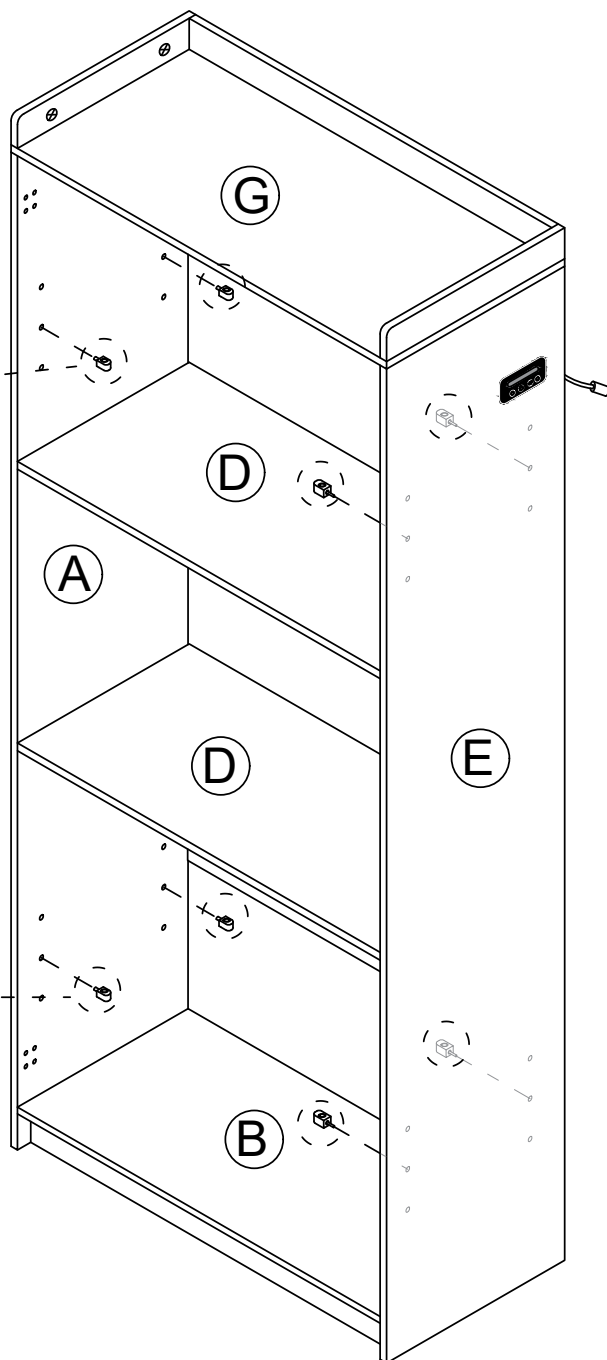
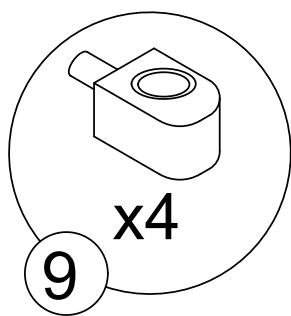


 
Step 24

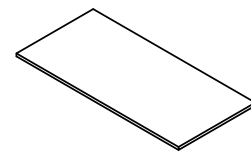


Kx2

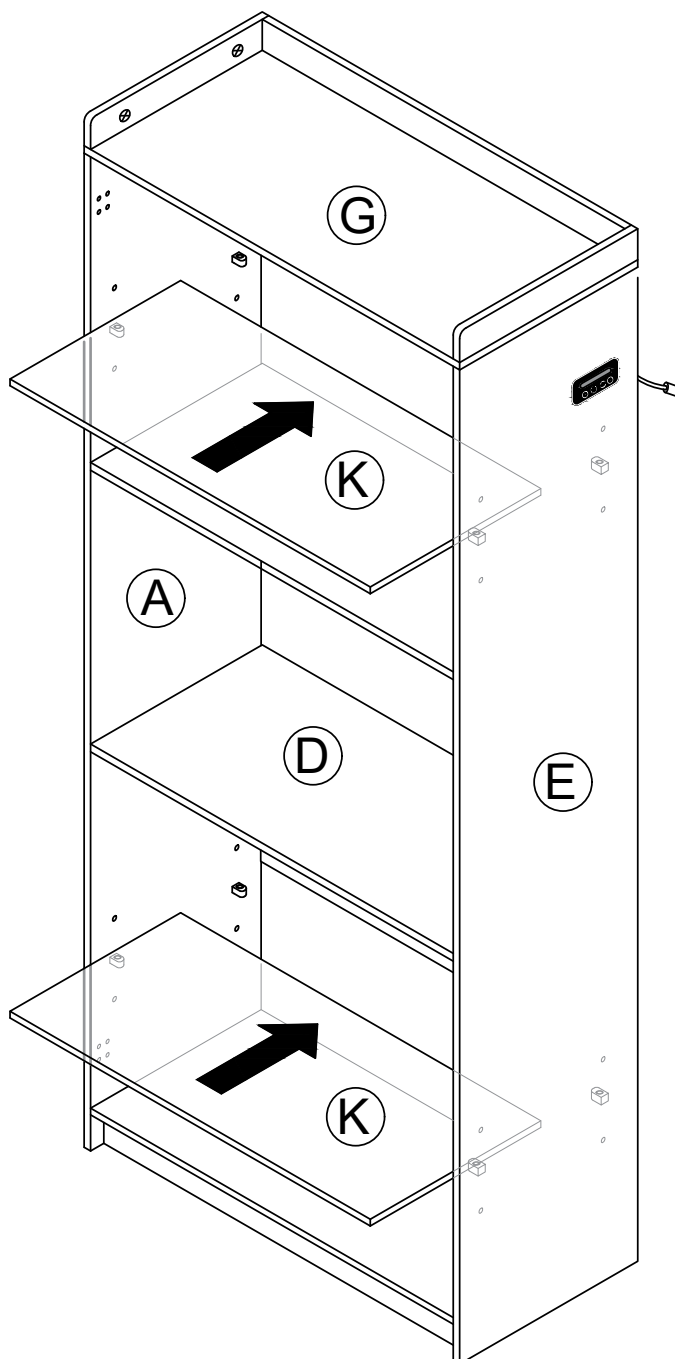 

  4	 2pcs	 4pcs	11	 16pcs	
10	 4pcs	 8pcs		 1pcs	

 12	 x2	 x2	 x2
	 x2	 x4	

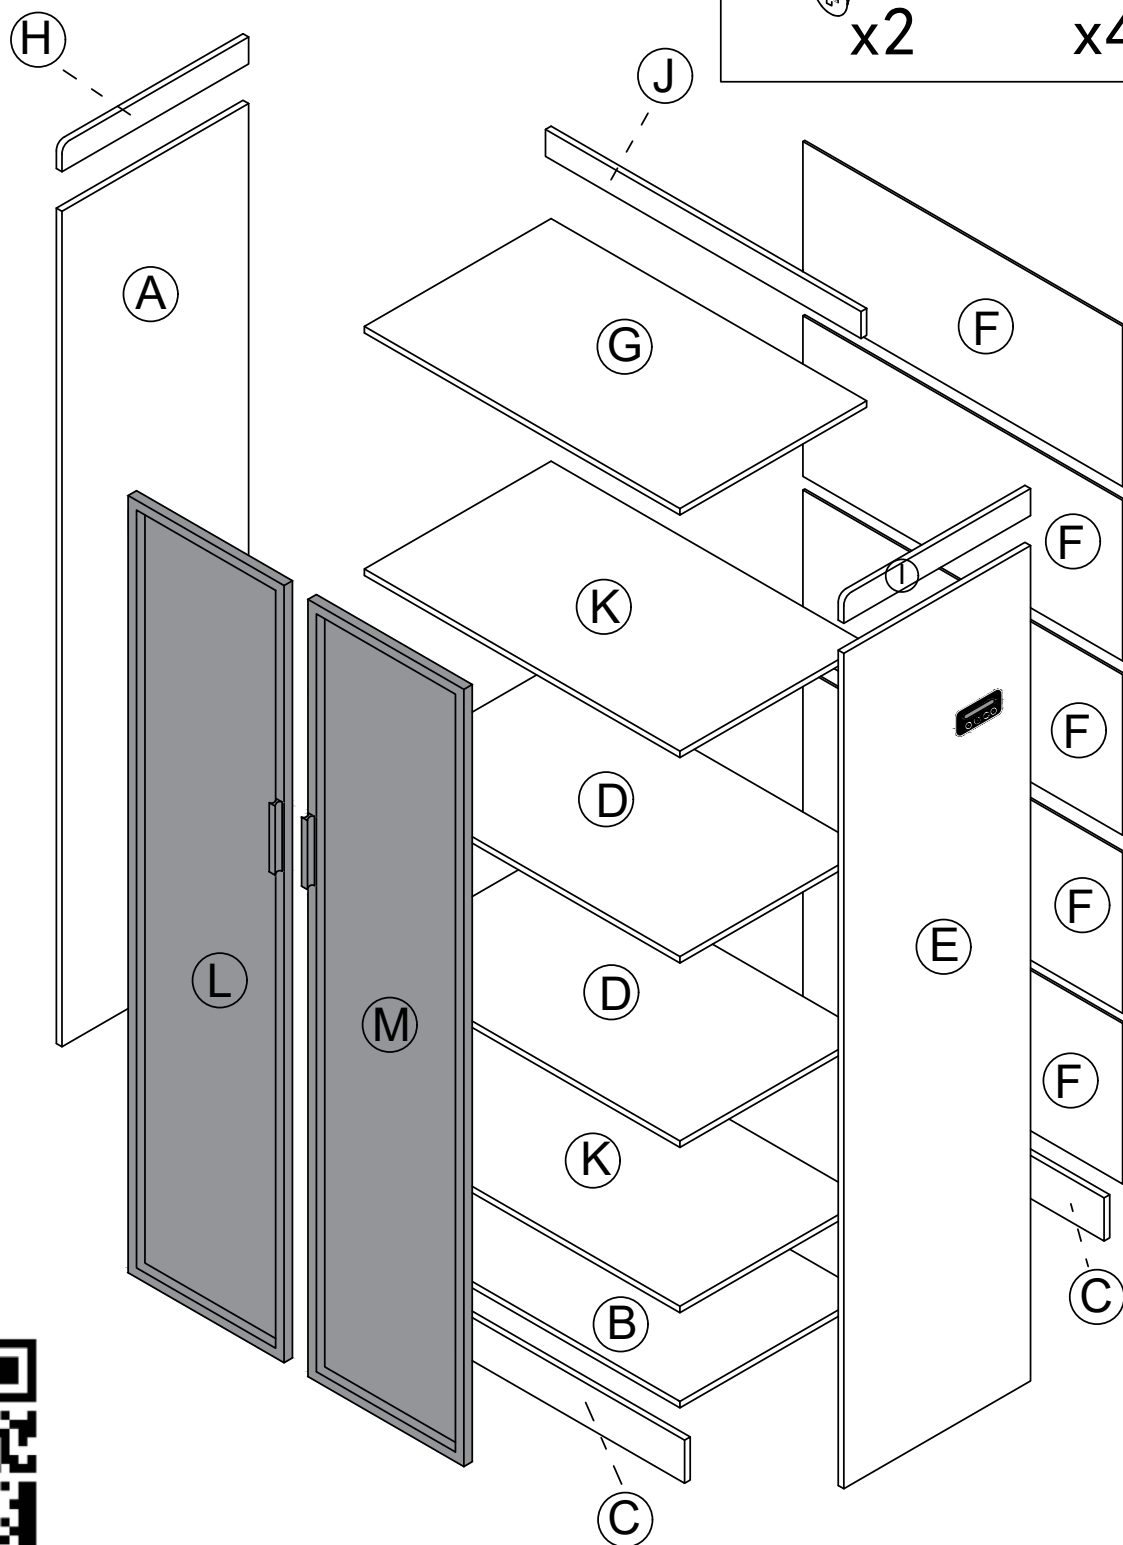 

80038

 
 
How to Install the Cabinet
Door Frame

25


Step 25

Be careful not to scratch your hand


10

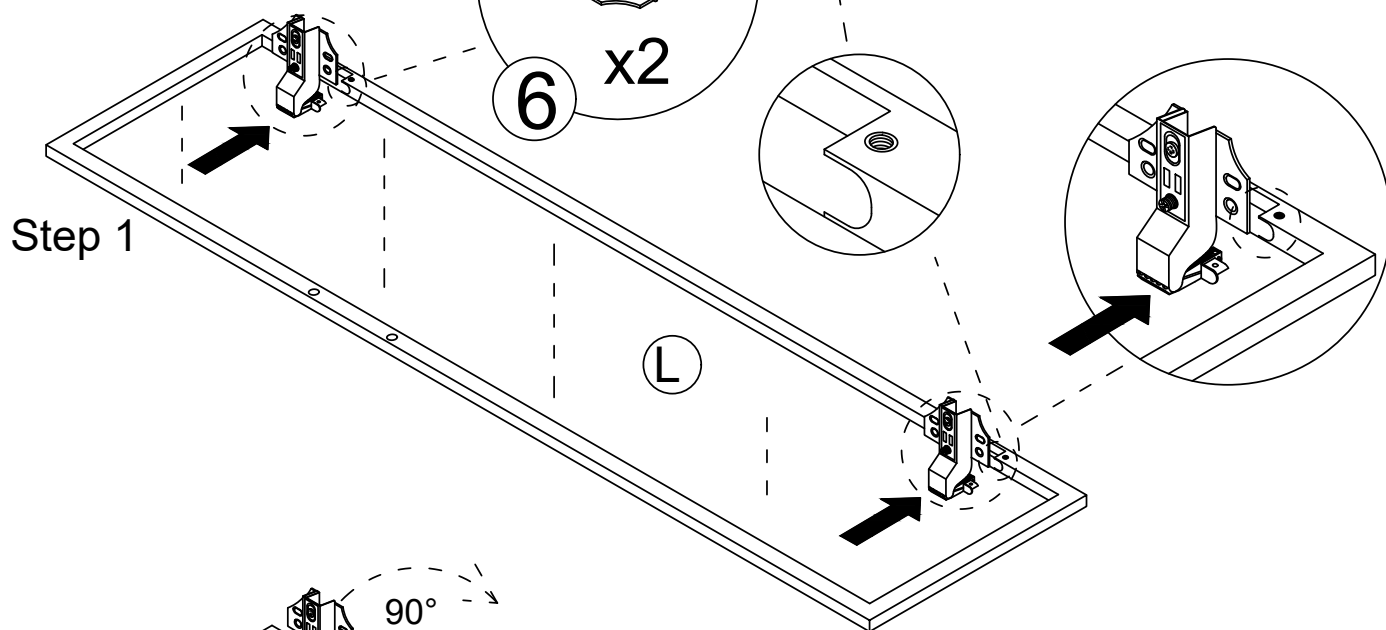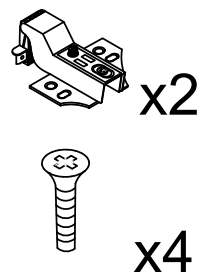

 Step 2

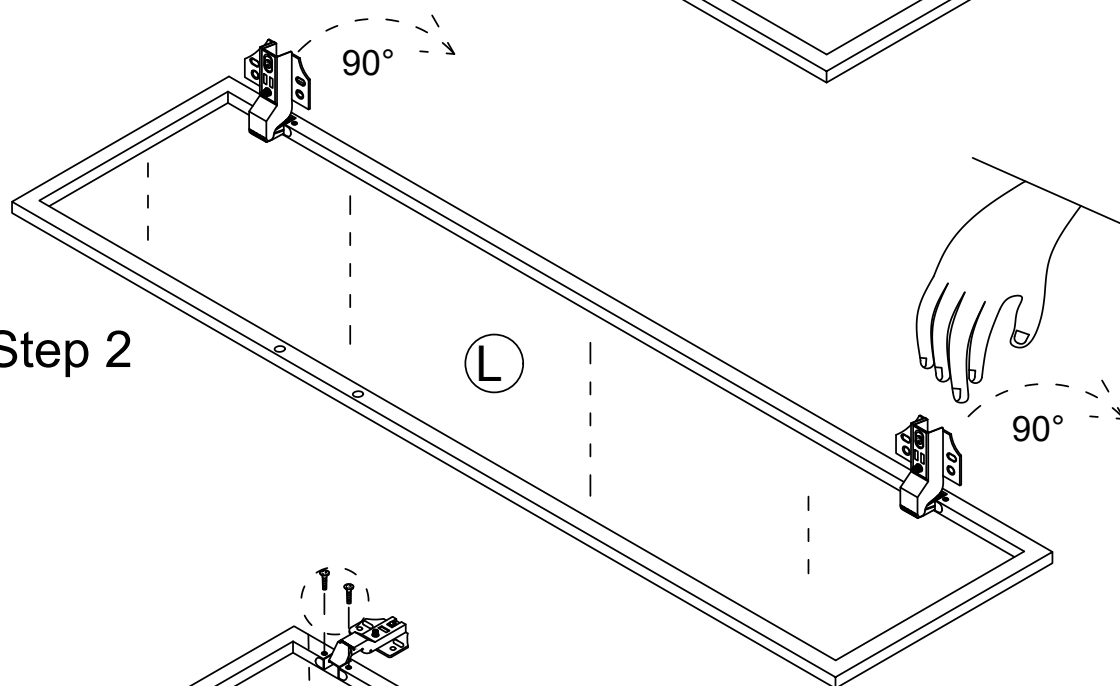




 
Step 3

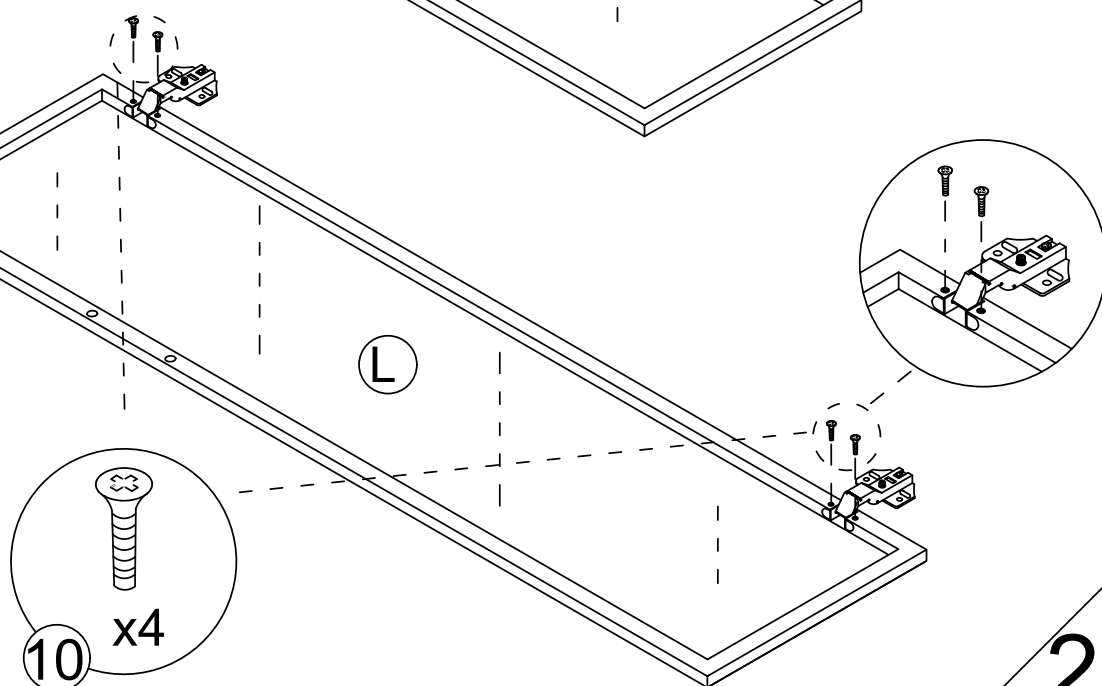


Step 26

Be careful not to scratch your hand

    
10

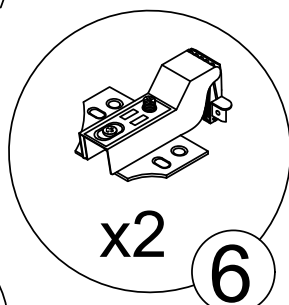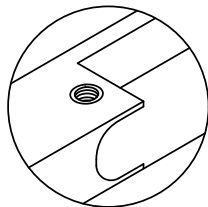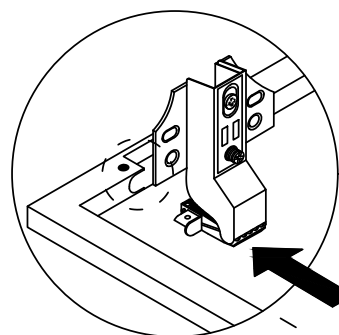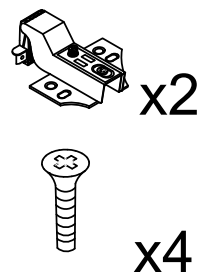


6

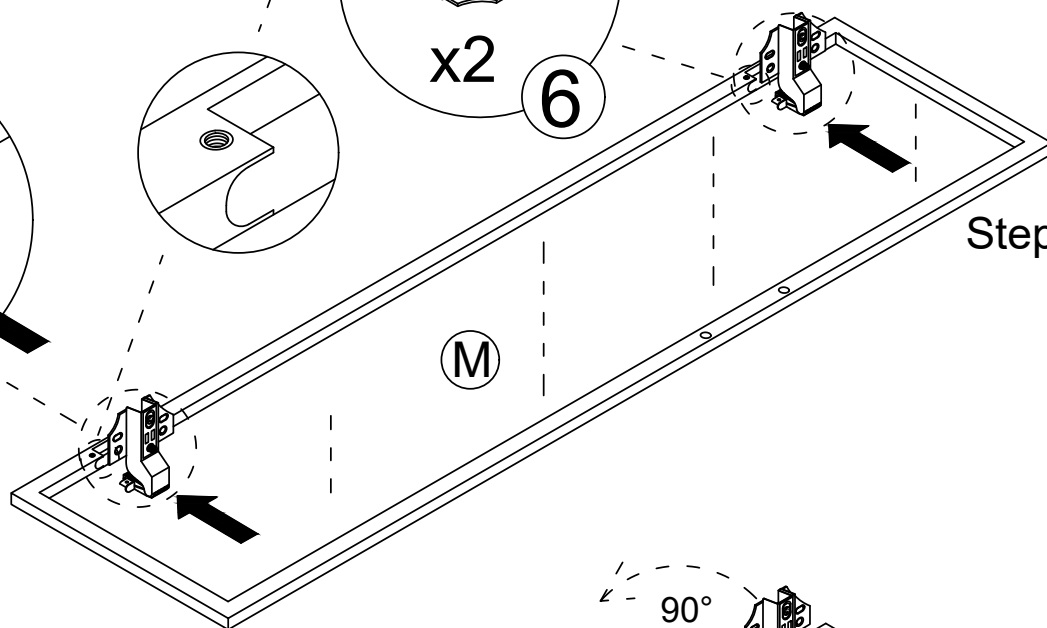 

 
Step 1

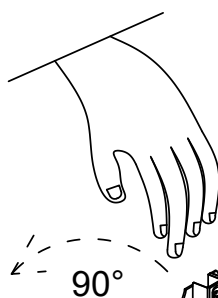



90°

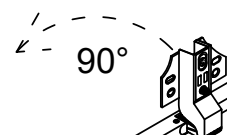 


90°

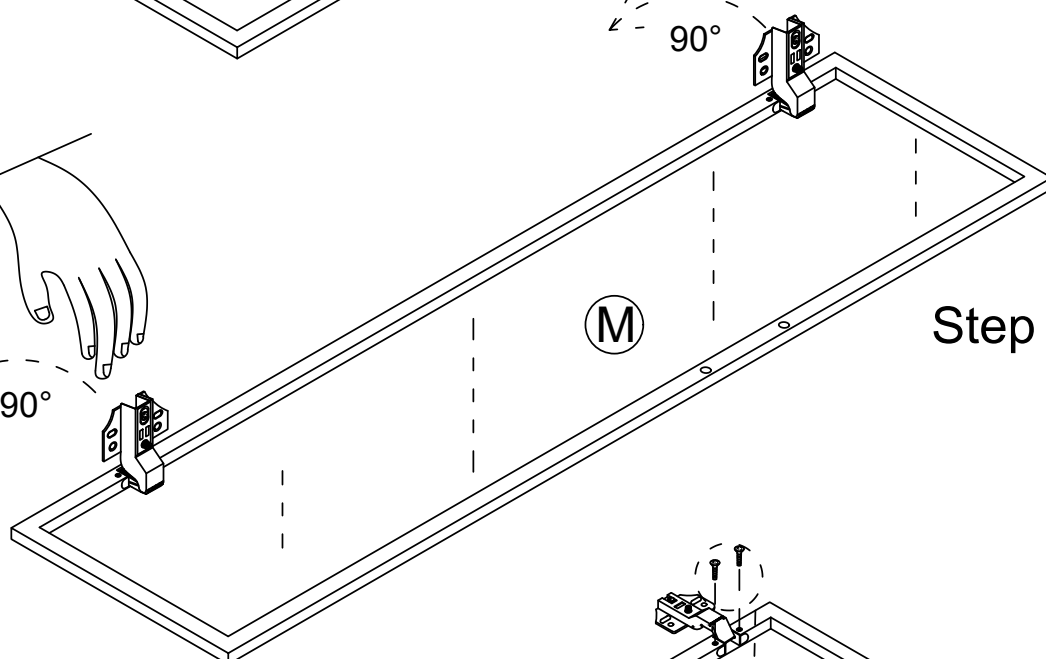 

  Step 2

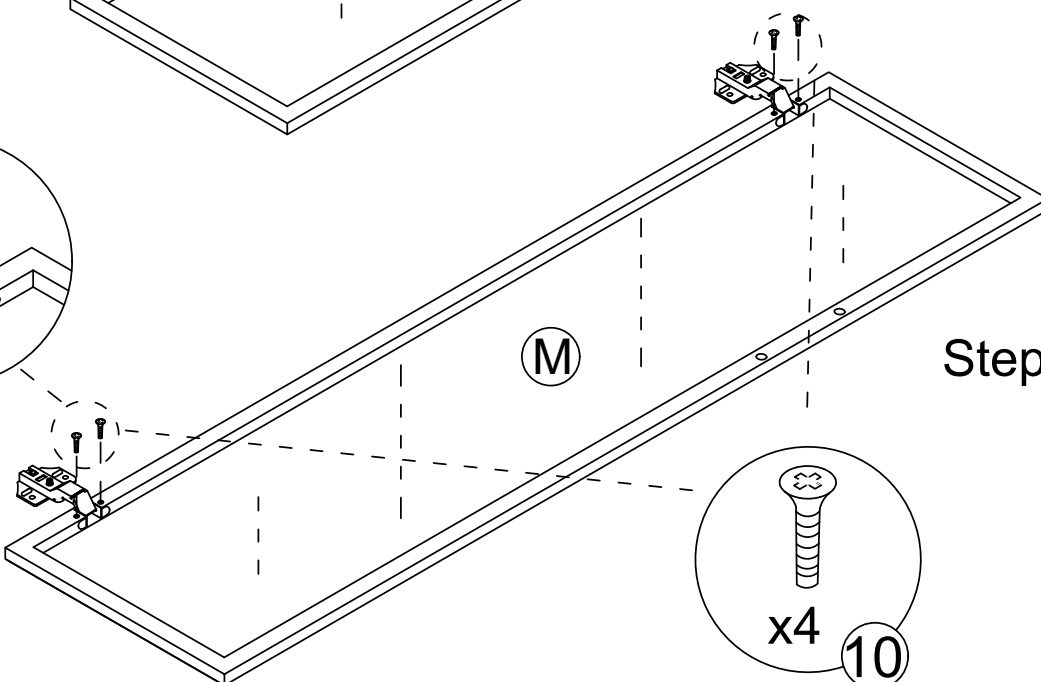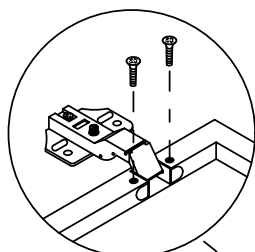

 
Step 3

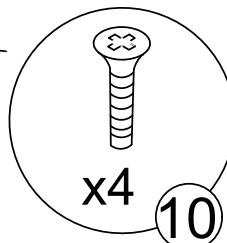





10

Step 27

 11





x16

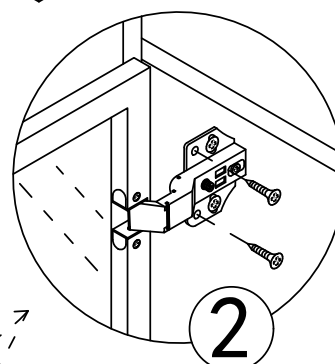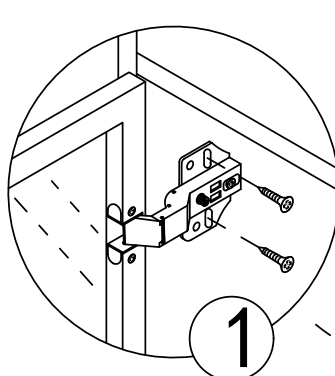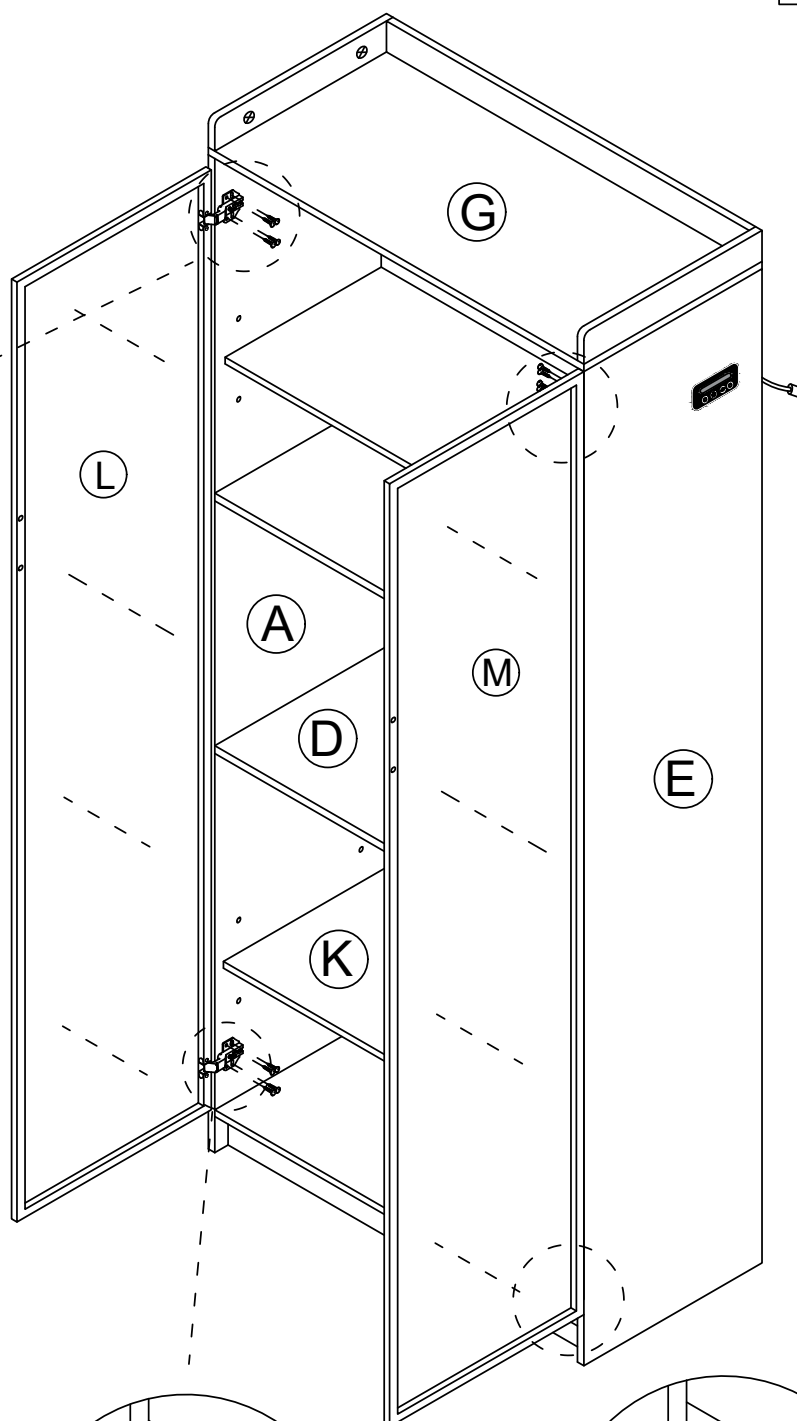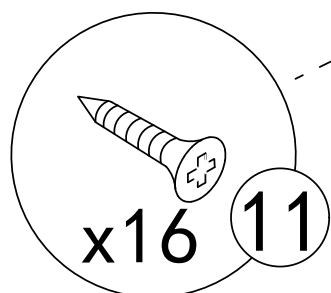    

First lock the elliptical hole
then lock the fixed hole

  Step 28

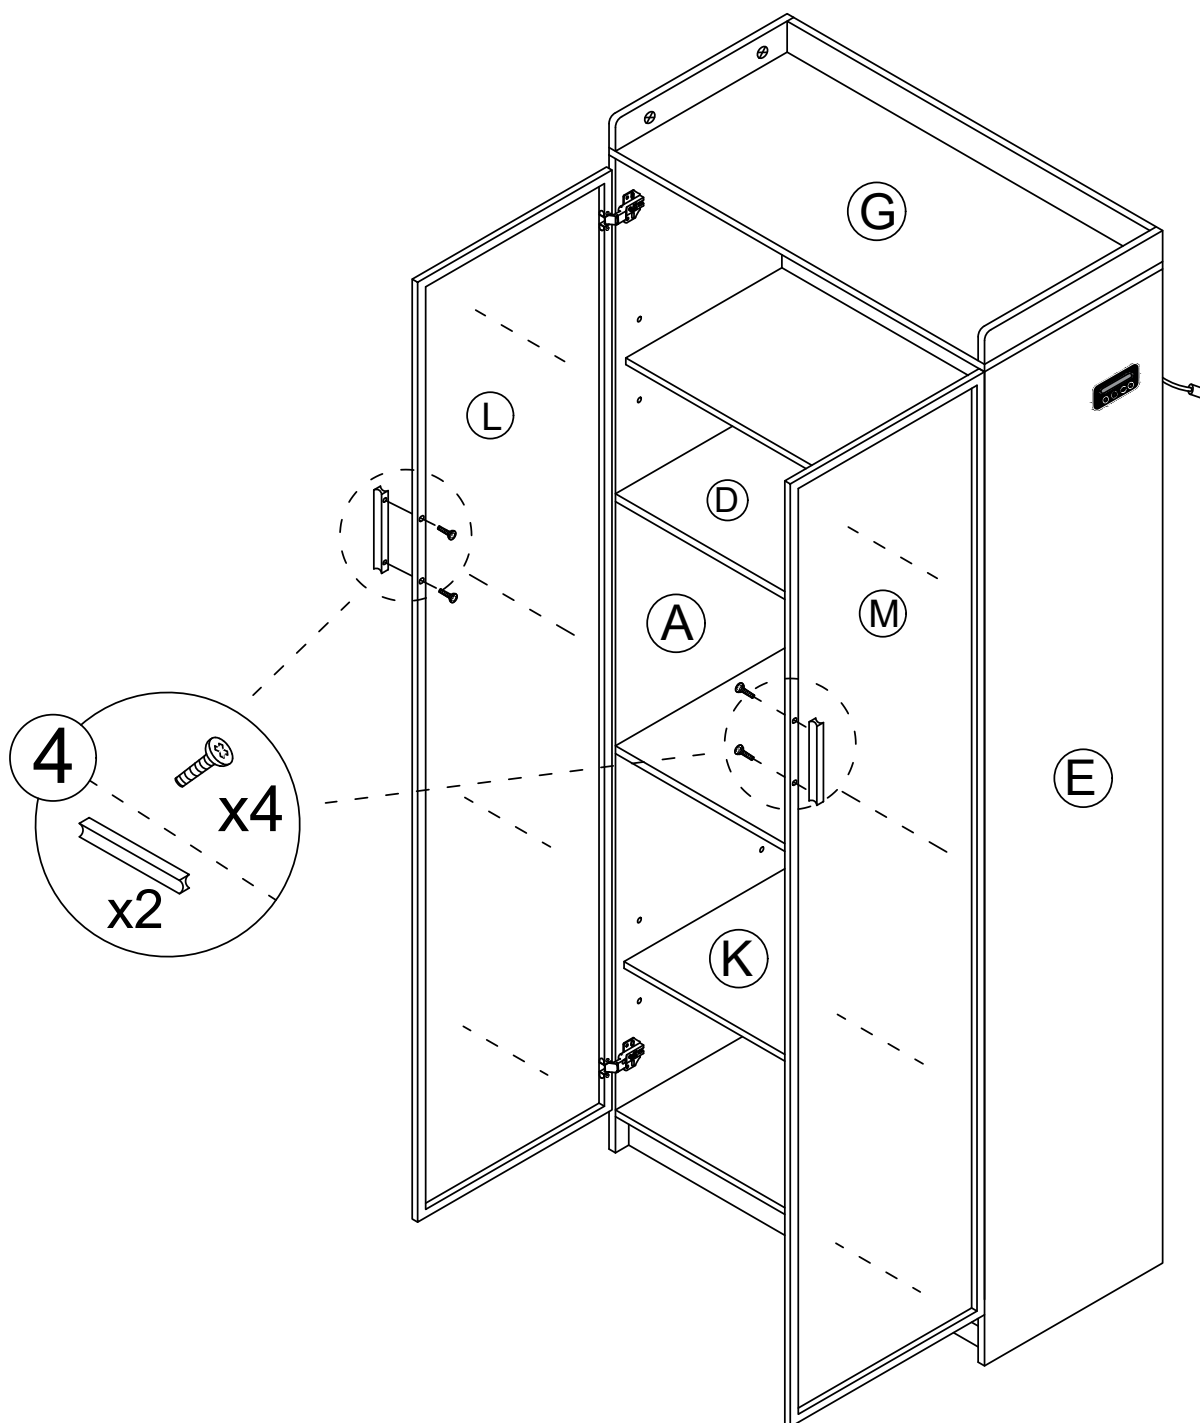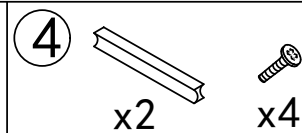


Step 29




80038

 How to adjust the gap between the doors

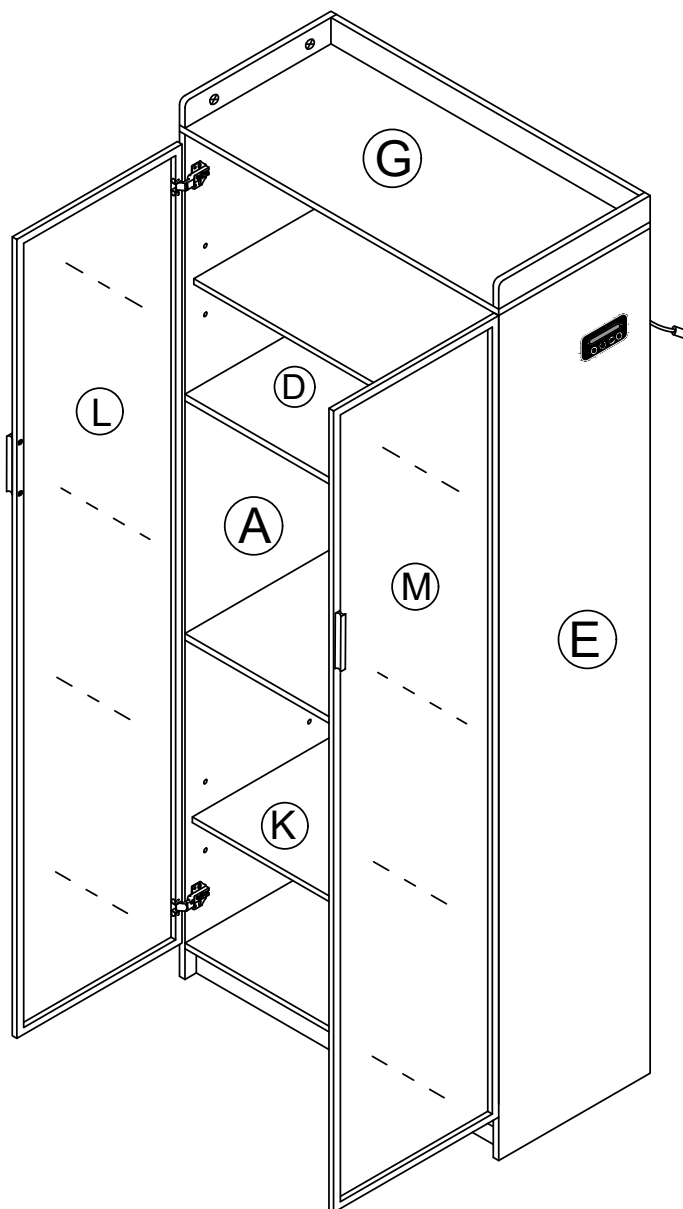


 Turning this screw can effectively adjust the size of the door gap.

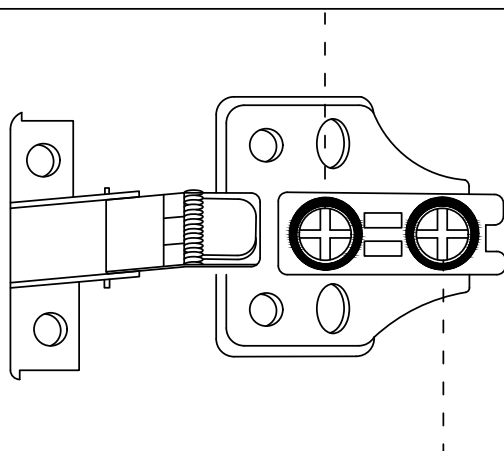


Turn this screw to adjust the door panel to be flat with the side panel.

 Step 30

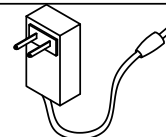


x1

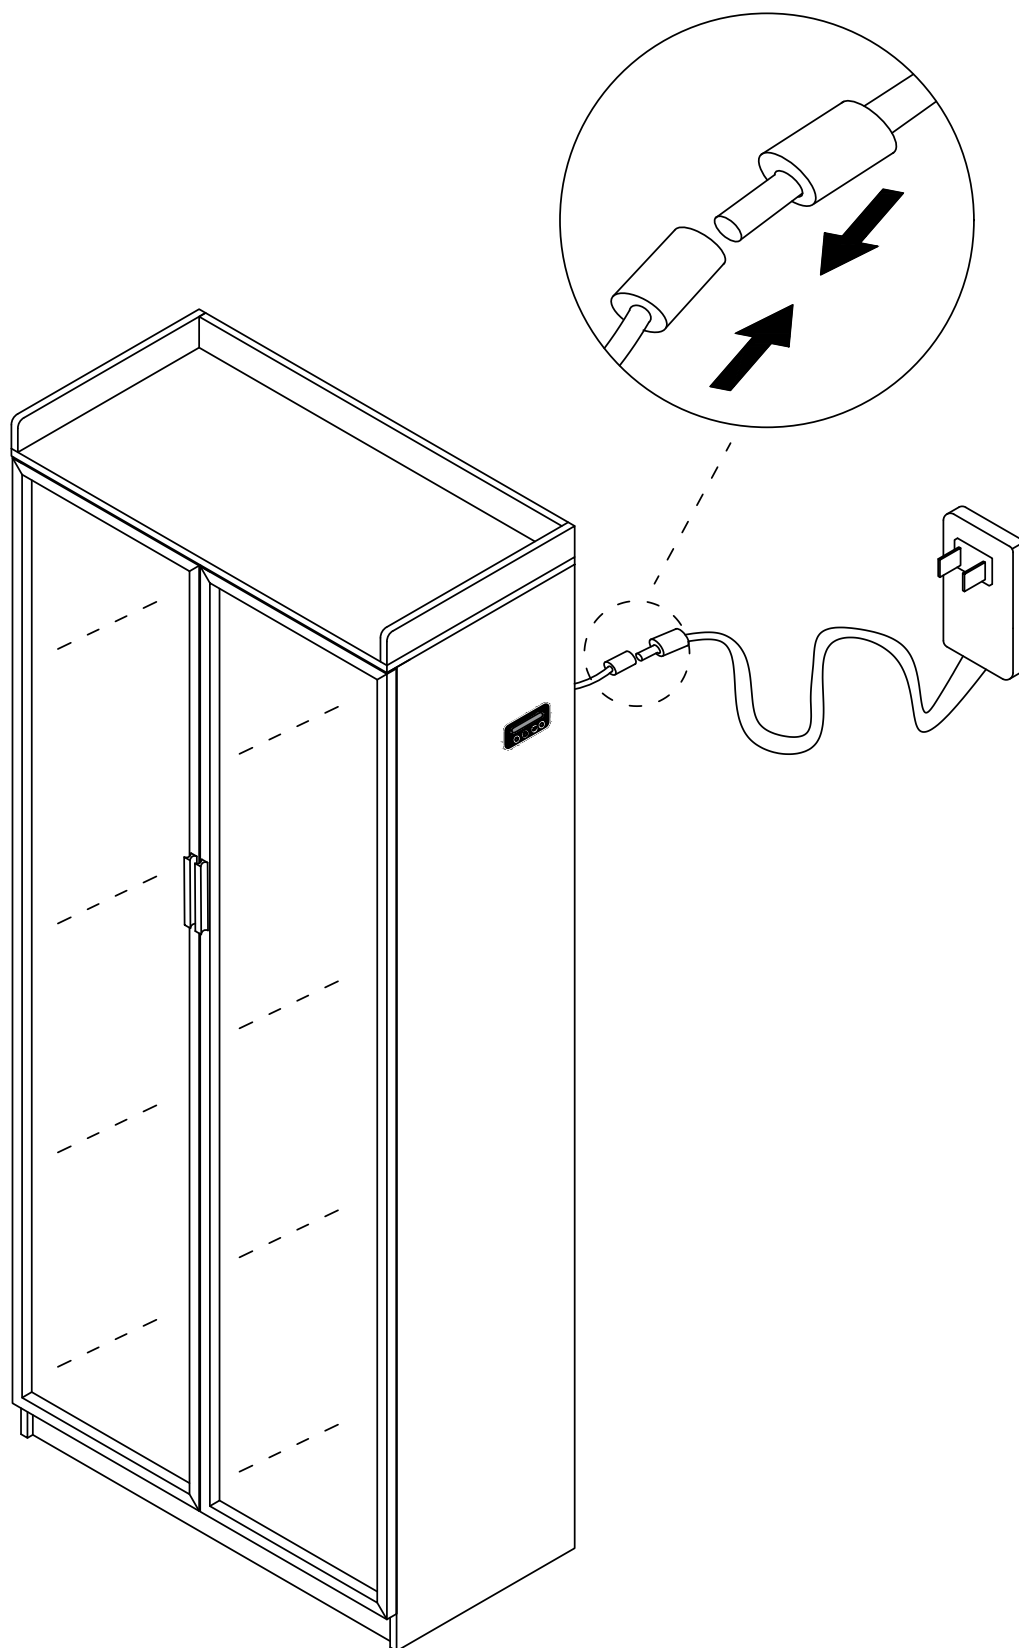 



Step 31

Install as required

 
12



  3.5x14mm

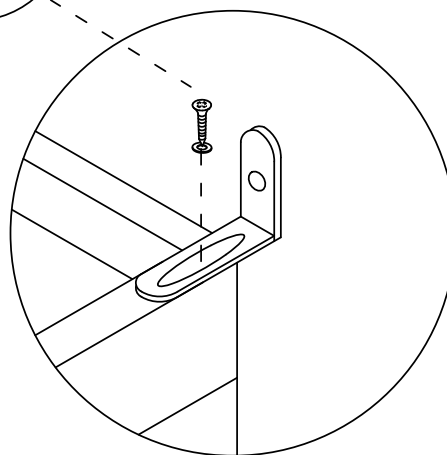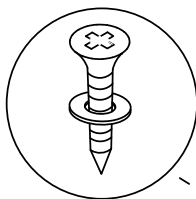


 
Install the anti fall hardware on the cabinet as shown in the picture first

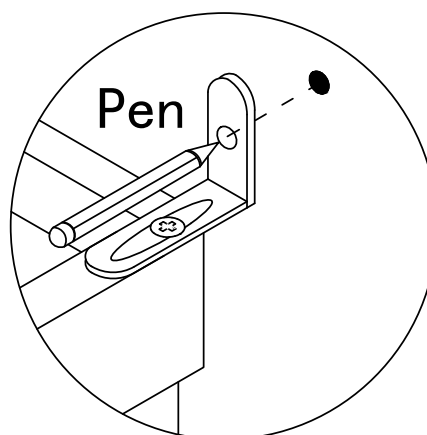

Then mark the wall with a pen through the holes in the anti-fall hardware

Step 32

  Wall Mount


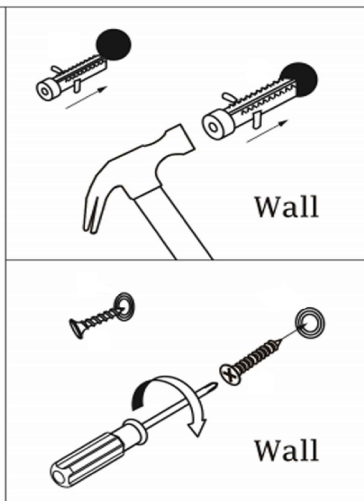
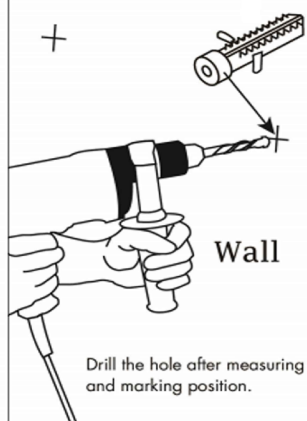


12

x2

x2 x2

   Drill the hole with an electric drill and punch in the colloidal particles

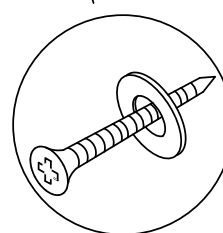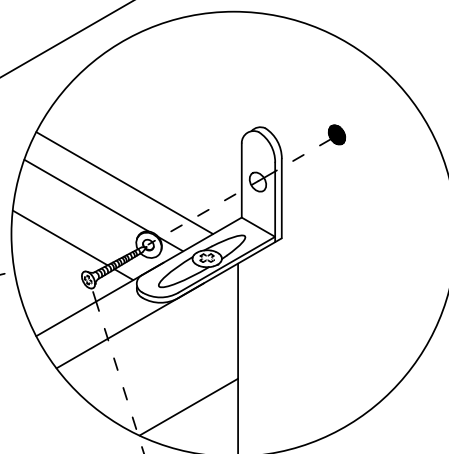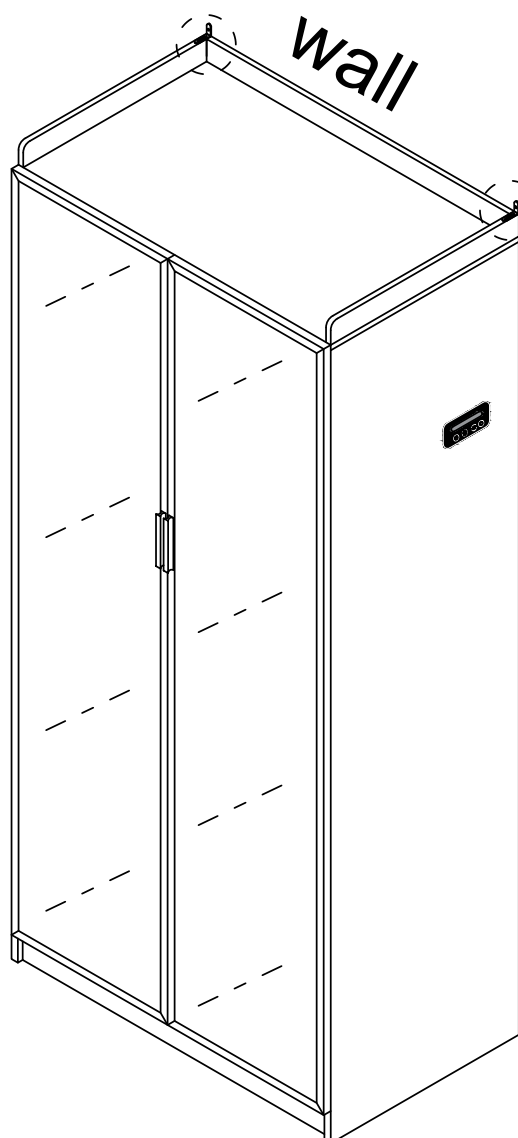

4x45mm

Fasten the cabinet to the wall

User's Guide

Thank you for purchasing this product.

To use this product, please plug it into a 12V DC power supply.

Please use if the product works normally after connecting to power.

Introduction

The box is an intelligent controller. With 5 touch buttons, it can turn ON/OFF the light and turn ON/OFF the induction function, change light colors, and adjust the light luminance.



Operation



This touch button is the master switch of the smart box,

which can turn off all functions of the box and control the light strips on/off operation.

The operation that can be turned on and off with just a light tap. Press and hold to adjust the brightness. Upon first power-up, the default light will be set to white.



This touch button is used to turn on/off the induction function.

A. touch this button once to turn on the induction function (indicator light on).

After the person leaves or remains stationary for more than 30 seconds, the light strip goes out; people and objects within a range of 1 meters move will light up the light strip.

B. Long press this button for 0.5 seconds to turn off the human body induction function (the indicator light goes out). At this point, keep the light strip as it was before turning off and no longer be affected by human and object activities. By default, induction function is enabled when powered on.



This touch button is the Dynamic Phantom Color Mode, which includes 5 magical lighting effects.

Simply tap to cycle through the options. (Attention: This mode cannot adjust the brightness)



 
This touch button controls the single-color switching function of the light strips, offering 7 different colors to choose from.



This area controls the color switching function.

You can tap or slide to any color bar position to change the color.

Color Palette

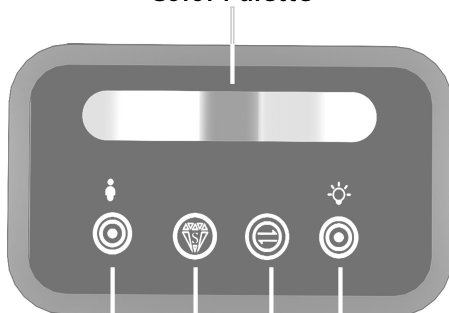

Induction Button

Phantom Color Mode Button

Master Switch Button

7-Color Mode Button



ATTENTION PLEASE

1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
2. If bubbles appear on the panel, remove the protective film.
3. If you have any questions when installing, please feel free to contact us. Thank you.