


10 Compartment Hanging Wall Locker Model# ELR-17304

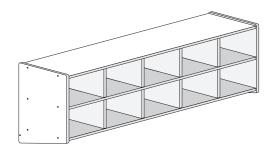





WARNING:

Adult Assembly Required.

Two adults recommended.

- Contains small parts, sharp points and edges.
- Do not stand, sit, kneel, climb, lean or pull on unit for support.
- Never leave children unattended.
- Do not place unit near high heat or moisture.
- Adult supervision recommended.

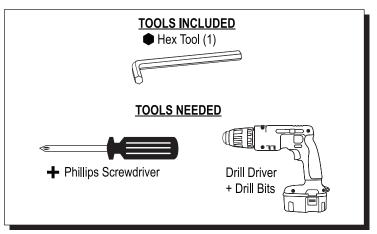


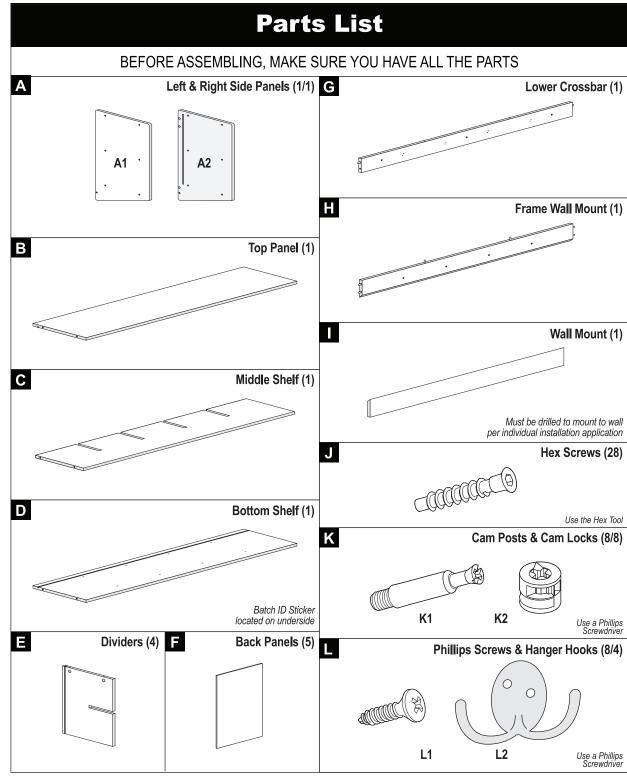

Insert the Dividers onto Middle Shelf

Align the slit on **Dividers (E)** with the slits on **Middle Shelf (C)** as shown, and slide together until seated.

Place two **Cam Locks (K2)** into the recessed holes on each **Divider (E)**, with the arrow facing the closest edge.

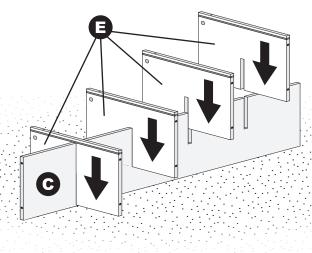


Connect the Top Panel to Dividers

Install eight Cam Posts (K1) into the threaded plastic inserts on the underside of Top Panel (B) with a Phillips screwdriver.

Reminder: Do not overtighten, as the plastic threads can be stripped.


Insert the **Top Panel (B)** Cam Posts into the holes on the top edge of the **Dividers (E)**.


Turn the Cam Locks clockwise with a Phillips screwdriver to lock the **Dividers (E)** onto the posts.

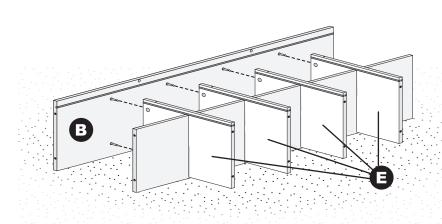

Slide three Back Panels (F) into the grooves on the Dividers (E) as shown, until fully seated into the groove on the underside of the Top Panel (B). Tip: If the Back Panels (F) do not slide in easily, wiggle the panels while pushing into place.

Install Lower Crossbar to Bottom Shelf Install the Lower Crossbar (G) onto the Bottom Shelf (D) with two Hex Screws (J) using the Hex Tool.

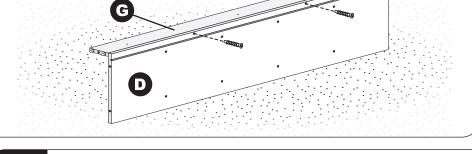


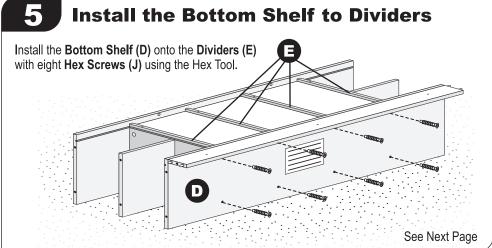

Slide the Outer Back Panels into Place

Slide the remaining **Back Panels (F)** into the grooves on the **Top Panel (B)** and **Bottom Shelf (D)** as shown, until fully seated into the groove on the inside of the **Dividers (E)**.


Tip: If the Back Panels (F) do not slide in easily, wiggle the panels while pushing into place.

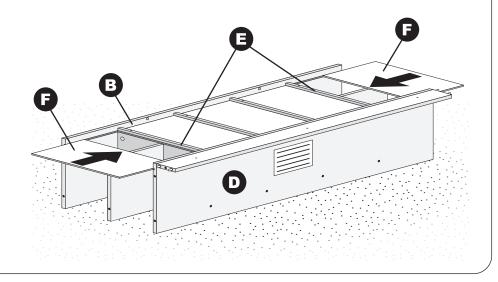

Install the Right Side Panel

Insert the pre-installed wooden dowels on Lower Crossbar (G) and Frame Wall Mount (H) into the corresponding holes on the inside of the Right Side Panel (A2).


Install the Right Side Panel (A2) onto the Top Panel (B), Middle Shelf (C), Bottom Shelf (D) and Lower Crossbar (G) with seven Hex Screws (J) using the Hex Tool.

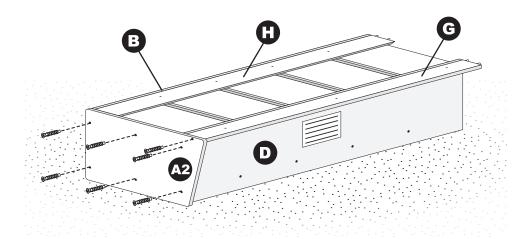

Insert the Frame Wall Mount

Insert the pre-installed wooden dowels on **Frame Wall Mount (H)** into the corresponding holes on the underside of the **Top Panel (B)**.


Note: Do not screw the **Frame Wall Mount (H)** into place, this is the last step.

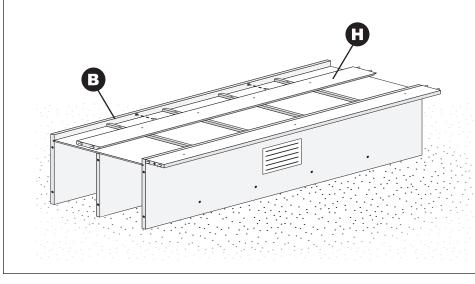

9 Install the Left Side Panel


Insert the pre-installed wooden dowels on Lower Crossbar (G) and Frame Wall Mount (H) into the corresponding holes on the inside of the Left Side Panel (A1).

Install the Left Side Panel (A1) onto the Top Panel (B), Middle Shelf (C), Bottom Shelf (D) and Lower Crossbar (G) with seven Hex Screws (J) using the Hex Tool.

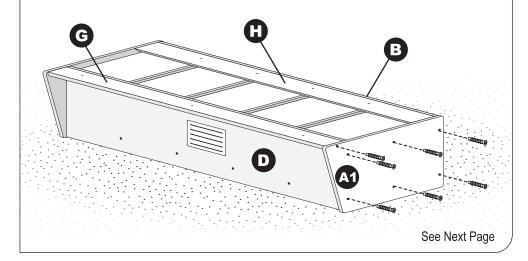


10 Install the Frame Wall Mount

Install the Lower Crossbar (G) onto the Dividers (E) with four Hex Screws (J) using the Hex Tool.

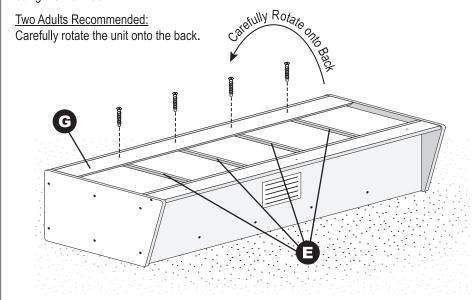

Install the Hanger Hooks

Install the Hanger Hooks (L2) on to the Lower Crossbar (G) as shown, with two Phillips Screws (L1) per Hook using a Phillips screwdriver.

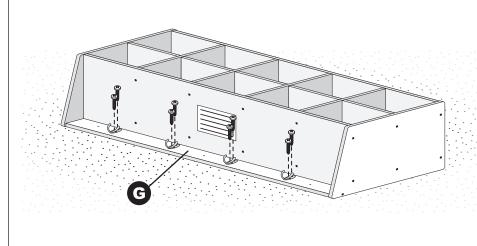


12 Install the Wall Mount

Consult a professional Handyman, Carpenter or Maintenance person to install the wall mount. They can determine suitable wall mounting hardware, available from your local home improvement store, for your particular application.

<u>Two Adults Required.</u> The **Wall Mount (I)** must be secured in a minimum of two locations, preferably into wall studs and/or correct wall anchors for your application.

Secure the **Lower Crossbar (G)** to the wall with three screw/anchors (not included) thru the pre-drilled holes.

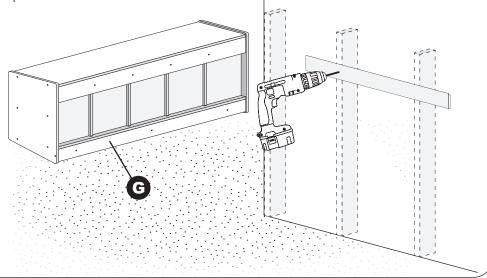



We appreciate your purchase of the 10 Compartment Hanging Wall Locker. ECR4KIDS has made every effort to supply a quality product that with proper use and care, will provide many years of trouble-free use.

If you experience any difficulties with this product, please email us at ecrcs@ecr4kids.com or call toll-free at (855) ECR-4KIDS (Monday - Friday, 7:00am - 4:00pm Pacific Standard Time)

Please do not return to place of purchase as ECR4KIDS will replace defective part(s) and/or product.

Warranty: Visit our website for product specific warranty information at: www.ecr4kids.com

Care and Cleaning

Clean wood with a damp cloth or sponge using warm water and mild soap. Wipe dry.

Do not place near heat, moisture or vaporizer which may cause wood to warp and peel.

Check for loose or worn parts periodically and tighten or replace as necessary.

Record the manufacture date here. Information is located on the Batch ID sticker and on the shipping carton. Save this sheet in an accessible place.