

INSTRUCTIONS MANUAL



PATIO WICKER CHAIR AND OTTOMAN AND SIDE TABLE

Loosely assemble before tightening.

IF YOU PURCHASED THE PRODUCT ONLINE AND HAVE ANY
QUESTIONS OR CONCERNS
PLEASE CONTACT US VIA EMAIL, TEXT, OR PHONE

Warning:

1. Very important!


After receiving the product, please check if all parts are intact.

Do not open the vacuum-sealed packaging of the mat immediately.

Only proceed with opening the packaging if you are satisfied with the product.

2. When unpacking the box, please use tools carefully to avoid scratching the mat.

Note: Since the mat is vacuum-packed, if you are not satisfied with the product after opening, it may affect the after-sales process.

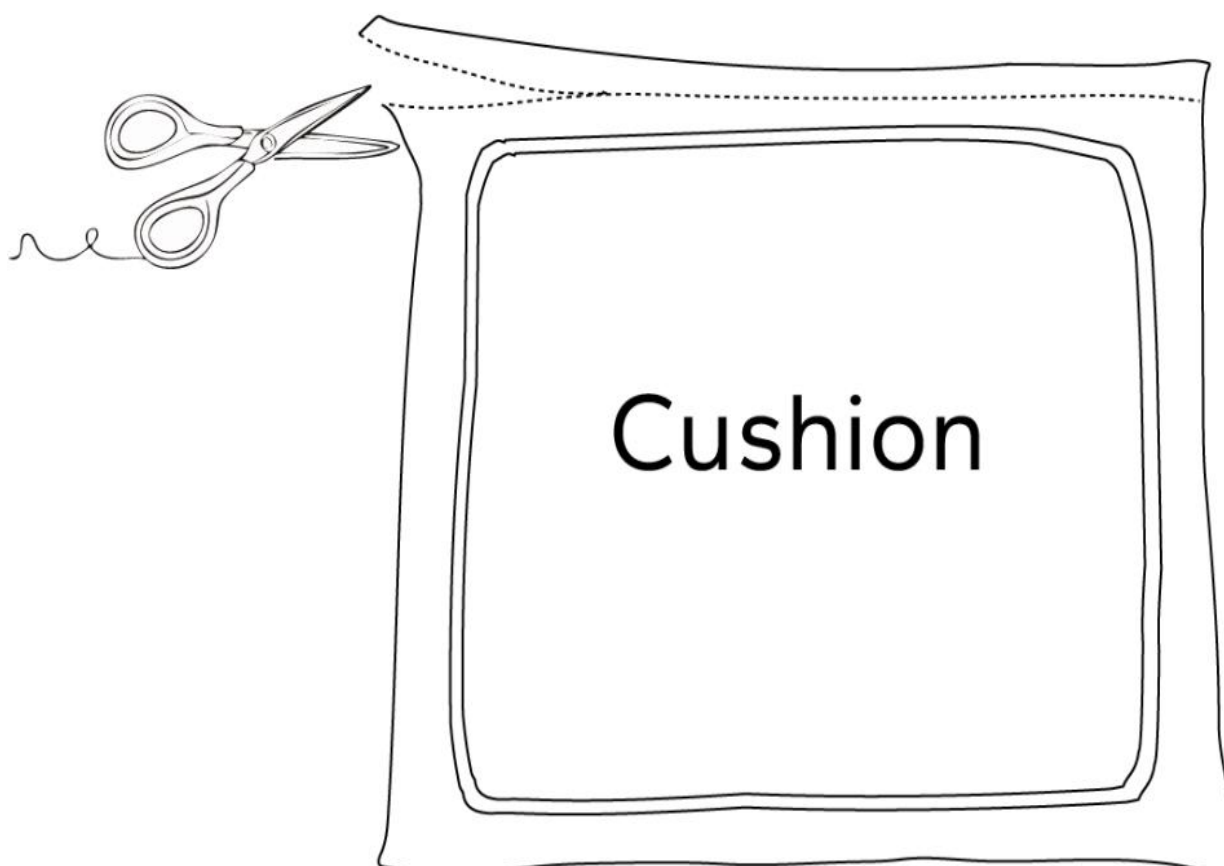

Warning and Cautions:

Thank you for choosing our furniture. Please read and understand this entire manual before attempting to assemble or install the product.

GENERAL BEST PRACTICES FOR ASSEMBLY

1. Familiarize yourself with the product and check all parts against the packing list. If any Parts are missing or damaged, do not install. Contact us immediately.
2. Some parts may contain sharp edges. Wear protective gloves, if necessary, during assembly.
3. Check all nuts and bolts periodically for tightness and, when required, tighten them again.
4. Pay attention to the parts orientation.
5. Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

IMPORTANT

- Make sure to place the washer on the bolt before inserting it into the bolt hole.
- To ensure the best fit, assemble loosely before tightening.
- Tighten all bolts after all parts are assembled.

WARNINGS

 **Keep children and pets away from the working area during assembly and adjustments.**

1. Keep the assembly area at least 6 feet from any obstruction, such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
2. When assembling and using this product, always follow basic safety precautions to reduce the risk of personal injury and product damage. Please read all instructions before assembly and use.
3. Check all bolts for tightness before use. **IMPORTANT** - check and tighten bolts often to keep them secure!
4. The chair is not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only.
5. The chair and ottoman support a weight of 350lb (159 kg). Improper use of this product or failure to use it as directed may result in injury. Not intended for commercial use.

WARRANTY





•WHAT IS COVERED?





- The limited warranty is extended to the original purchaser and covers material and manufacturing defect, provided the item is properly maintained and used for personal residential purposes only.
- Warranty: 180 DAYS.
- Lost Accessories or Parts Policy: Costs for lost accessories or parts will be charged after 90 days from the date of purchase.



MAINTENANCE

- STAIN RESISTANT CUSHIONS CARE:** Keep cushions in storage on rainy days.
- SPILLS:** Immediately wipe up spills using a white damp cloth. Repeat if necessary until the stain is gone. Allow cushions to air dry.
- **FABRIC CARE:** Hand wash with cold water, non-chlorine bleach when needed, and lay flat to dry. Cool iron if necessary. Do not dry clean.
- **RESIN WICKER PRODUCT CARE:**
 1. General Cleaning: Before use, clean the product with a soft, dry towel. When not in use, wipe off any dirt or loose debris. For regular cleaning, use a mild soap and water solution, rinse thoroughly, and dry completely.
 2. Weather Protection: To prolong the life of your resin wicker, avoid prolonged exposure to intense sunlight or heavy rain. Whenever possible, use a protective cover when the furniture is not in use, especially during extreme weather conditions.
 3. Avoid Harsh Cleaners: Do not use strong detergents or abrasive cleaners, as these may damage the finish.
- Regular Maintenance:** Over time, nuts and bolts may loosen. Occasionally check and re-tighten them on all products as needed.


Assembly Instructions for 1PC Chair


AL	AR	B	C
			
AL 1PC Left Arm	AR 1PC Right Arm	B 1PC Chair Back	C 1PC Front Panel

D	SC8	SC17	SC1
	 M6*35mm	 Ø16*Ø6.5*1mm	
D 1PC Seat Panel	I 12PC Bolt	K 12PC Washer	L 1PC Allen Wrench

E	F		
			
E 1PC Seat Cushion	F 1PC Back Cushion		


Tools:

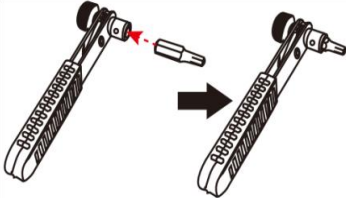

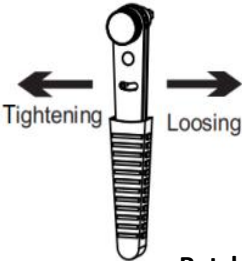


Ratchet Wrench


1. Secure chair arms (AL&AR) to chair back (B) with 4 bolts (SC8) and 4 washers (SC17) by using allen wrench (SC1). **Keep the bolts loose.**

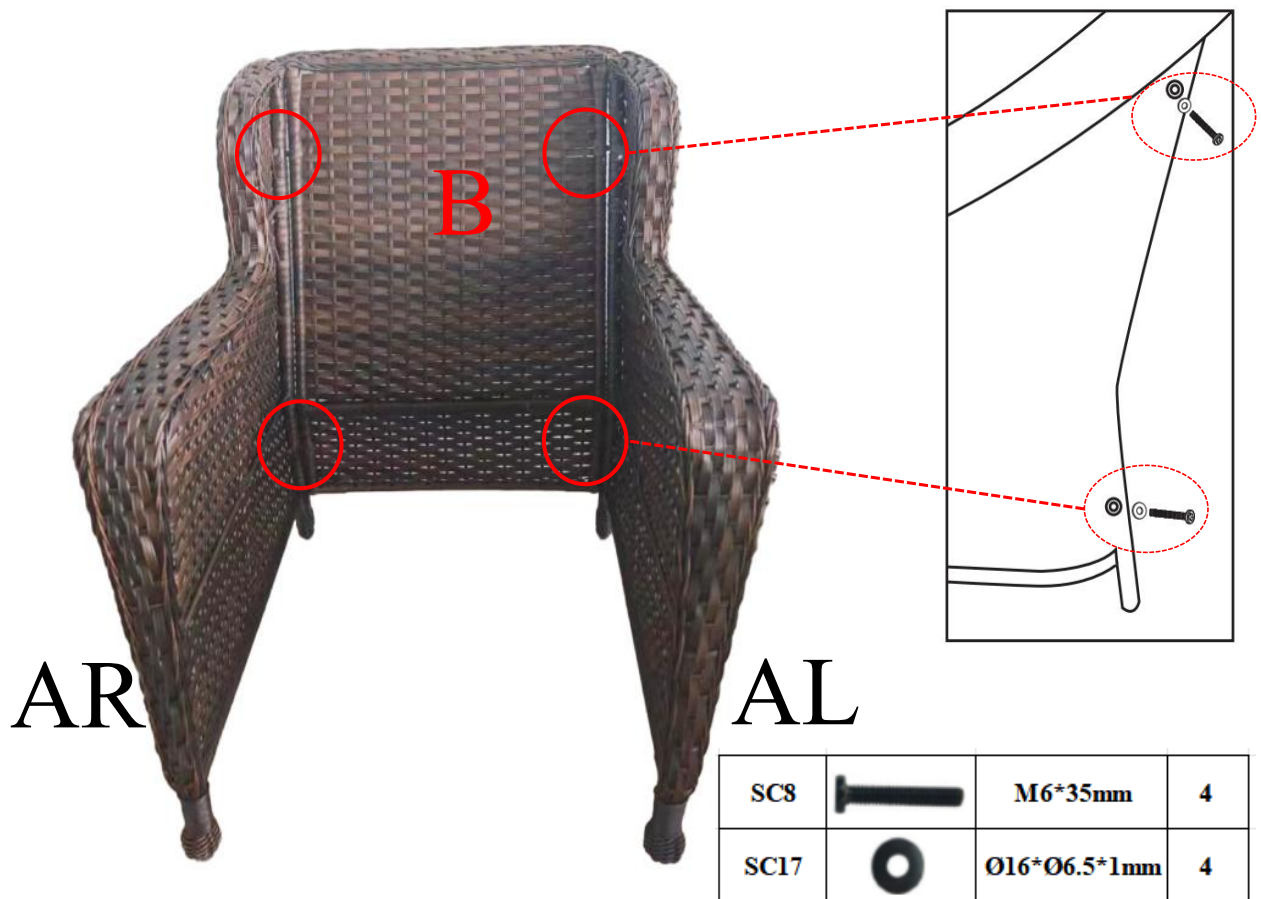

2. Secure assembled chair arms (AL&AR) to front panel (C) with 4 bolts (SC8) and 4 washers (SC17) by using allen wrench (SC1). **Keep the bolts loose.**

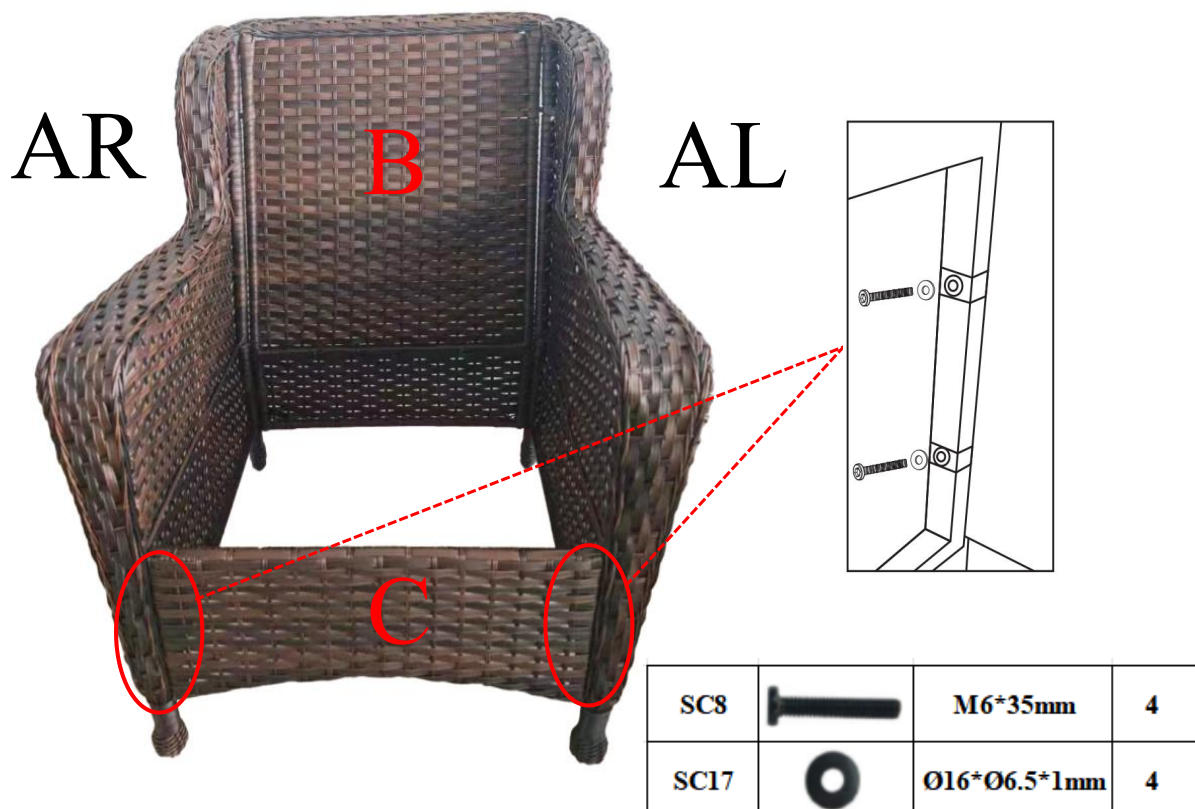

3. Secure seat panel (D) to chair back (B) and assembled front panel (C) with 4 bolts (SC8) and 4 washers (SC17) by using allen wrench (SC1). **Keep the bolts loose.**
Note: Seat panel with arc shape should face chair back.

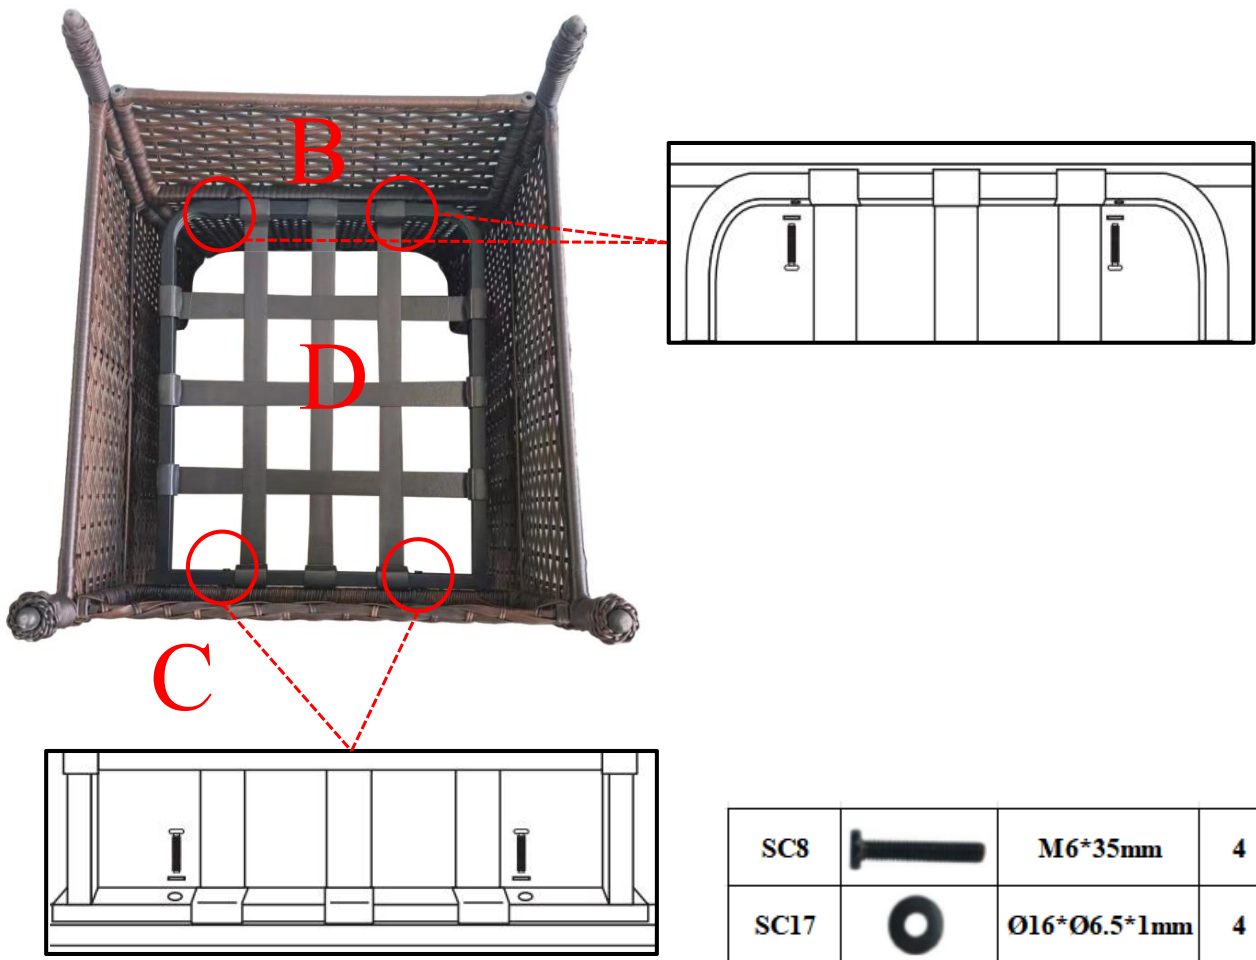

4. Tighten all bolts, put cushions (E&F) onto the chair, it is ready for use now.




Assembly Instructions for 1PC Ottoman

A	B	C	SC7
A 2PC Ottoman Leg	B 2PC Seat Panel	C 1PC Ottoman Top	M6*32mm S 12PC Bolt


SC17	SC1	G	
Ø16*Ø6.5*1mm K 12PC Washer	L 1PC Allen Wrench	G 1PC Ottoman Cushion	

1. Secure Ottoman Leg (A) to Ottoman Top (C) with 4 bolts (SC7) and 4 washers (SC17) by using allen wrench (SC1). Keep the bolts loose.

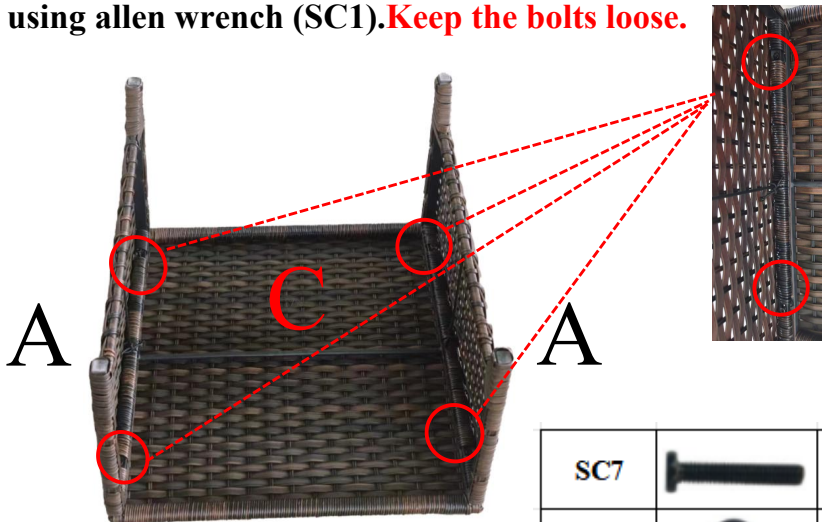

SC7		M6*32mm	4
SC17		Ø16*Ø6.5*1mm	4



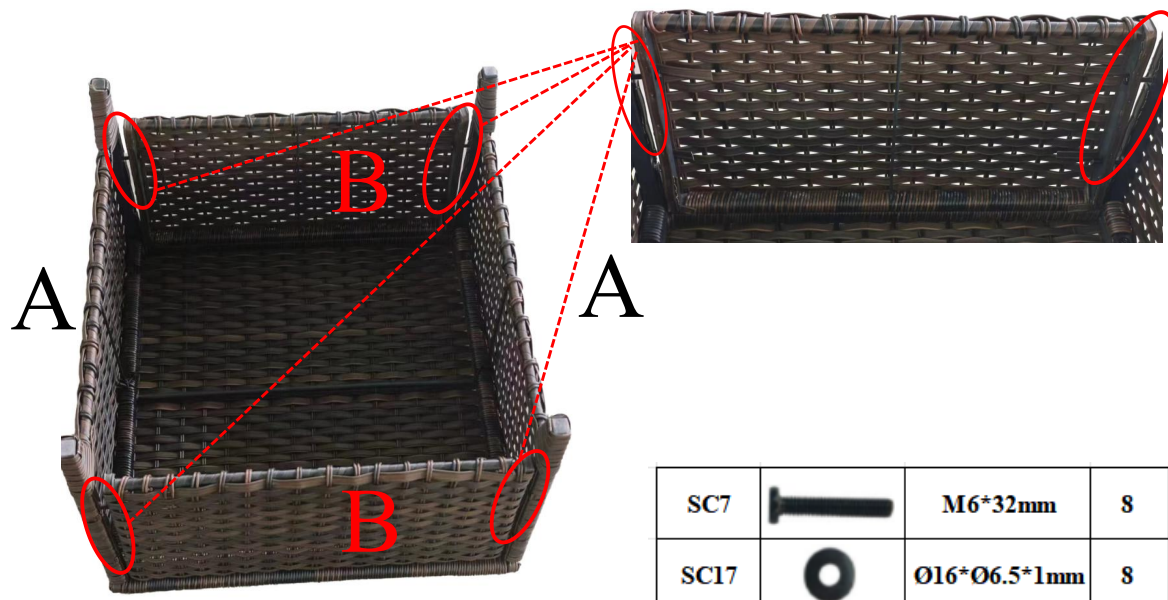

1. Secure Seat Panel (B) to Ottoman Leg (A) with 8 bolts (SC7) and 8 washers (SC17) by using allen wrench (SC1). **Tighten all bolts.**





3. Tighten all bolts. Put cushions (T) onto the ottoman, it is ready for use now.






Assembly Instructions for 1PC Table

A	B	C	SC23
			
A 1PC Table Top	B 1PC Table Tray	C 4PC Table Leg	M6*16mm N 12PC Bolt


SC17	SC1		
			
Ø16*Ø6.5*1mm K 12PC Washer	L 1PC Allen Wrench		

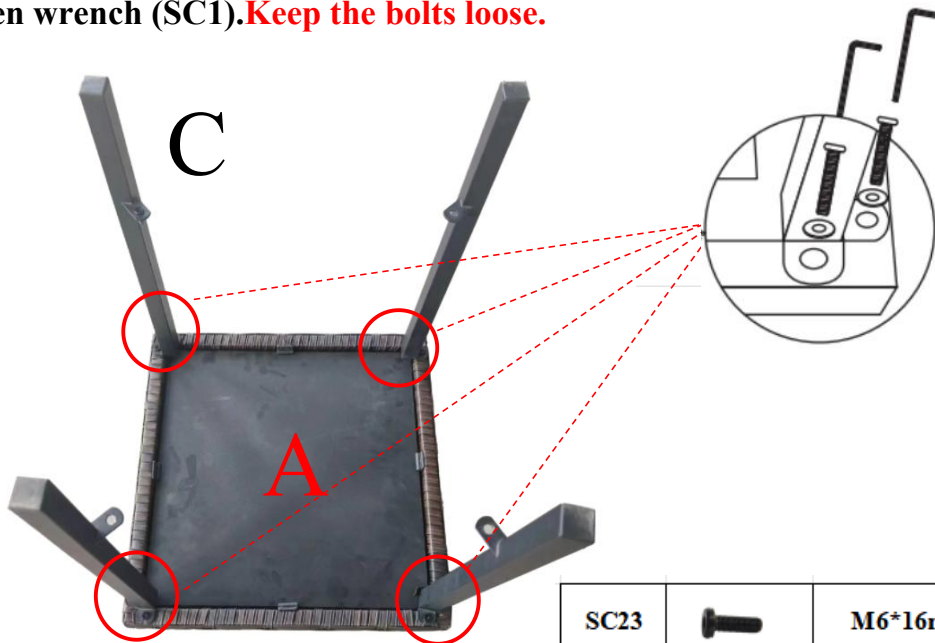

1. Secure Table Leg (C) to Table top (A) with 8 bolts (SC23) and 8 washers (SC17) by using allen wrench (SC1). Keep the bolts loose.



SC23		M6*16mm	8
SC17		Ø16*Ø6.5*1mm	8

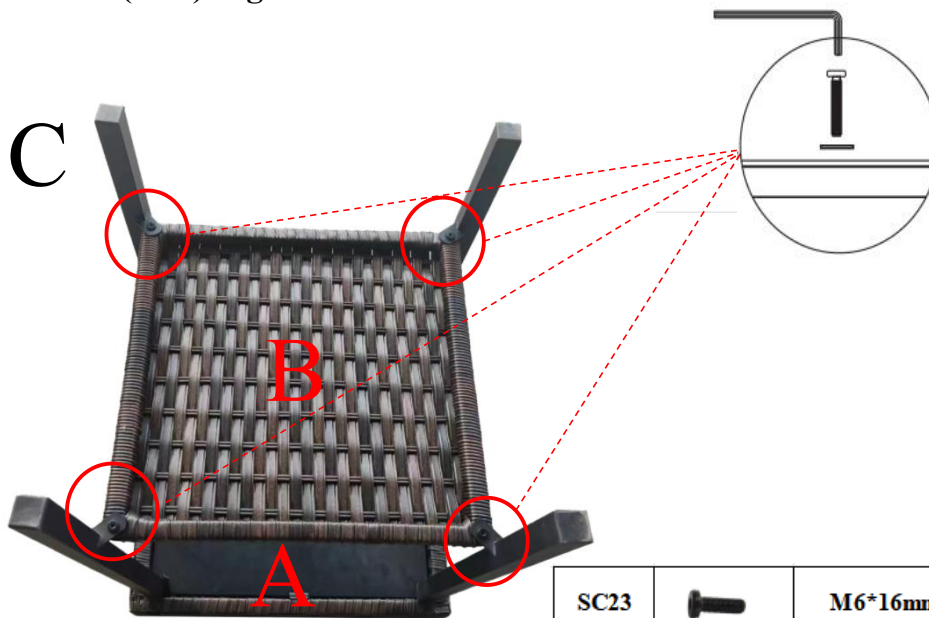2. Secure Table Tray (B) to Table leg (C) with 4 bolts (SC23) and 4 washers (SC17) by using allen wrench (SC1). Tighten all bolts.



SC23		M6*16mm	4
SC17		Ø16*Ø6.5*1mm	4

3. Tighten all bolts, it is ready for use now.

