 


ENJOY SMART LIFE

EPLO®

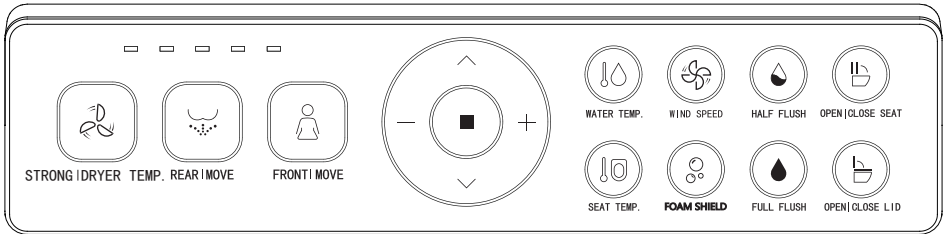

Remote Control Instructions

■ Model: EP-U8MAX / EP-U9MAX

Thank you for choosing our product. Please read the instructions carefully before installation and keep it available for future maintenance or reference.

E-mail: service@eplo.com

Content

Installation preparation

- 01. Remote control installation _____ 01
- 02. Battery installation _____ 01

Usage instruction

 
- 01. Remote control illustration _____ 02
- 02. Rear/Front washing _____ 03
- 03. Strong/Dryer temperature _____ 04
- 04. Water volume adjustment _____ 04
- 05. Nozzle position adjustment _____ 04
- 06. Energy saving _____ 04
- 07. Water temperature adjustment _____ 05
- 08. Seat temperature adjustment _____ 05
- 09. Wind speed adjustment _____ 05
- 10. Full flush/Half flush _____ 05
- 11. Auto lid open/close _____ 06
- 12. Foam setting _____ 06
- 13. User code _____ 06
- 14. Other operations _____ 07

Installation Preparation

Remote control installation

 
Remote control holder installation 1:

1. Drill two 6mm diameter holes in the wall at a distance of about 130.7mm, a depth of about 35mm.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Install an anchor in each of the holes, stick the holder to the wall and secure with screws and then stick the patch with tape.

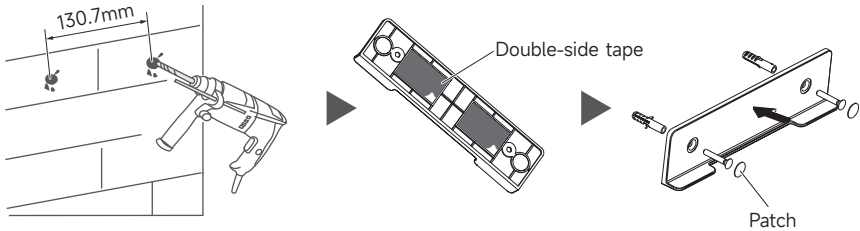

 
Remote control holder installation 2:

1. Clean and dry the pre-installation area of the holder.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Stick the holder to the wall horizontally and then stick the patch with tape.

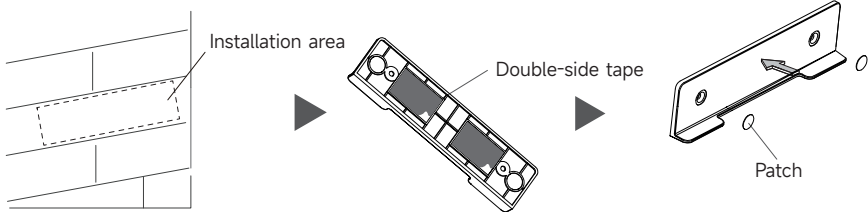

Battery installation:

1. Insert batteries into the remote control.
2. Put the remote control to the holder.

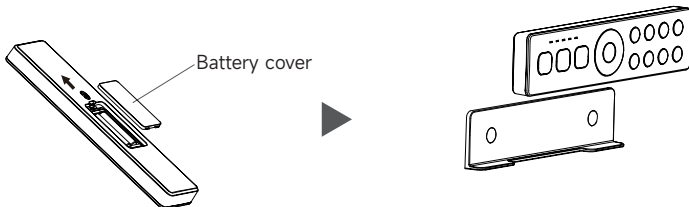 


Notice:

1. Please ensure the remote control is within reach when a person on the seat.
2. Do not install and use the product in damp places such as a shower room.
3. Do not place the product in a place where it is easily exposed to water.

Installation Preparation

Remote control illustration

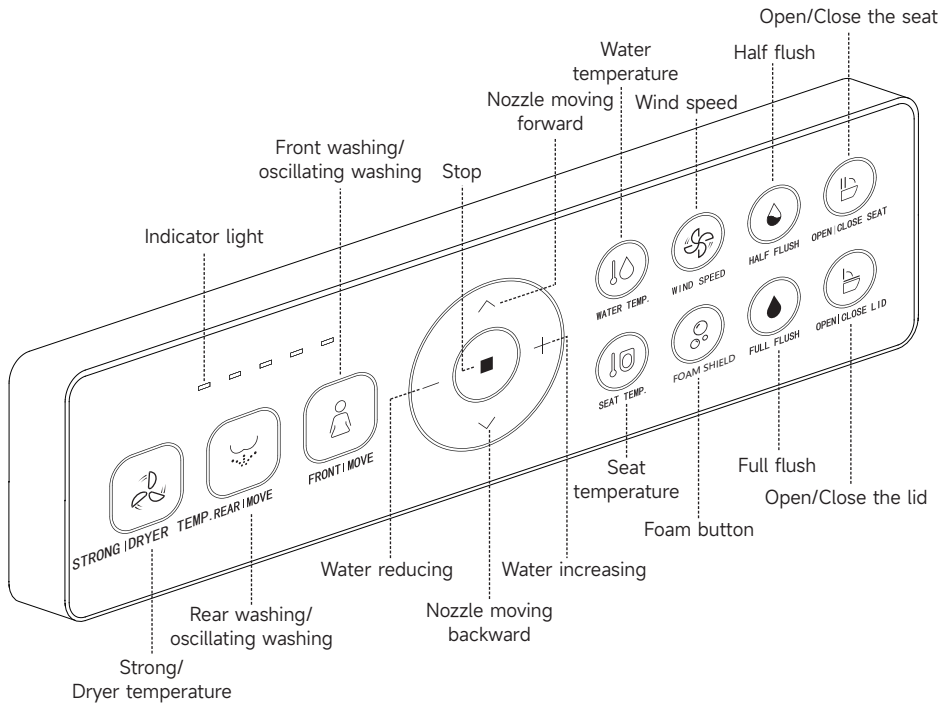

Usage Instruction

Notice :

- Only when the user is seated and the buzzer beeps can the functions of front/rear washing and drying be activated.
- The nozzle will continue to spray for 1-2 seconds after user stands up during washing, so please press "STOP" button before standing up.

REAR|MOVE

 


- Press " " button, the indicator light is on showing current water temperature level, it starts rear washing; Press again " " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses " ■ " button.

FRONT|MOVE



- Press " " button, the indicator light is on showing current water temperature level, it starts front washing; Press again " " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses " ■ " button.

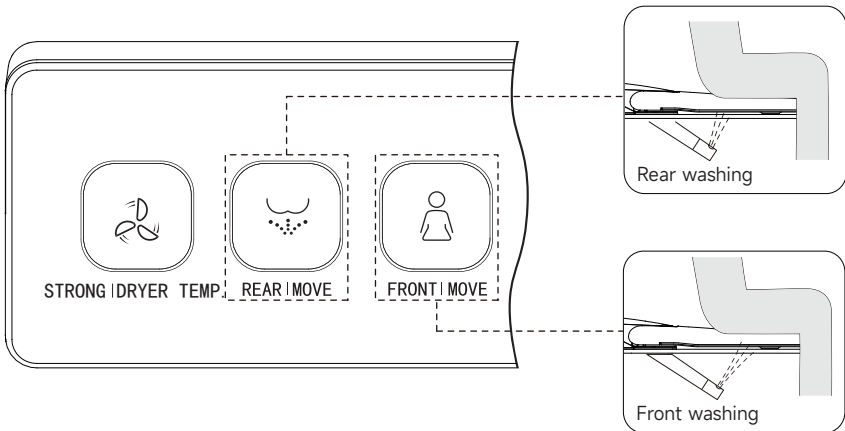


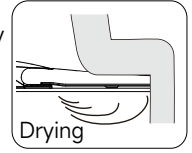 
Usage Instruction


STRONGIDRYER TEMP (Only for the product with drying function)



STRONG IDRYER TEMP.

① Press "  " button, the indicator is on showing current air temperature gear, it starts drying. The drying will stop automatically after one cycle or after user leaves the seat.



② Under drying, press "  " button to adjust the air temperature, and the indicator light is on showing the air temperature gear.

When the indicator light is off, the temperature is at gear 0 (room temperature),

The air temperature adjustment mode is cycle through 0-5 gears.

③ Under drying, press the air outlet position " ^ ", " v " button, the indicator light is on showing the current air outlet gear, and the air outlet position can be adjusted between 0-5 gears.

○ ○ ○ ○ ○ ● ○ ○ ○ ○ ● ● ○ ○ ○ ● ● ● ○ ○ ● ● ● ● ○ ● ● ● ● ●

Room Level 1 Level 2 Level 3 Level 4 Level 5

 
temperature

Water volume adjustment

· Press "+" or "-" button when it is under function of rear washing or front washing, the indicator light is on showing current water volume level, and water volume can be adjusted.



Nozzle position adjustment

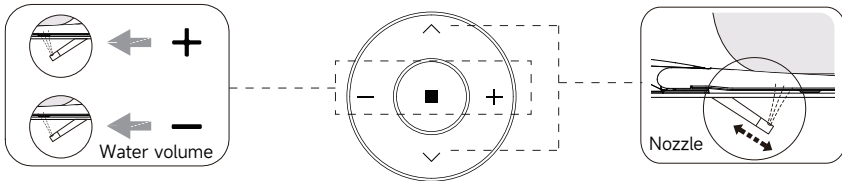· Press "A" or "V" button when it is under function of rear washing or front washing, the indicator light is on showing current nozzle position, and nozzle position can be adjusted in 5 levels.



Energy saving



Long press "  " button to enter energy saving mode, long press "  " button again to exit energy saving mode.

Under energy saving mode, seat temperature is set to Level 1 for energy saving.

(Note: If the seat temperature before energy saving is neutral, then it will be neutral as well.)

Remark:


Energy saving mode will be suspended and the product will enter functional mode if the seat is used. The seat starts to heat immediately (without turning off the seat temperature), and the energy saving mode is restored once the seat is no longer being used.

Usage Instruction

Water temperature adjustment



WATER TEMP.


Short press "  " button to adjust the water temperature between 0-5 level. The indicator light is on showing current water temperature level. When the indicator is off, the temperature is at level 0 (room temperature).

○ ○ ○ ○ ○ ● ○ ○ ○ ○ ● ● ○ ○ ○ ● ● ● ○ ○ ● ● ● ● ○ ● ● ● ● ●
Room Level 1 Level 2 Level 3 Level 4 Level 5
temperature

Seat temperature adjustment



SEAT TEMP.

 
 
Short press "  " button to adjust the seat temperature between 0-5 level. The indicator light is on showing current seat temperature level. When the indicator is off, the temperature is at level 0 (room temperature).

○ ○ ○ ○ ○ ● ○ ○ ○ ○ ● ● ○ ○ ○ ● ● ● ○ ○ ● ● ● ● ○ ● ● ● ● ●
Room Level 1 Level 2 Level 3 Level 4 Level 5
temperature

Wind speed adjustment






WIND SPEED

- ① Under drying, press "  " button to switch the wind speed gear, and the gear adjustment will be cycled from 1-3 gears.
- ② Long press the "  " button to turn on/off the drying moving function.

Half flush/Full flush



 
HALF FLUSH

- ① Short press "  " button, the toilet starts half flushing.
- ② Short press "  " button, the toilet starts full flushing.
- ③ Long press "  " button to turn on/off auto flush function.



FULL FLUSH

When the auto flush function is turned on, toilet will automatically flush after detecting user leaving the seat.

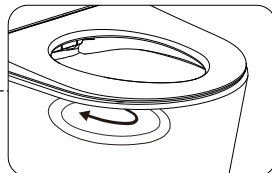 


Usage Instruction

Auto lid open/close




Short press "  " button, open or close the lid.


Short press "  " button, open or close the seat.

OPEN | CLOSE SEAT



OPEN | CLOSE LID


Long press "  " button to turn on the auto opening function, and the buzzer will beep once.


Long press the "  " button again to turn off the auto opening function, and the buzzer will beep twice.

 
 
Foam setting

 
 


FOAM SHIELD

① Short press "  " button to activate the foam shield function.

② Long press "  " button to turn on pumping quickly until the foam comes out and then release it. (Note: This operation is only used when the toilet has just been installed or the foam agent is used up, and the foam agent is added again. The use of the rest of the time will cause foam agent to be wasted.)

③ Press "  " button first, then press "  " button to turn on the automatic foaming function, and the buzzer will beep once.



④ Press "  " button again and press "  " button to turn off the automatic foaming function, and the buzzer will beep twice.

· After the automatic foaming function is on, when it is detected that the user is sitting, the foam shield function will be turned on automatically. (The automatic foaming function is turned off by default)

User code

· Radio frequency remote control

① Shut off the power supply of toilet


② Press and hold "  " button, then press "  " button, the indicator light will flash.

③ Re-connect the power plug and press "reset" button.


④ The indicator stops flashing and stays on for 2 seconds, indicating that the remote control and the toilet are matched successfully. It beeps once when the self-inspection completes. Then the remote control is ready for use.

Other operations


Quiet mode

- Press and hold the " ■ " button and press the "  " button to turn on/off quiet mode.


Auto deodorization

- Press and hold " ■ " button and press "  " button to turn on/off auto deodorization function. The deodorization function will be automatically turned on when the user is seated, and will stop after user leaves. Under drying, deodorization will stop. (This function is turned on by default.)




Automatic pre-wetting function

- Press and hold " ■ " button and press "  " button to turn on or off automatic pre-wetting function. After the automatic pre-wetting function is turned on, the pre-wetting function will be performed when the user is detected to be seated.

 

Foot sensor function

- Long press "  " button to turn on/off foot sensor function. Foot sensor is deactivated when the user is seated.

Night light

- Night light adjustment: Long press "  " button to turn on/turn off night light.
- Intelligent mode: Long press "  " button to enter into intelligent mode (Night light will be on or off by detecting the lightness of surroundings). If the product is on intelligent mode, long press "  " button to exit intelligent mode. (Factory setting: intelligent mode)

Four Seasons Temperature Sensing function

- ① Long press "  " button to activate the Four Seasons Temperature Sensing function, indicated by a single beep. Once activated, the unit will intelligently adjust the water temperature, air temperature, and seat temperature based on the external environment.
- ② Long press "  " button again to deactivate the Four Seasons Temperature Sensing function, indicated by two beeps. (The Four Seasons Temperature Sensing function is set to off by default and needs to be activated for first-time use.)

Remark:

- In case of power cut during nozzle spraying, the wand cannot be retracted, please wait until the power is restored. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.

EPLO[®]
WWW.EPLO.COM

WhatsApp



E-mail:service@eplo.com

The picture of product may not entirely consistent with actual appearance and color because of product improvements, please in kind prevail.