

 
INSTALLATION

Product Manual




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

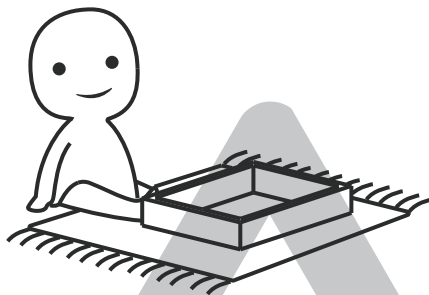



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

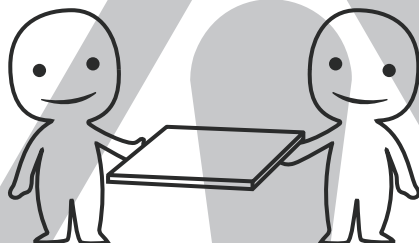

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

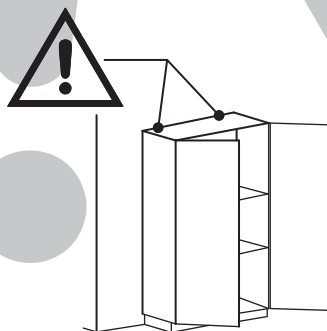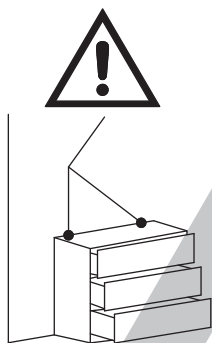

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

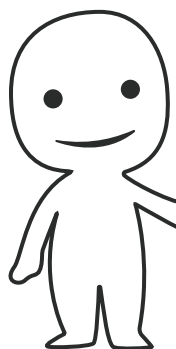


Please prepare the following tools

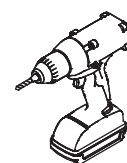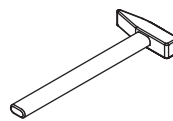    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 84



Ø 6 x 40 mm

B x 84



 
Ø 15 x 12 mm

C x 16




Ø 6 x 30 mm

D x 4




66 mm

 E x 28




Ø 4 x 35 mm

 F x 8

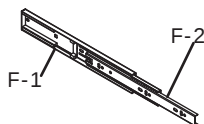

L=300 mm

 G x 4




Ø 6 x 60 mm

H x 72




Ø 3.5 x 14 mm

 I x 12



Ø 4 x 25 mm

 J x 14

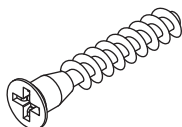

Ø 7 x 38 mm

K x 16



 
Ø 20 mm

L x 16



L=13 mm

Parts List

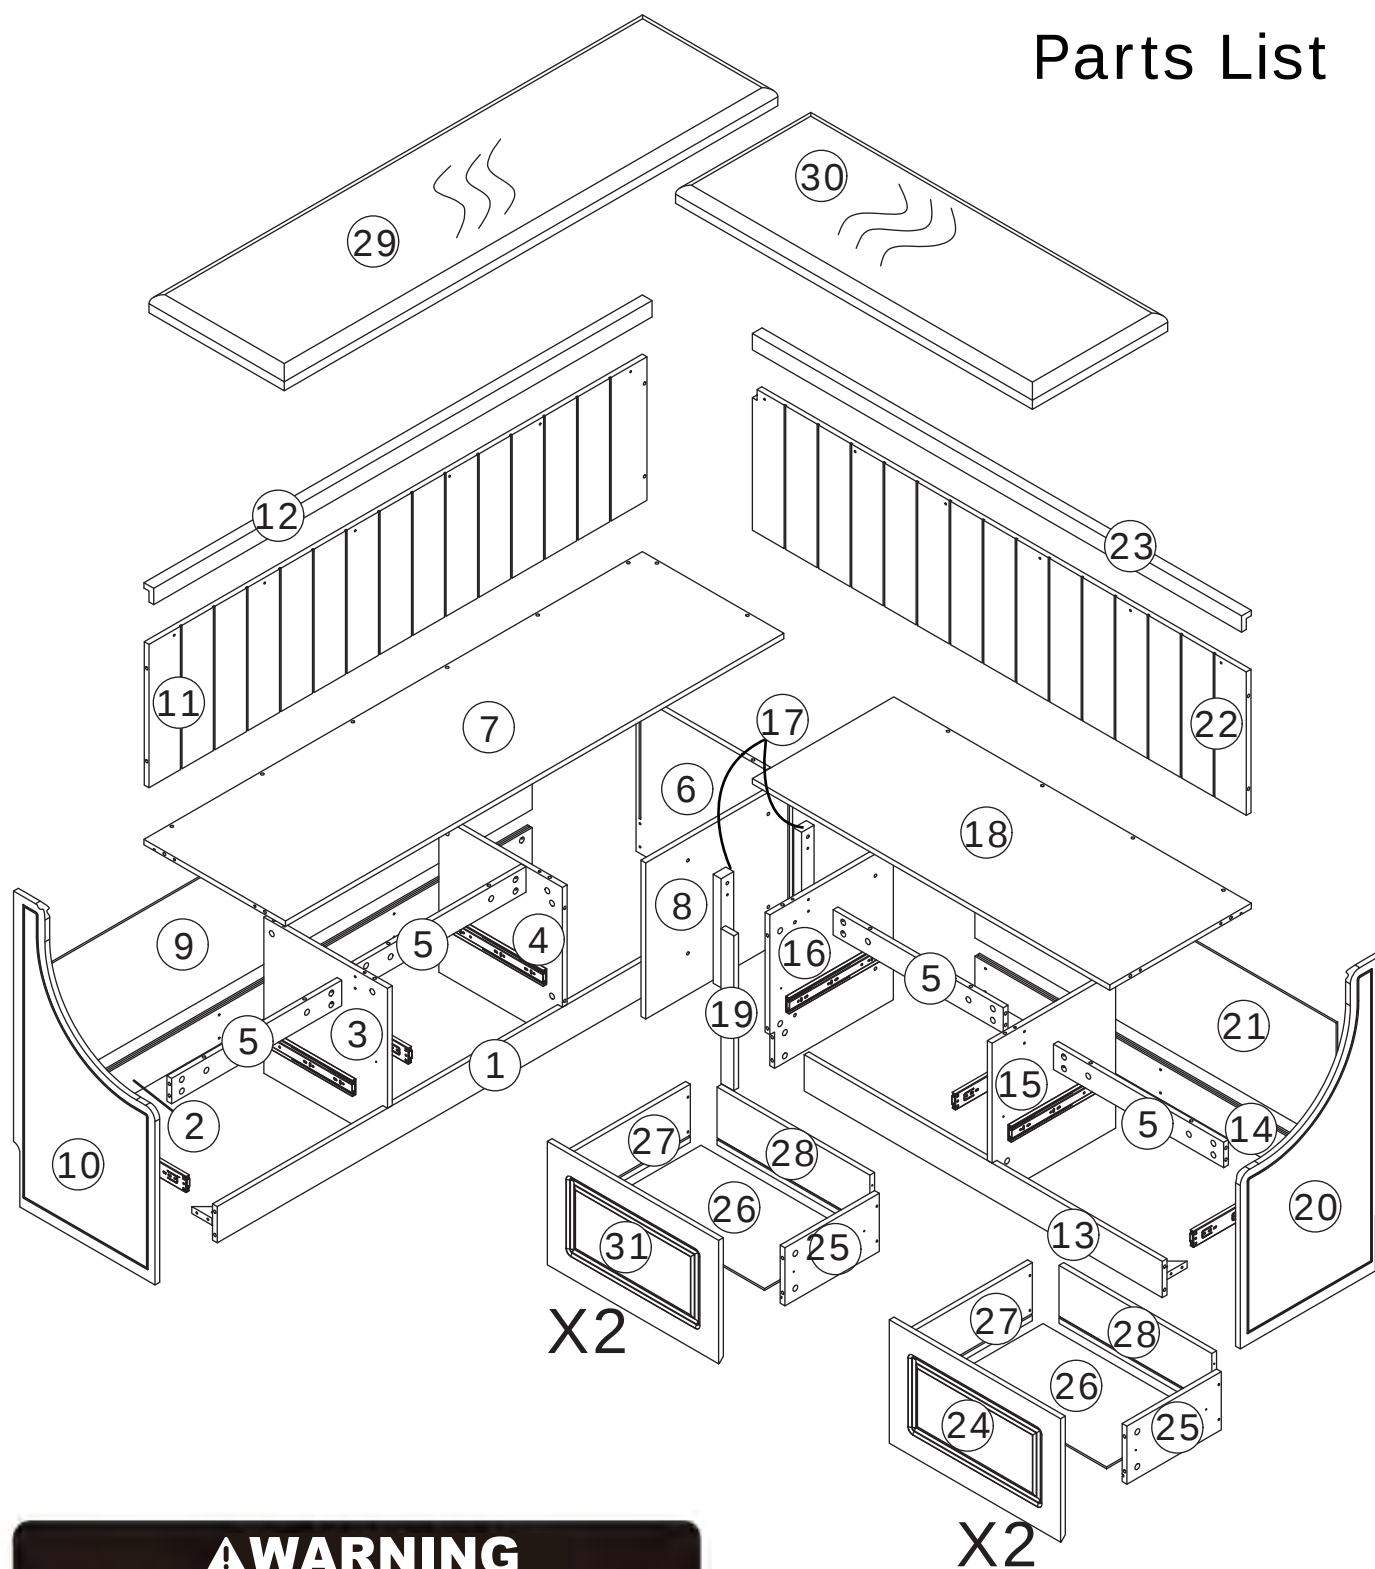


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

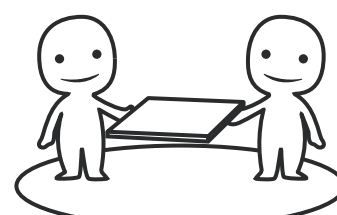

ASSEMBLED BY 2 ADULTS


Parts List

 Lista de piezas

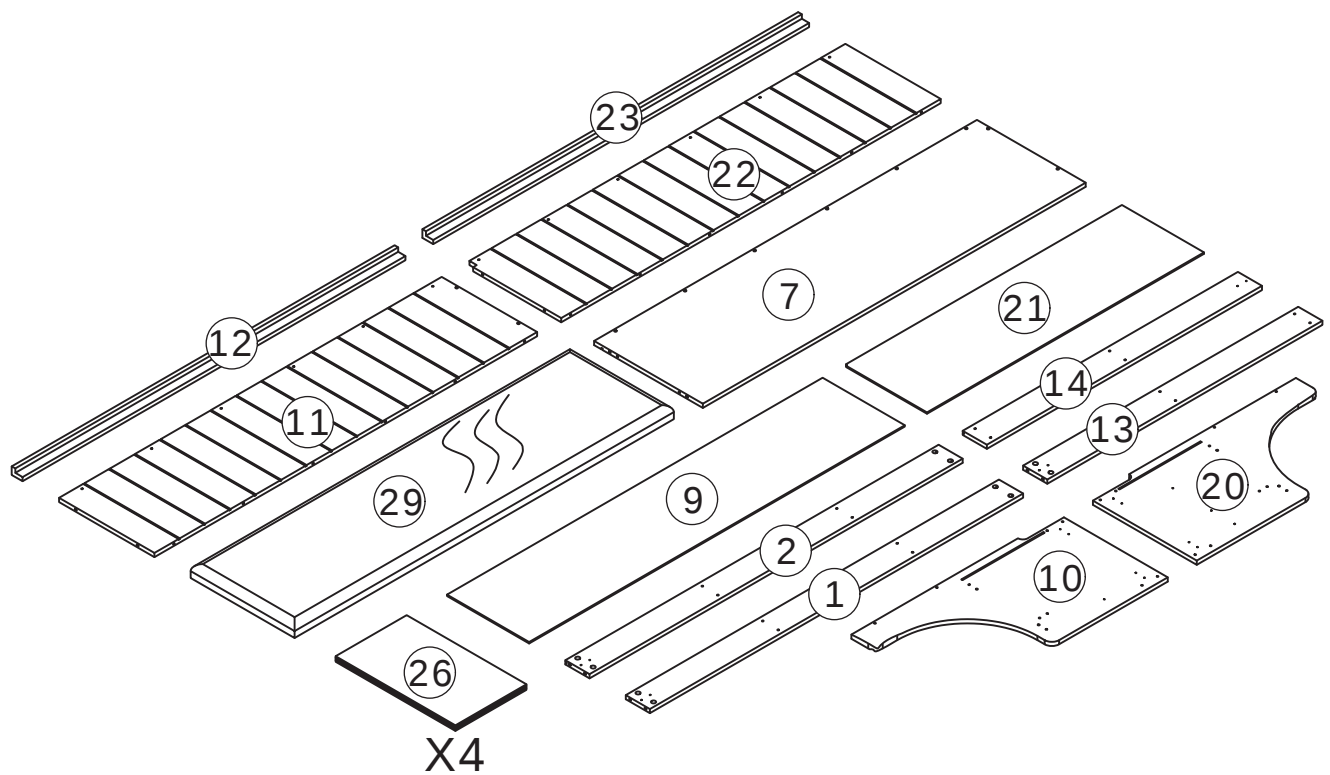

Parts List

 
Lista de piezas

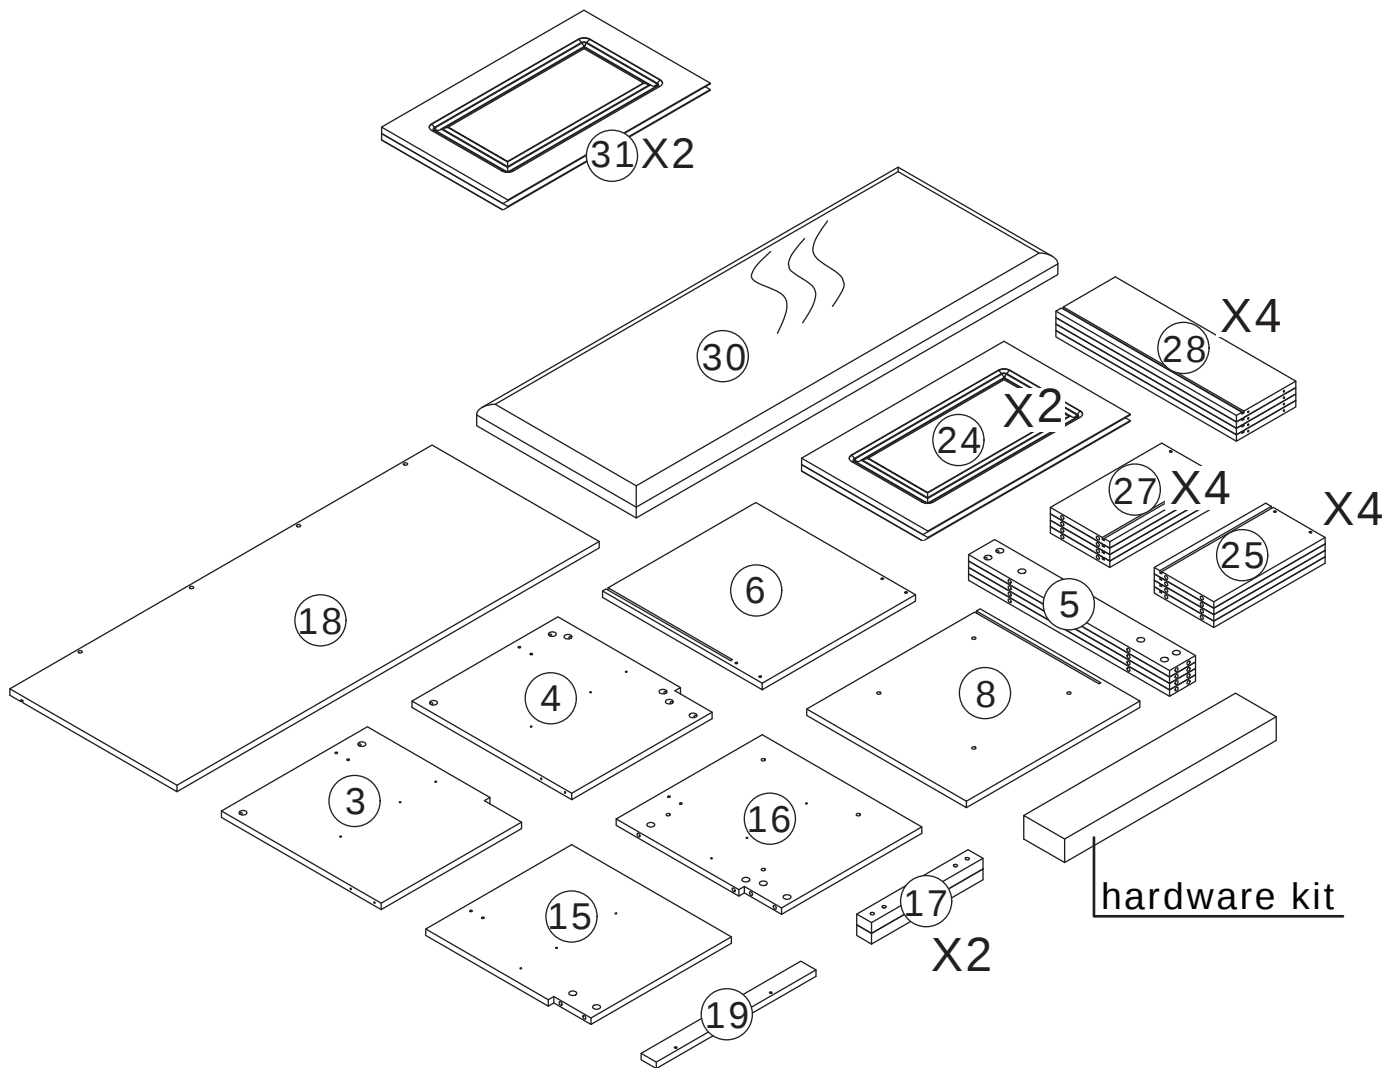




**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

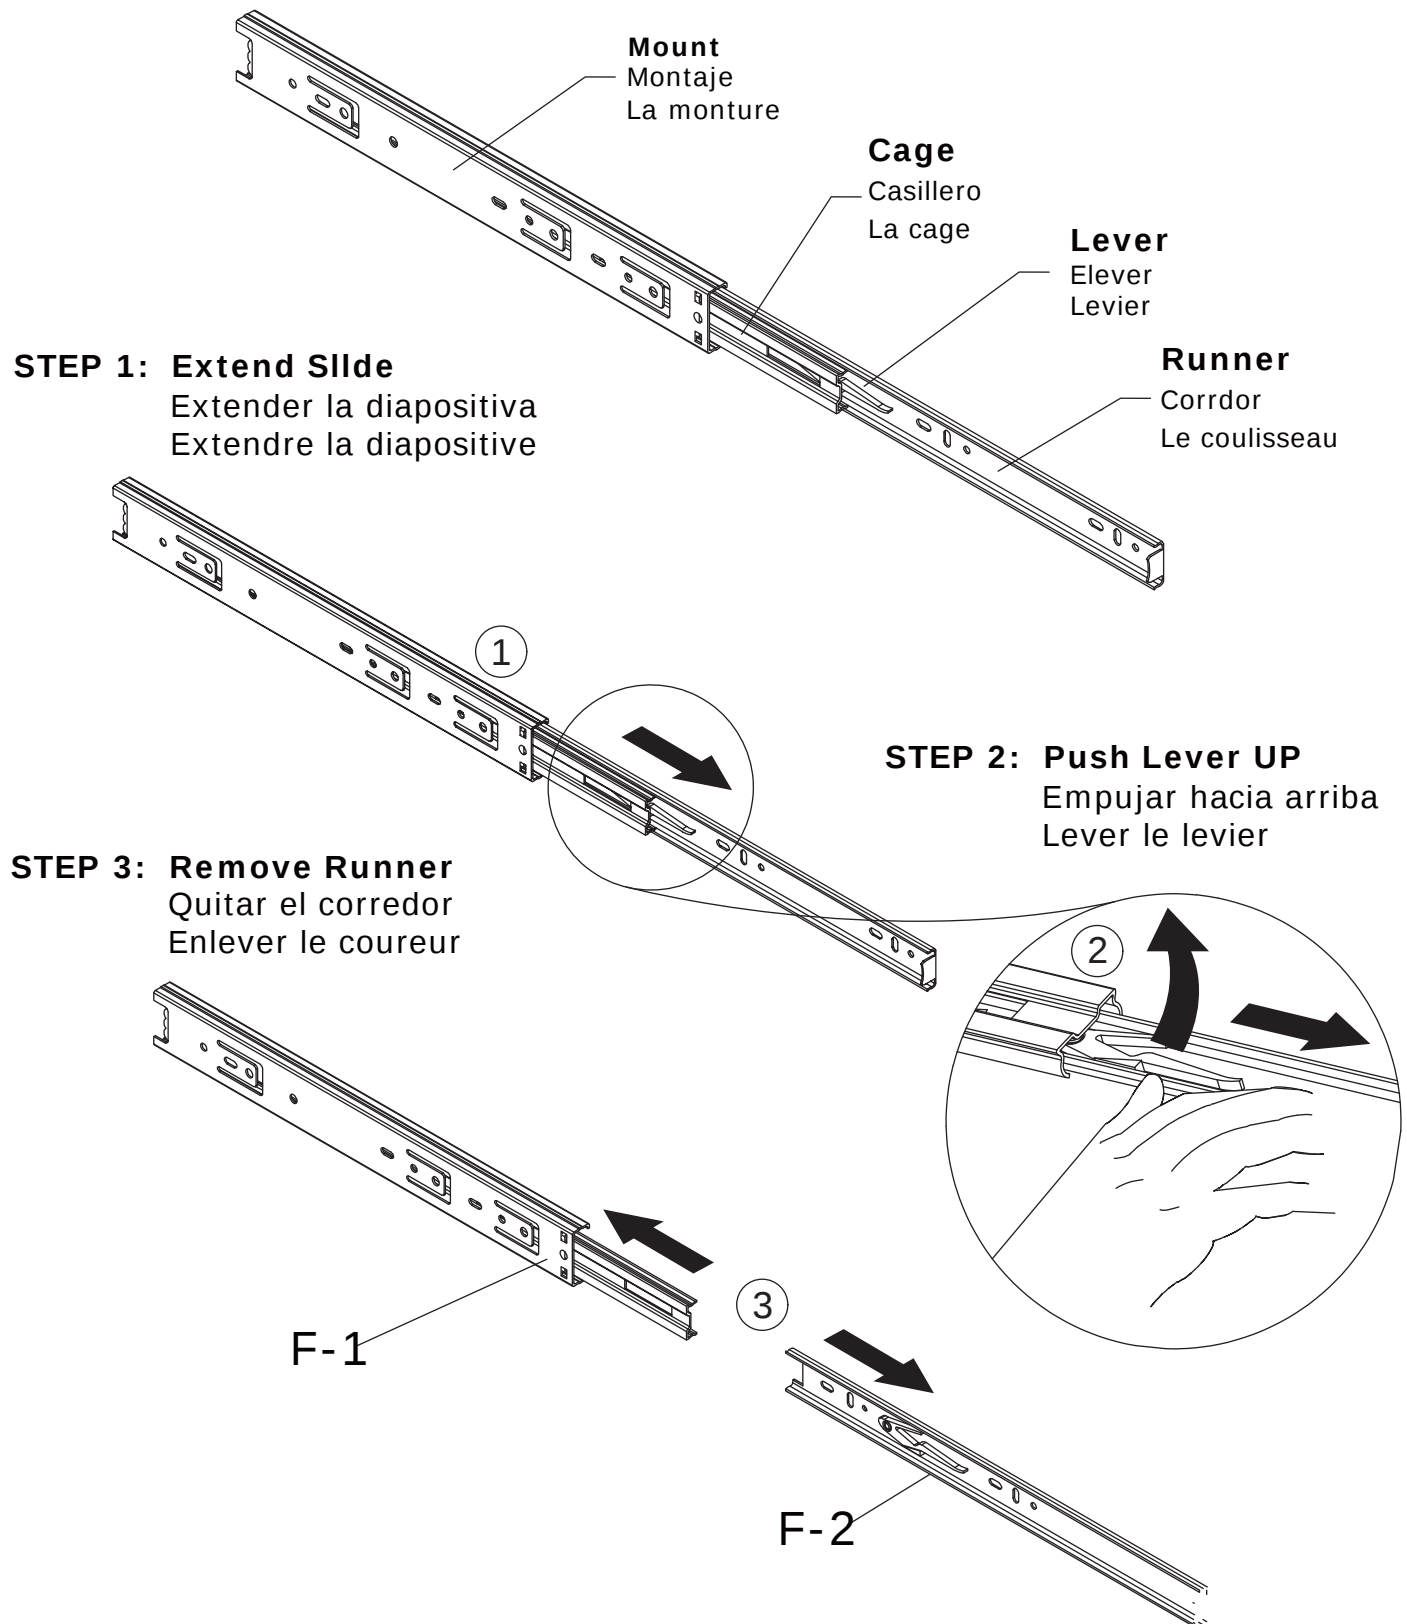



1

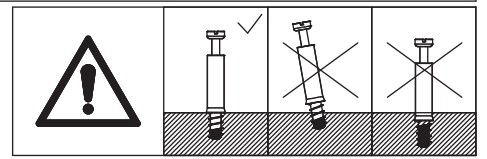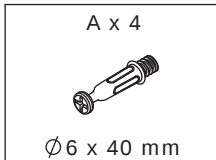   

Screw eccentric rod (A) onto Part 1.






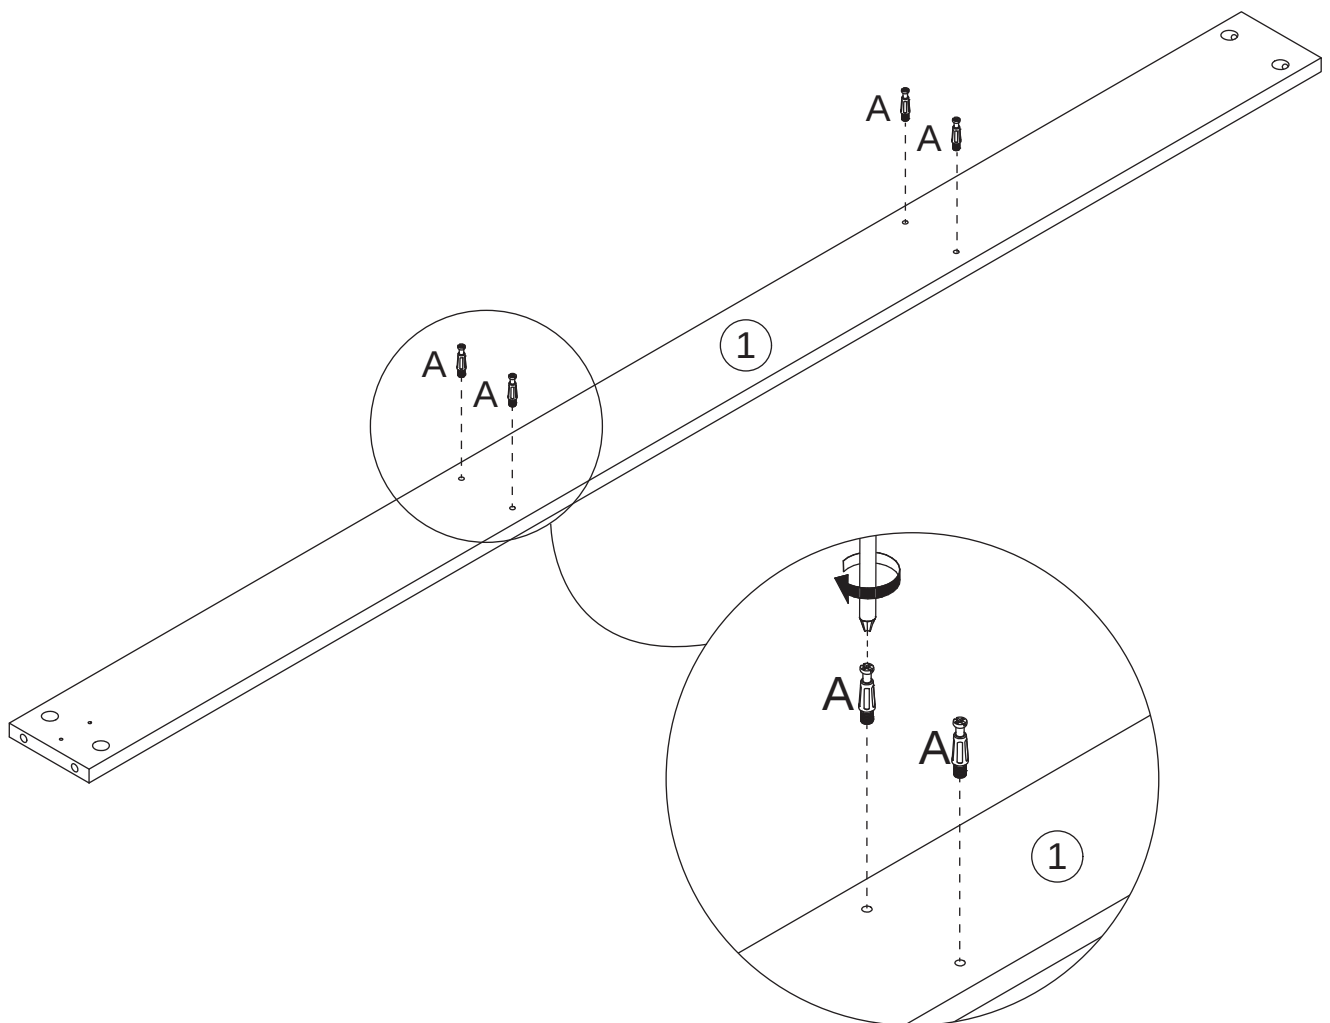 


2

  
A x 4  Ø 6 x 40 mm	F x 2 F-1  L=300 mm	H x 6  Ø 3.5 x 14 mm	
---	---	---	---

Screw eccentric rod (A) onto **both sides** of Part 3.

     
 
Secure slide rail (F-1) to Part 3 using screw (H).

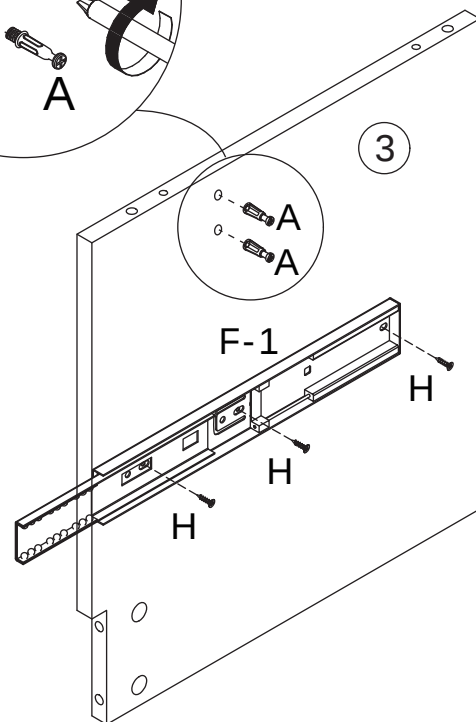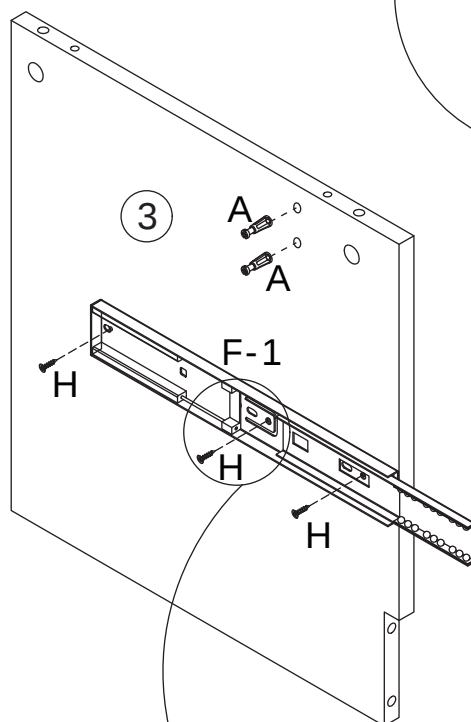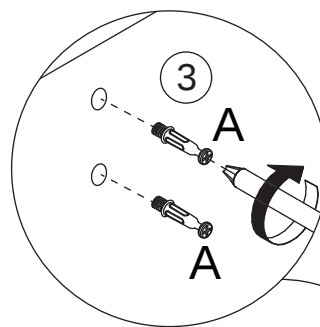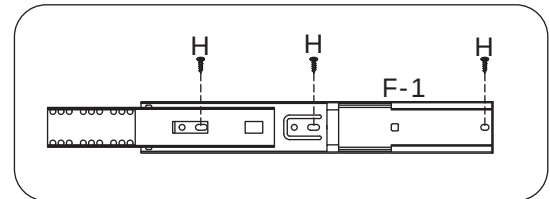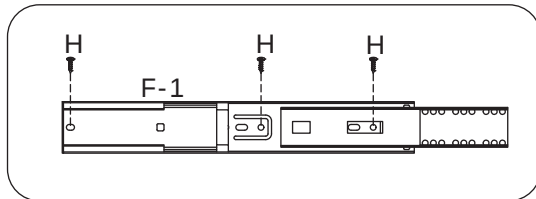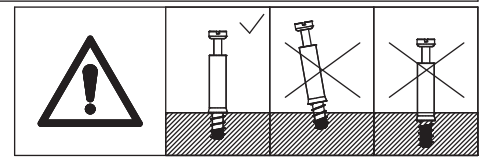






Flip to the other side

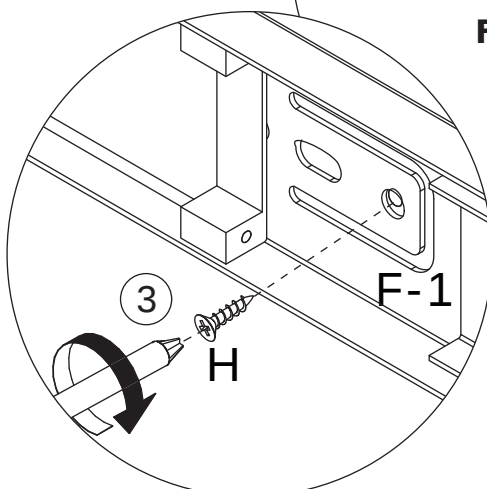 

3

  A x 2  Ø 6 x 40 mm	F x 1  F-1 L=300 mm	H x 3  Ø 3.5 x 14 mm	
---	--	---	---

     Screw eccentric rod (A) onto Part 4.
Secure slide rail (F-1) to Part 4 using
screw (H).

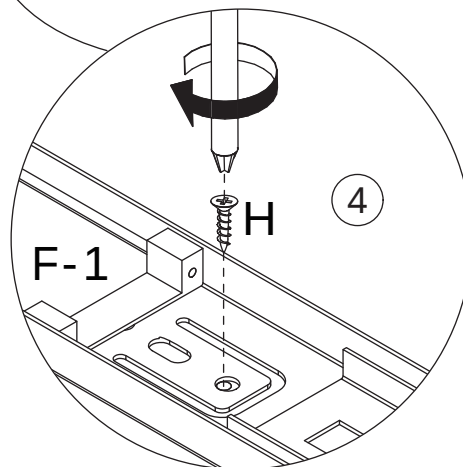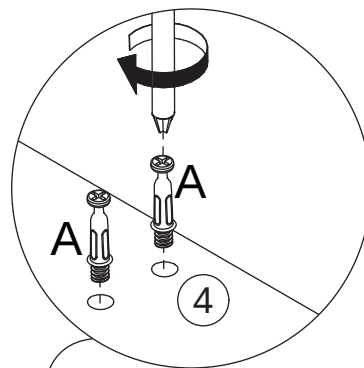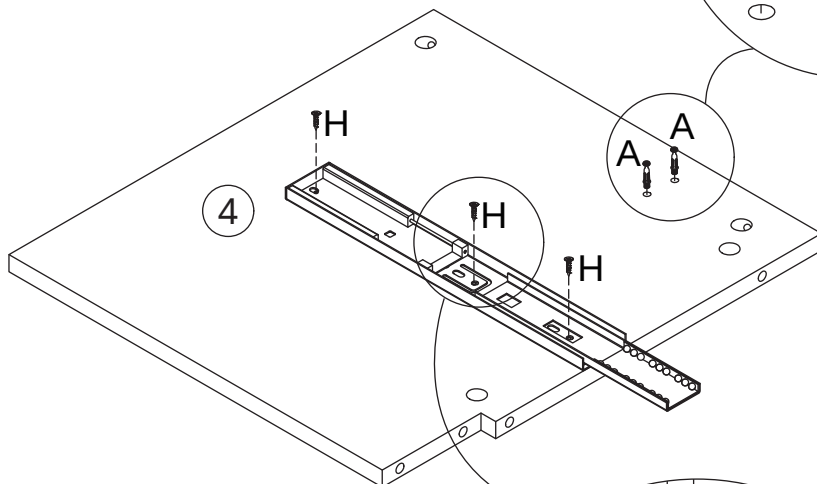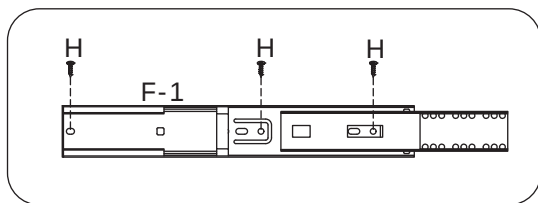
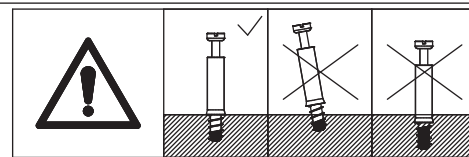


4


B x 4



  Ø 15 x 12 mm

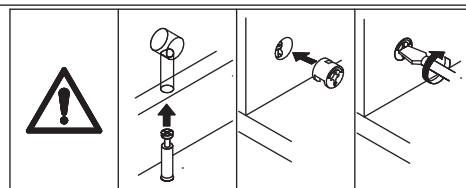


 
Connect Part 3 and 4 to Part 5, tighten by turning cam lock (B) clockwise.

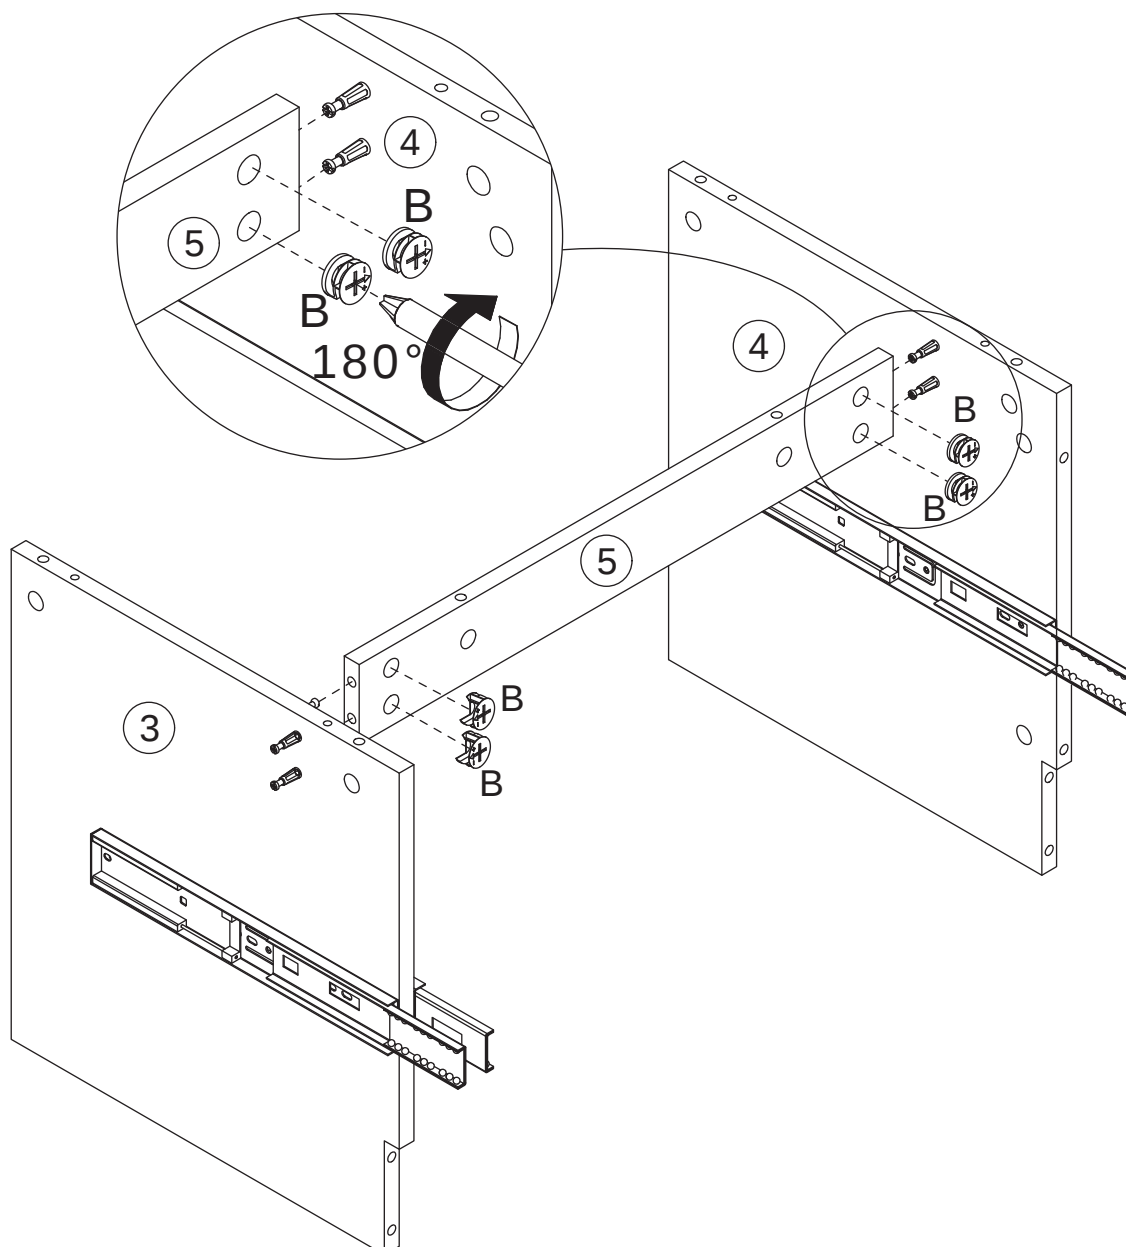


5

B x 4

   Ø15 x 12 mm

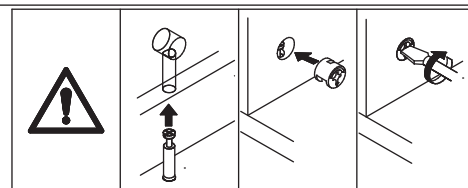

 
Connect Part 1 to Part 3 and 4, tighten by turning cam lock (B) clockwise.

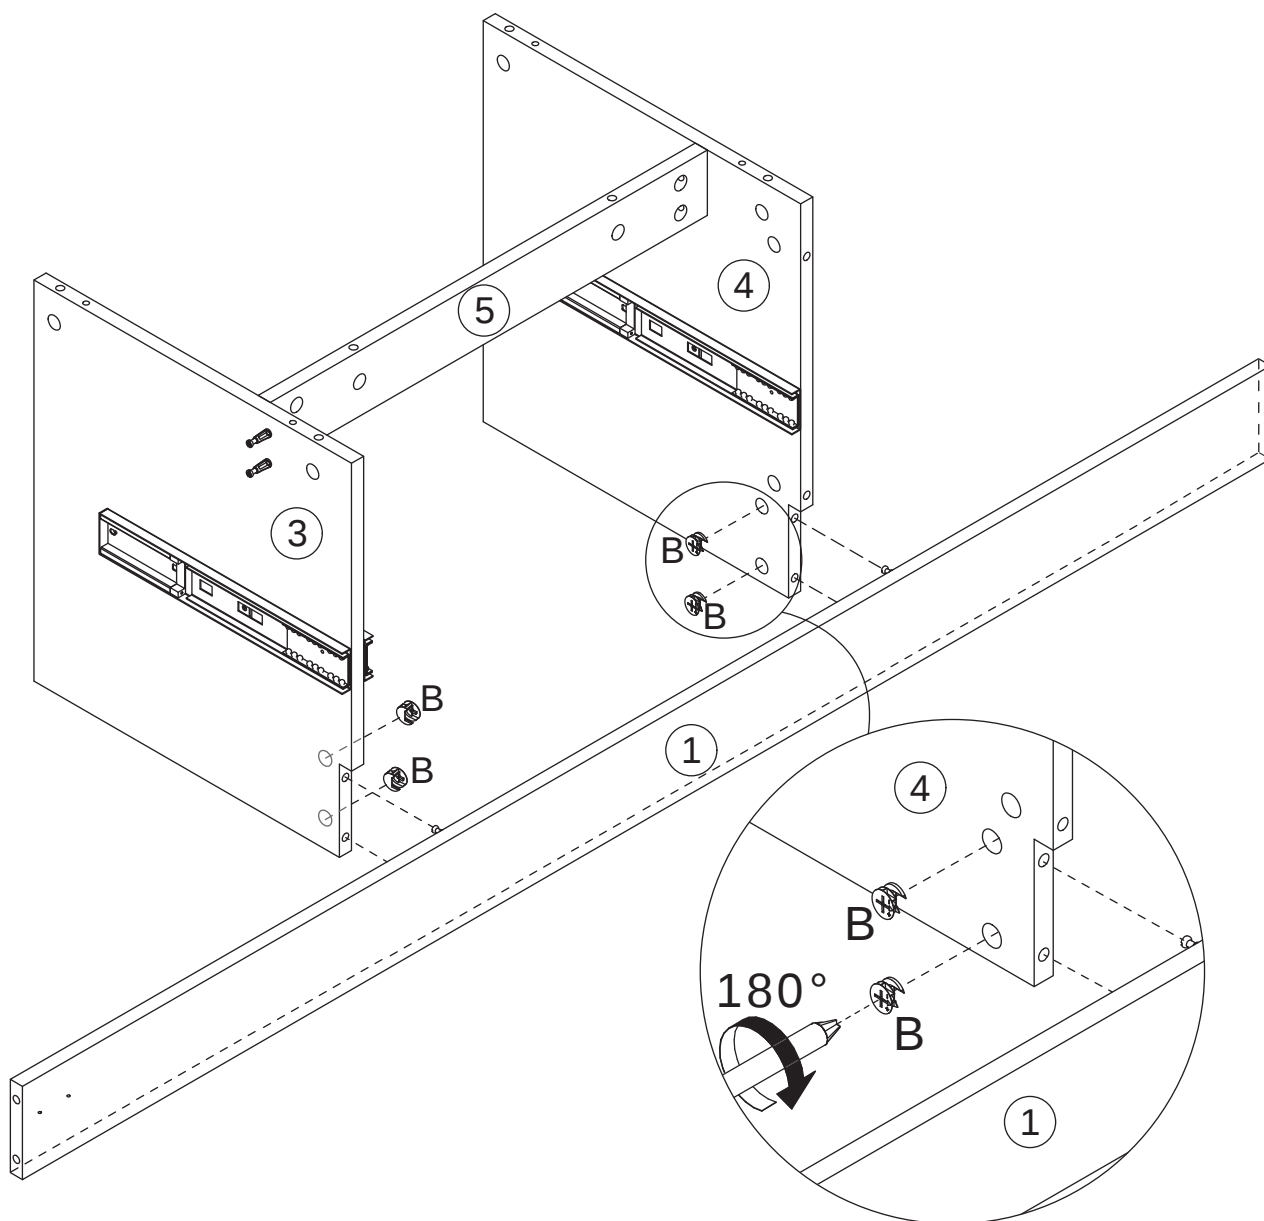


6

E x 4



 
Ø4 x 35 mm



 
Secure Part 2 to Part 3 and 4 using screw (E).

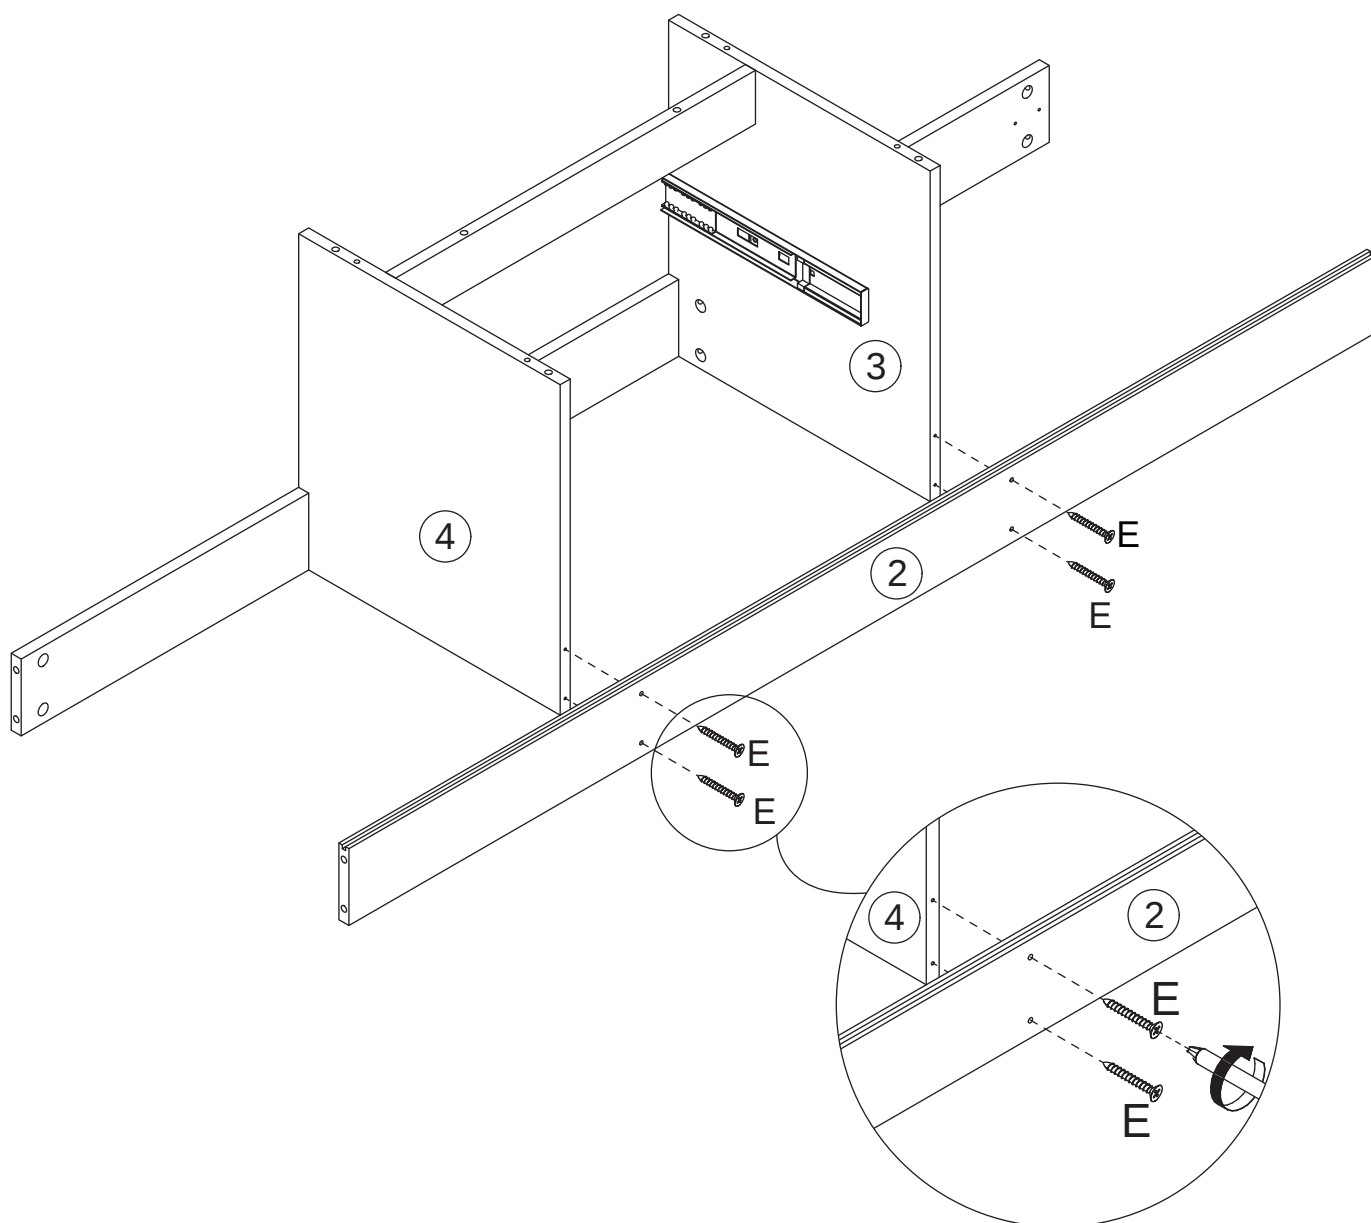

7

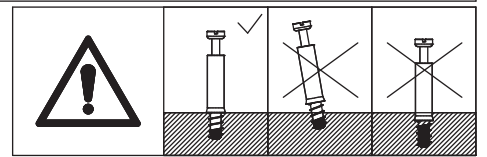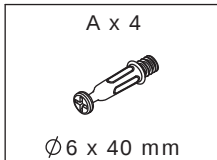   

Screw eccentric rod (A) onto Part 6.

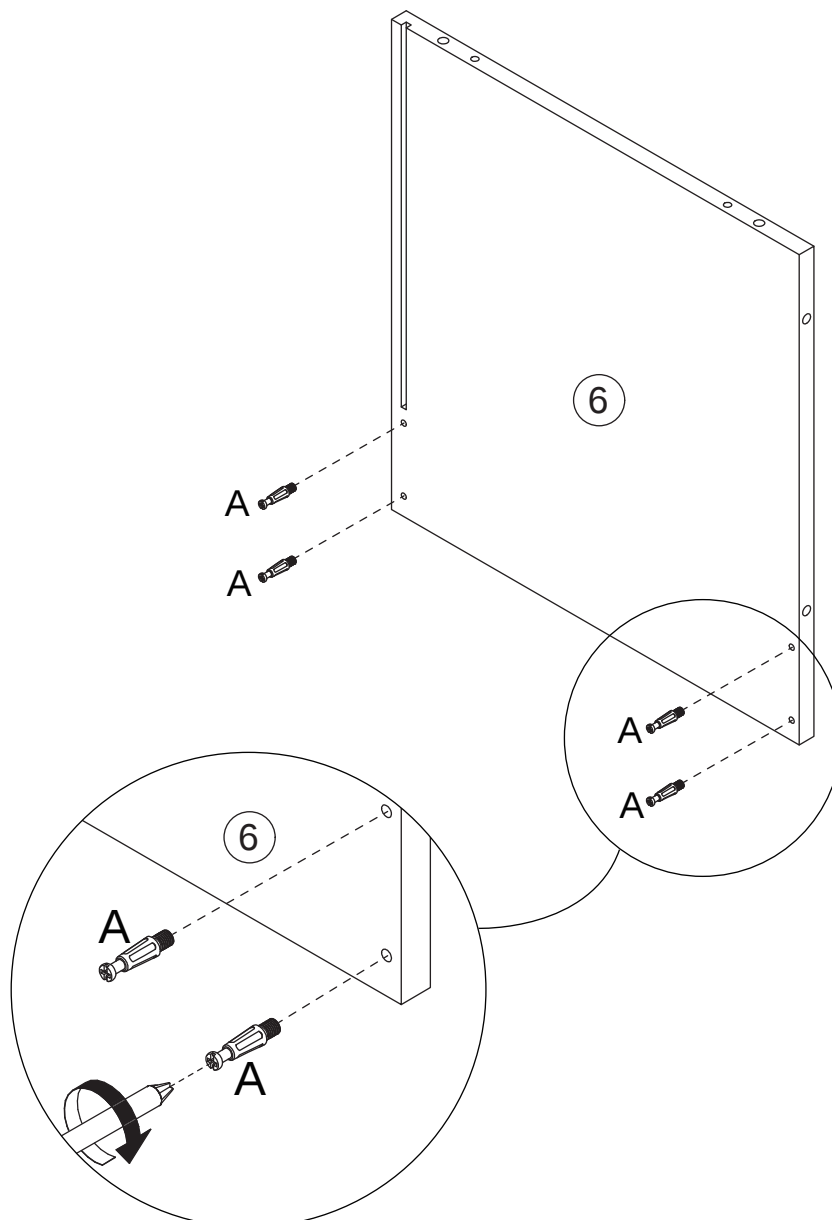 


8



B x 4



 Ø15 x 12 mm



  Connect Part 6 to Part 1 and 2, tighten by turning cam lock (B) clockwise.

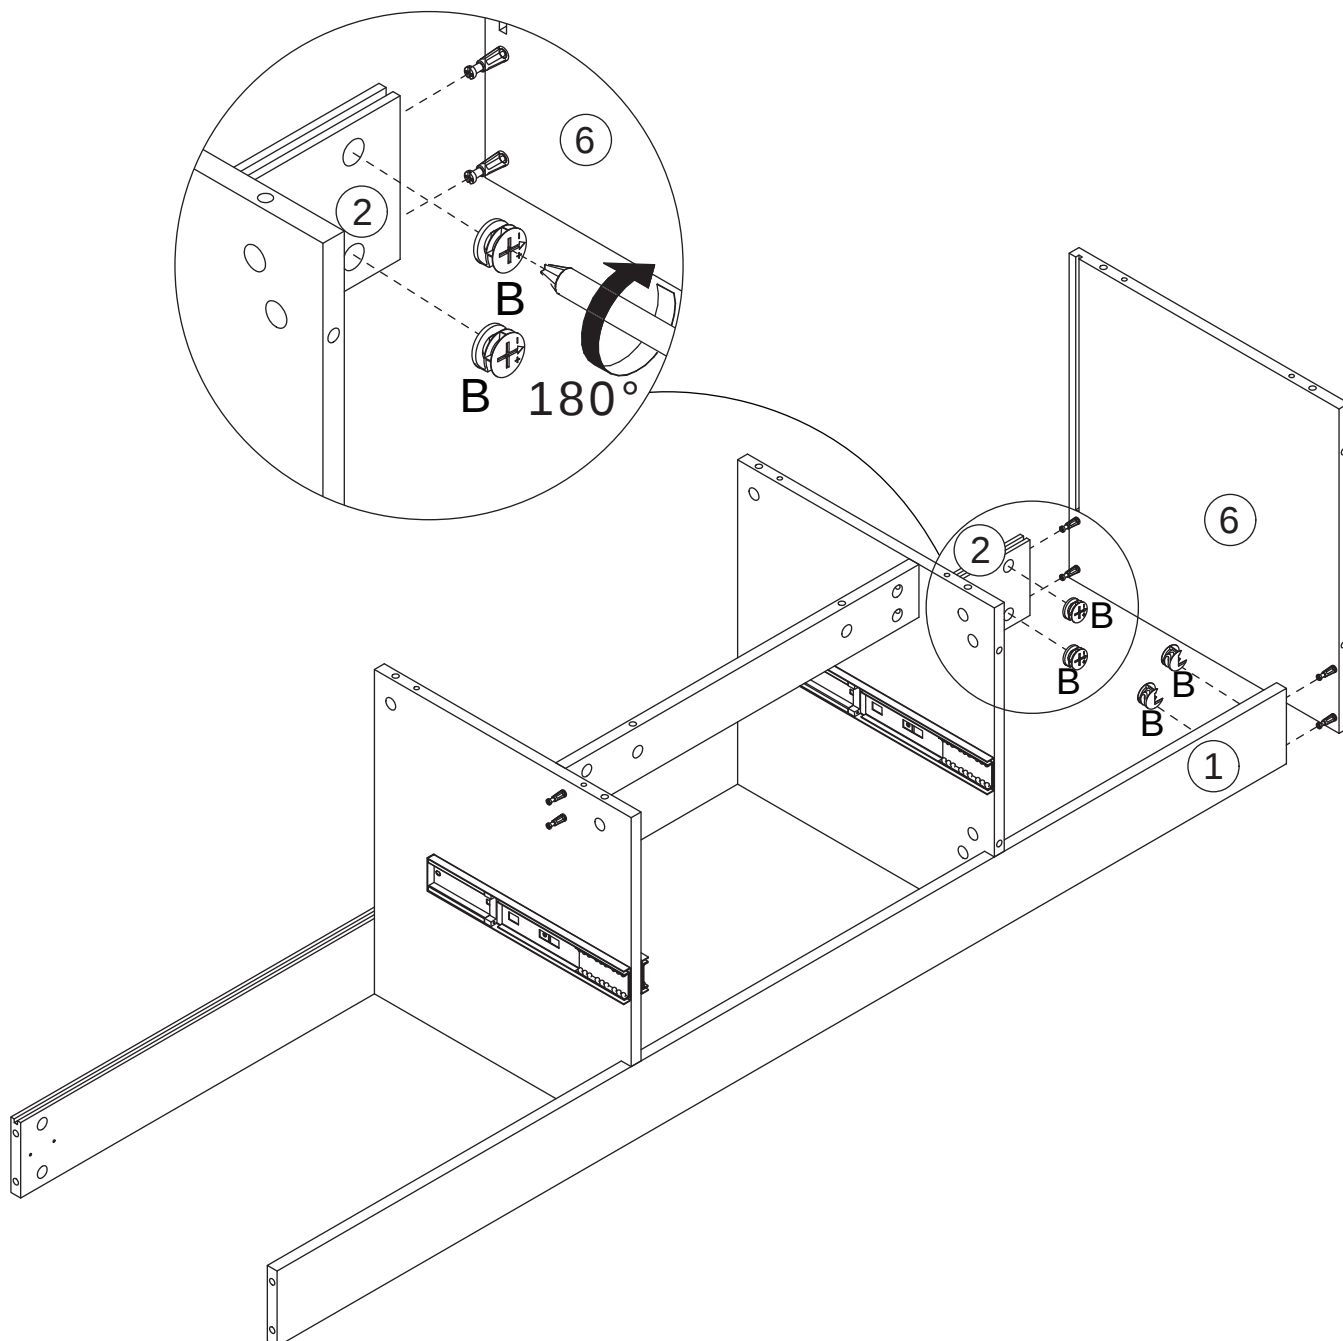
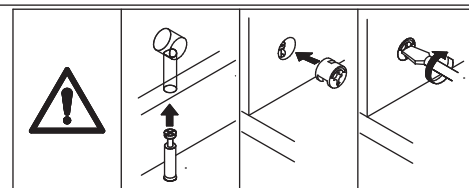


9



A x 10



  C x 6



  Screw eccentric rod (A) and insert wooden dowel (C) to Part 7.

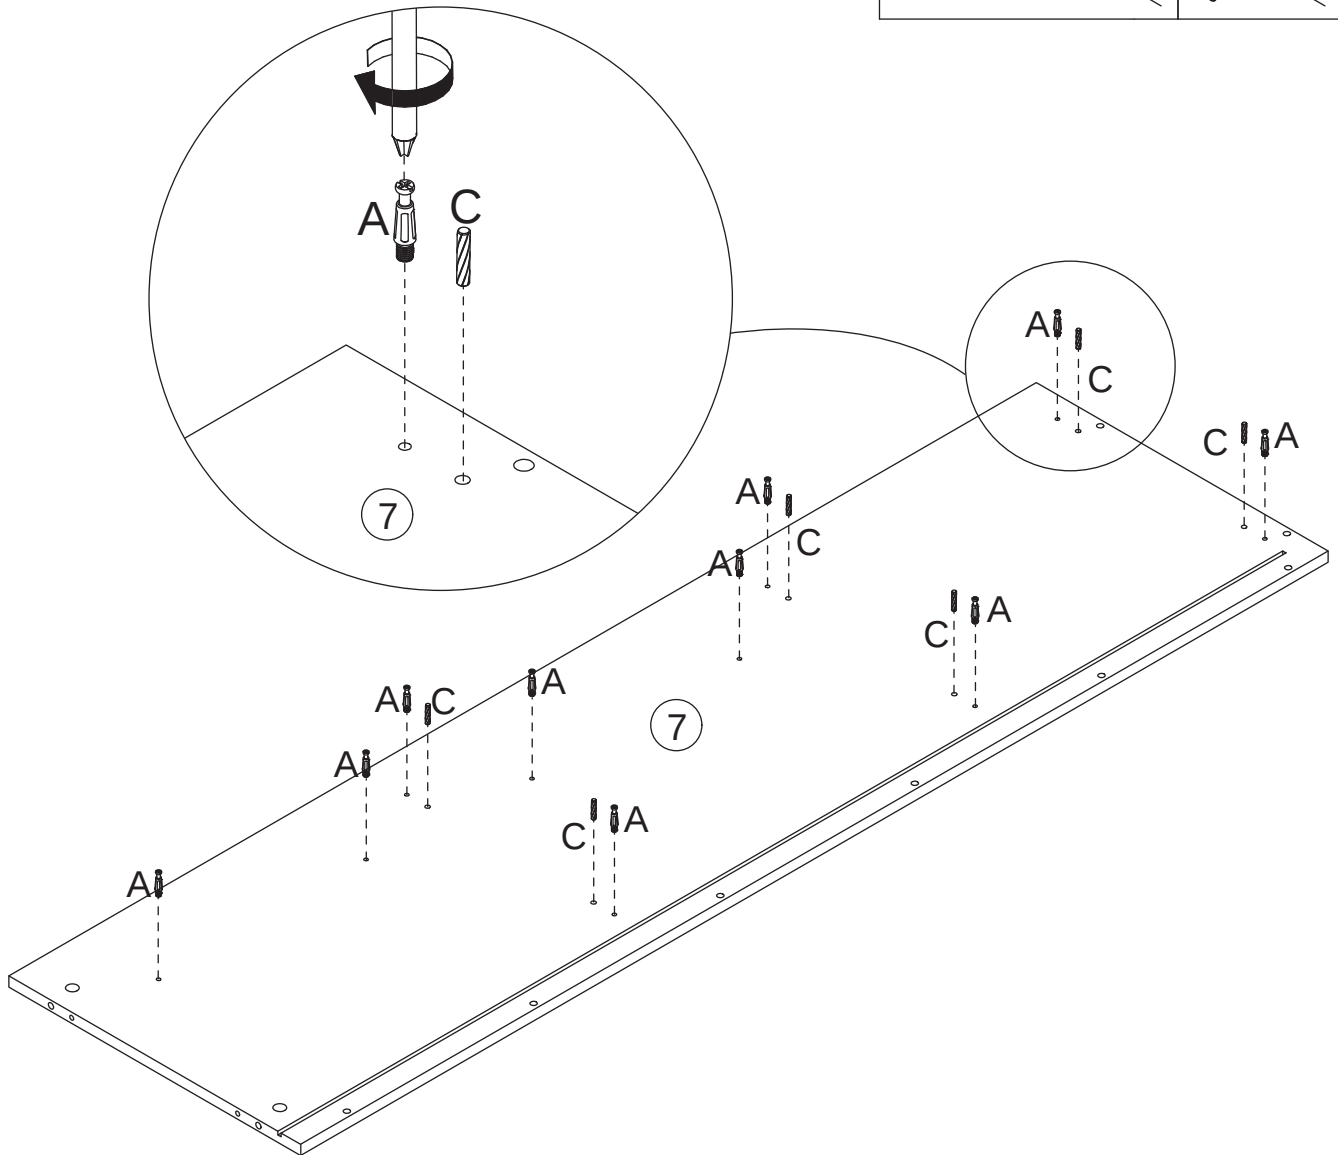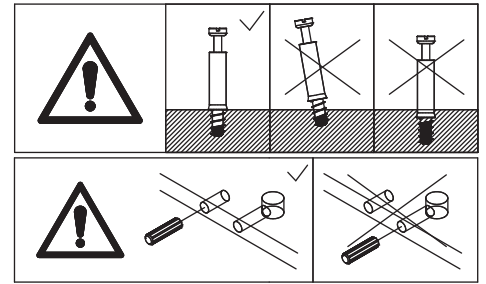


10



B x 2



 Ø15 x 12 mm



  Connect Part 5 to Part 3, tighten by turning cam lock (B) clockwise.

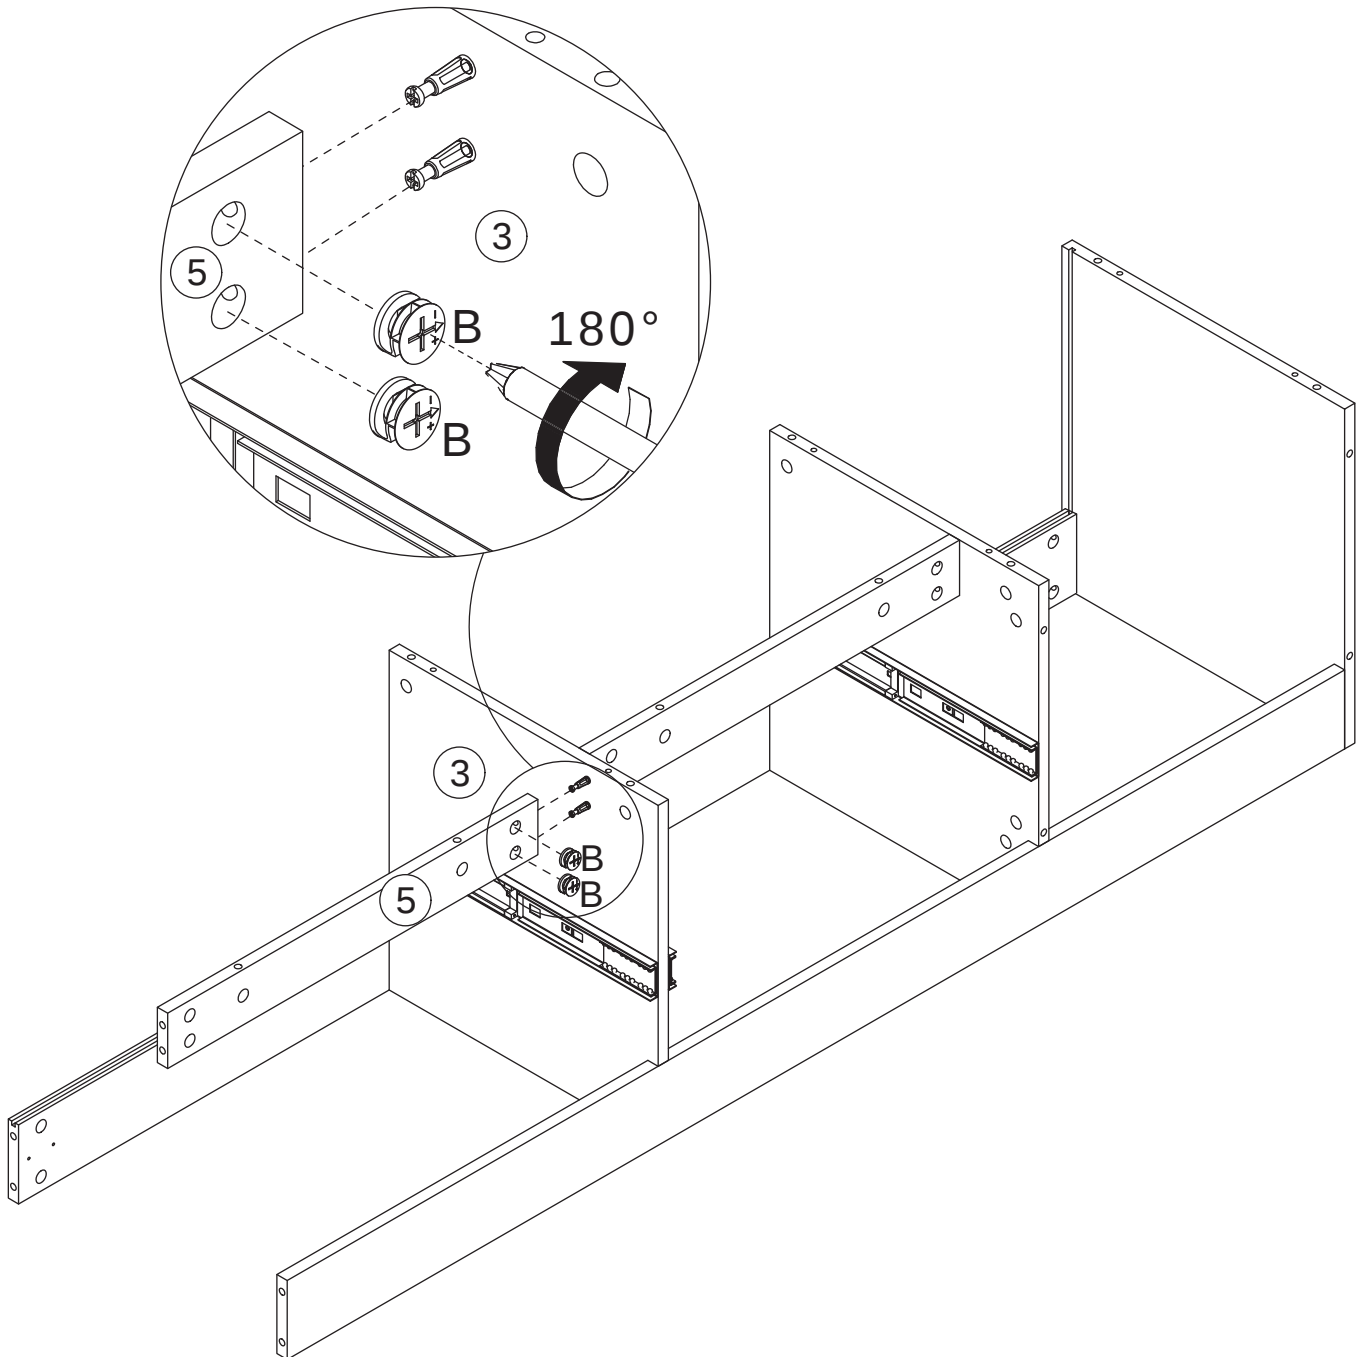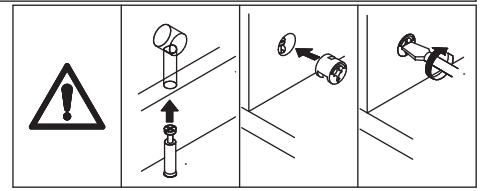


11



B x 10





 
Ø 15 x 12 mm



  
Connect Part 7 to Part 3, 4, 5, and 6, tighten by turning cam lock (B) clockwise.

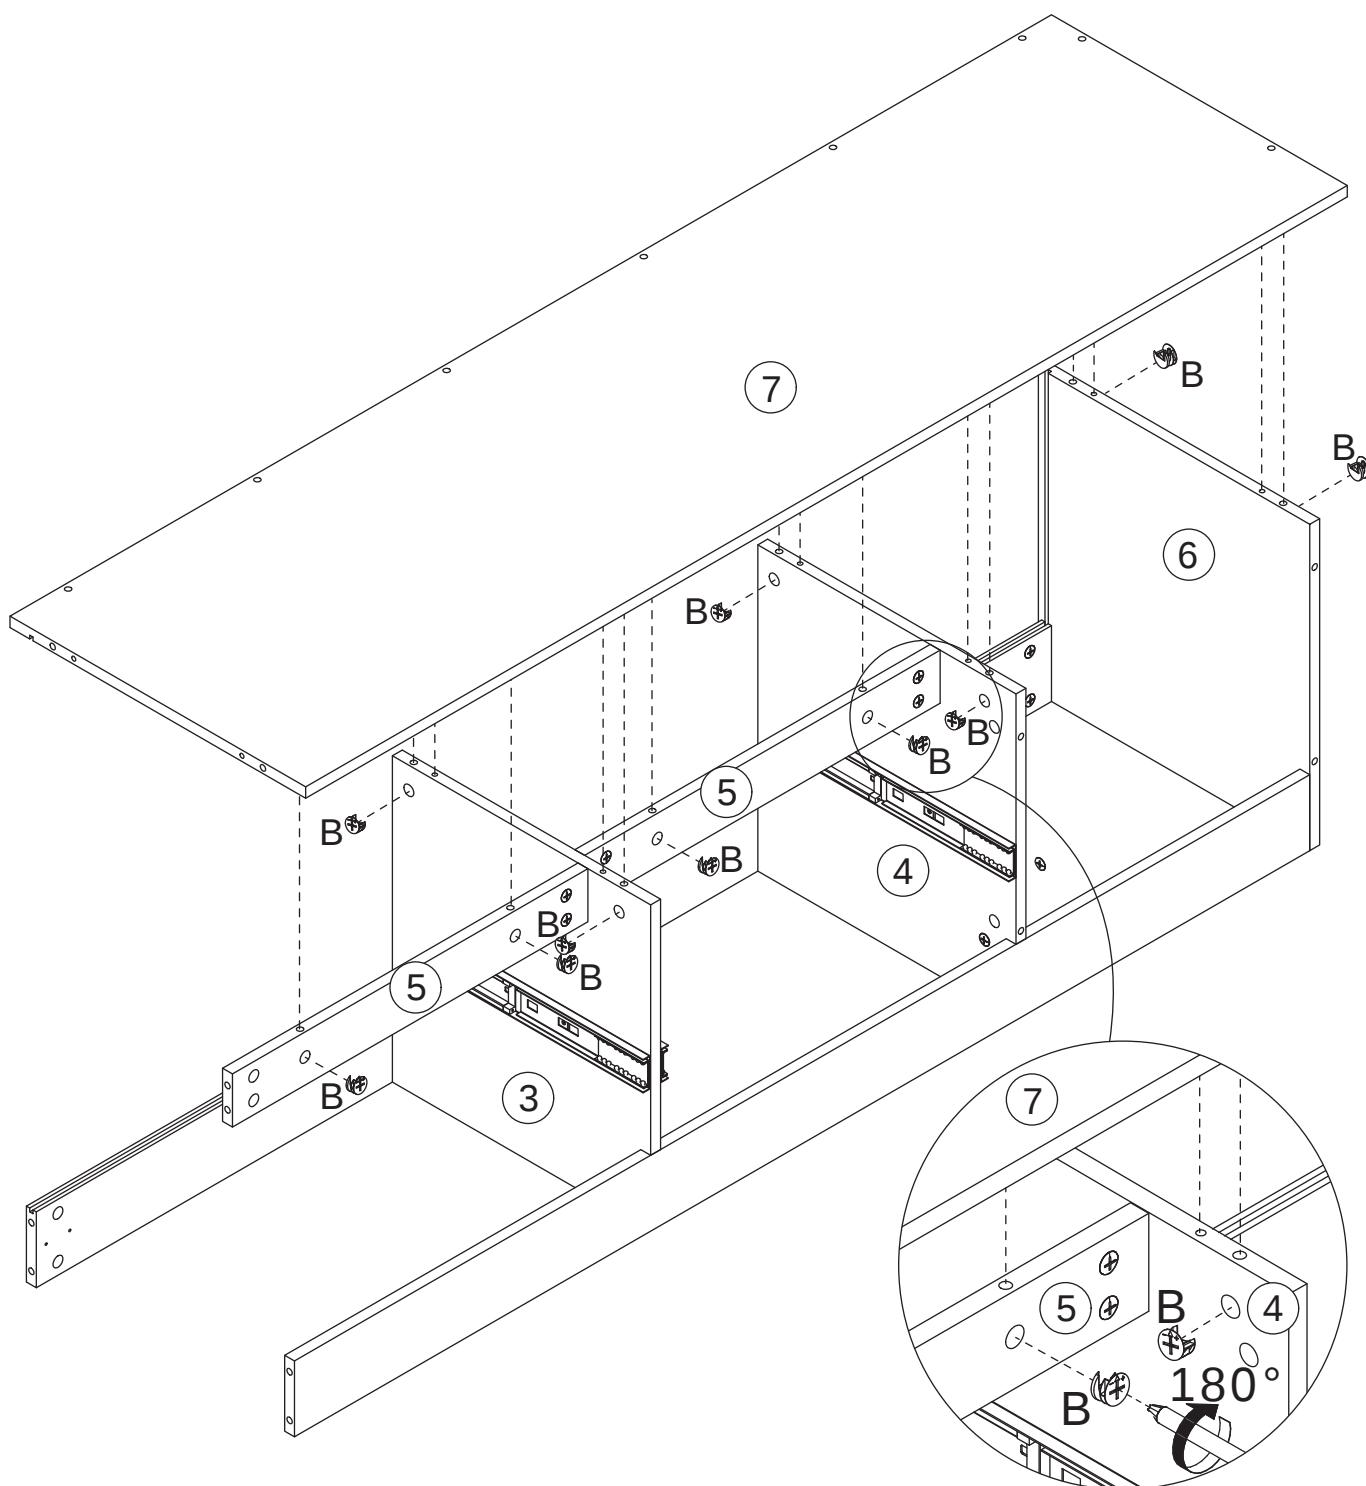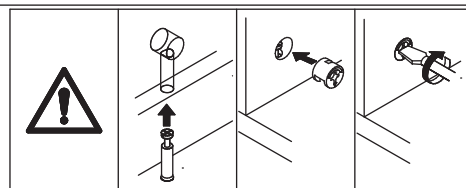

12

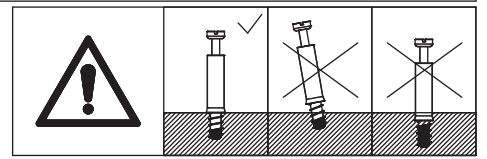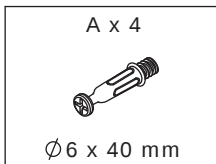   

Screw eccentric rod (A) onto Part 8.


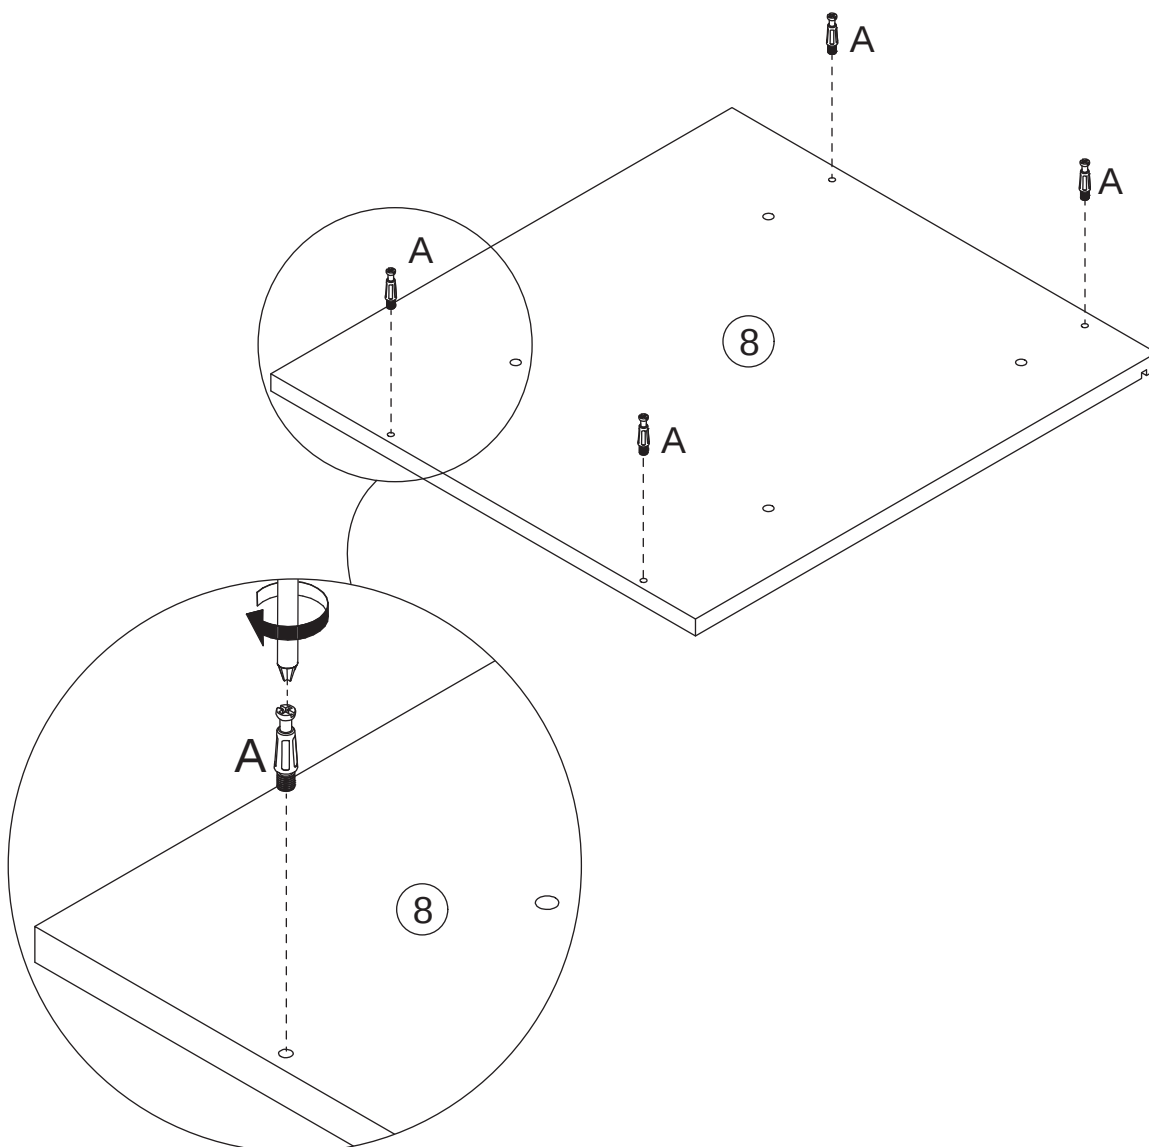 


13


B x 4



  Ø15 x 12 mm

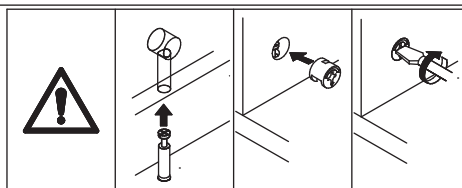


 Connect Part 8 to Part 4 and 6, tighten by turning cam lock (B) clockwise.


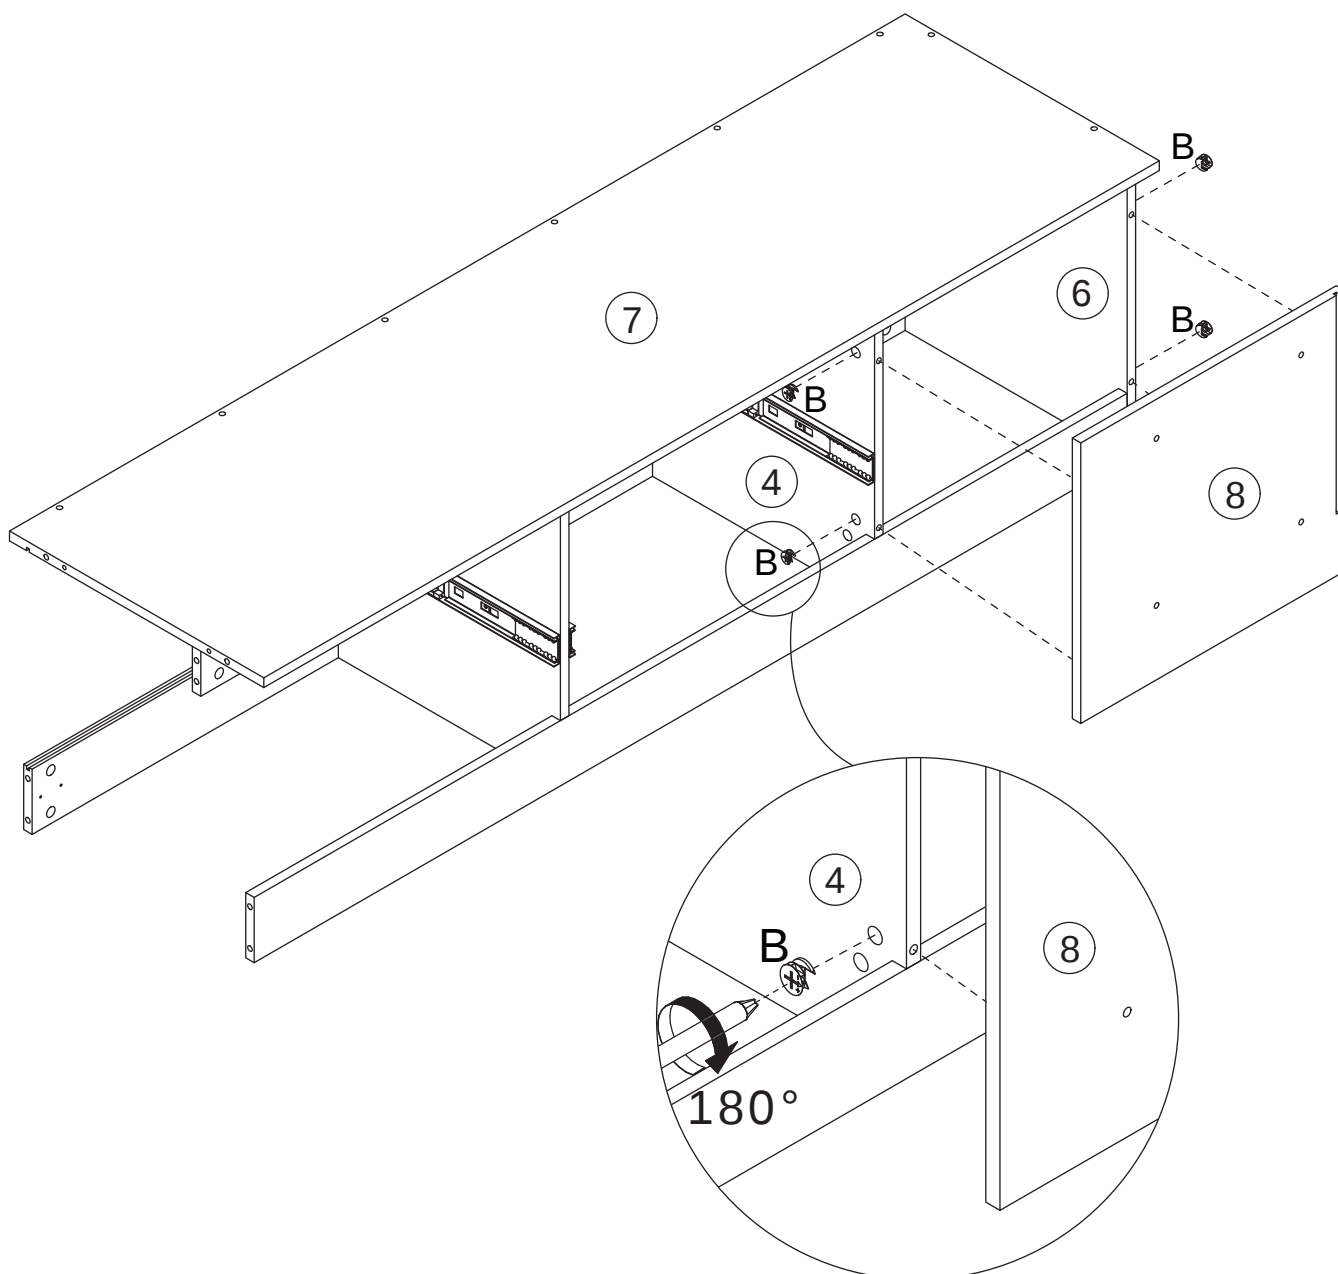


14


 
Insert Part 9 into the available grooves.

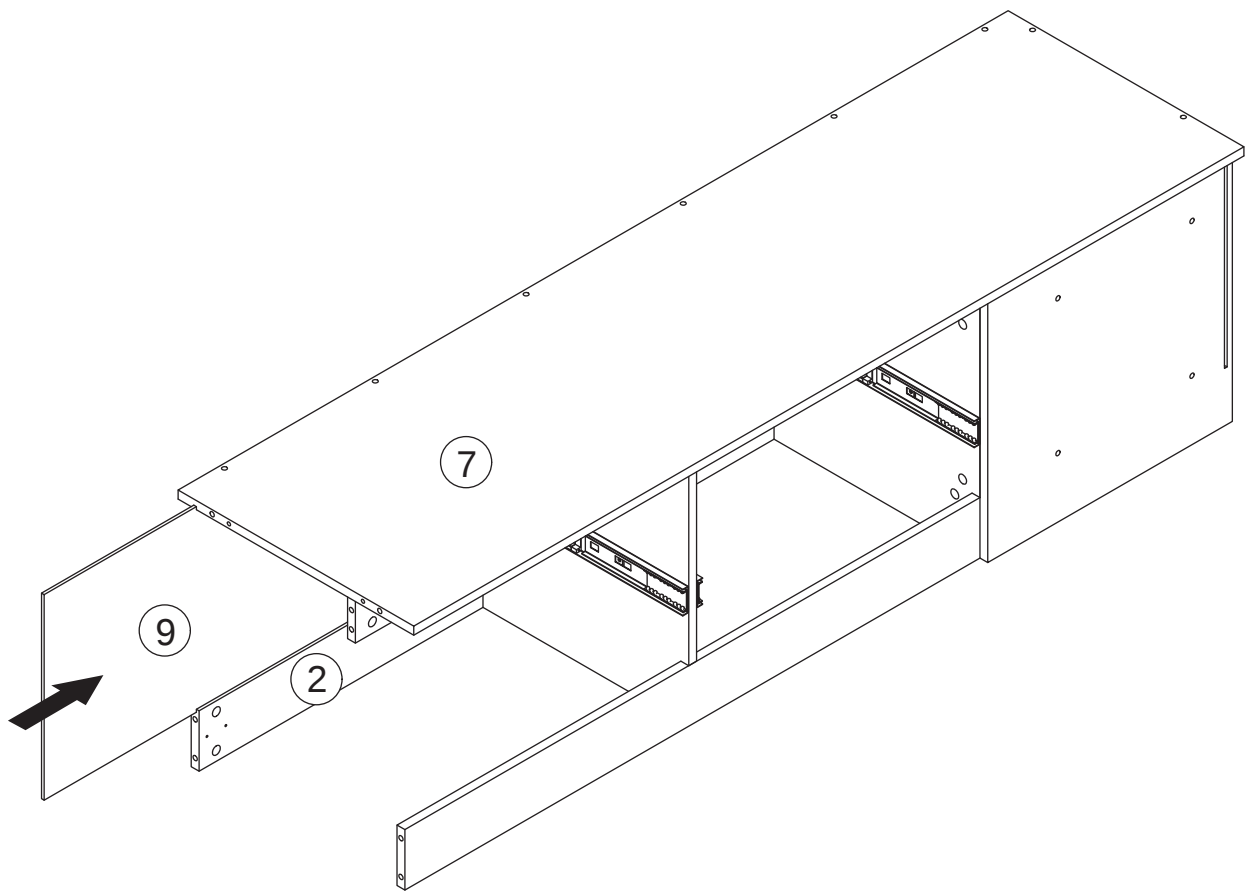

15

  A x 10  Ø 6 x 40 mm	C x 2  Ø 6 x 30 mm	F x 1 F-1  L=300 mm	H x 3  Ø 3.5 x 14 mm	
--	---	---	--	---

  Screw eccentric rod (A) and insert wooden dowel (C) to Part 10.
Secure slide rail (F-1) to Part 10 using screw (H).

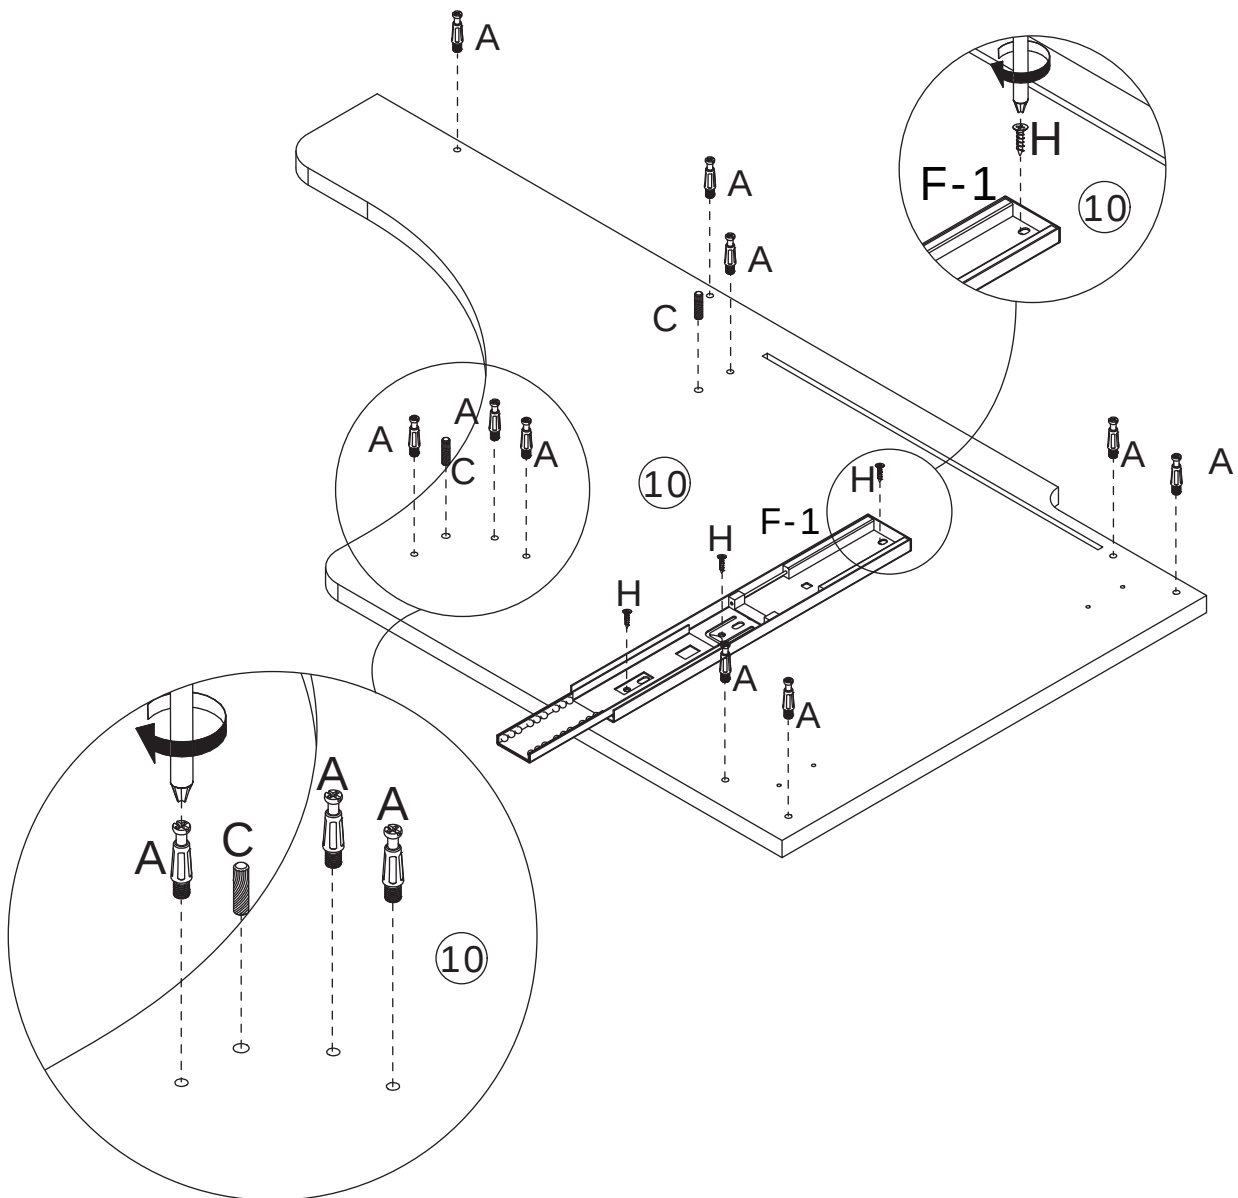
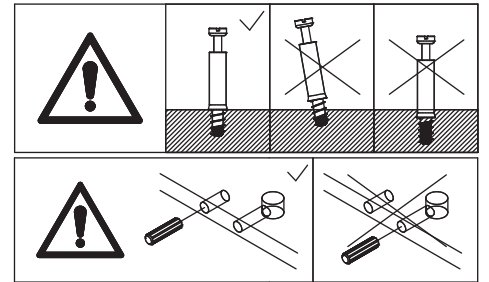


16


B x 8



  
Ø 15 x 12 mm

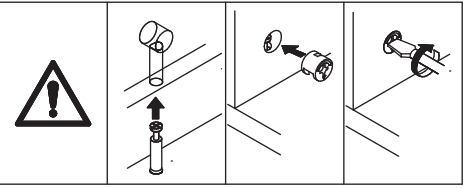

 
Connect Part 10 to Part 1, 2, and 7, tighten by turning cam lock (B) clockwise.

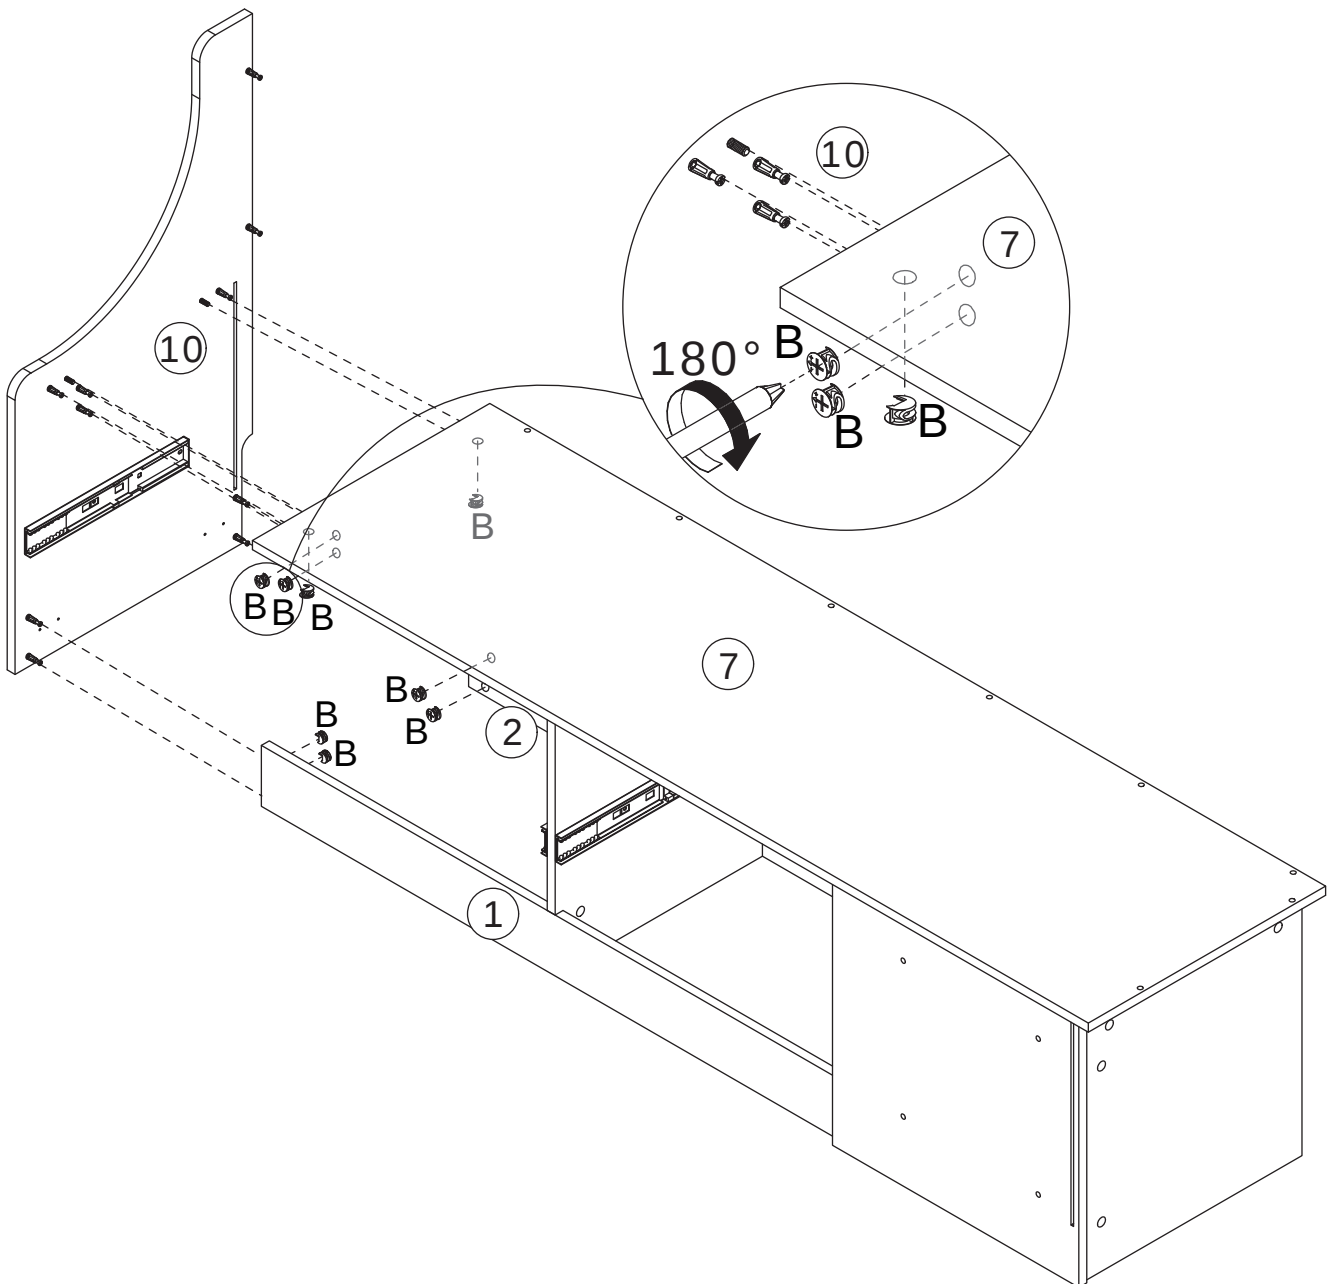

17

 D x 2  66 mm	H x 8  Ø 3.5 x 14 mm	
---	---	---

 Secure fitting (D) to Part 1, 2 and 10 using screw (H).

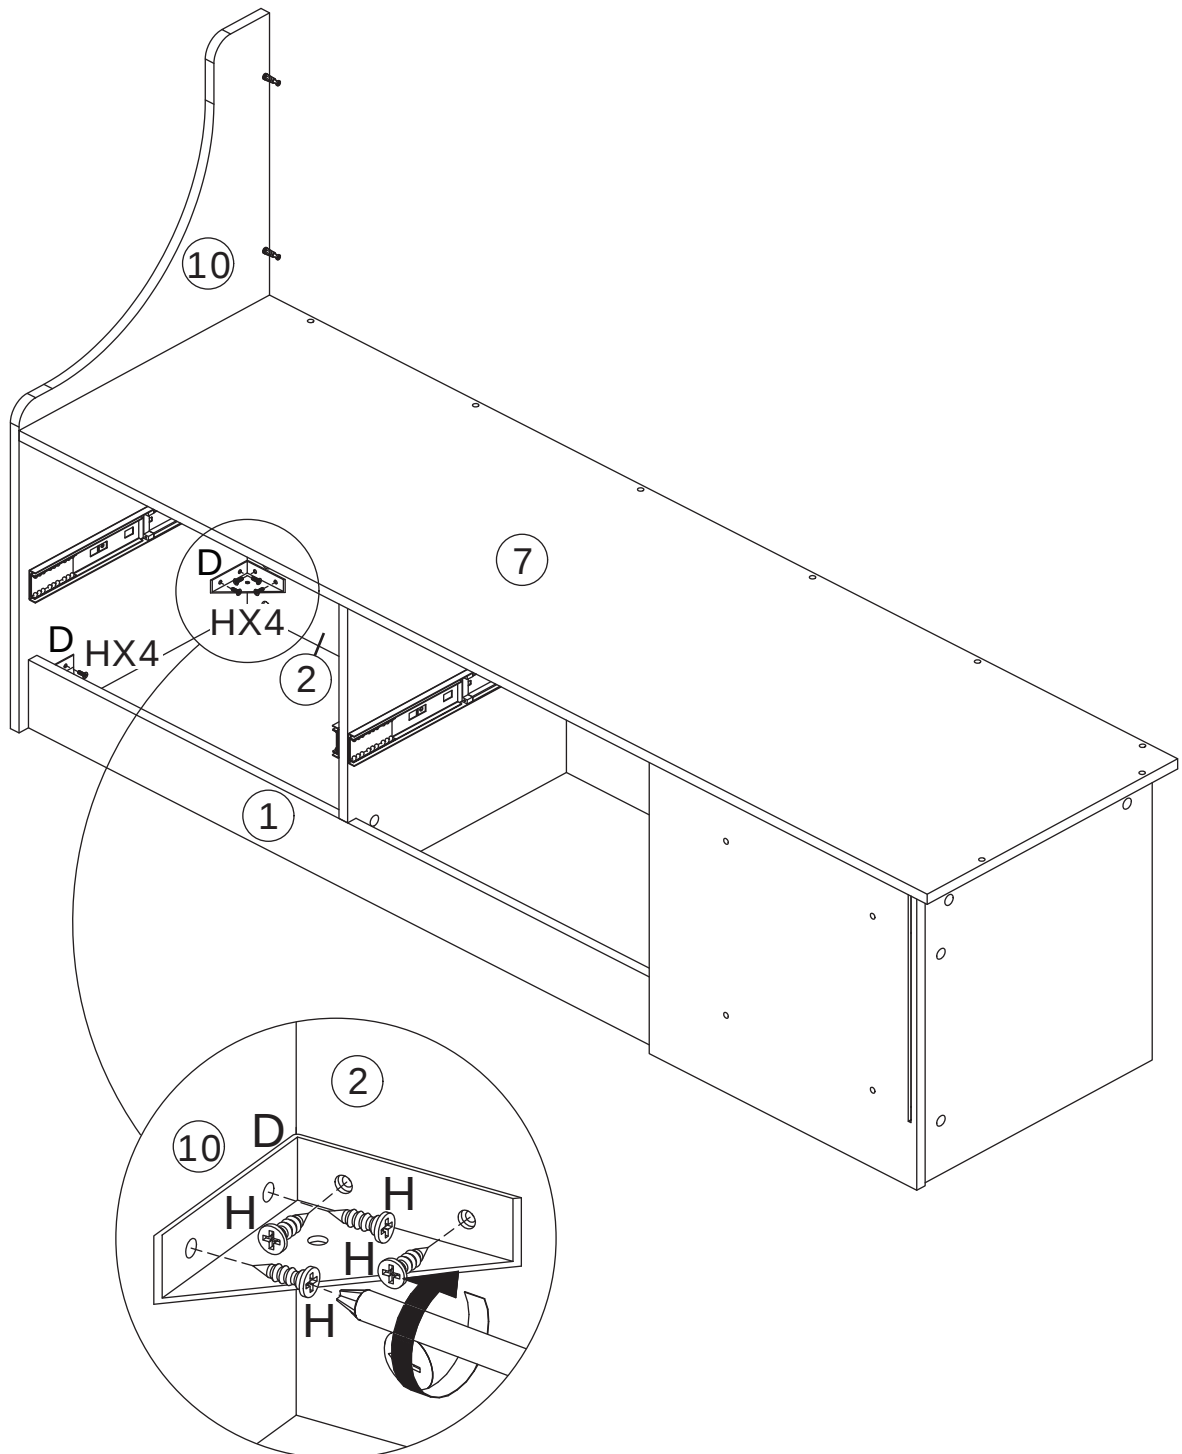


18


I x 6



 Ø 4 x 25 mm



 Secure Part 11 to Part 12 using screw (I).

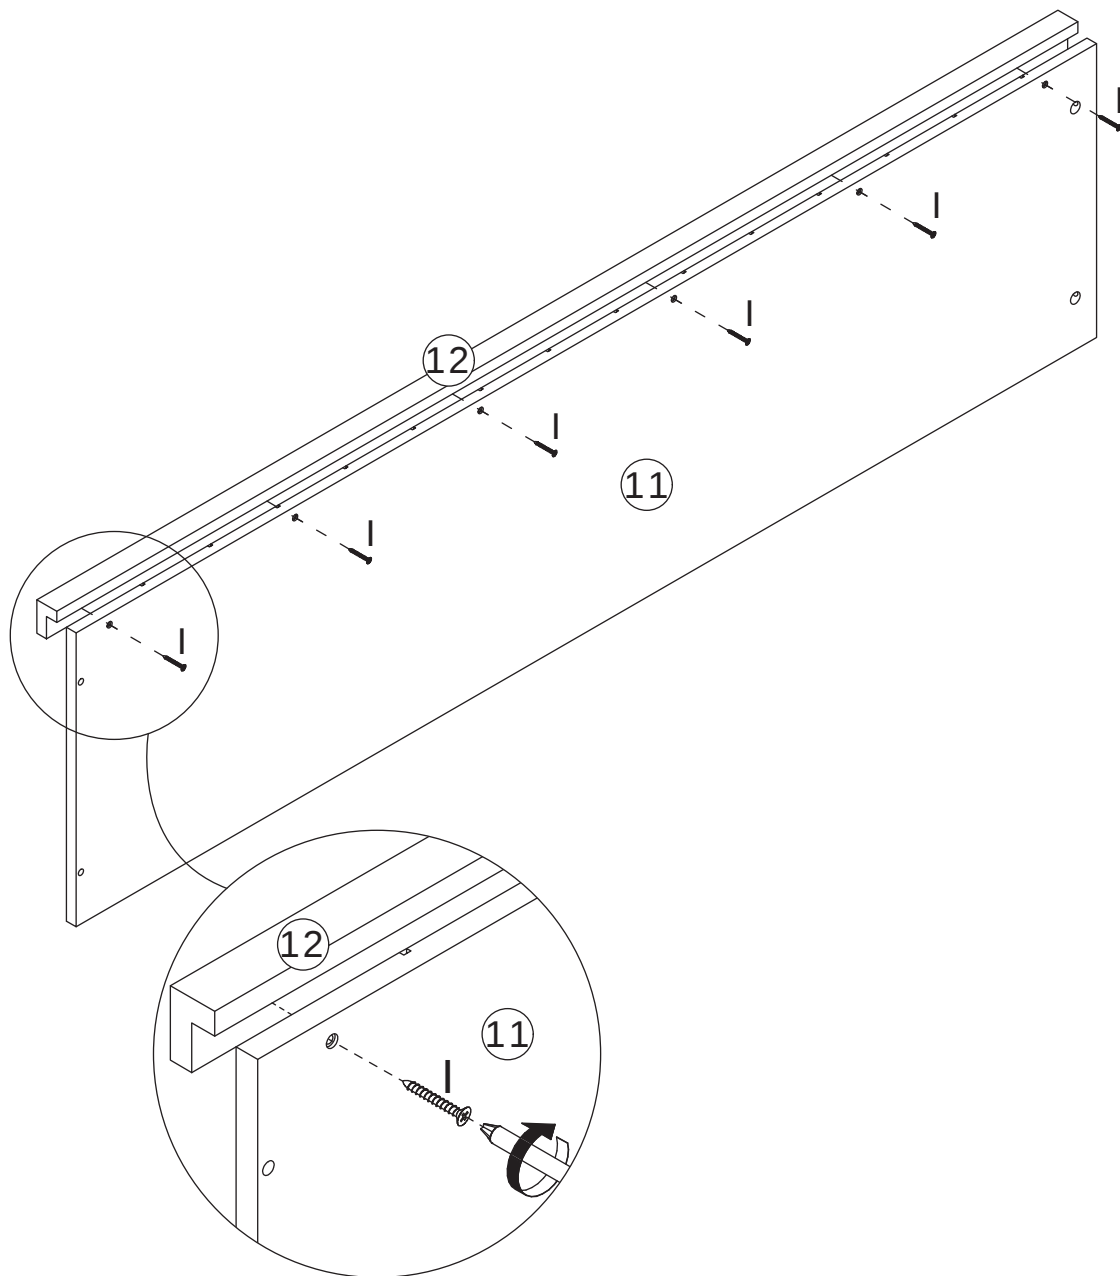

19

B x 2

 
 
 
 


Ø15 x 12 mm


J x 6






Ø7 x 38 mm

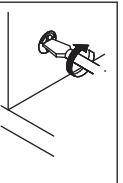

 
Connect Part 11 to Part 10, tighten by turning cam lock (B) clockwise.
Secure Part 11 to Part 7 using screw (J).

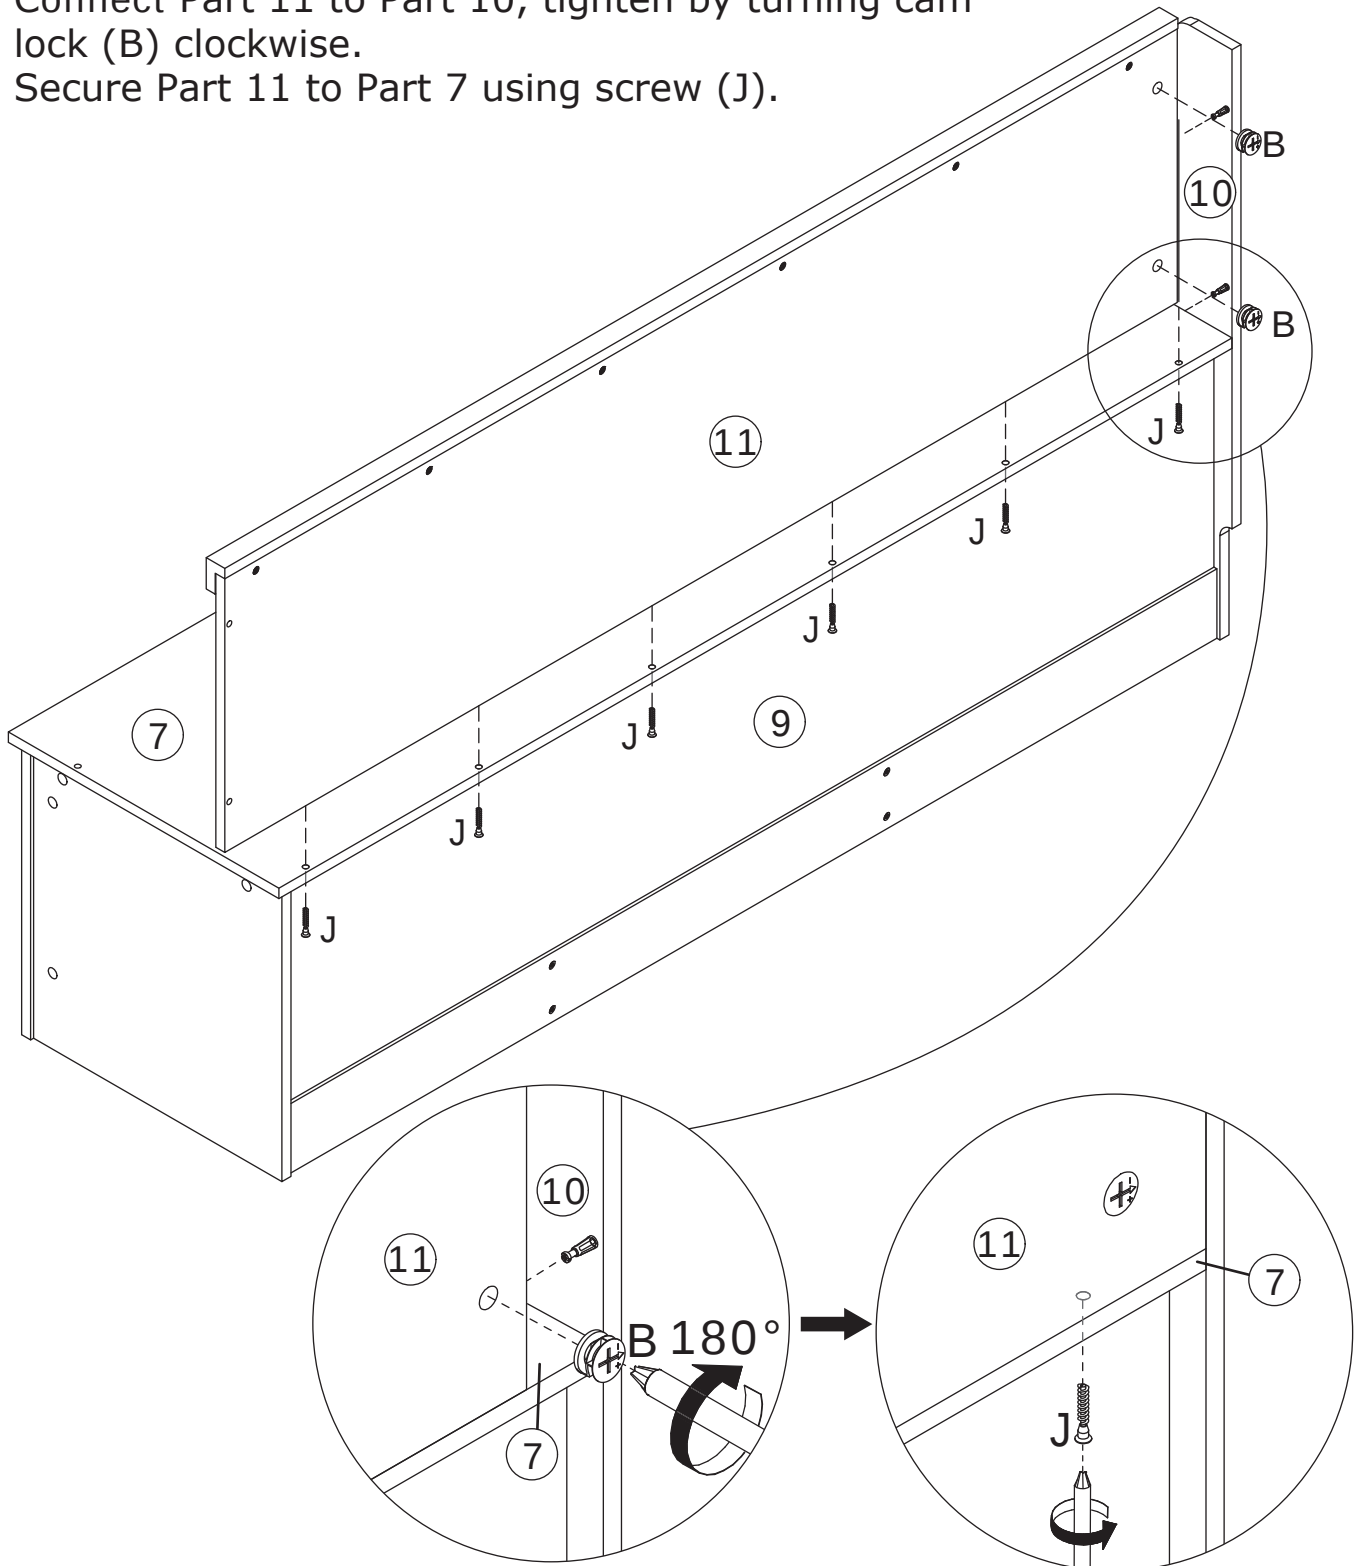



20

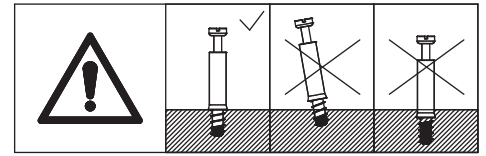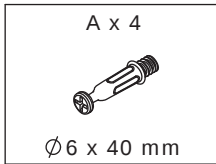   

Screw eccentric rod (A) onto Part 13.




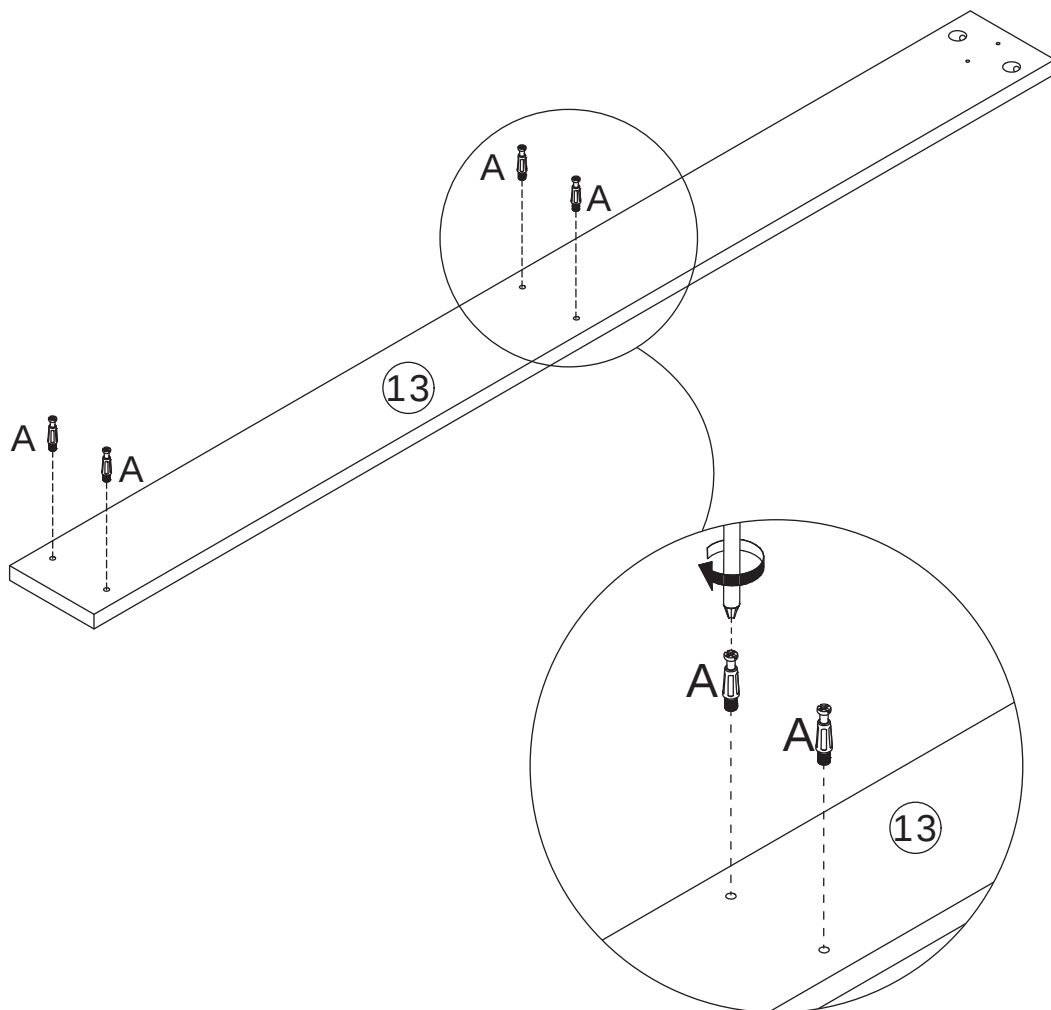 


21

 
 
A x 4  Ø6 x 40 mm	F x 2  F-1 L=300 mm	H x 6  Ø3.5 x 14 mm	
--	--	--	---

Screw eccentric rod (A) onto **both sides** of Part 15.

    Secure slide rail (F-1) to Part 15 using screw (H).

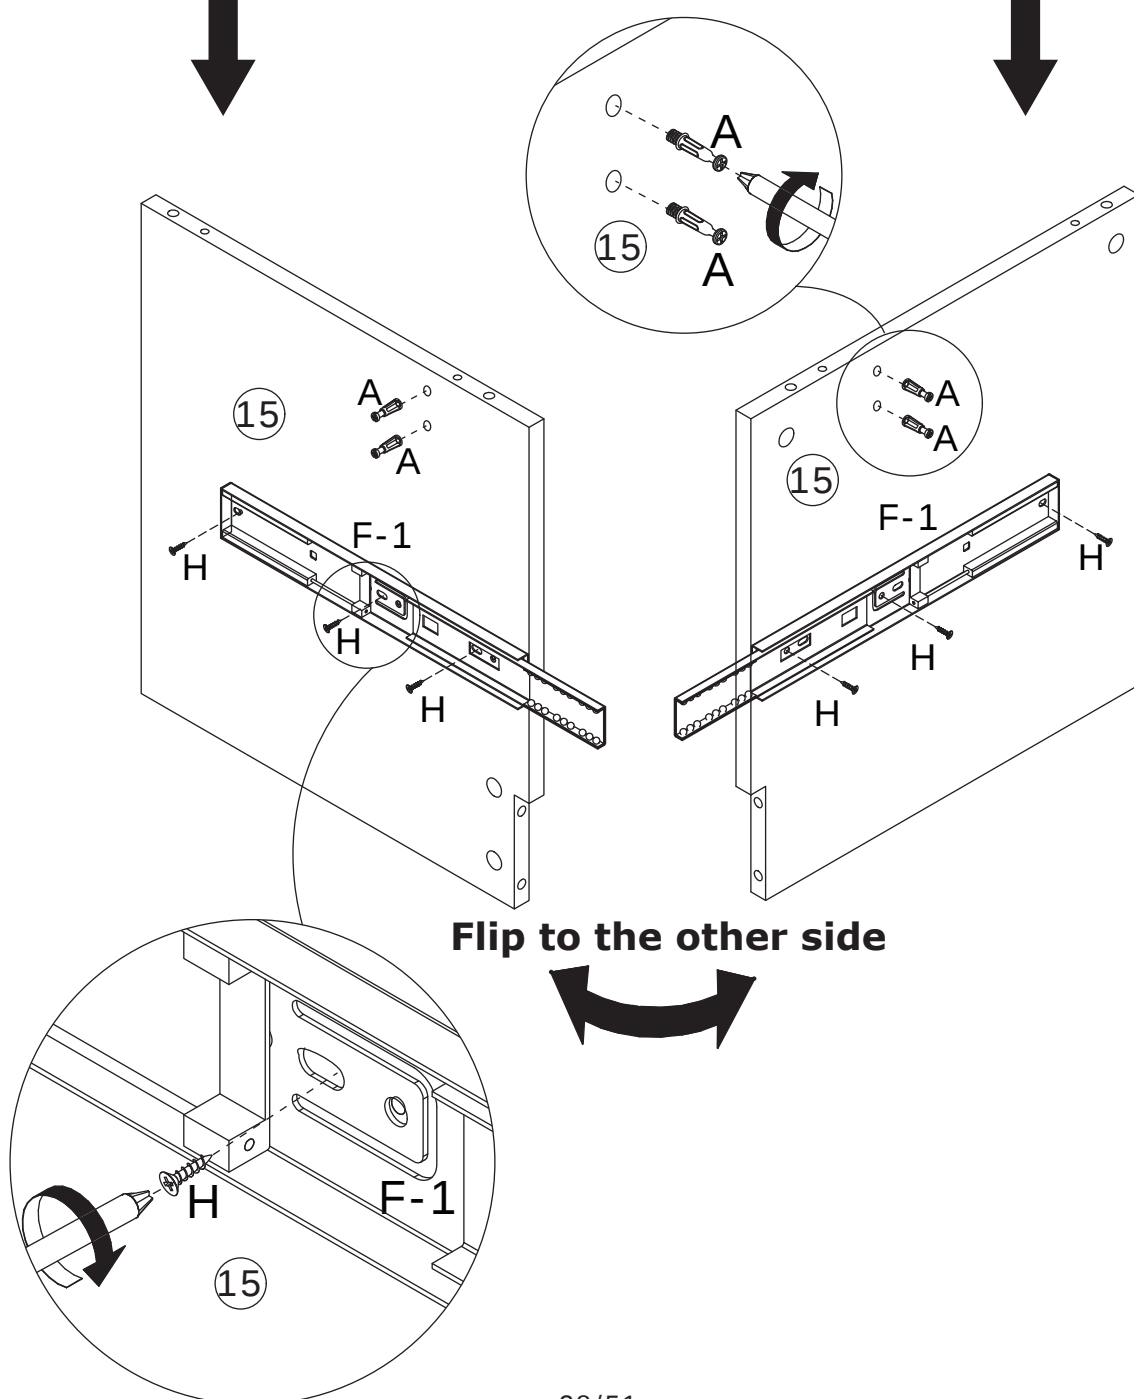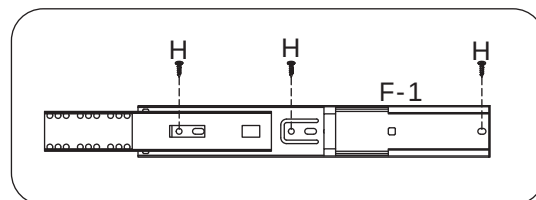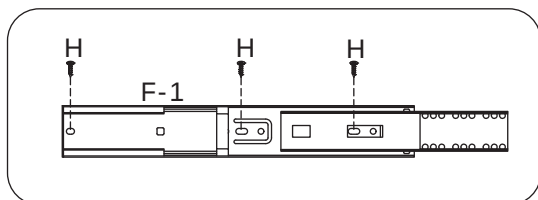
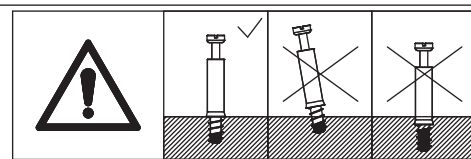


22

  A x 2  Ø6 x 40 mm	E x 4  Ø4 x 35 mm	F x 1  F-1 L=300 mm	H x 3  Ø3.5 x 14 mm	
--	--	--	---	---

Screw eccentric rod (A) onto Part 16, and secure slide rail (F-1) using screw (H).

  Flip the board to the other side, secure Part 17 to Part 16 using screw (E).

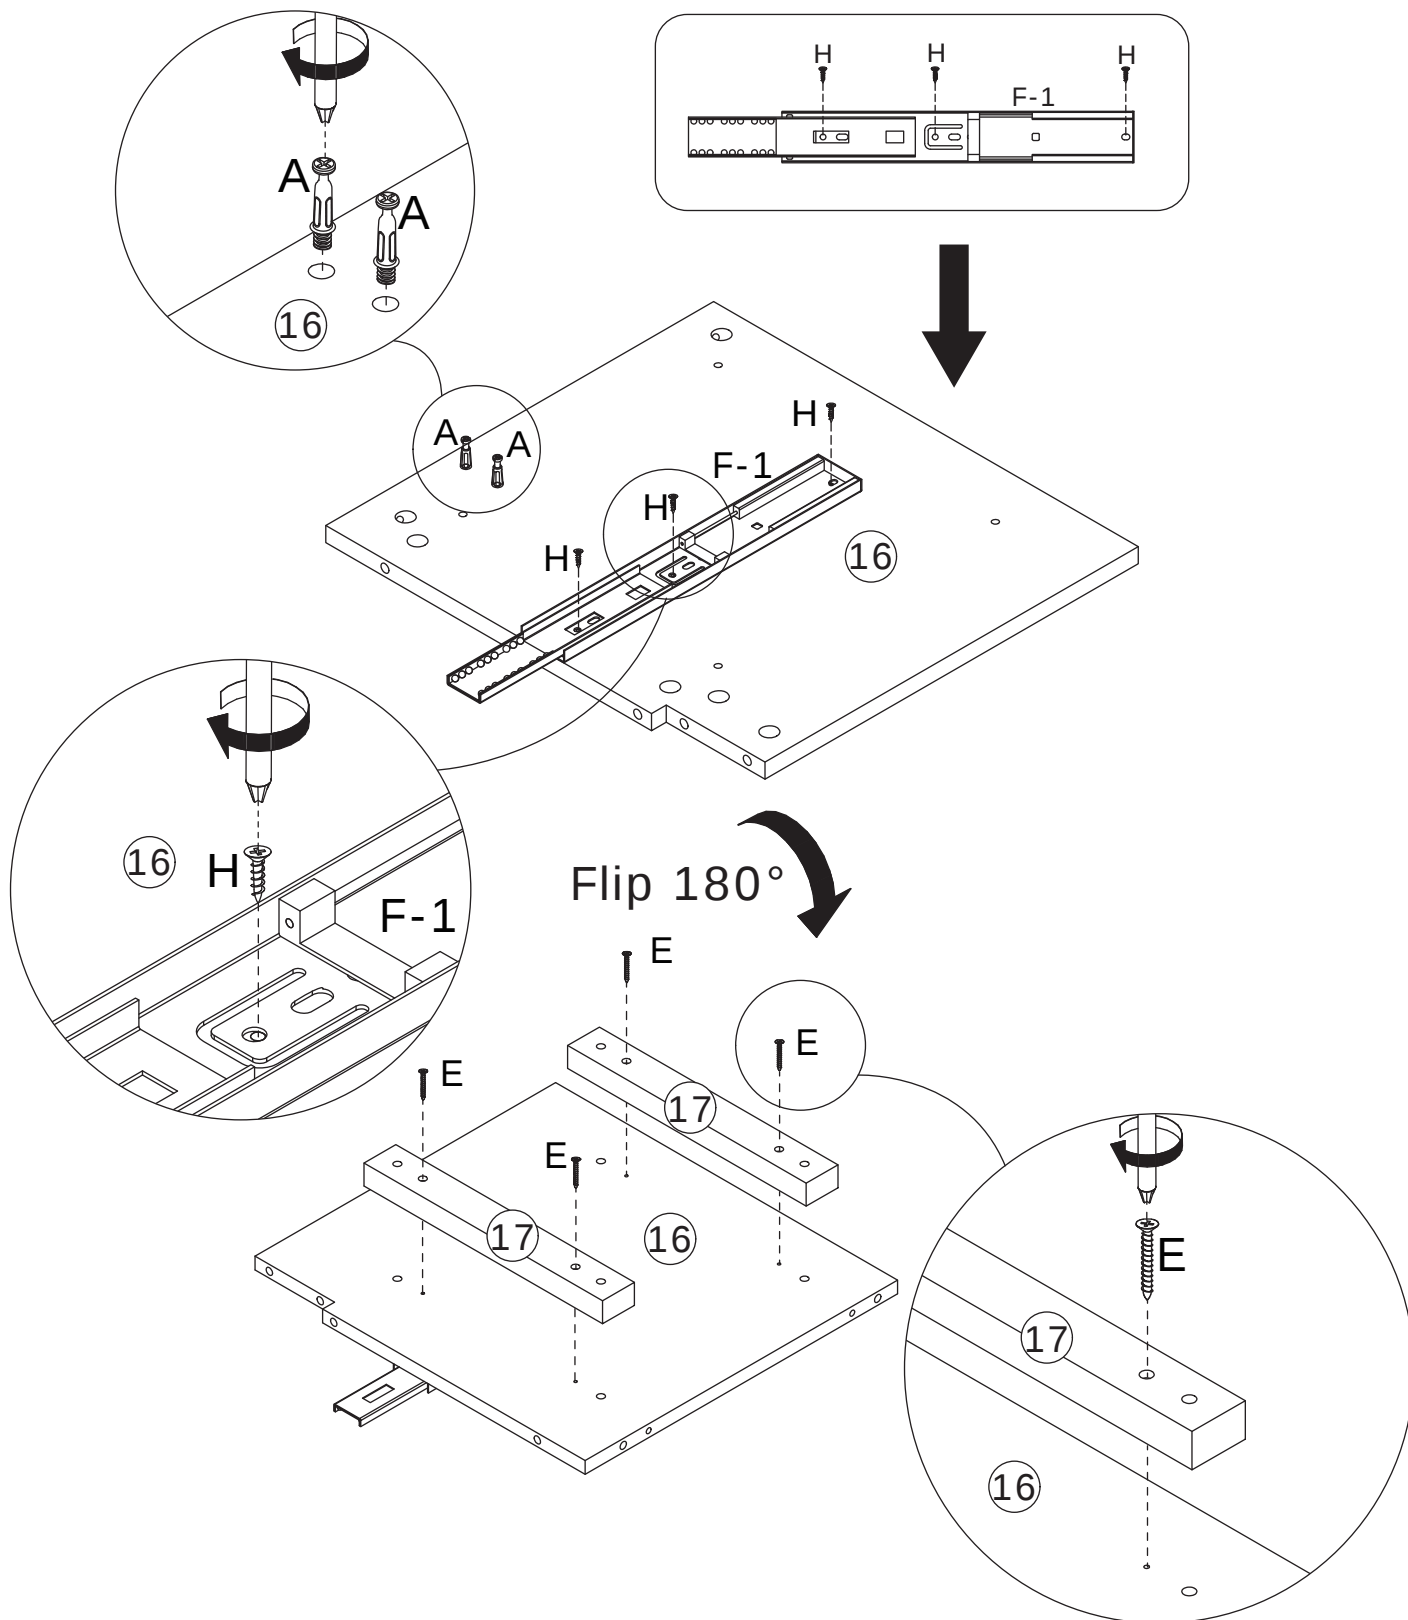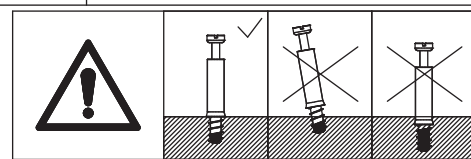


23



B x 4



 Ø 15 x 12 mm



  Connect Part 5 to Part 15 and 16, tighten by turning cam lock (B) clockwise.

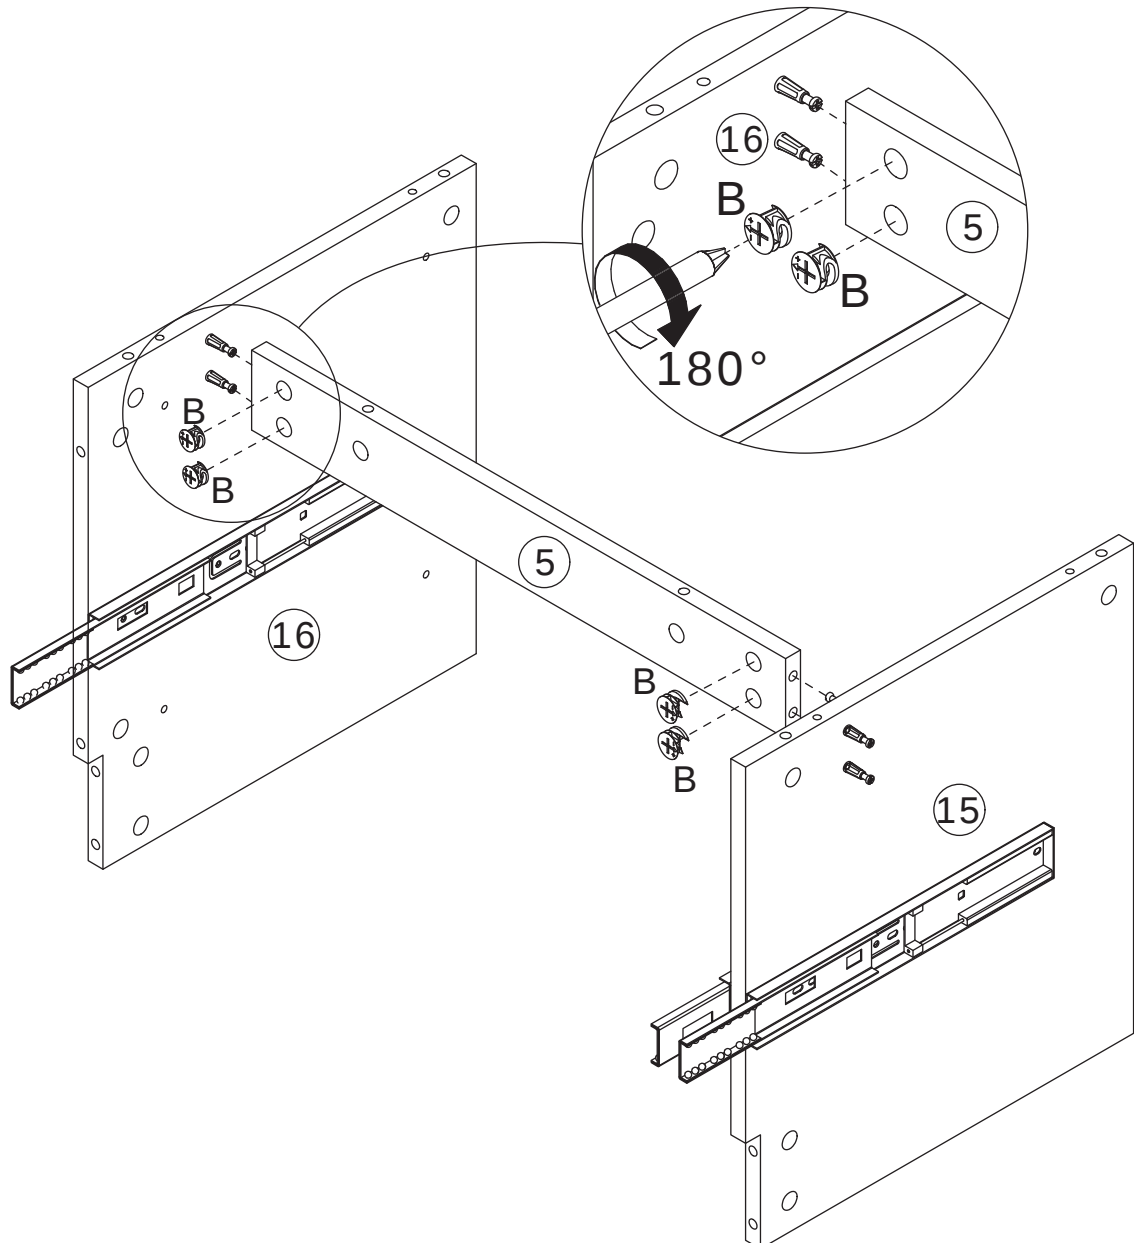
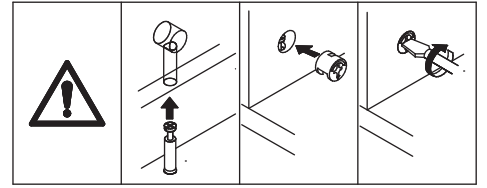


24


B x 4



 
 
Ø15 x 12 mm

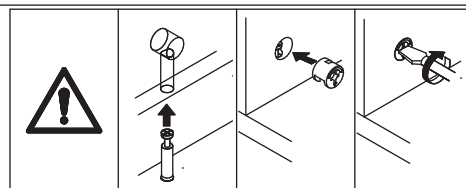

 
Connect Part 13 to Part 15 and 16, tighten by turning cam lock (B) clockwise.

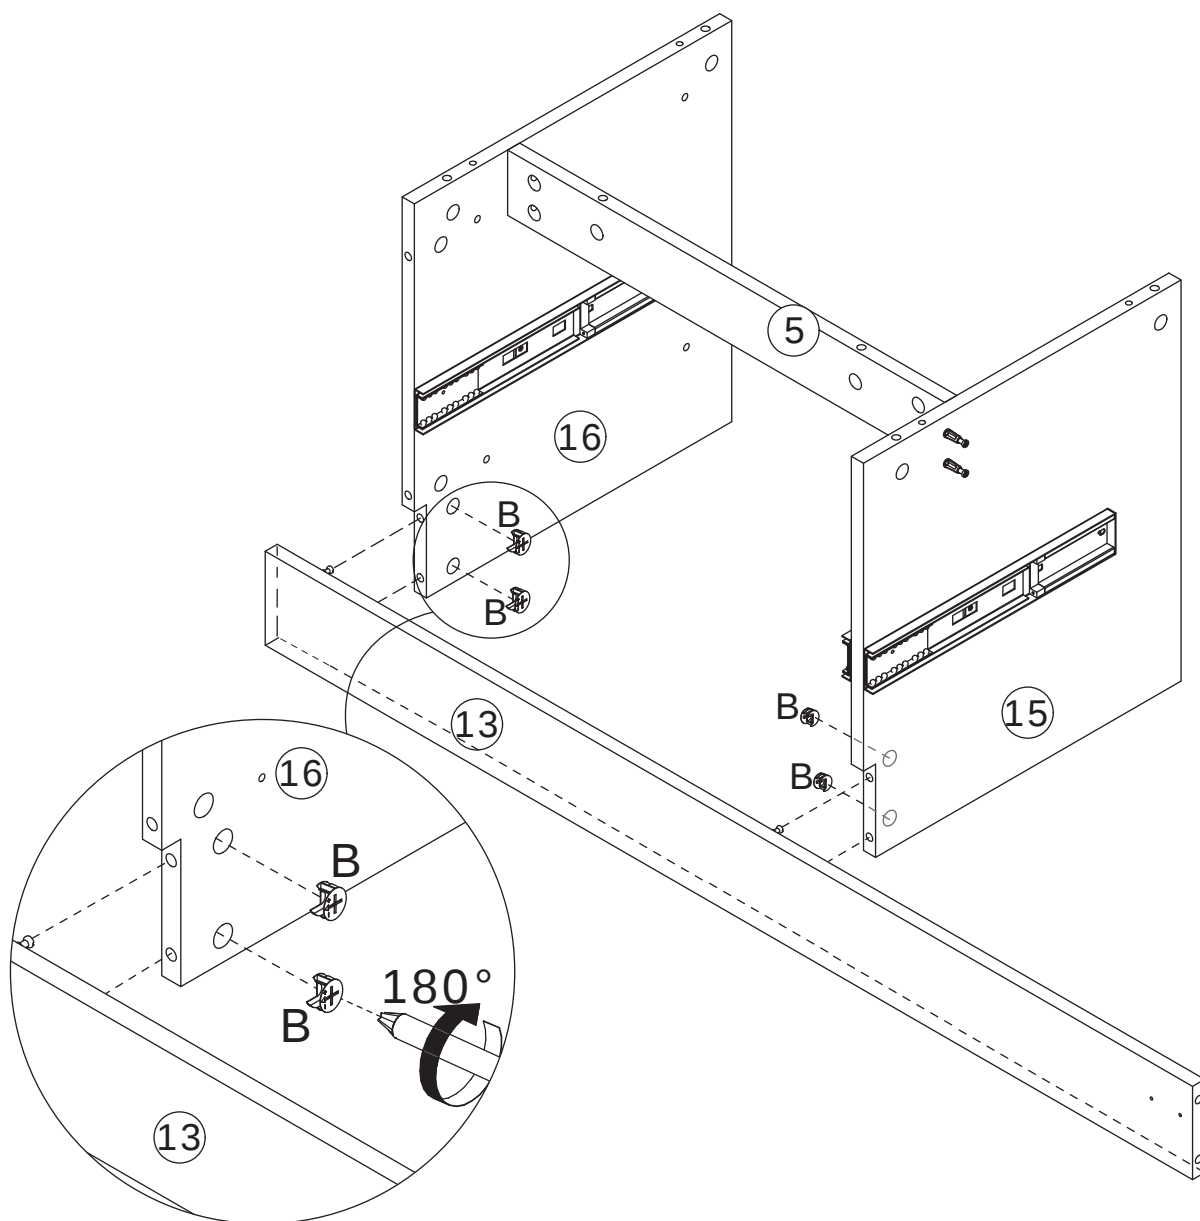




25

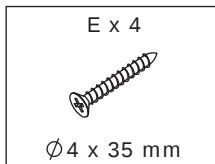  


 
Secure Part 14 to Part 15 and 16 using screw (E).

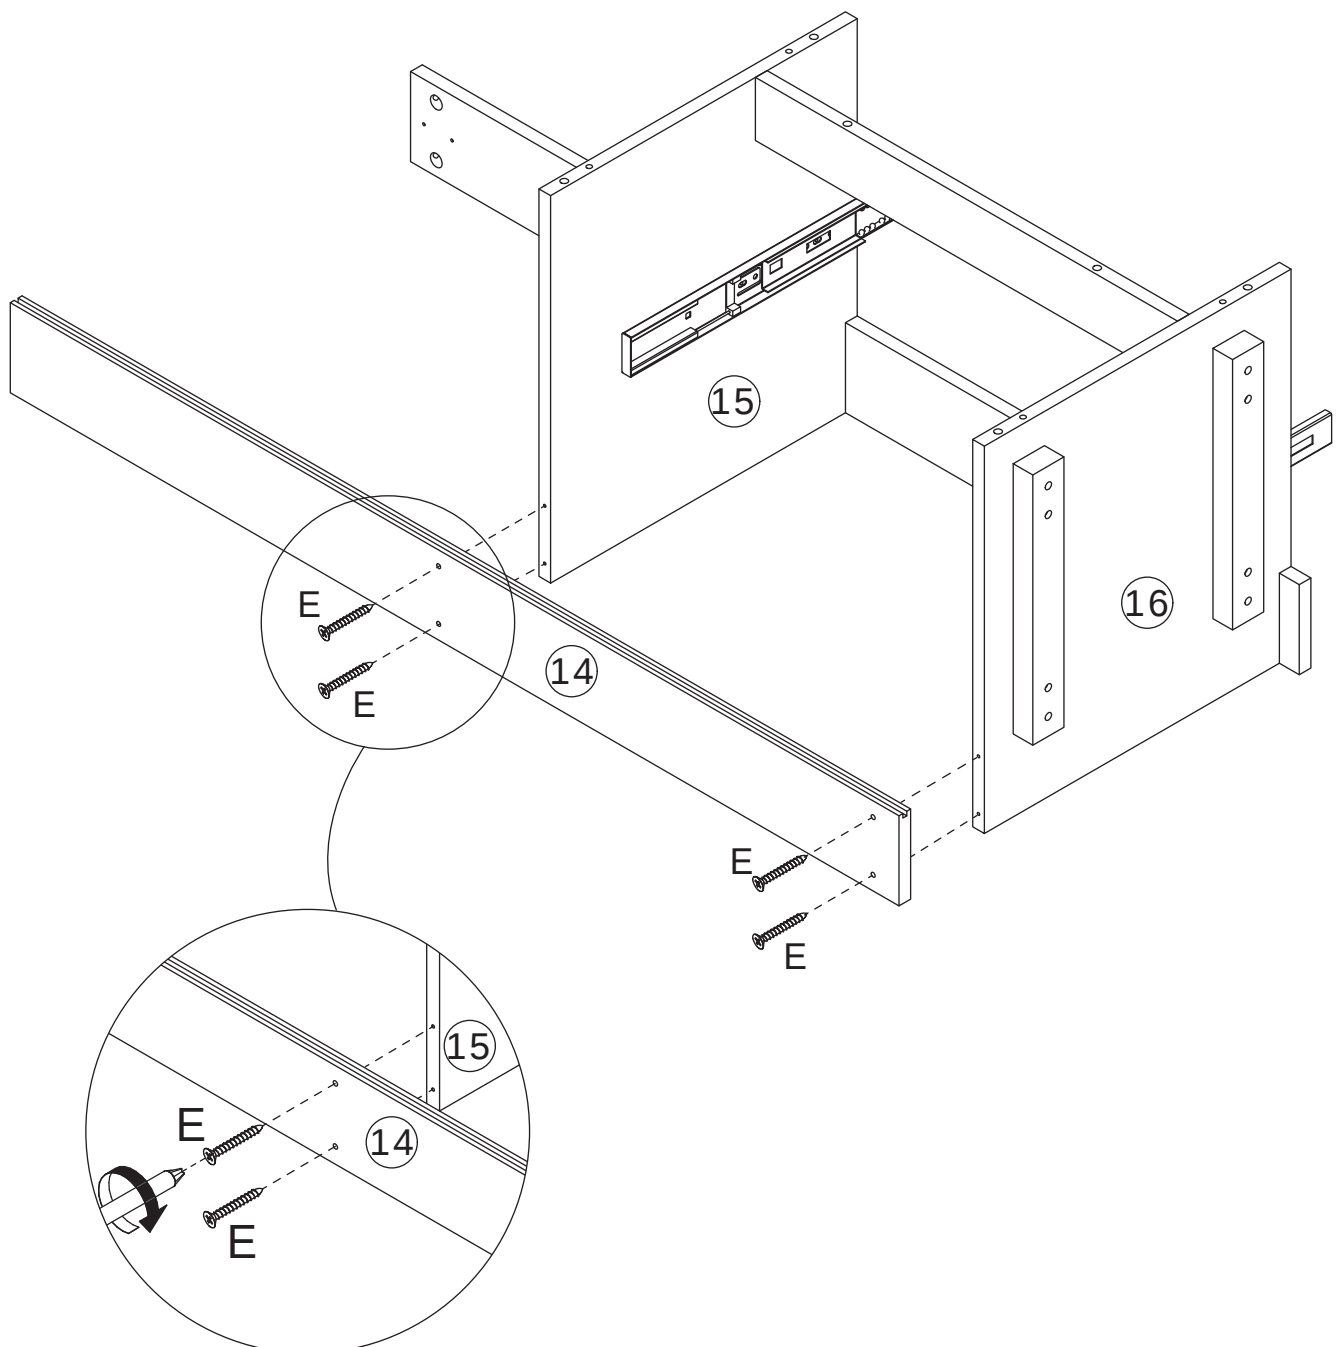

26

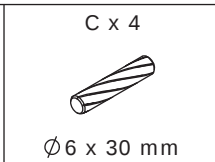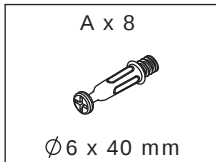   

  Screw eccentric rod (A) and insert wooden dowel (C) to Part 18.

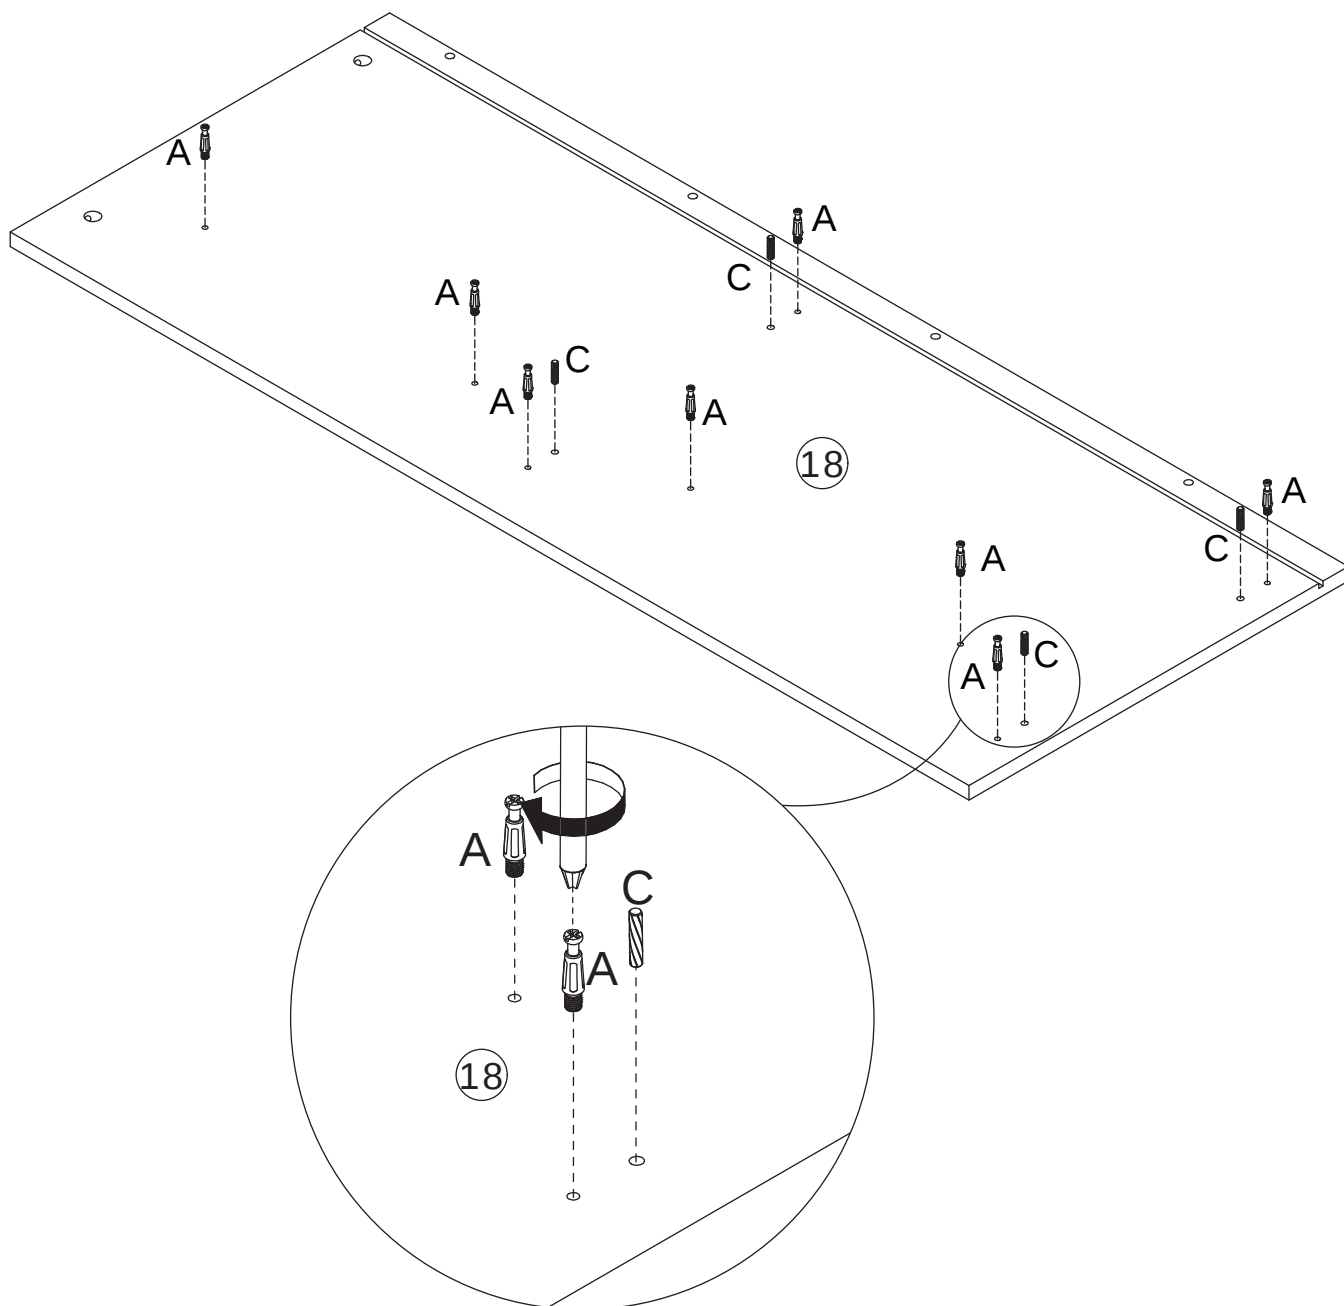
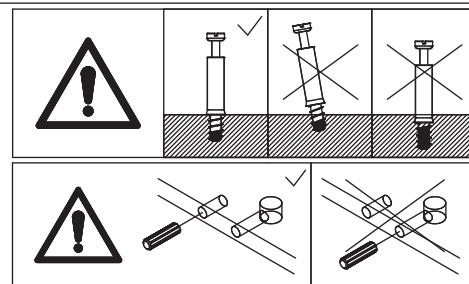


27


B x 2



  Ø15 x 12 mm

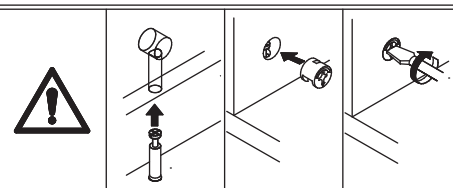

 Connect Part 5 to Part 15, tighten by turning cam lock (B) clockwise.

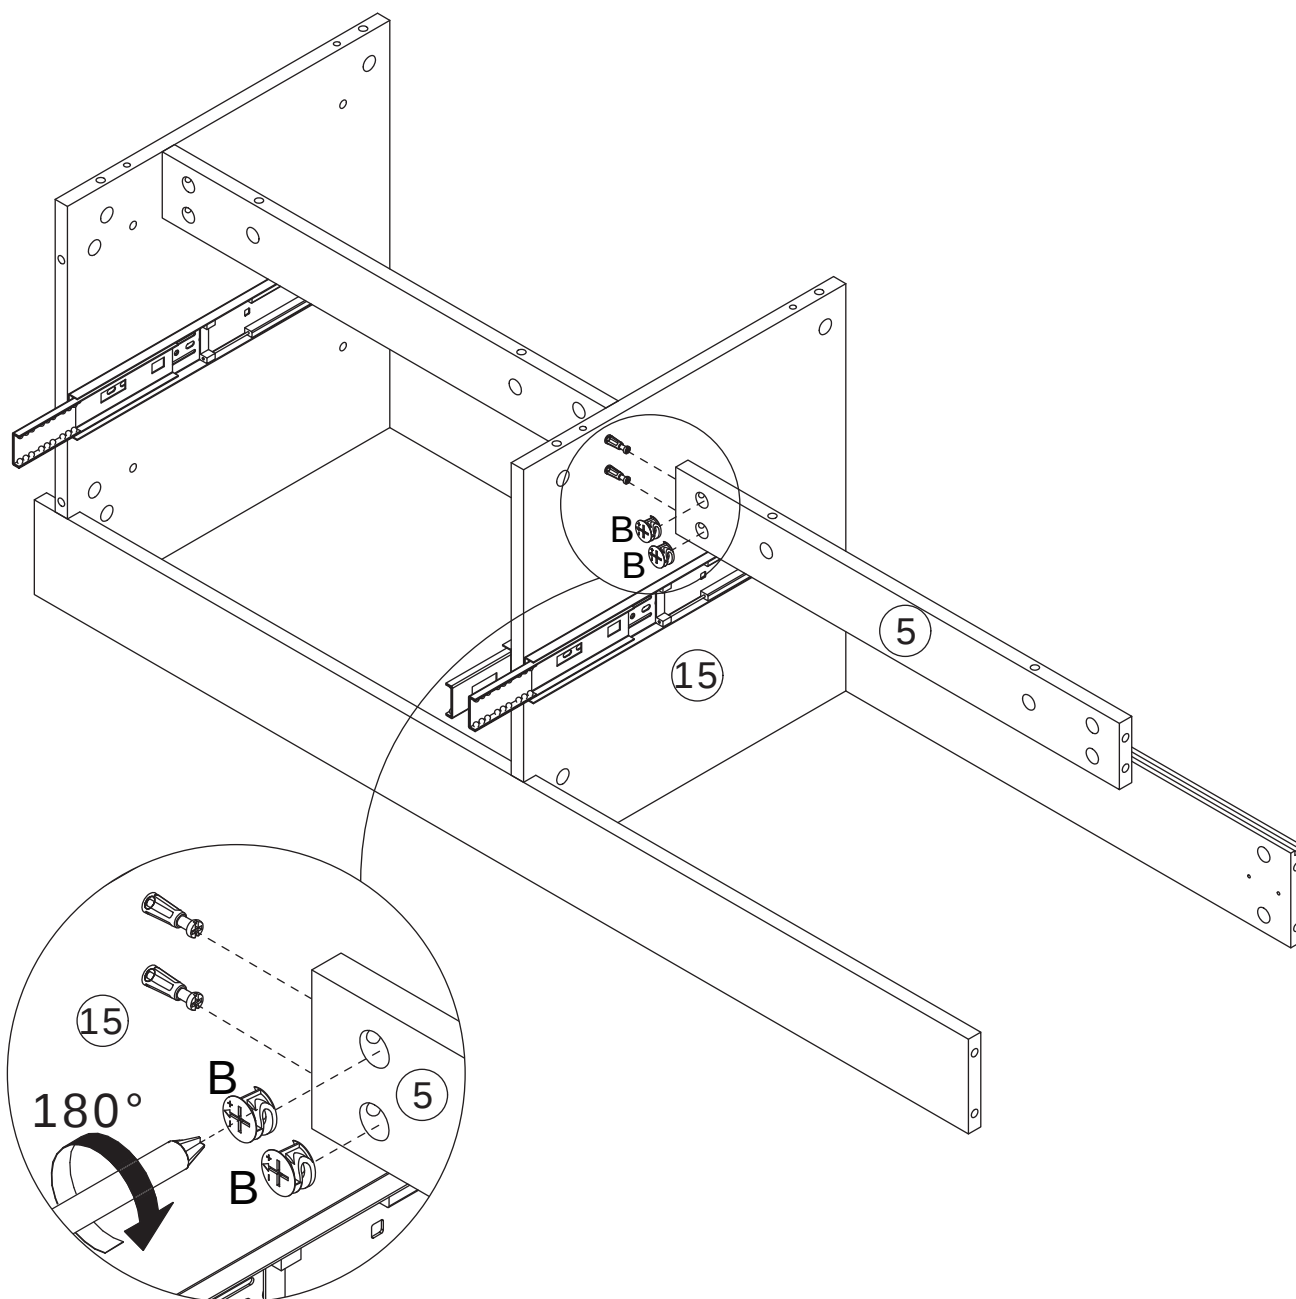


28




B x 8



 Ø15 x 12 mm





   Connect Part 18 to Part 5, 15, and 16, tighten by turning cam lock (B) clockwise.

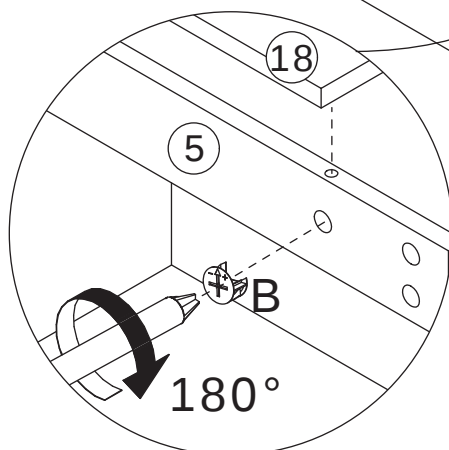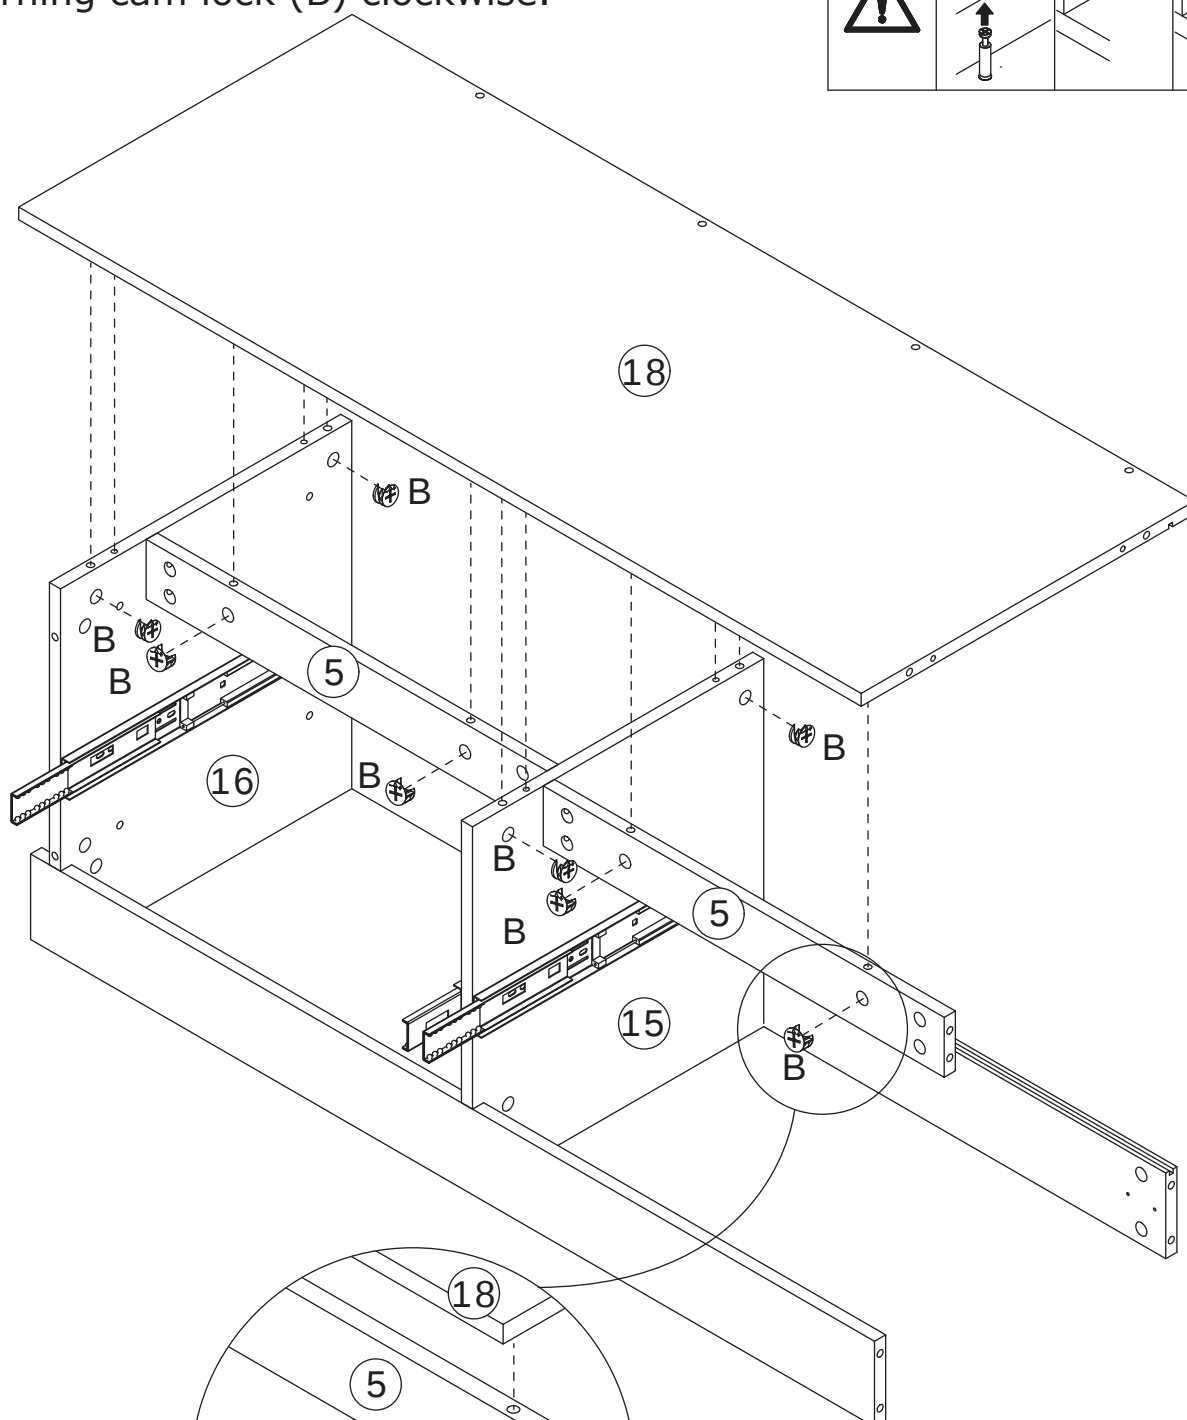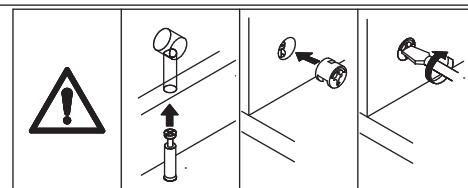


29

  A x 2

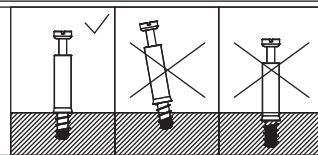

Screw eccentric rod (A) onto Part 19.


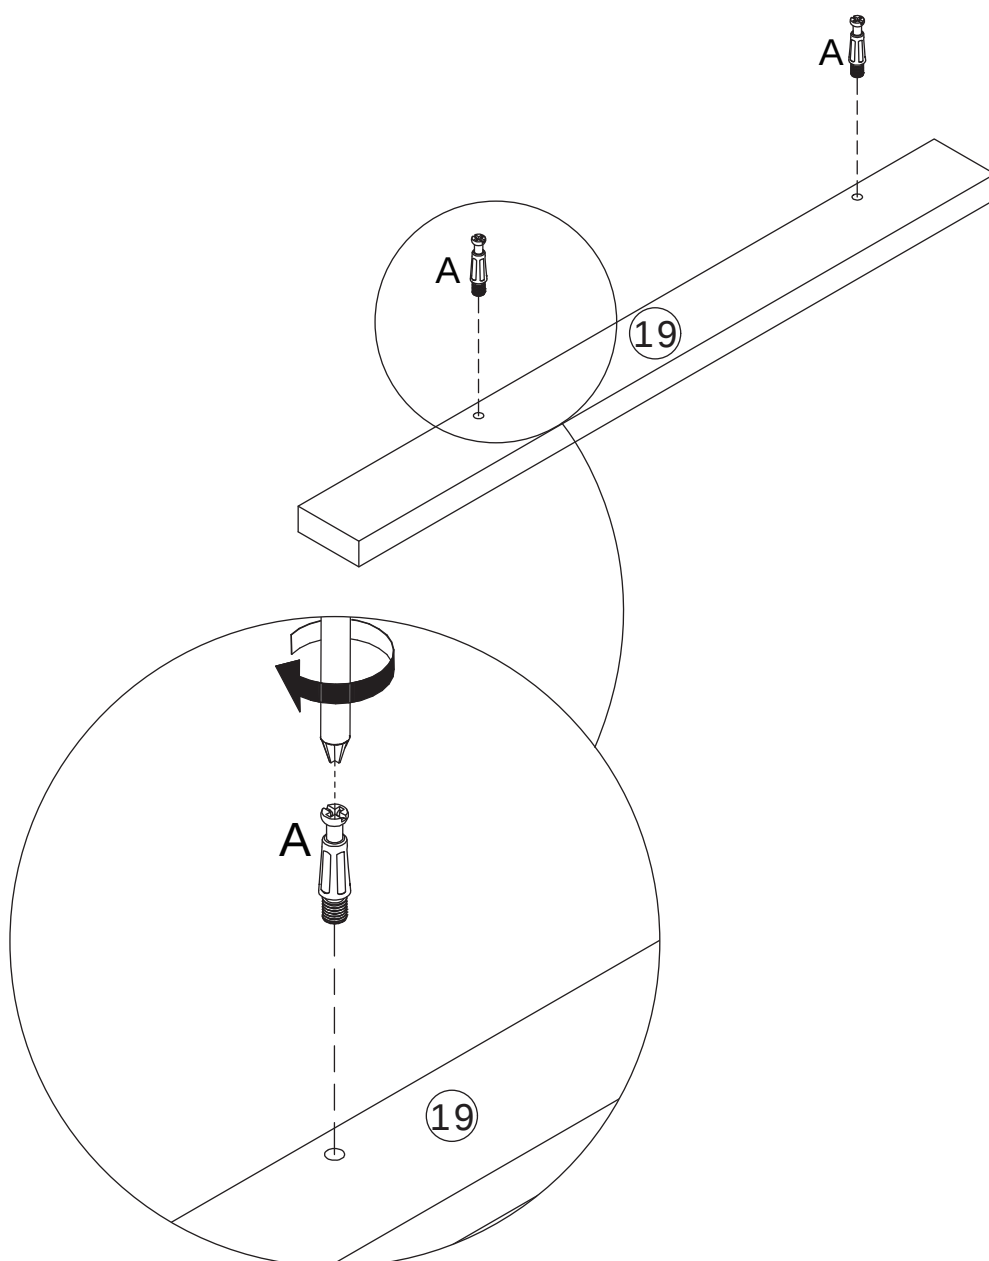 


30


B x 2



 
 
Ø15 x 12 mm

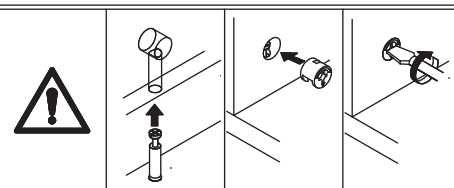


 Connect Part 19 to Part 16, tighten by turning cam lock (B) clockwise.

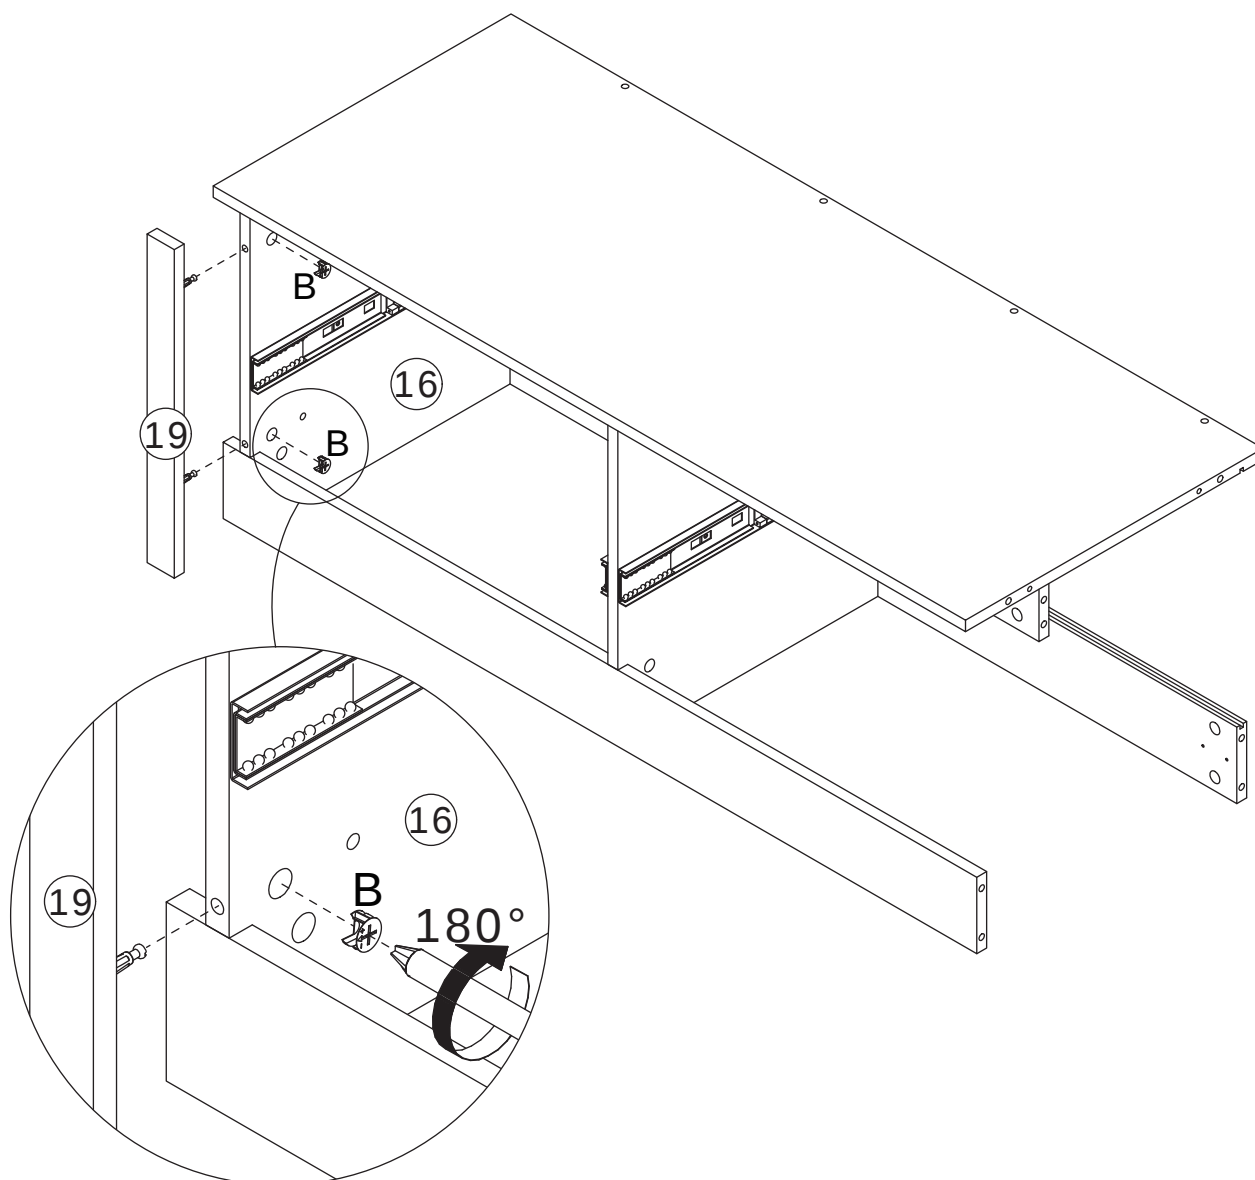


31

  A x 10  Ø 6 x 40 mm	C x 2  Ø 6 x 30 mm	F x 1 F-1  L=300 mm	H x 3  Ø 3.5 x 14 mm	
--	---	---	--	---

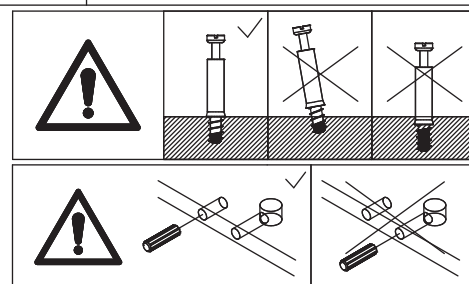 

 Screw eccentric rod (A) and insert wooden dowel (C) to Part 20.
Secure slide rail (F-1) to Part 20 using screw (H).

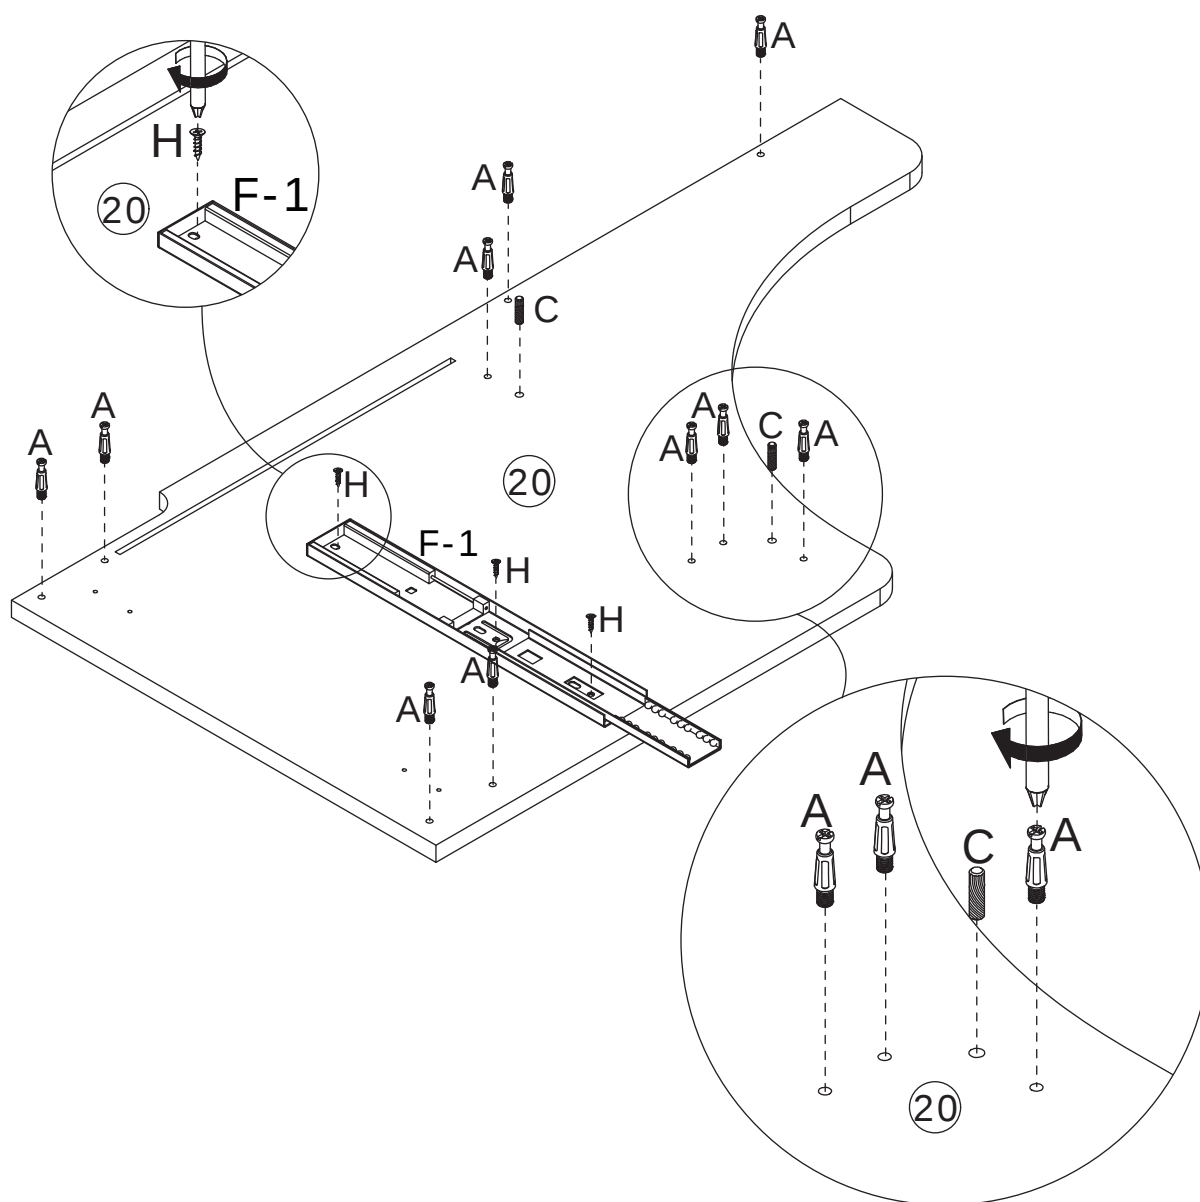


32



B x 8



 Ø 15 x 12 mm




  Connect Part 20 to Part 5, 13, 14, and 18,
tighten by turning cam lock (B) clockwise.

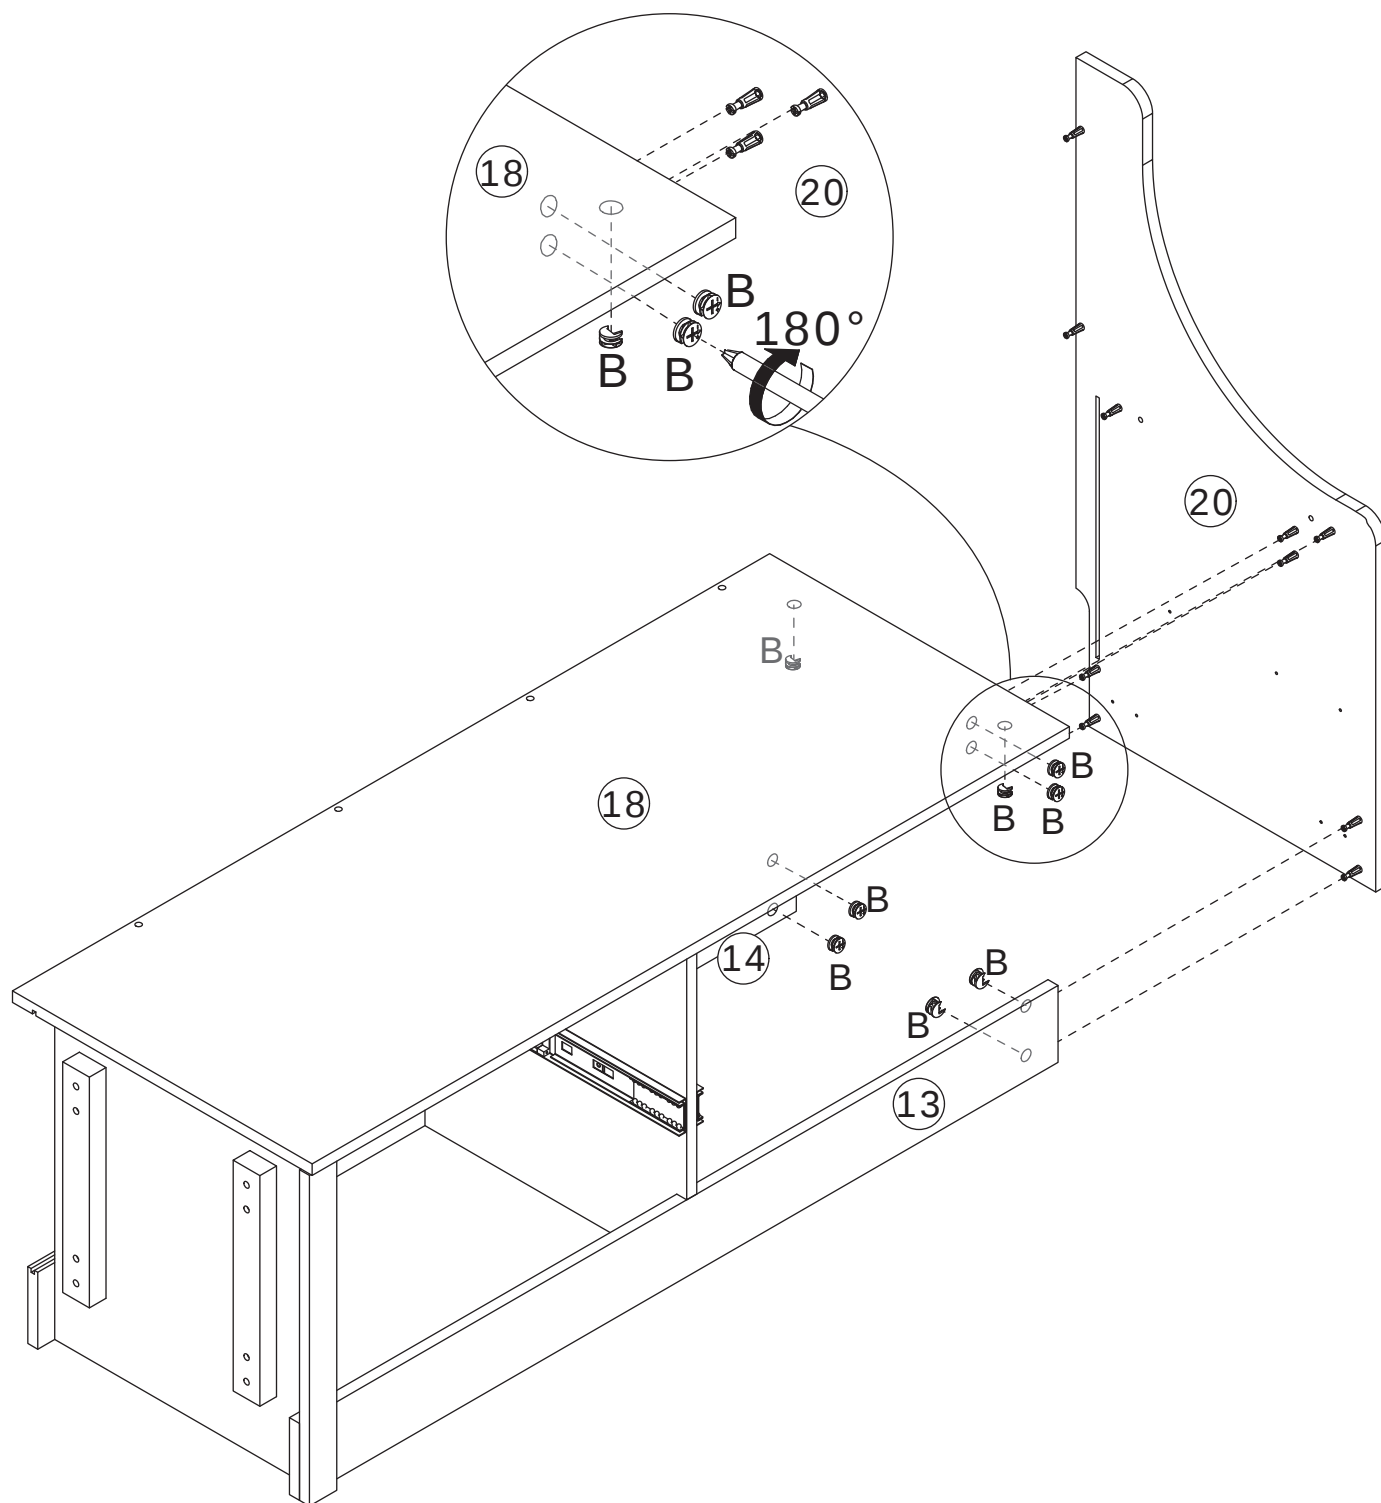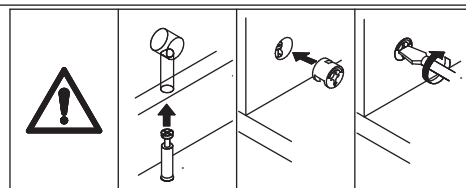


33

 Insert Part 9 into the available grooves.

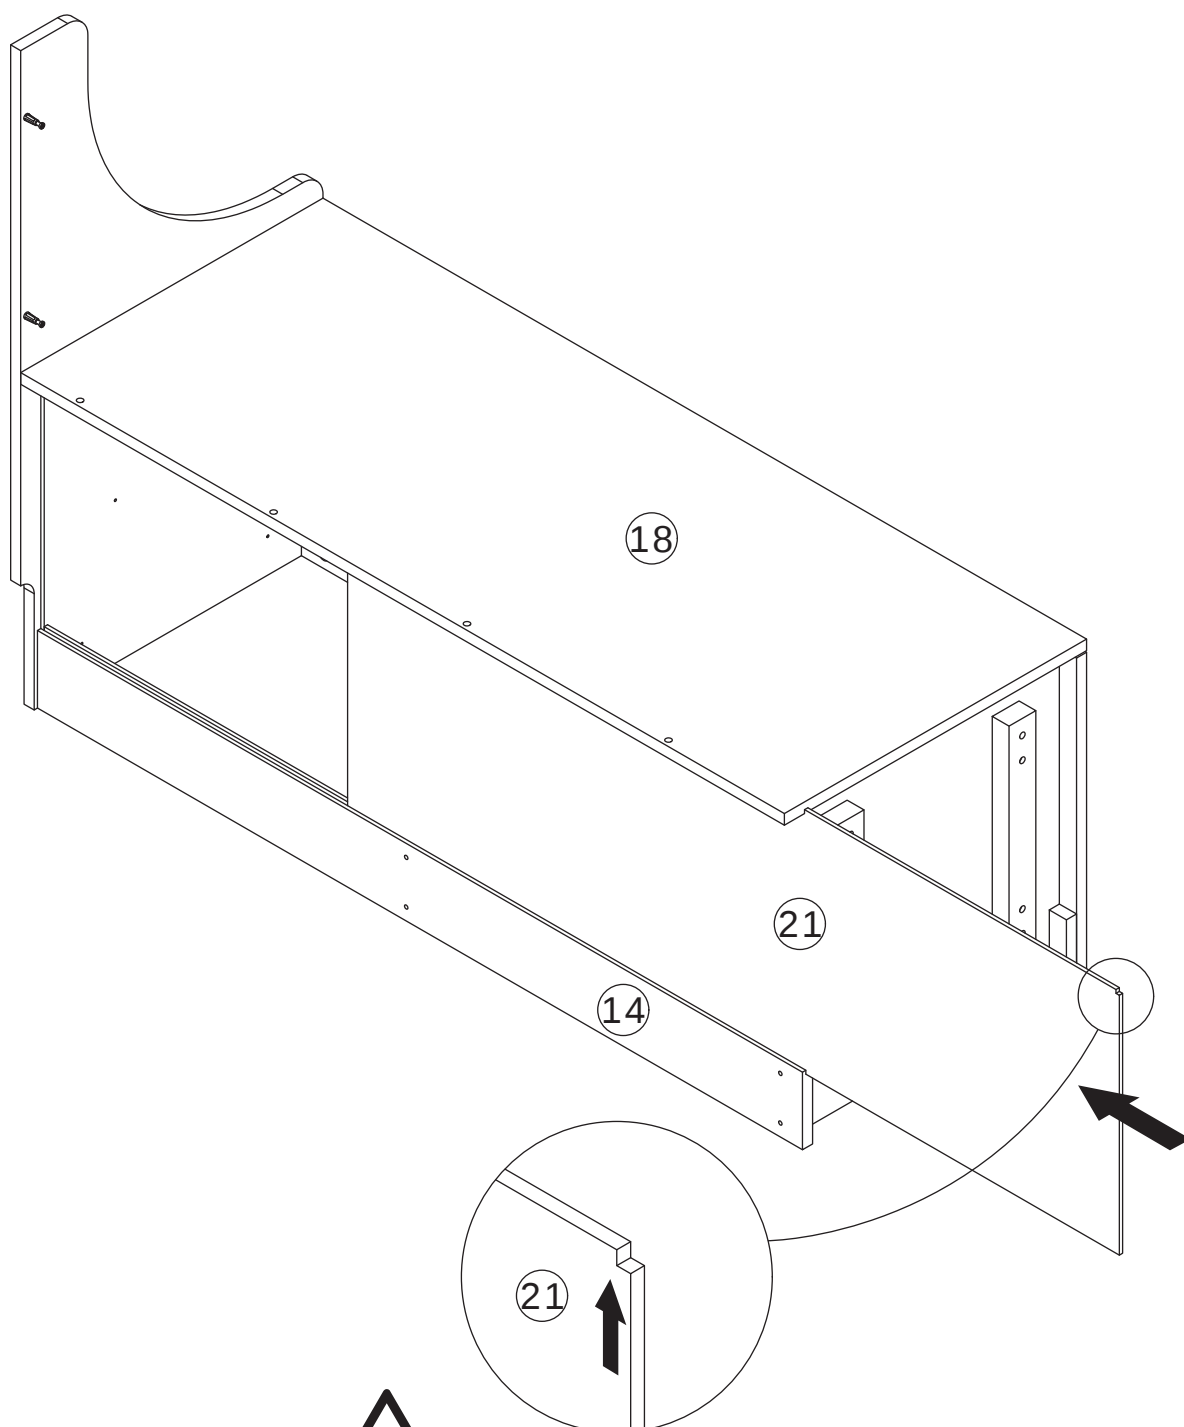


Pay attention to the direction of the gap.

 34

D x 2  66 mm	H x 8  Ø 3.5 x 14 mm	
---	---	---

 Secure fitting (D) to Part 13, 14 and 20 using screw (H).

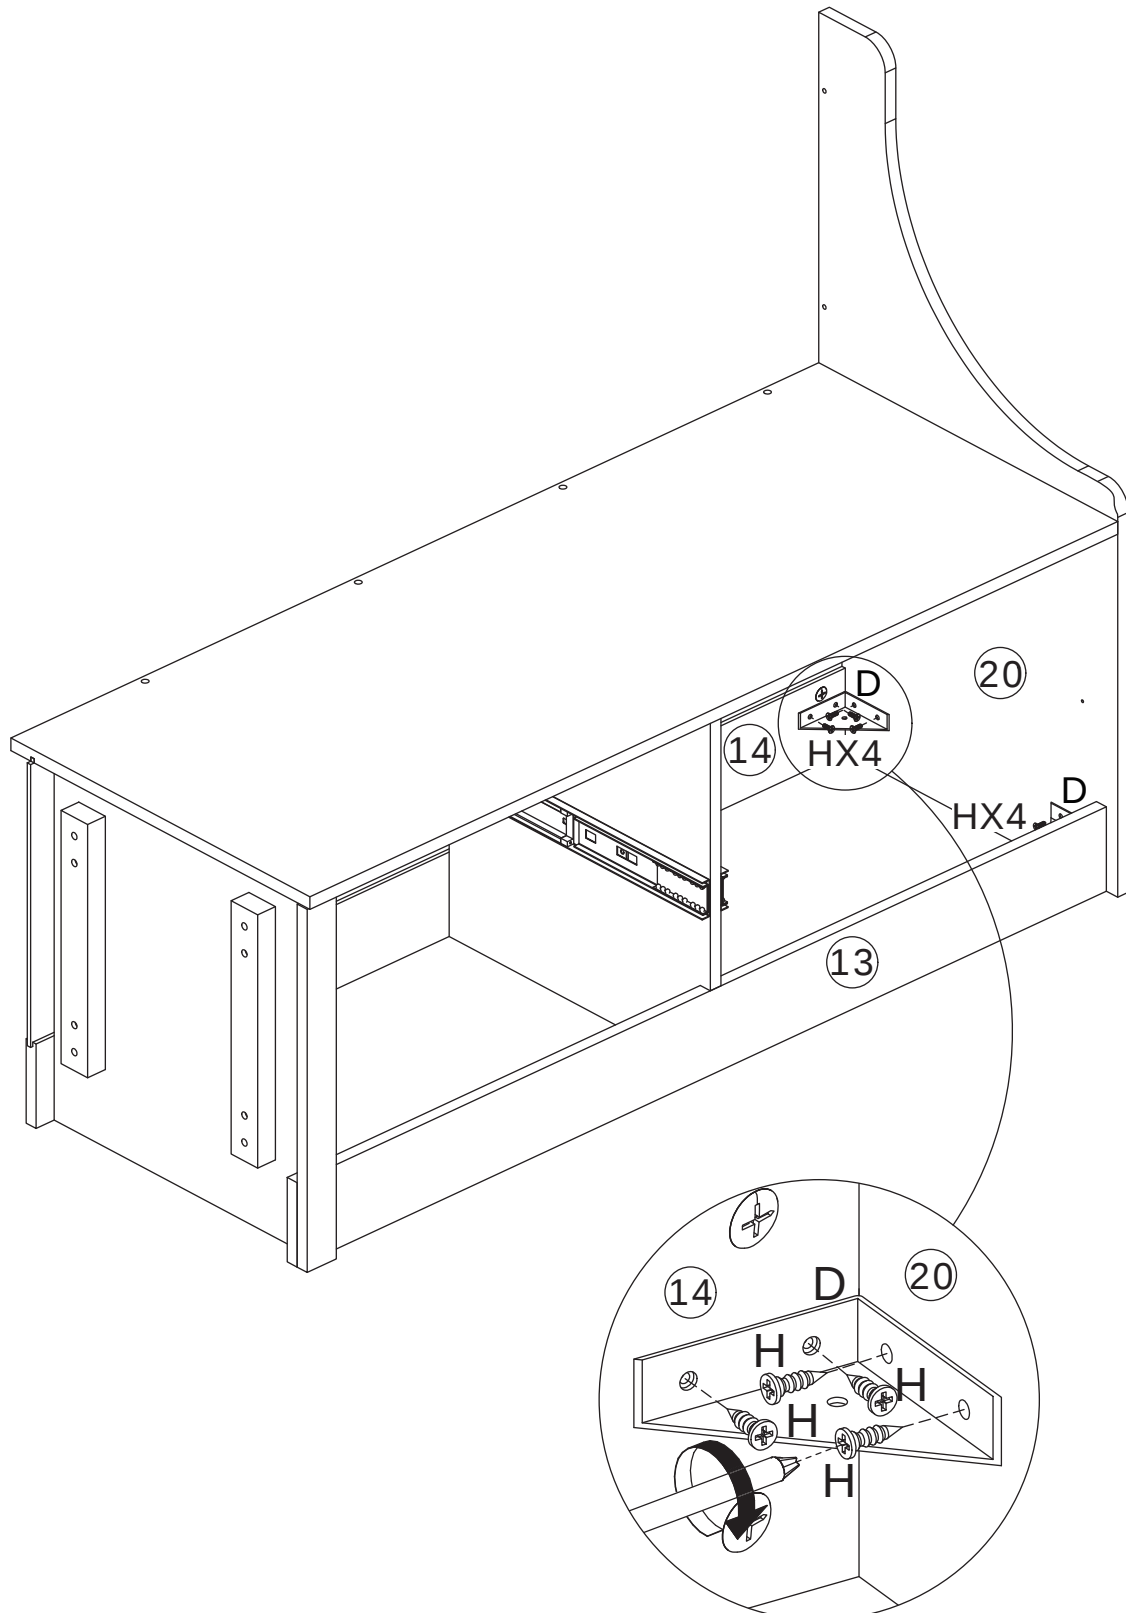


35


I x 6



 Ø 4 x 25 mm



 Secure Part 22 to Part 23 using screw (I).

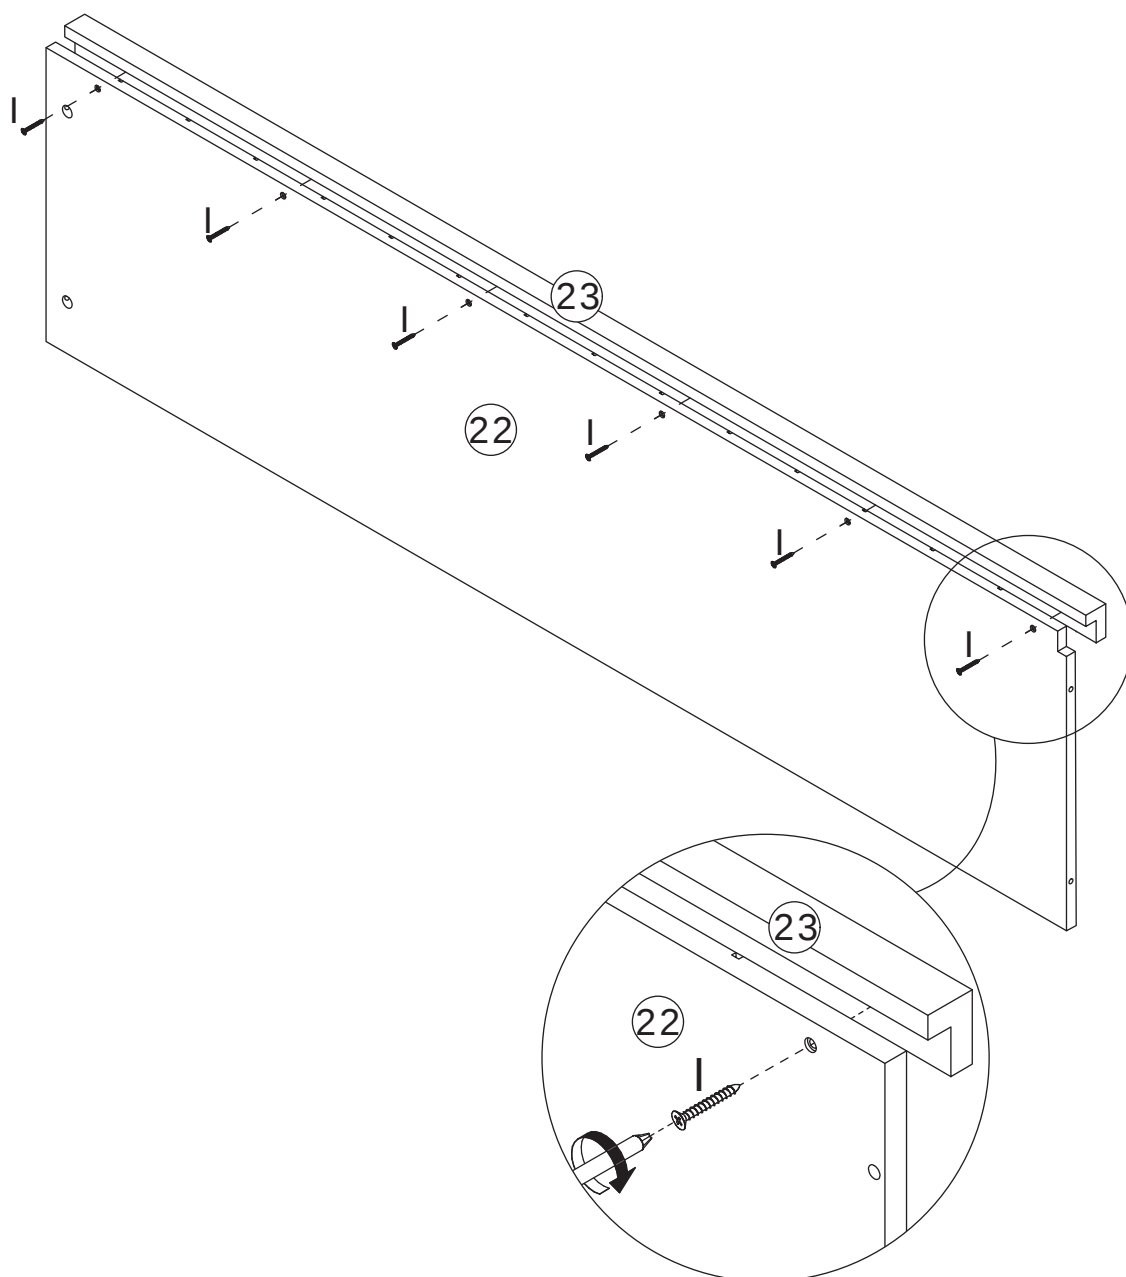

36

B x 2

 


Ø15 x 12 mm





J x 4



Ø7 x 38 mm



    Connect Part 22 to Part 20, tighten by turning cam lock (B) clockwise.
Secure Part 22 to Part 18 using screw (J).

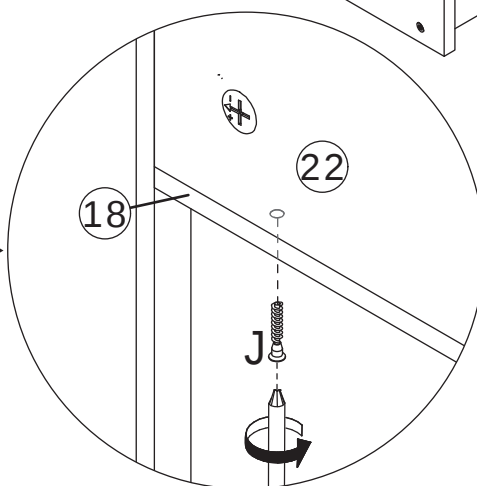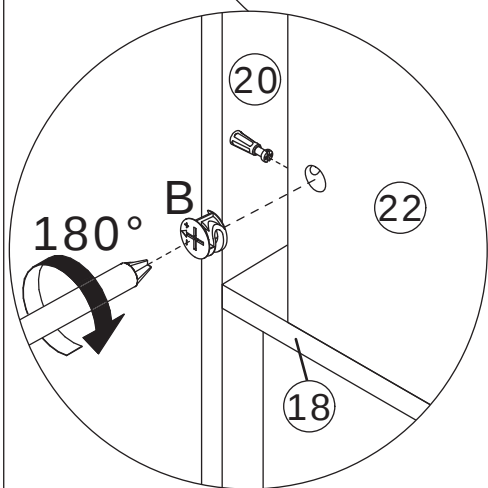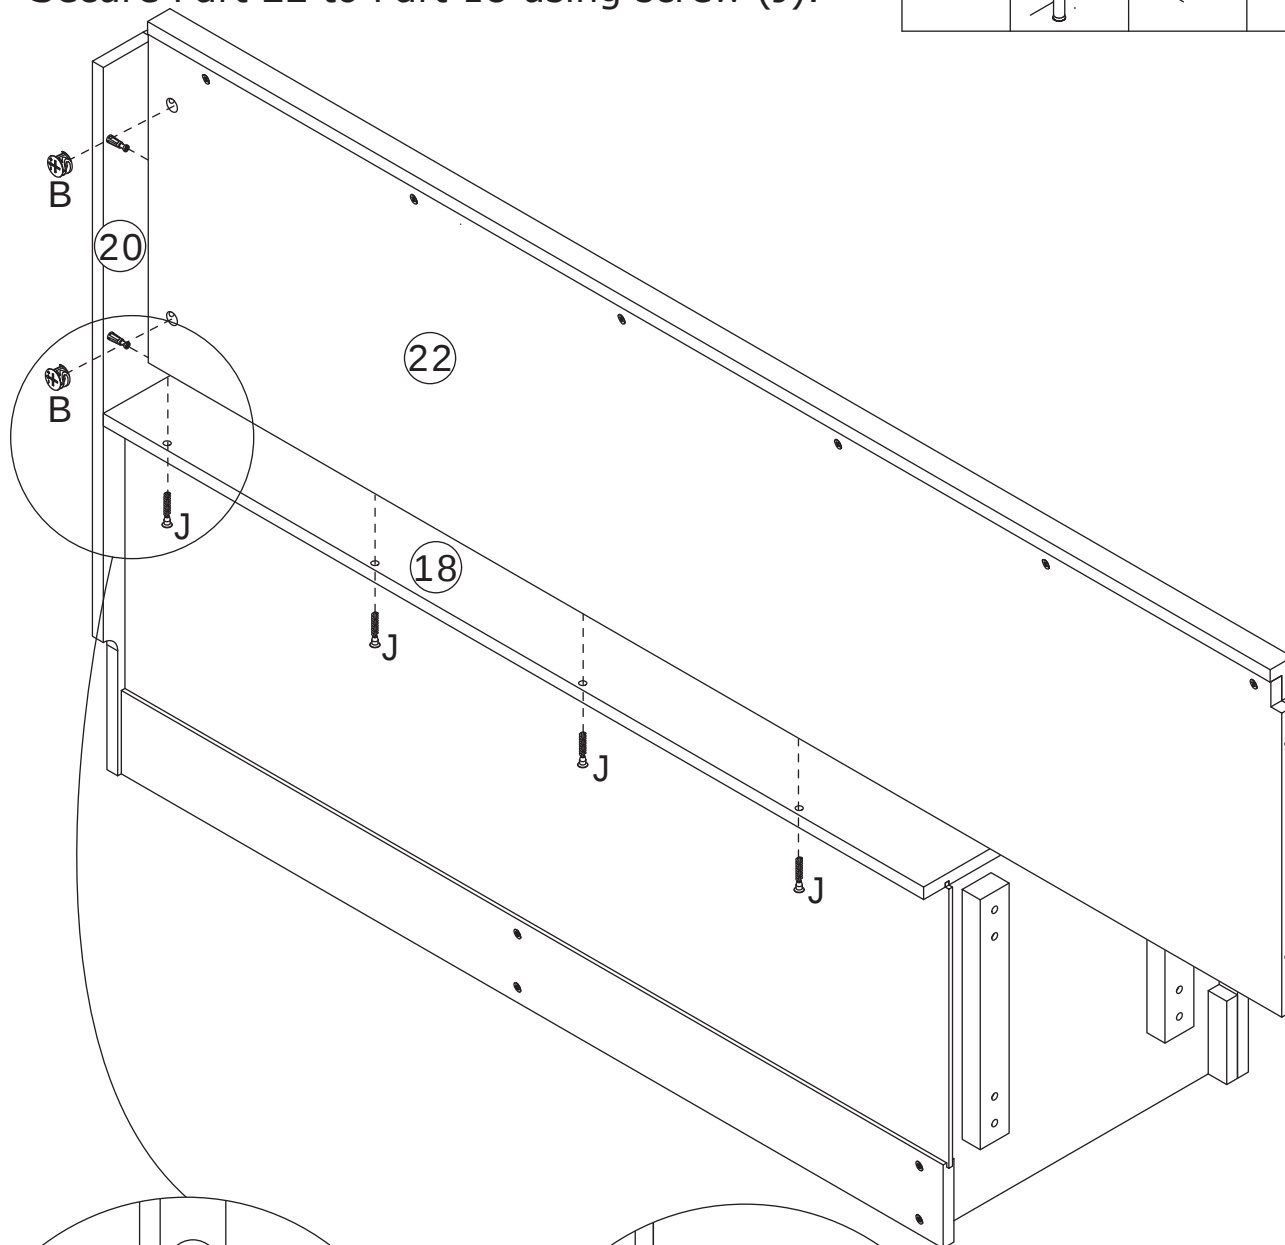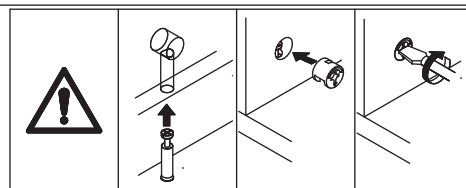


37


G x 4



 Ø6 x 60 mm



 Connect the two assembly units using screw (G).

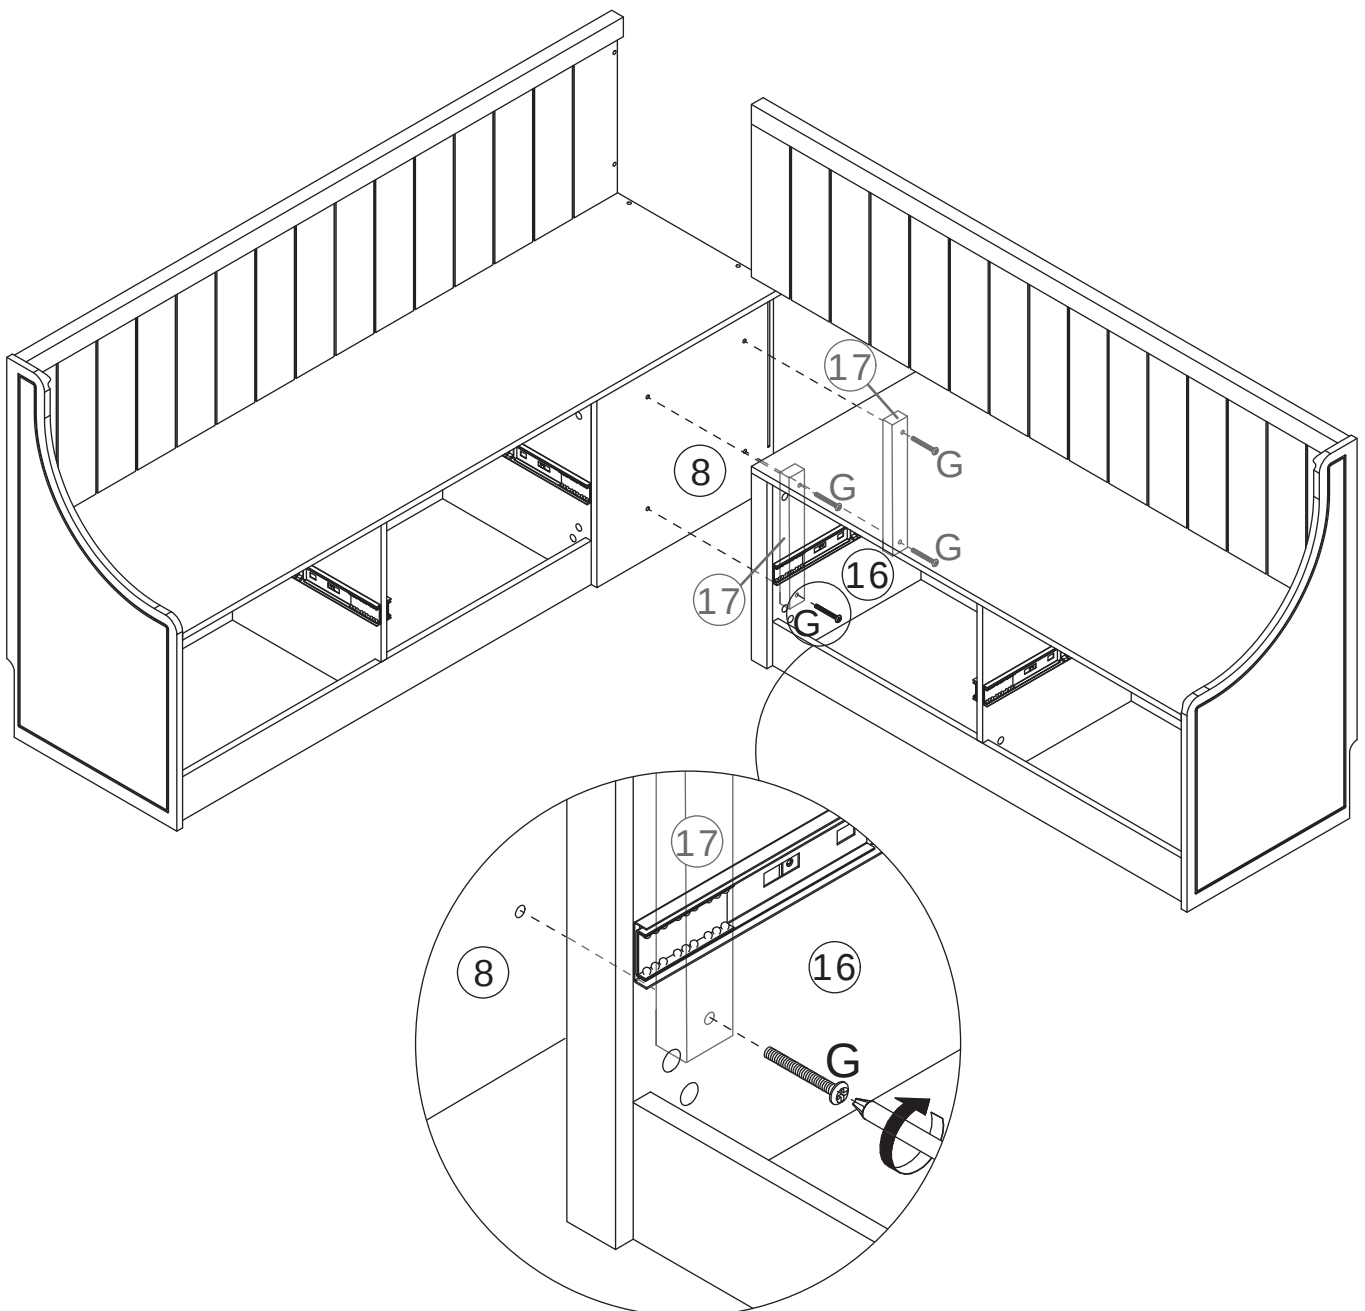


38


J x 4



 
Ø7 x 38 mm




 Secure Part 11 and 6 to Part 18 using screw (J).






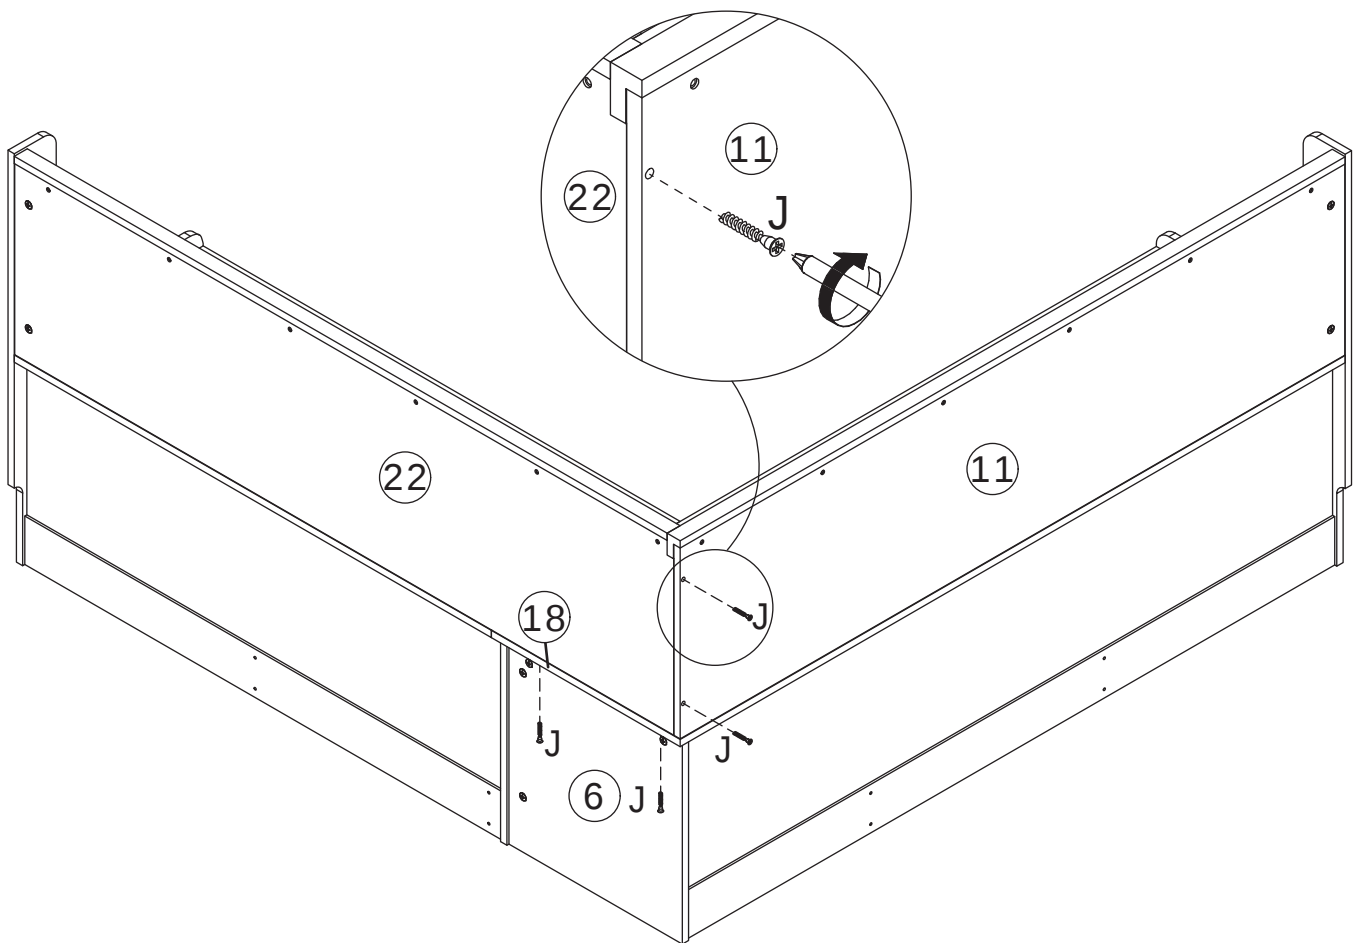


39

 A x 16  Ø 6 x 40 mm	F x 8  F-2 L=300 mm	H x 16  Ø 3.5 x 14 mm	
--	--	--	---

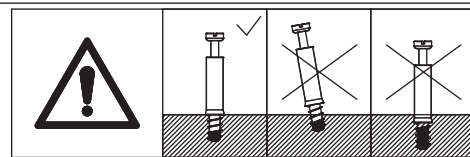 

      Screw eccentric rod (A) onto Part 24 and 31.
Secure slide rail (F-2) to Part 25 and 27
using screw (H).

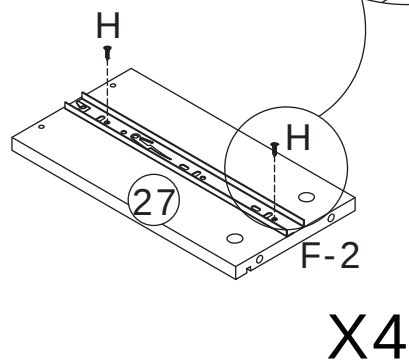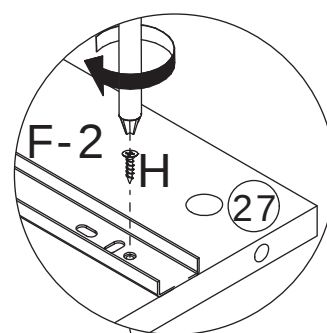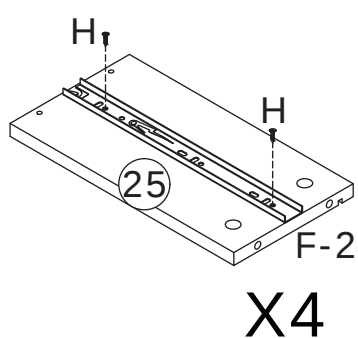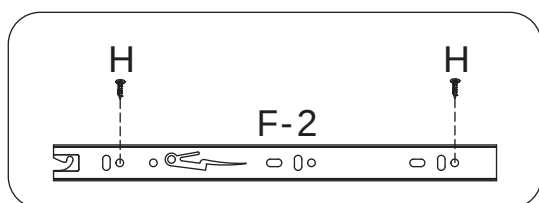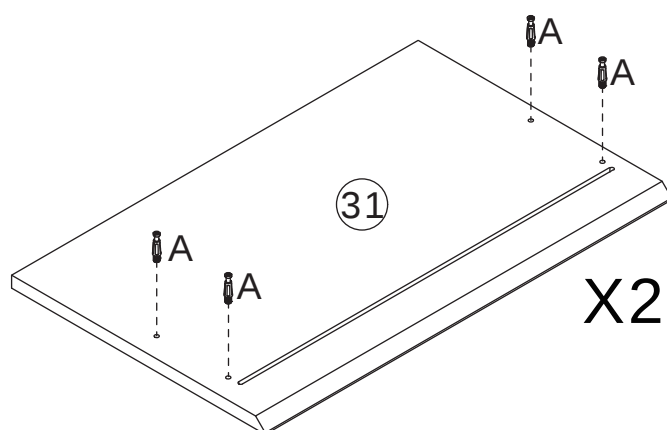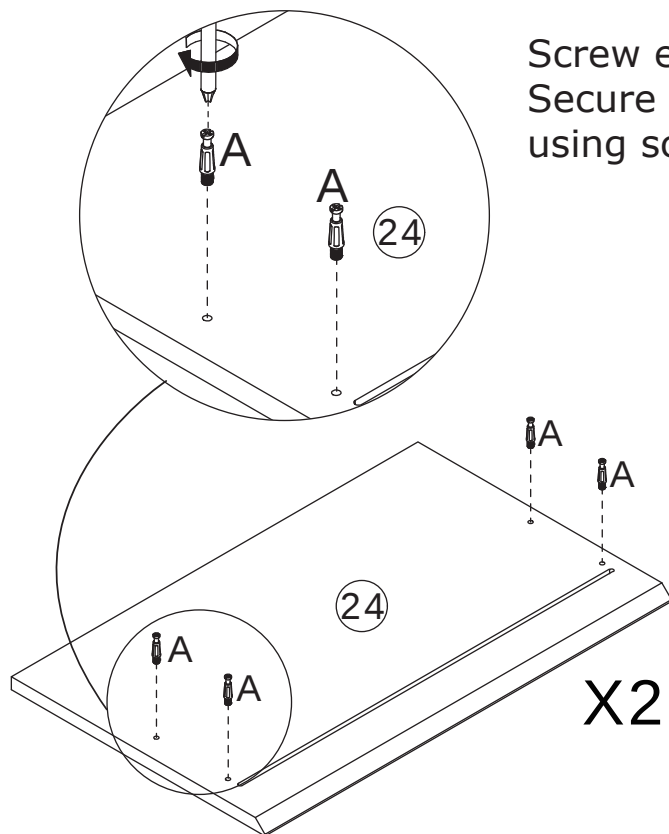

40

B x 16

 


Ø15 x 12 mm






K x 16



Ø20 mm



     Connect Part 24 and 31 to Part 25 and 27,
tighten by turning cam lock (B) clockwise.
Insert Part 26 into the grooves.

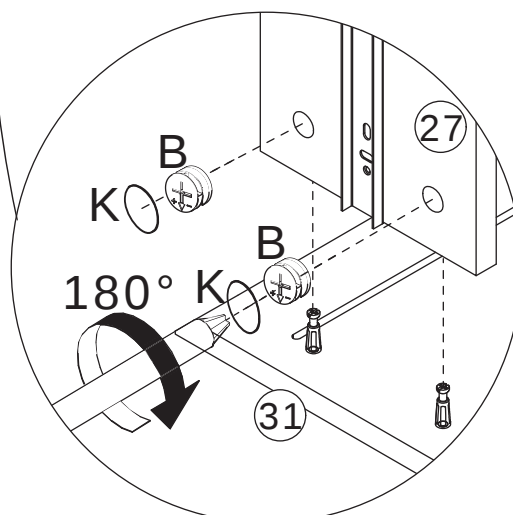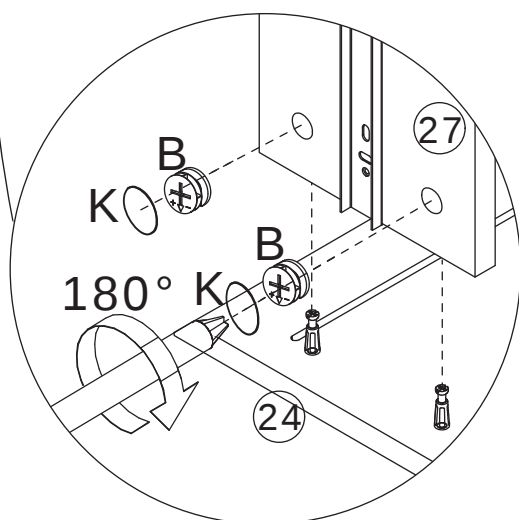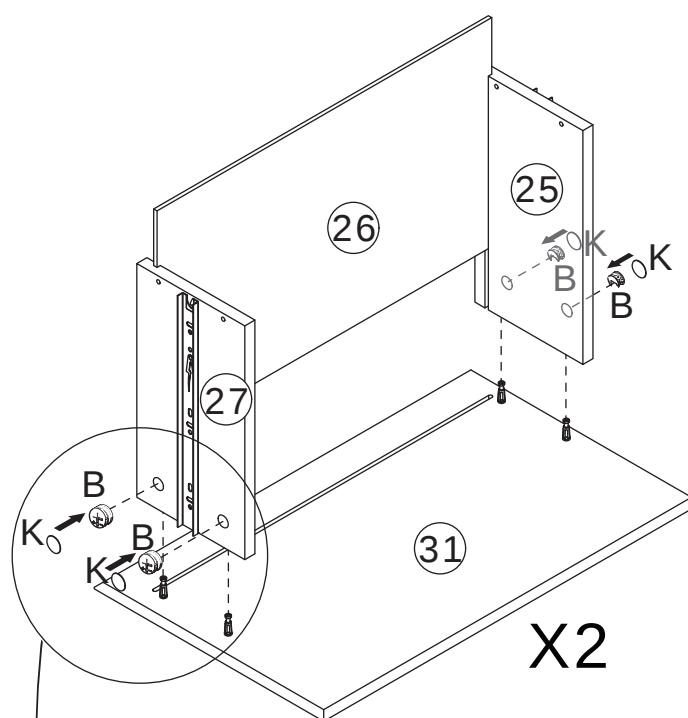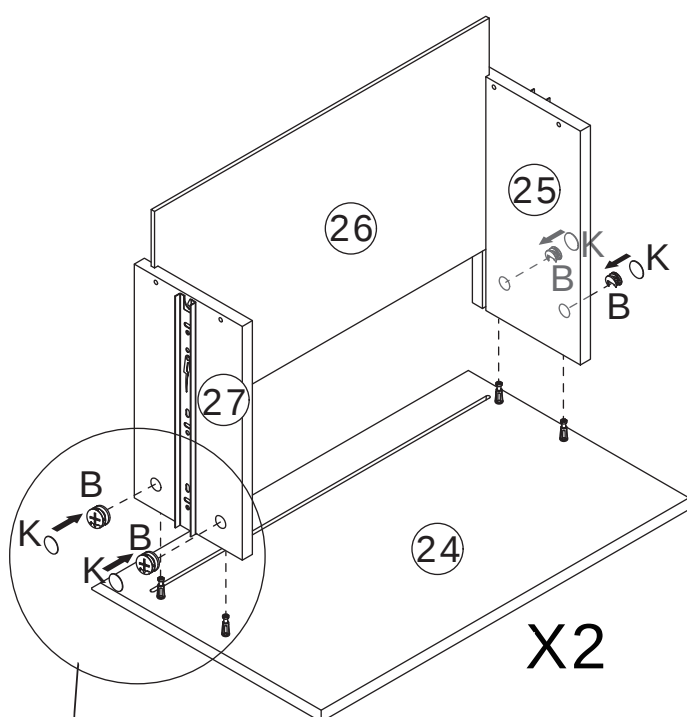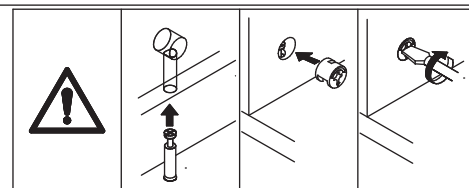


41


E x 16



 
Ø4 x 35 mm



 
Secure Part 25 and 27 to Part 28 using screw (E).

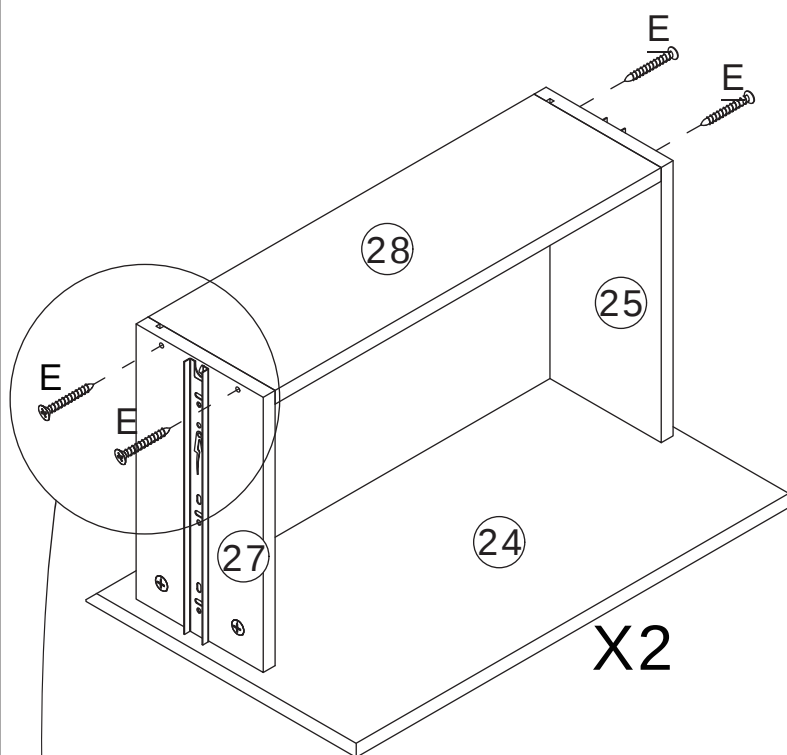

X2

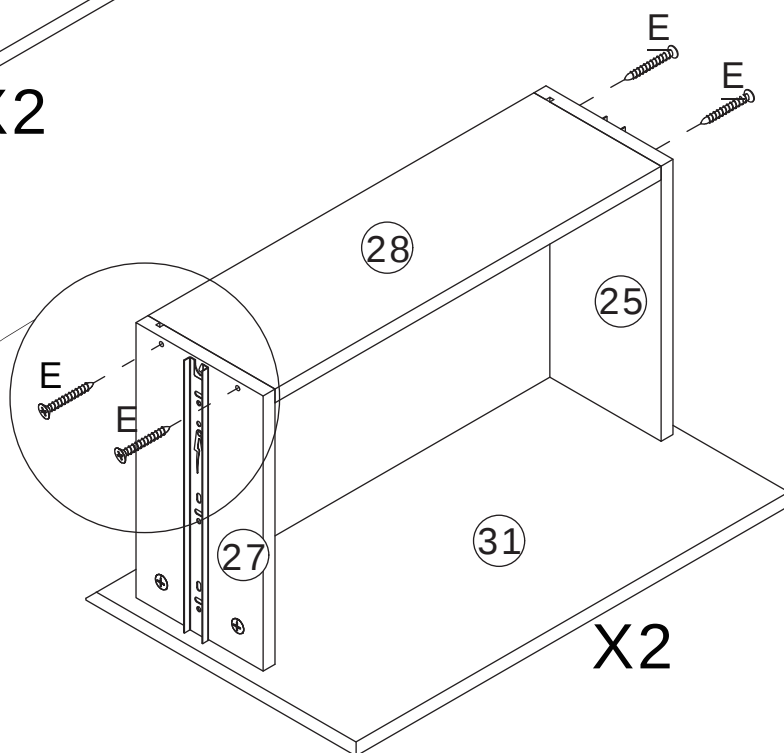 


X2

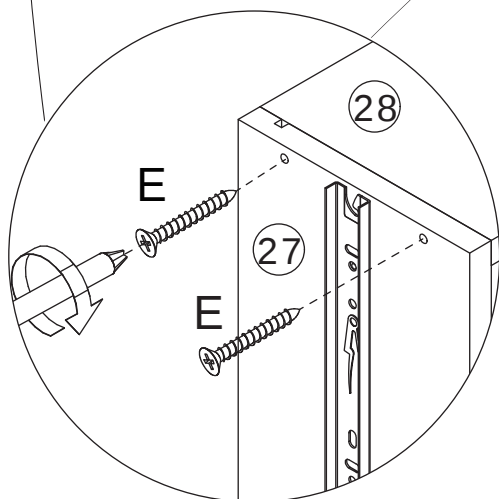 


42

 Insert the four drawers.

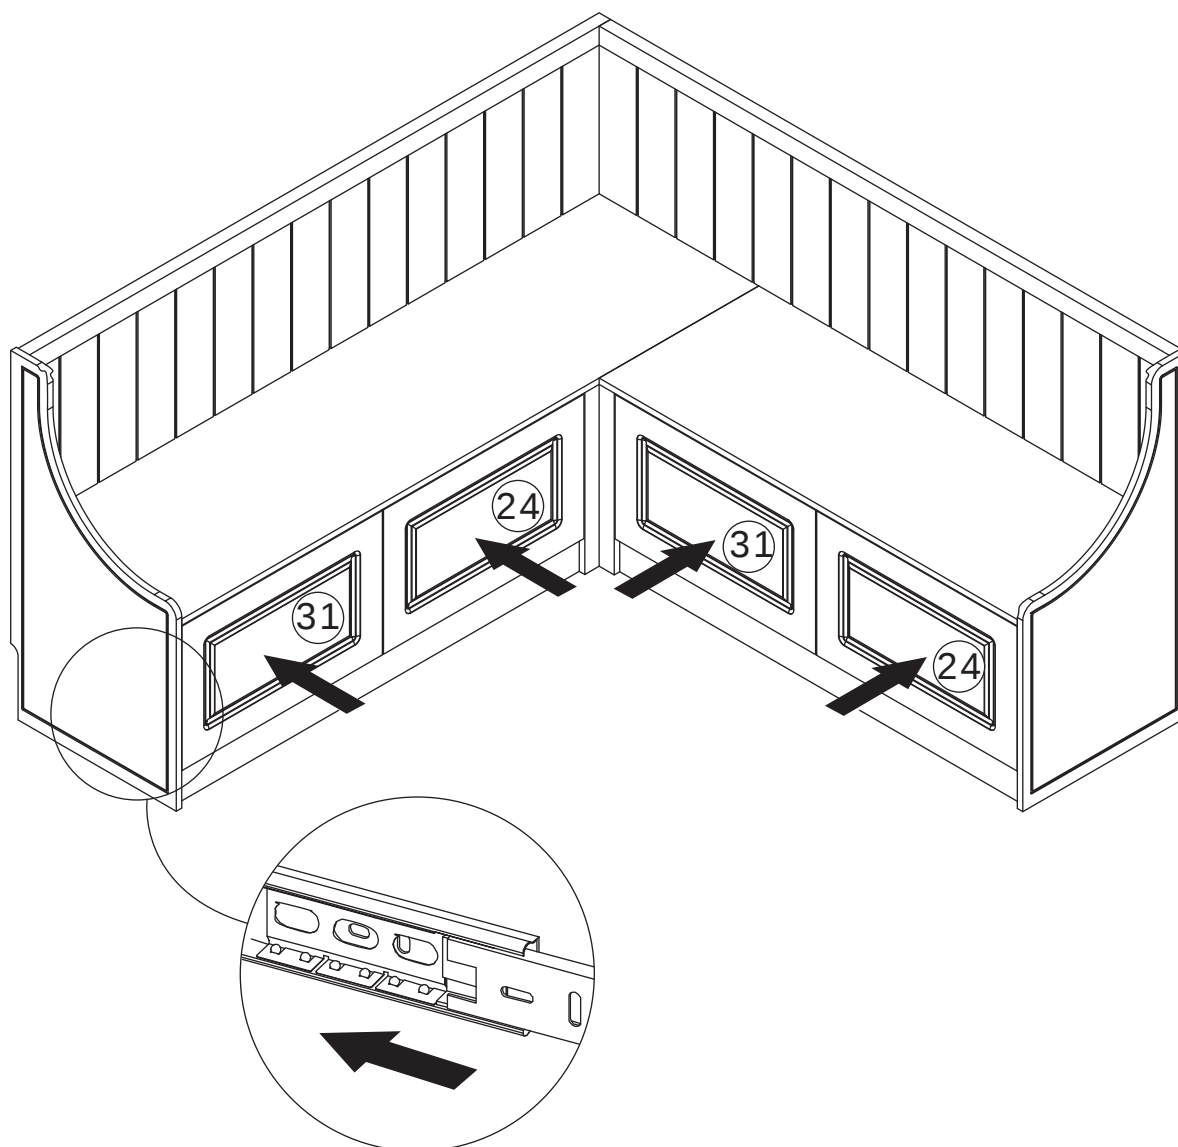


43

 
Place the cushions (Part 29 and 30) on top.

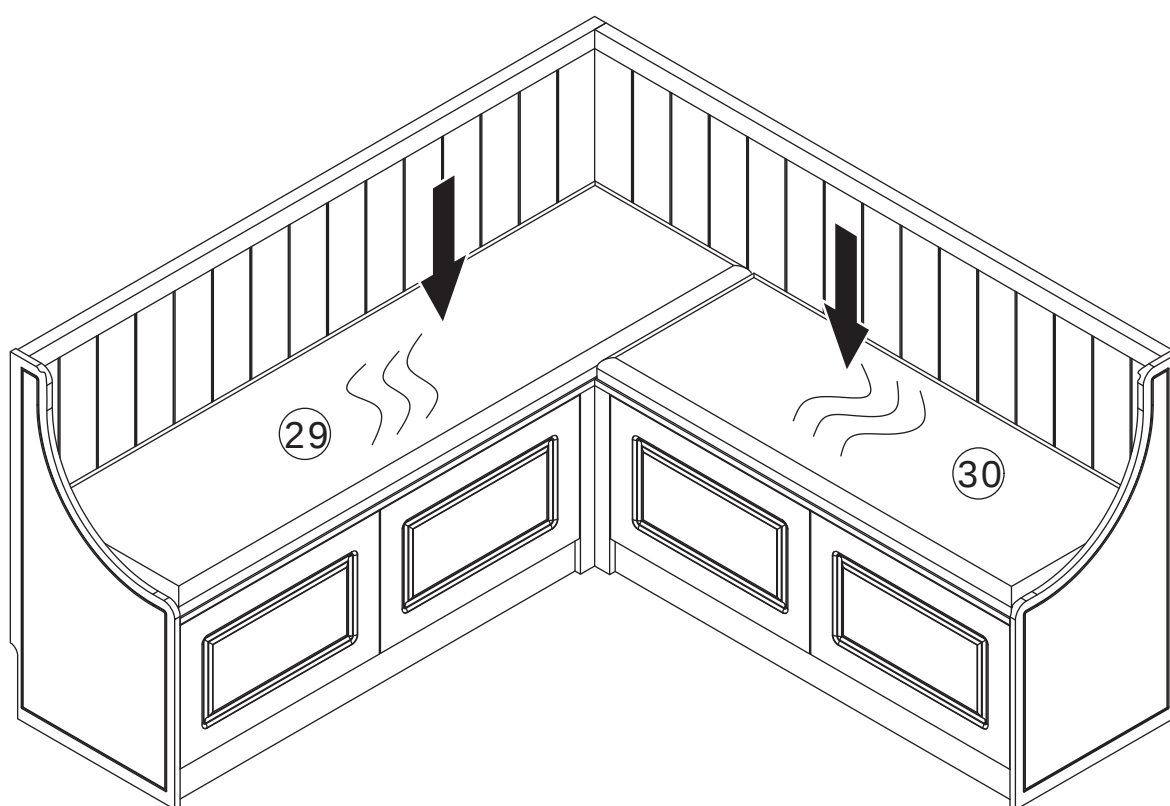

44

 H x 16  Ø 3.5 x 14 mm	L x 16  L=13 mm	
--	--	---

 Insert clip (L) into back slots and secure using screw (L).

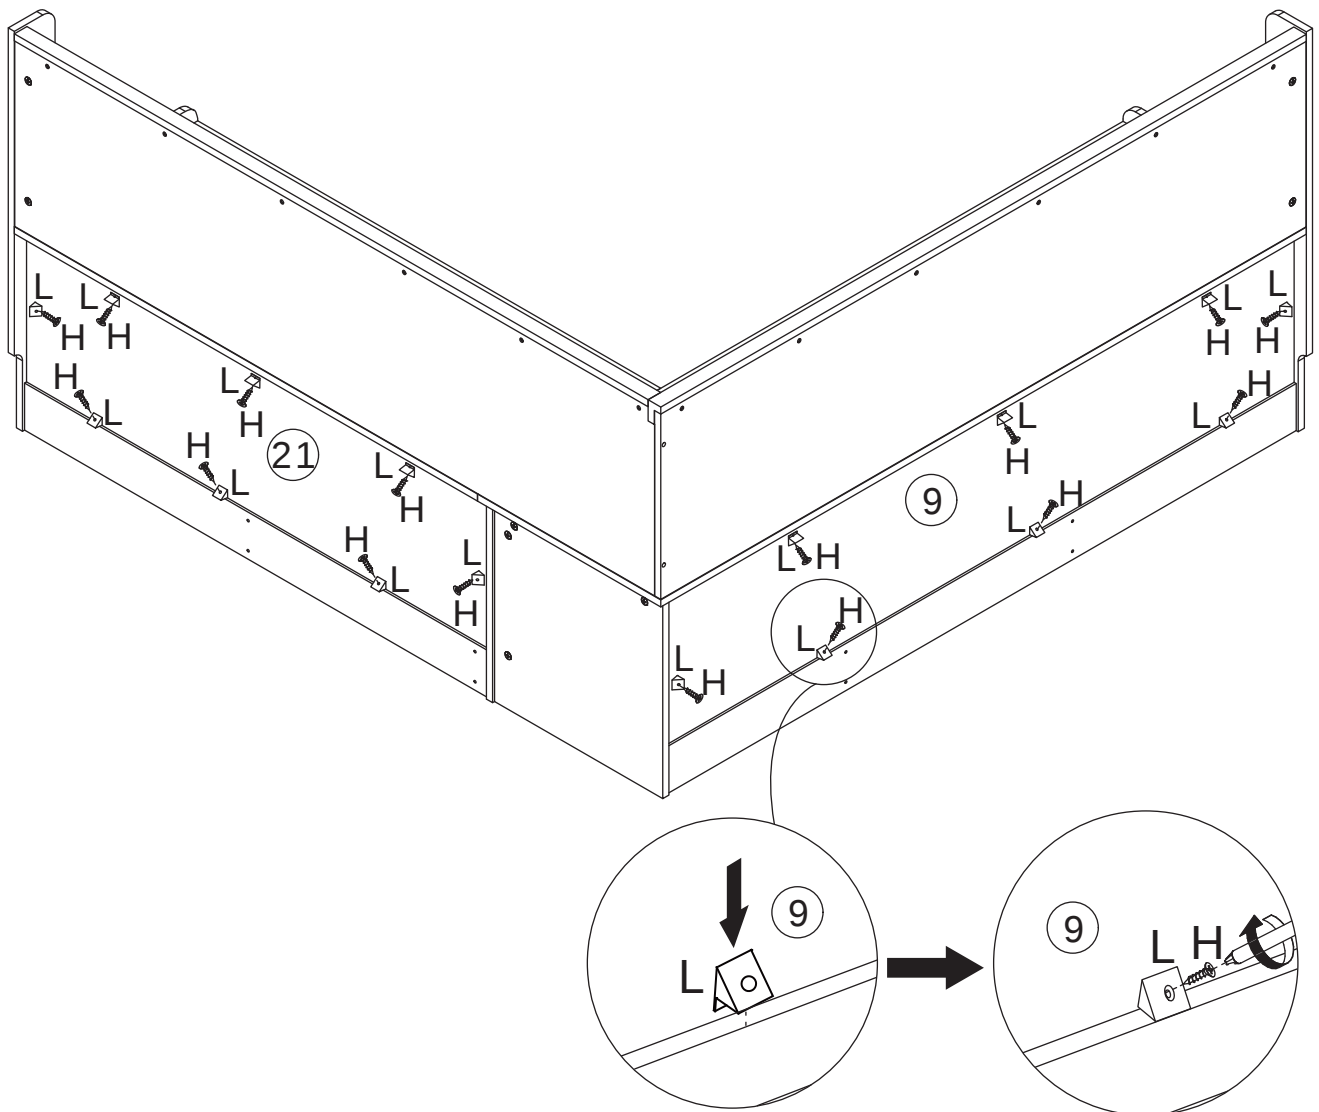

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.