


**THANK  
YOU!**

**USER MANUAL**


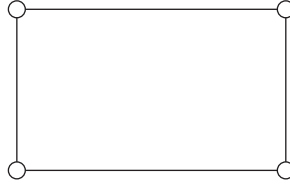

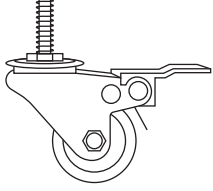


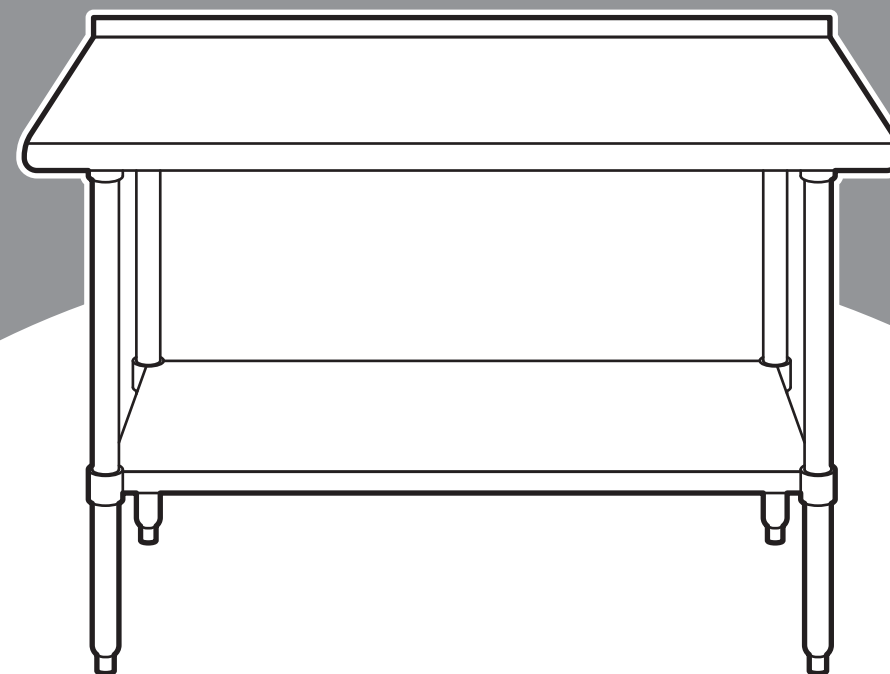


**Stainless Steel  
Work Table**

SECTION A

# Parts List

Before assembling the product, make sure your package contains the following parts. If any of the parts are missing or damaged, please contact Customer Service for assistance.


Item No.	Reference Image	Qty.
<b>A</b>	 Table Leg Tube	x4
<b>C</b>	 Supporting Layer	x1
<b>E</b>	 Wrench	x1
<b>G</b>	 Universal Wheel	x4

Item No.	Reference Image	Qty.
<b>B</b>	 Table Board	x1
<b>D</b>	 Screws	x4
<b>F</b>	 Foot Nails	x4

# Assembly Steps


## STEP 1 **A** x 4 pcs.

Using a tape measure or other measuring tool, we will mark the location of support layer (Part C) on all 4 table legs (Part A). These marks should be the same distance from the end of the table legs (Part A).

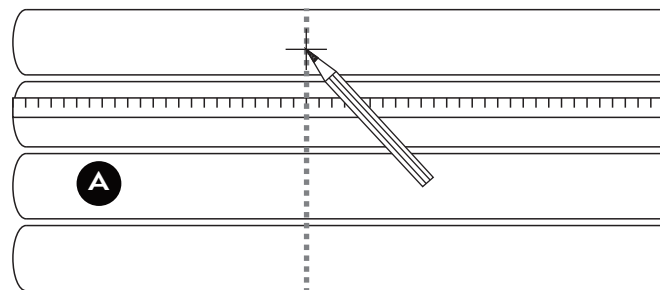

## STEP 2 **B** x 1 pc.



Tighten the four leg tubes (Part A) as shown in the figure below. Press down the four leg tubes (Part A) and screw them clockwise.

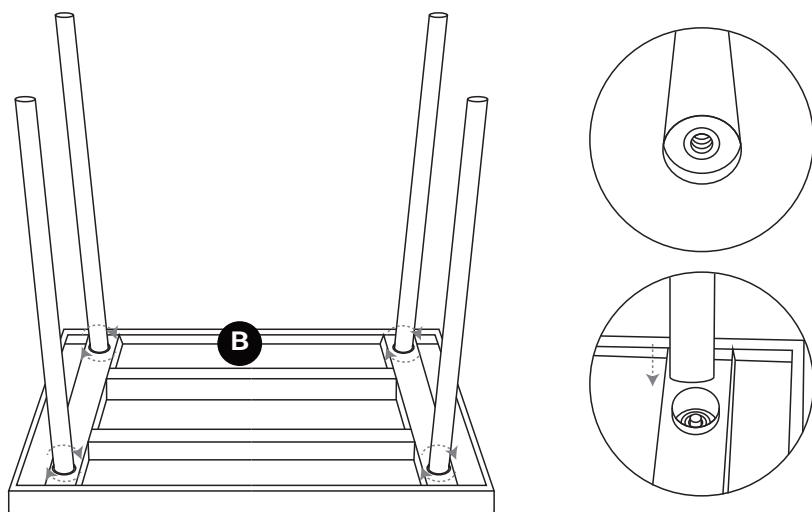

# Assembly Steps



## STEP 3 **C** x 1 pc. **D** x 4 pcs. **E** x 1 pc.

Put the supporting layer (Part C) into the table leg tubes (Part A), aligning the previously drawn marks, and tighten the screws (Part D).

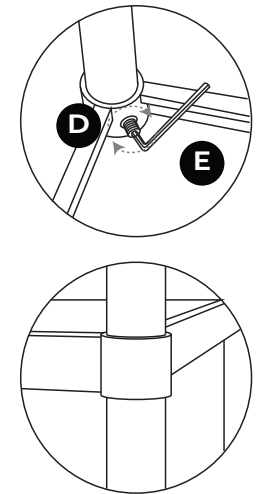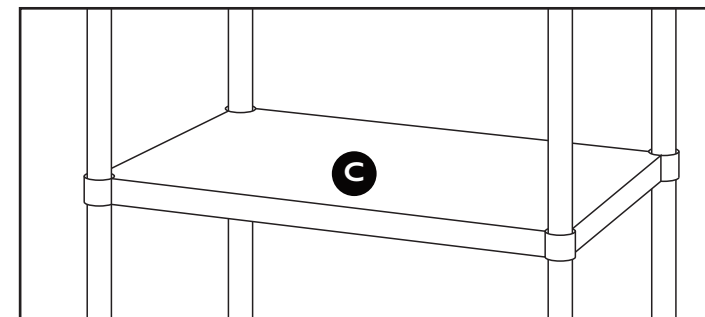

## STEP 4 **F** x 4 pcs.


Use a rubber mallet (not included) to knock the four foot nails (Part F) into the table leg tubes (Part A). (Be sure to hit the end.)

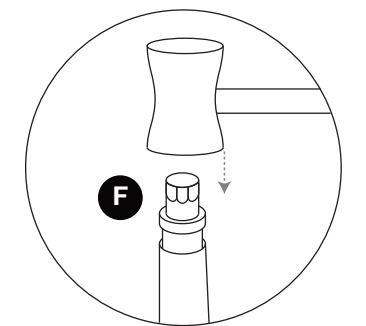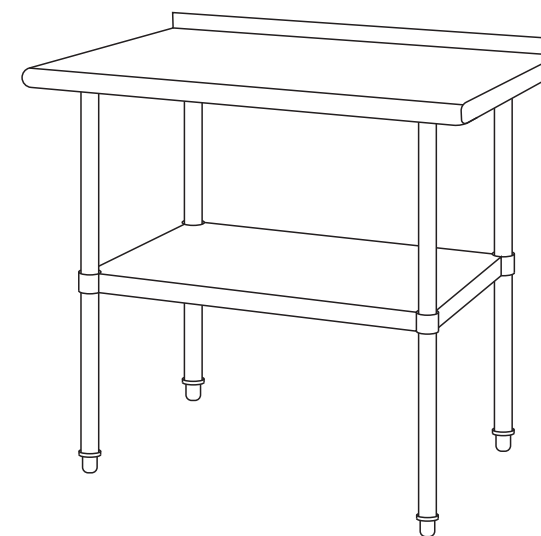

## Assembly Steps

### STEP 5

Note: The product is equipped with four universal casters with brakes. If you want to use the universal wheels, you can unscrew the metal foot pads of the foot nails of Part F, screw on the universal wheels, and tighten them.

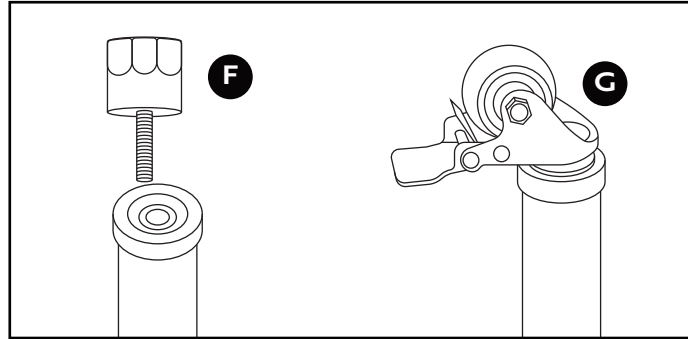

## Warranty

### WARRANTY EXCLUSIONS

This warranty does not cover damage resulting from misuse, accident, unauthorized modification, or any other circumstances not directly related to the manufacturing and design of the product, including but not limited to:

- Parts lost during use.
- Normal wear and tear of products or parts.
- Incorrect installation (such as using the wrong voltage) or assembly.
- Exceeding the bearing capacity of the product.
- Use under extremely harsh conditions.
- Improper cleaning or maintenance.
- Damage caused by any reason other than the intended use of the product.
- Indirect loss or damage caused by the product.

## Warranty



The warranty program is our commitment to you.

We are committed to providing you with a high-quality product that meets your needs and expectations. To demonstrate our confidence in the durability and performance of our products, we offer the following warranty.

### WARRANTY COVERAGE

This warranty program applies to any orders, purchases, receipts, or use of any products sold and is valid for a period of 1 year from the date of purchase. However, please note that this warranty period is only valid for the original order. If you receive a replacement order during the warranty period, it will not include a separate warranty period.