



Item # : CP700CC
Description : CROSSPOINTE COUNTER CHAIR
Product size : 19-1/4" x 22-1/2" x 43-1/4"H

P. 1/4

Your furniture purchase is an investment. Here are a few tips to maximize the lifetime of your furniture with a minimum amount of effort. Properly caring for your furniture can help ensure that it looks great year after year.

Wood Furniture Maintenance:

- Always dust, wipe, and clean *with* the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- Use the same type of polish consistently as interchanging oil-based and wax-based polishes will cause a build-up and result in a foggy or cloudy appearance.
- If a polished surface becomes foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surfaces. Water can penetrate the finish and raise the grain on wood, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface.

The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which results in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

High Gloss Resin Table Maintenance:

- Resin tabletops have approximately 1/8" of a resin coat on the top face of the table, which will resist ice, water, wine, liquor, food, cleaning fluids, and warm or hot liquids; however, cups, glasses, etc. containing hot liquids should not be left on the table without a coaster for protection.
- Resin tabletops will scratch just the same as any other glossy surface and basic precautions should be taken.
- For lasting shine, the resin table should be waxed with a car wax that does not contain silicon. Maintaining this wax build-up will result in a high gloss shine.
- When wiping down the table, a soft, clean rag should be used. Do not use a heavy paper.

Granite Top Maintenance:

The surface of the granite on your table has been polished or sealed to create a generally non-porous surface. The stone has many natural characteristics including: veining, hairline cracks, and color variations - which make up the stone's beauty.

To maintain the beauty of your granite:

- Protect surfaces from scratching, staining and etching by:
 - * Keeping them free of debris or sharp objects
 - * Wiping up spills immediately
 - * Avoiding contact with chemicals (particularly acid-based materials)
 - Clean with pH neutral products or those especially formulated for use on stone.
 - It is not recommended to use a water-based solvent for dark granite as it will remove the polish from the surface.
 - After a period of use, apply a penetrating sealer to prevent contaminants from being absorbed into the stone.
 - Remove stains with special absorbent poultices formulated for use on stone.
 - Renew the surface on polished granite (granite with a high gloss surface) by buffing with special stone polish, powder or cream.
- Do not use granite polish on granite with a matte finish, which has been honed rather than polished. (Penetrating sealer may be used on both polished and honed granite.)

Marble Top Maintenance:

Marble may be stone, but it is porous stone and can stain easily. Treating marble surfaces the same as wood surfaces is a great rule of thumb.

- It is recommended to seal the tops on a regular basis (every 6 to 12 months). A good quality stone sealer can be purchased from any tiles/stone store or any homeware store and should be applied according to the manufacturer's recommendation.
- When sealed properly, marble tops can be used indoors and outdoors and can withstand any weather conditions except internal freezing. Snow or freezing rain will penetrate the table and cause cracks.

Caring for the Fabric on Upholstered Furniture:

- Frequent vacuuming of the entire upholstered area will prevent dust from settling into the fibers.
- Professional cleaning is always recommended for all upholstered pieces.
- Always pre-test a small area of fabric in an inconspicuous area when cleaning before proceeding.
- Do not use cleaning products containing brightening agents.

VERY IMPORTANT!!			
NEVER USE GLASS CLEANERS ON FINISHED SURFACES. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.	 DO NOT WRITE DIRECTLY ON SURFACE PREVENT MARKING	 DO NOT PLACE DIRECTLY IN SUNLIGHT PREVENT FADING	 DO NOT USE PLACEMATS WITH RUBBER BASES PREVENT DISCOLORING
NEVER ALLOW LIQUIDS OF ANY KIND TO LINGER ON SURFACES. ABSORPTION CAUSES THE WOOD TO WARP AND THE FINISH TO DE-LAMINATE.	 DO NOT USE COMMERCIAL POLISHES AND WAXES PREVENT YELLOWING	 DO NOT PLACE HOT POTS, ETC. ON SURFACE PREVENT DAMAGE TO FINISH!	 REGULATE THE HUMIDITY CONDITIONS AT YOUR HOME PREVENT SPLITTING

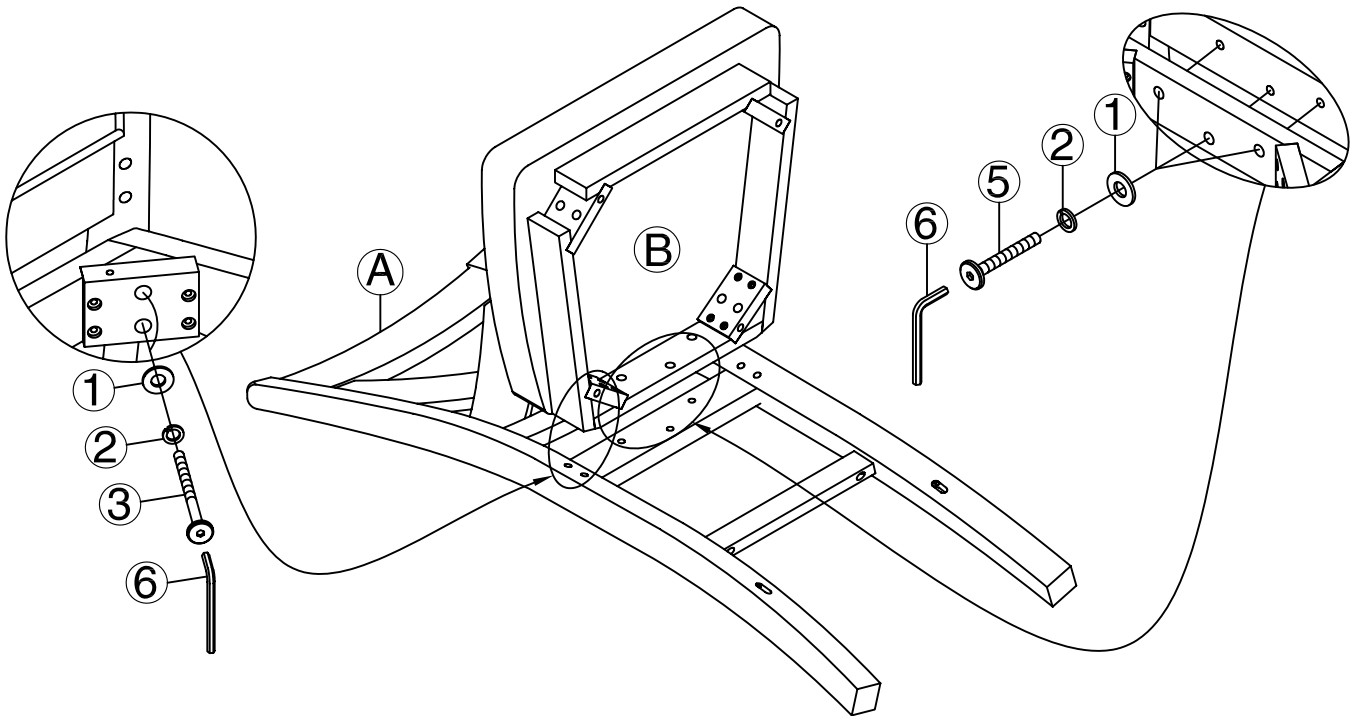
CP700CC

ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN SCREWS AND BOLTS UNTIL
THE ENTIRE ITEM IS COMPLETELY ASSEMBLED

STEP 1:

Place the Chair Back (A) upside down. Insert Flat Washer (1), Lock Washer (2), and Long Bolt (3) into the holes at corner of Seat Box w/ Seat Cushion (B). Attach Flat Washer (1), Lock Washer (2), and Short Bolt (5) into the holes at the rear bar of seat frame. Tighten with Allen Key (6). Do not fully tighten.




STEP 2:

Insert LSF/RSF Stretcher (F,G) to the Chair Back (A) by using Wood Screw (8), and secure with a Philip-head screwdriver (not provided).








Attach LSF/RSF Front Leg (C,D) to the Seat Box w/ Seat Cushion (B) by inserting Flat Washer (1), Lock Washer (2), Hex Nut (4) through bolts, and secure with Wrench (7).

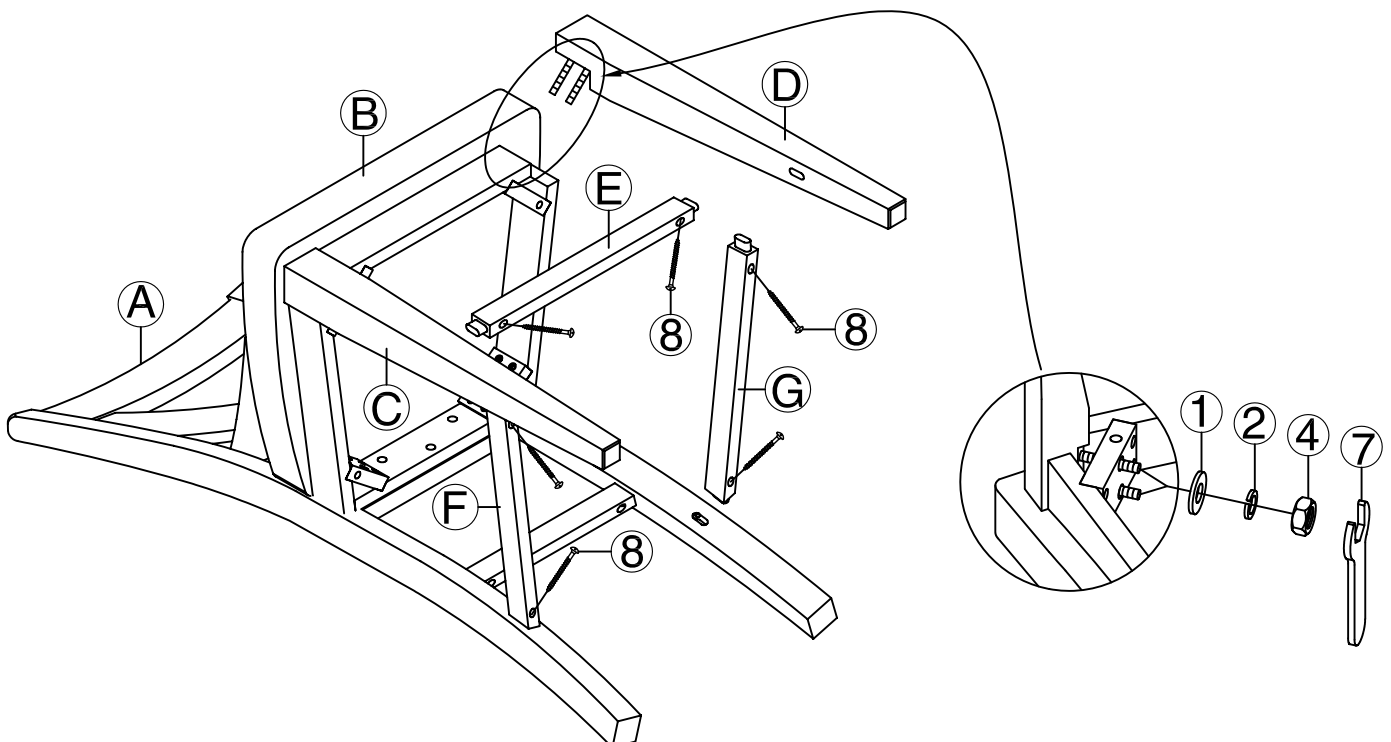Attach Front Stretcher (E) and the LSF/RSF Stretcher (F,G) to the LSF/RSF Front Leg (C,D) by using Wood Screw (8), and tighten with a Philip-head screwdriver (not provided).



PARTS LIST

  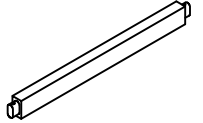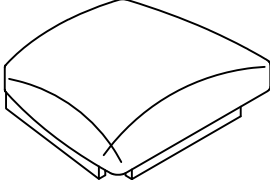 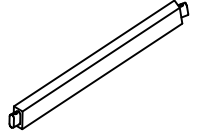 P. 3/4


A	CHAIR BACK (1PC)		D	RSF FRONT LEG (1PC)	
			E	FRONT STRETCHER (1PC)	
B	SEAT BOX w/ SEAT CUSHION (1PC)		F	LSF STRETCHER (1PC)	
			G	RSF STRETCHER (1PC)	
C	LSF FRONT LEG (1PC)				

HARDWARE PACK#: PCP700CCH

NO.	DESCRIPTION		DIMENSION	Q'TY
1	FLAT WASHER		φ5/16" x 19	11pcs
2	LOCK WASHER		φ5/16" x 12	11pcs
3	LONG BOLT		φ1/4" x 85	4pcs
4	HEX NUT		φ5/16" x 12	4pcs
5	SHORT BOLT		φ1/4" x 38	3pcs
6	ALLEN KEY		NO.4	1pc
7	WRENCH		NO.12	1pc
8	WOOD SCREW		φ8 x 50	6PCS

PARTS FOR CP700CC

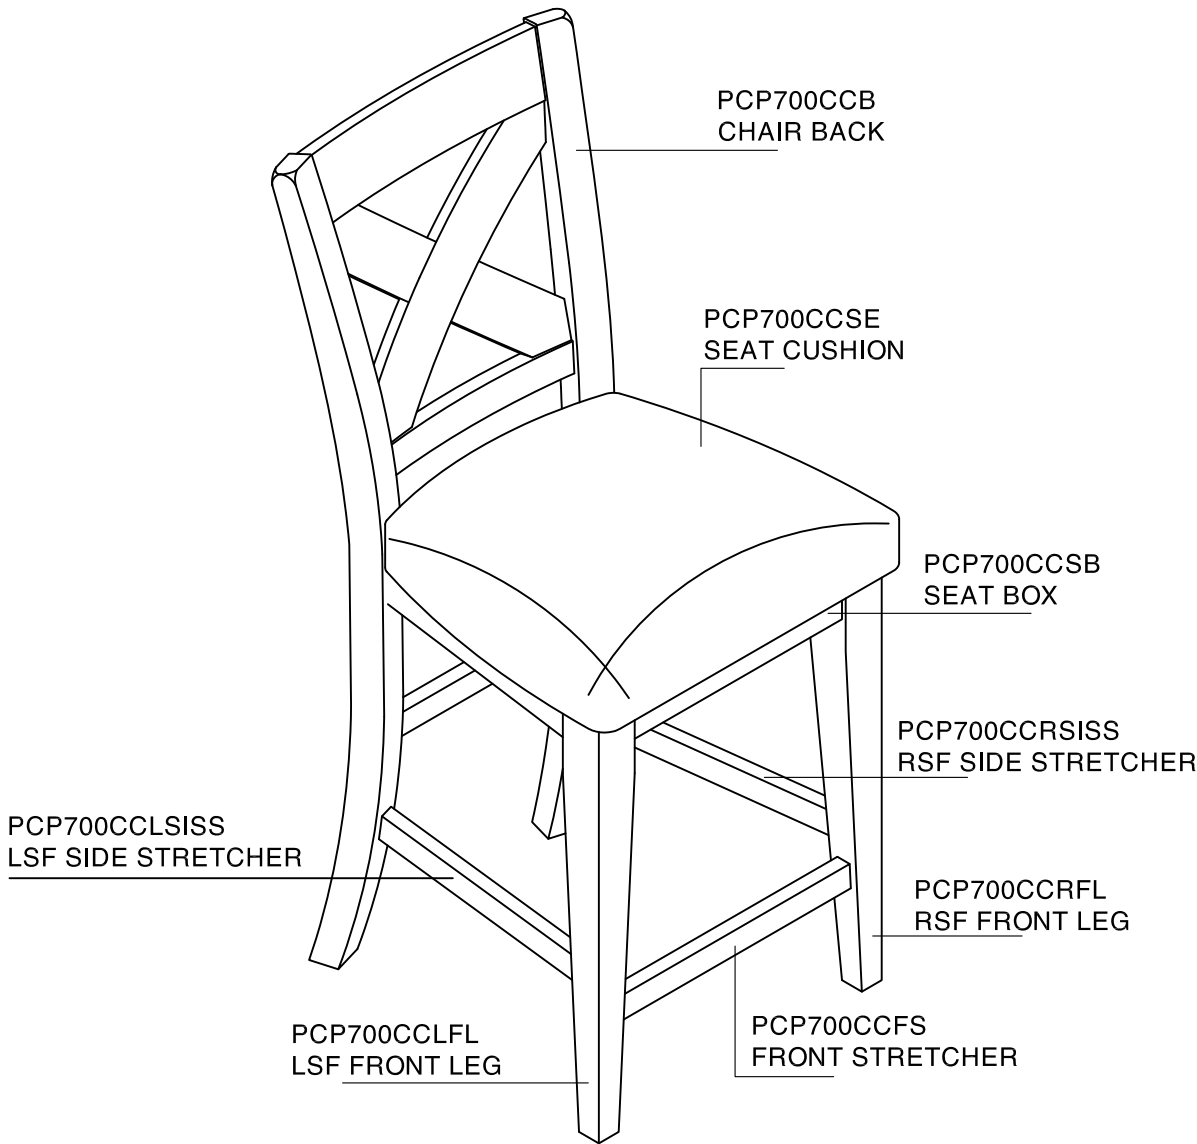COMPLETE HARDWARE # : PCP700CCH



FABRIC CONTENT: POLYESTER 100%

This fabric is not machine washable.

Allow +/-3% residual shrinkage.

Do not use cleaning products containing brightening agents.

PRODUCT DETAILS

SEAT BOX	RUBBERWOOD
CHAIR BACK	RUBBERWOOD & BENTWOOD
LEG	RUBBERWOOD
STRETCHER	RUBBERWOOD
PRODUCT SIZE	19-1/4" x 22-1/2" x 43-1/4"H
CARTON SIZE	44.88" x 19.69" x 12.8"
NET WEIGHT	47.4 LBS / 2pcs
GROSS WEIGHT	55.1 LBS / 2pcs
CU.FT.	6.54'

MADE IN VIETNAM