



USE WITH

BFTLPT-1016

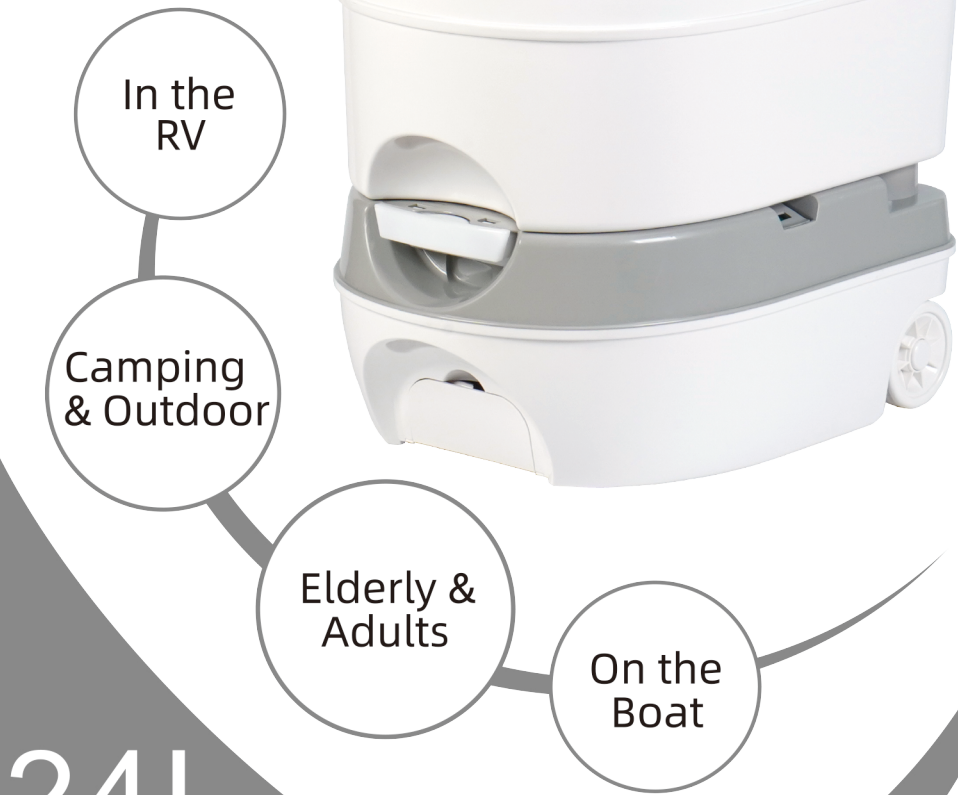

24L

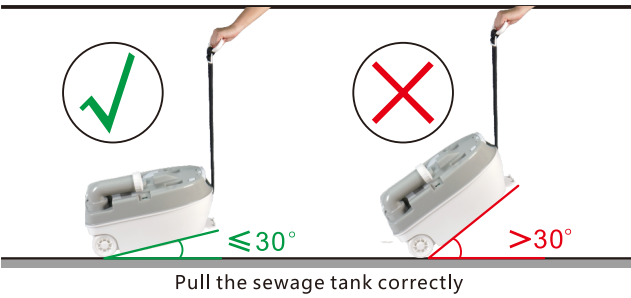

EASY TO USE



1.Open the cap of water holding tank, fill the fresh water.



2.Before use, press the button and pull out the slide valve at the same time, then open the seat cover.



3.After use, close the seat cover, pull up and press down piston pump one or more times to rinse thoroughly by water.



4.Close the slide valve by pushing fully for next use. When the water level of the waste holding tank exceeds 18L, the indicator will turn to red.

EASY TO CLEAN

HOW TO CLEAN



1.Keep the slide valve and seat cover closed.



2.Press the detached button to separate the water holding tank and waste holding tank.



3.Rotating the waste pipe, then remove the cap and pour waste into permanent toilet facility.



4.After adding fresh water or detergent, rinse repeatedly, then pour the rinse water into a permanent toilet facility.