


Assembly Instruction Sheet for Model HL733170

Package Contents

Part	Description	Quantity
A	Mounting Bracket	1 pc.
B	Arm Support Plate	1 pc.
C	Fixture Arm	multi pcs.
D	Central Column	1 pc.
E	Decorative Antler	multi pcs.
F	Mini Drum	1 pc.
G	Chain	1 pc.
H	Canopy	1 pc.

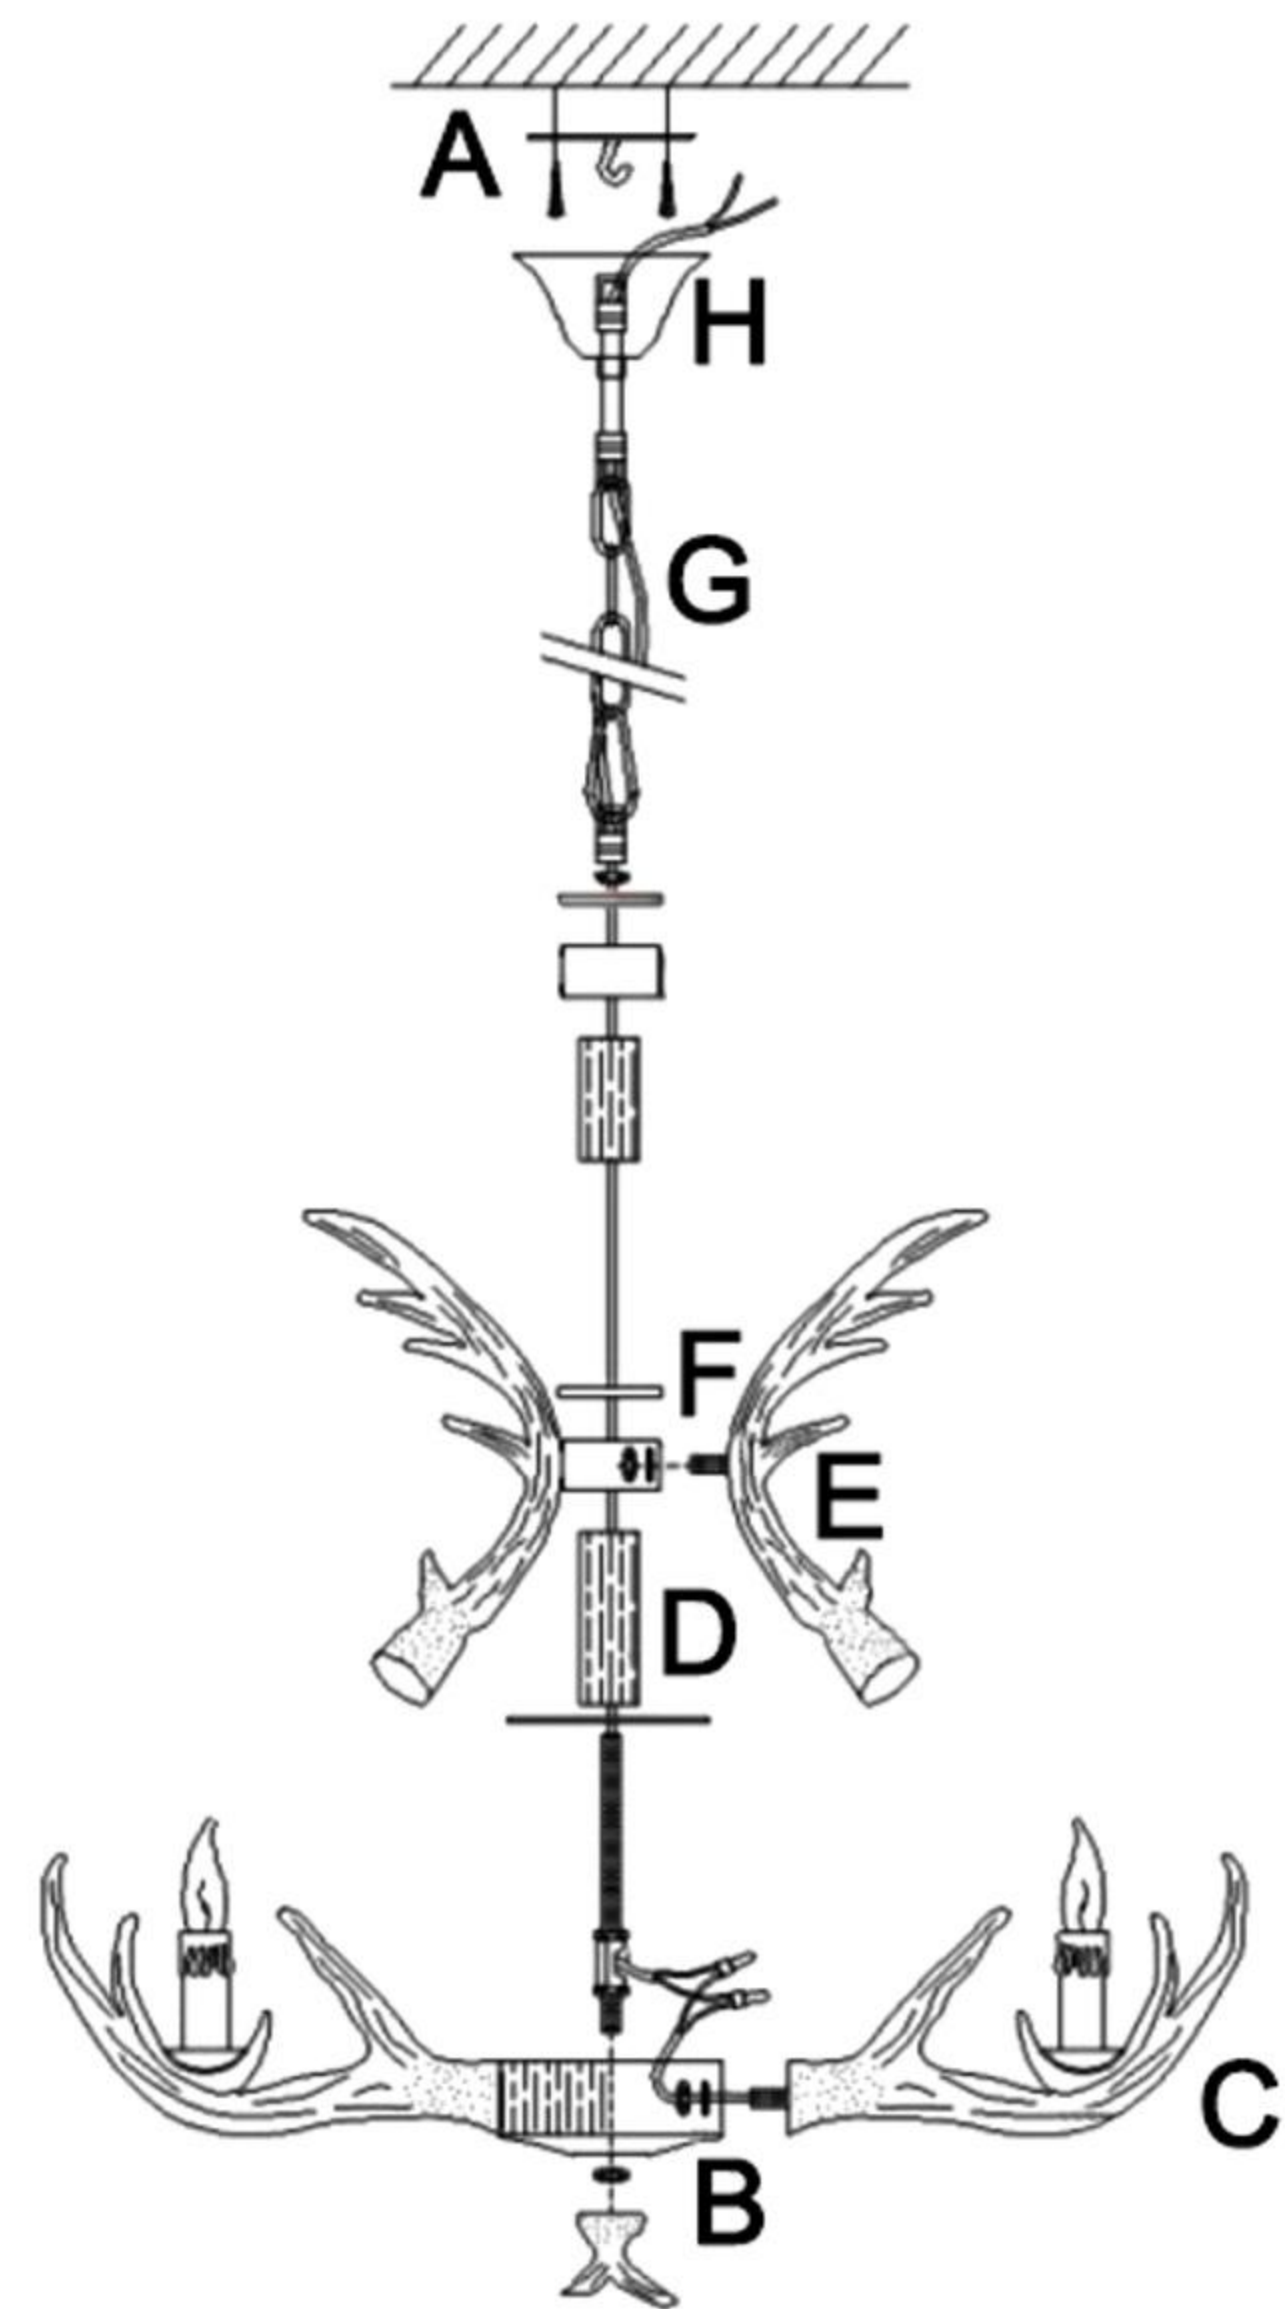

STEP 1

Mark the drilling position on ceiling with the help of the Mounting Bracket(A).
Drill holes on the marks and stick the expansion anchors into the holes.
Fix the Mounting Bracket(A) to the expansion anchors with self-tapping screws.

STEP 2

Remove the chassis of Arm Support Plate(B).
Thread the wire of Fixture Arm(C) to the Arm Support Plate(B),
and screw the Fixture Arm(C) to the Arm Support Plate(B).
Repeat the above step to fix the other Fixture Arms(C).

STEP 3

Connect wire color Blue/Red from the Arm Support Plate(B) as one strand of wire.
Connect wire color Black/White of Arm Support Plate(B) as the other strand.
Restore the chassis to the Arm Support Plate(B).

STEP 4

Thread the wire of Arm Support Plate(B) to the Central Column(D),
and fix the Central Column(D) to the Arm Support Plate(B).

STEP 5

Fix the Decorative Antler(E) to the Mini Drum(F) with screws.
Repeat the above step to fix the other Decorative Antlers(E).

STEP 6

Thread wire from the Central Column(D) through the Mini Drum(F) to the Chain(G),
and screw the Mini Drum(F) and the Chain(G) to the Central Column(D).
Thread wire of the Chain(G) to the Canopy(H), and attach the Chain(E) to the Canopy(H).

STEP 7

Hold the fixture close to ceiling.
Connect live line to wire color Blue/Red from the Canopy(H).
Connect neutral line to wire color White/Black from the Canopy(H).

STEP 8

Attach the Canopy(H) to the Mounting Bracket(A).

STEP 9

Install your bulb to the bulb base.

Your fixture is now assembled and ready to use.