

# Digital tube display LED Snow machine :

○	○	○	○
MANU	UP	DOWN	ENTER
	snow/flash	snow	confirm

LCD display code

A	1-512	DMX address
P	1-100	spray the snow
R	0-255	red、light1-255 can adjust
G	0-255	green、light1-255 can adjust
B	0-255	blue、light1-255 can adjust
----		standby

1.press the UP/DOWN button, spray the snow and LED lights up, color gradient. Press the DOWN button, only spray the snow.

2. snow adjust: press the menu display P, then press the UP/DOWN button , 1-100range adjust, press the confirm to Preservation

3.DMX: press the menu display A, then press the UP/DOWN button , 1-512range adjust, press the confirm to Preservation

4: press the menu display R, then press the UP/DOWN button , 1-255range adjust the red light, press the confirm to Preservation

5: press the menu display G, then press the UP/DOWN button ,

1-255range adjust the green light, press the confirm to Preservation

6: press the menu display B, then press the UP/DOWN button ,

1-255range adjust the blue light, press the confirm to Preservation

## 6.wireless remote :

1. Press A key to spray snowflakes and light up (LED walking)

2.Press B to spray snowflake (only snowflake, no light)

7.DMX: automatically takes priority over DMX. Other functions are invalid when DMX is available.

Press the menu key and then press up or down to set the address code, and press “ENTER” to save.

## DMX channels:

1. Snowflake spray (snowflake adjustable)

2. Snowflake spray (working at full capacity)

3. R-LED

4. G-LED

5. B-LED

6. Fast and slow flash (brightness is controlled by R, G and B)

7. LED three-segment functional mode:

(10 - 99) The gradient、(100 - 199) jump、(200 - 255) Pulse variable.

8. LED multifunction mode speed.