


A361-34 MASSAGE CHAIR

OPERATION INSTRUCTIONS

SAVE THESE INSTRUCTIONS

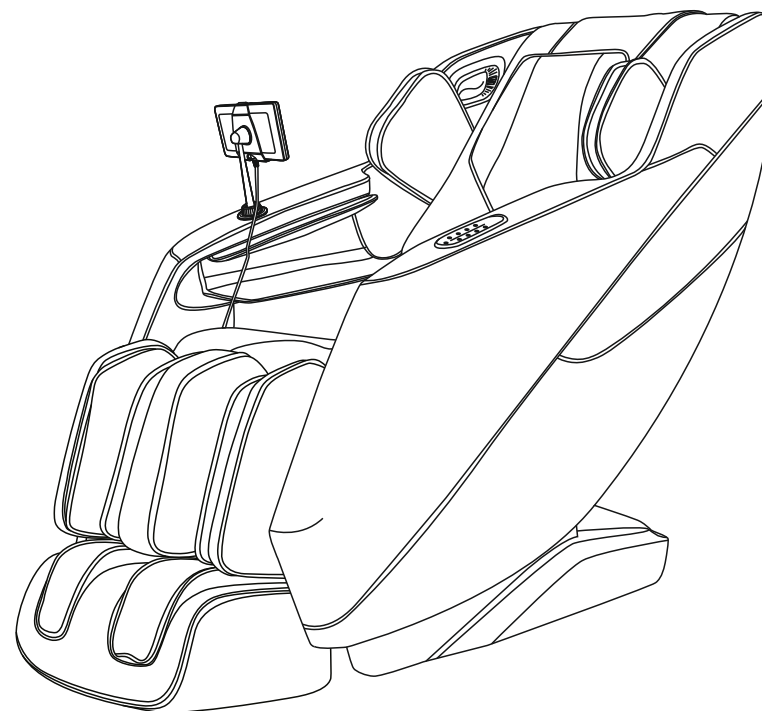

Thanks for purchasing this product. Please read this instruction manual carefully in order to know how to use this product correctly before operating it. Please pay more attention to some important safety warnings and keep this manual book properly for future use.

Note: Our company reserves the right to change and explain the design of the product. If there is some difference between the product function in the market and the description in the manual, it is a regular product update, and our company will not provide further notice. The specific product function and color may vary.

CONTENTS

Before Use

Safety Precautions	02-04
Installation Parts	05
Massage Chair Placement	06-07
Before Use	08-09
Product Structure	10-15

Usage Method

Operation Instructions	16-20
------------------------	-------

Maintain

Cleaning and Maintenance	21
--------------------------	----

Important

Troubleshooting	22
Product Specifications	23

Safety Precautions (must be observed)

- Please read all relevant instructions carefully before use.
- The notes marked here will help you to use the product safely and correctly.
- In order to clearly indicate the extent of harm and damage, precautions are divided into **"Warning"** and **"Caution"** that may be caused by incorrect use. Both of them are important for safety and must be followed.

 Warning	Indicates that serious injury or death may result from improper use.
 Caution	Indicates that misuse may cause minor injury or property damage.

- Please pay attention to the symbol before each safety item.

 Forbidden	Absolute prohibition
--	----------------------

The following persons should not use this product	
 Forbidden	■ The device is not intended for use by persons (including children) with physical disabilities, sensory or neurological impairments or who lack experience and common sense, unless they are supervised and instructed in the use of the device by those responsible for their safety. Children must be supervised to ensure they do not play with instruments. ■ Patients with osteoporosis. ■ Patients with heart disease or wearing electronic medical devices such as a pacemaker. ■ People who have a fever. ■ Pregnant women or women on their menstrual period. ■ Patients who are injured or have a skin disease. ■ When unsupervised, any children are under the age of 14 and those unconscious are not allowed to use this product. ■ People who are told by their physicians to have rest or who feel unwell. ■ People whose bodies are wet are forbidden to use this product. ■ This product has a hot surface. Persons insensitive to heat must pay attention when using this product. ■ If the supply cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or similar department

Safety Precautions (must be observed)

Important safety warnings	
 Warnings	■ Do not allow children to touch any movable part of this product. ■ Use the well-grounded power supply unit suitable for this product. ■ Pull out the plug after use or before cleaning to avoid any physical injury or damage to the product. ■ Operate this product as instructed in this manual. ■ Do not use any parts or accessories that are not recommended. ■ Do not use this product outdoors. ■ Please read the Operation Instructions carefully before operation. ■ Never use this product for any other purpose not listed herein. ■ 20 minutes of usage each time is recommended. ■ Do not use this product if the cover or leather is broken or damaged. ■ Do not drop anything into this product. ■ Never fall asleep while using this product. ■ Do not use this product if you are drunk or feel unwell. ■ Do not use this product within one hour after a meal. ■ Do not use this product with excessive force to avoid any injury.

Safety precautions	
 Caution	■ Check whether voltage is consistent with the specification of this product. ■ Never insert or pull out the plug with a wet hand. ■ Do not let water flow into this product to avoid electric shock or cause damage to this product. ■ Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden. ■ Do not damage the wire or modify the circuit of this product. ■ Do not clean live parts of this product with a wet cloth such as a power switch and plug. ■ Stay away from this product in case of power failure to avoid any injury if power is restored suddenly. ■ Stop using this product immediately if it malfunctions, and consult your local supplier. ■ Stop using this product if you feel unwell, and consult your healthcare practitioner.

Storage conditions	
 Caution	■ Storage room temperature: 5 °C to 40 °C. ■ Relative humidity (RH) should be between 20% and 80% The storage room should be free of corrosive gases and well-ventilated.

Safety Precautions (must be observed)





Product service and maintenance	
Caution	■ This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission. ■ Do not forget to turn off the main power switch after usage. ■ Do not use this product if the power socket becomes loose. ■ If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment. ■ Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine. ■ Please clean this product with dry cloth. Never use thinner, benzene or alcohol. ■ The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed. ■ Do not use a sharp object to stab at this product. ■ Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving. ■ Please use this product intermittently. Do not keep it working continuously for a long period of time.
Operating environment	
Caution	■ Do not use this product in a very moist environment such as the bathroom. ■ Stop using this product immediately when the ambient temperature changes sharply. ■ Do not use this product in any heavily-dusty or caustic environment. ■ Do not use this product in a small space or a place without good ventilation.
Solutions to ordinary malfunctions	
Caution	■ If the motor sounds during operation of this product, this is the normal operation sound. ■ If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on. ■ If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.

Installation Parts

Instructions for the Calf Component

1. Insert the lower leg's wire and air tube into the corresponding slots at the front end of the steel frame assembly (Figure 1).
2. Then, push the connected wire and air tube into the backrest frame hole (Figure 2).
3. Once the wires are connected, open the two side covers on the steel frame assembly (Figure 3).
4. Lift the lower leg and place it into the slot, then close the cover and secure it in place using two screws (Figure 4).

Note: For integrated installation, you can skip this step.

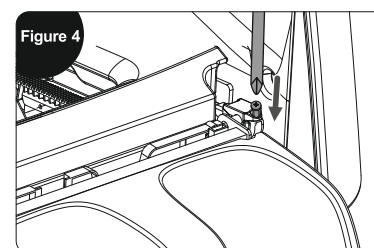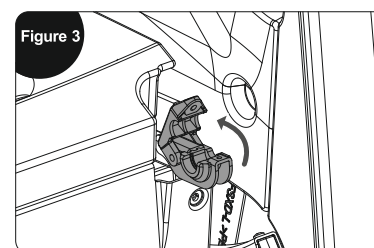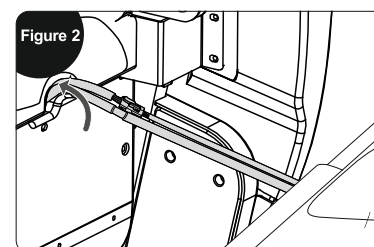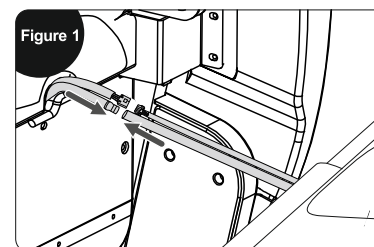


Massage Chair Placement

Installation placement

Make sure there is enough space for the massage chair can be tilted at least 30 cm.


Do not expose the massage chair directly to high temperature environment due to sunlight (such as: in front of heating equipment), and place it to where can avoid high temperature and direct sunlight. It is recommended to lay a soft cushion for long-term use in a designated location. When laying the cushion, the size of the cushion should be enough to cover. Keep the range where the machine touches the floor and the range where your feet touch the floor.

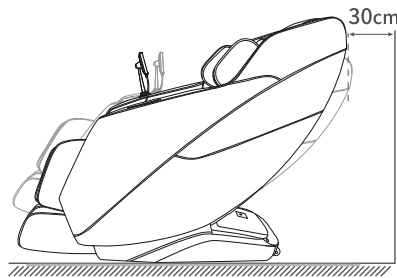

Product lift instruction

Require team work to lift and move the chair to avoid injury.

1. Please lift the massage chair to move it on vulnerable ground such as wooden floor.
2. When moving on a similar wooden floor, it is recommended to lift it. Avoid damage to the casters. When the floor is lifted and moved to the designated position, be careful to keep your hands out of the way to avoid injury, and be careful of your feet being crushed. Do not let go of the unit until the unit is completely flat, the floor may be damaged, therefore, it is recommended to place mats, etc. on the floor.

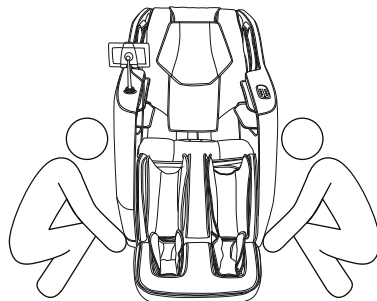


Massage Chair Placement

Move method

Moving Method: Use the rear wheels to move the massage chair. As shown in the diagram, tilt the chair approximately 45° backward for movement.

Caution: When pressing down the massage chair, avoid excessive tilting to prevent the chair from fully tipping over and causing damage to the product



1. Ensure proper shutdown before moving. Disconnect the power supply after the backrest and calf mechanism are fully reset.
2. Keep the product clear of people, pets, or objects during movement.
3. Avoid crossing obstacles higher than 0.08 inches or gaps larger than 0.2 inches while using the wheels for movement.
4. Limit continuous movement to a distance of 160 feet or less, moving the product at a slow and steady pace.

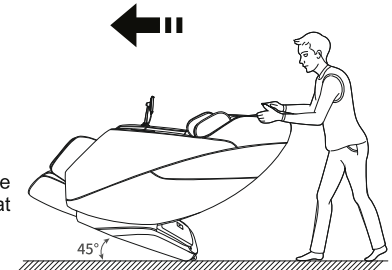

Headrest and Back Cushion Assembly and Usage Instructions:

Using the headrest can reduce the intensity of the neck and shoulder kneading massage. You can decide whether to use it based on your preference (we recommend using the headrest).


The back cushion is connected to the massage chair via a zipper (1), and the headrest is connected to the back cushion through a zipper (2).

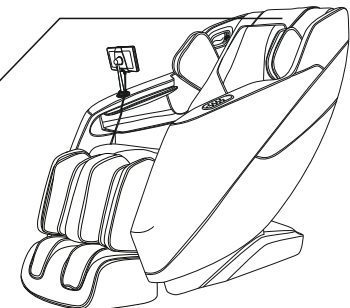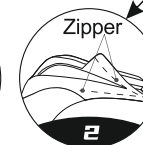

Before use


Check around

Ensure there are no people, pets, or other objects around the product.

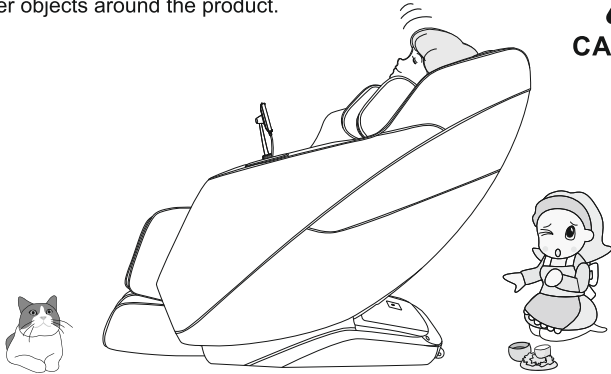

Ensure there are no other objects in the gaps of the product.

Before starting the massage, ensure that there are no items trapped between the calf and foot areas. Avoid inserting hands, feet, or head into the space between the calf components and the main body, as well as the space between the armrests and the cabin. Do not insert hands, feet, or head into the fabric or leather covering of the massage area under any circumstances.

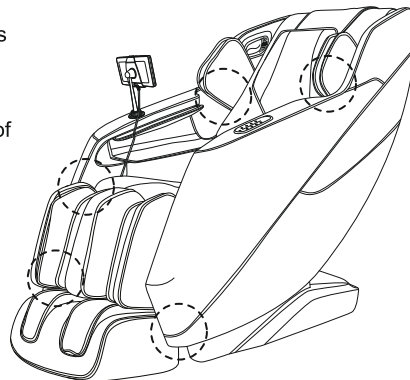


Before Use


Turn on the power




Plug in power cord

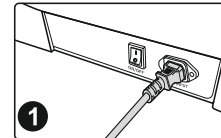

Schematic diagram of power on

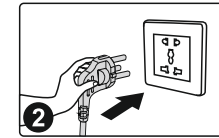


Turn on the power switch ("I" position)

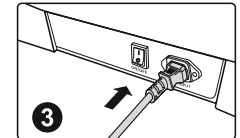

- Please check whether the power cord and power plug are damaged before use.
- Please supply power to this product in accordance with the working power requirements of this product's calibration.
- It is strictly forbidden to use a power supply other than the nominal power supply of this product.
- It is strictly forbidden to connect various power conversion devices to supply power to this product without authorization.


Product Structure

Parts description

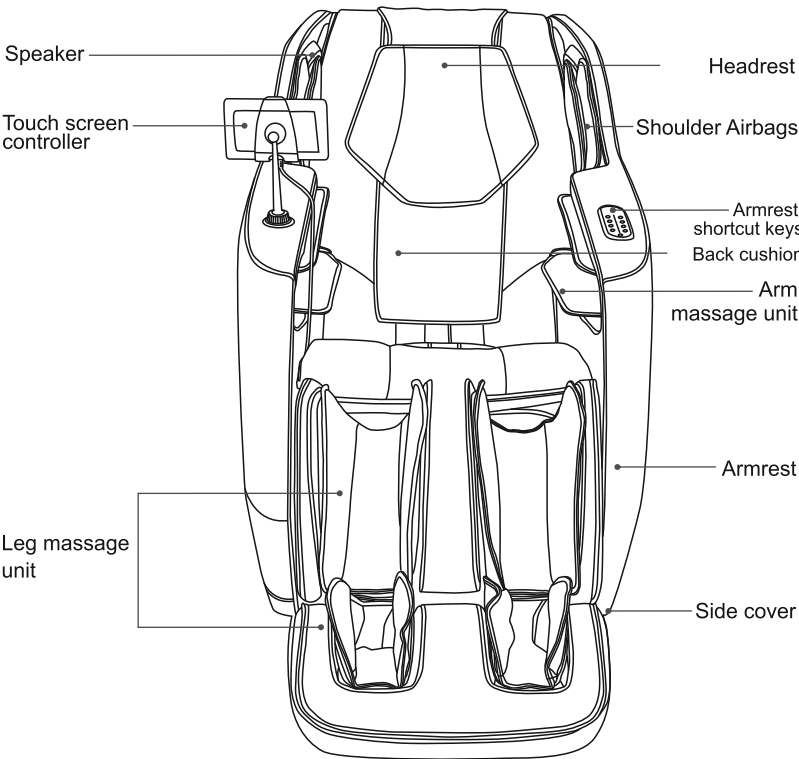


Product Structure

Function distribution

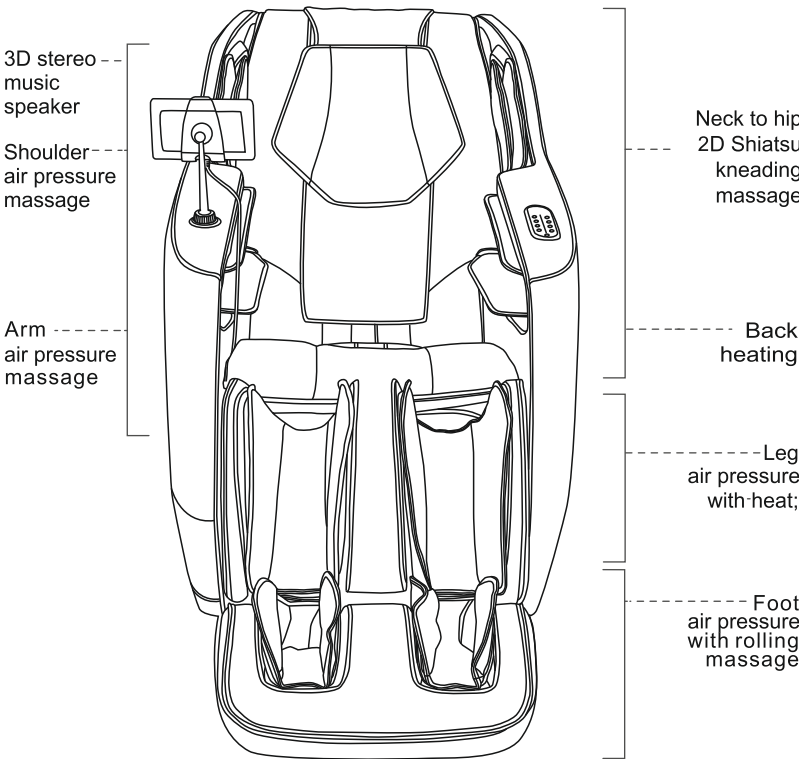

Product Structure

I .Hand Controller Button Instructions:

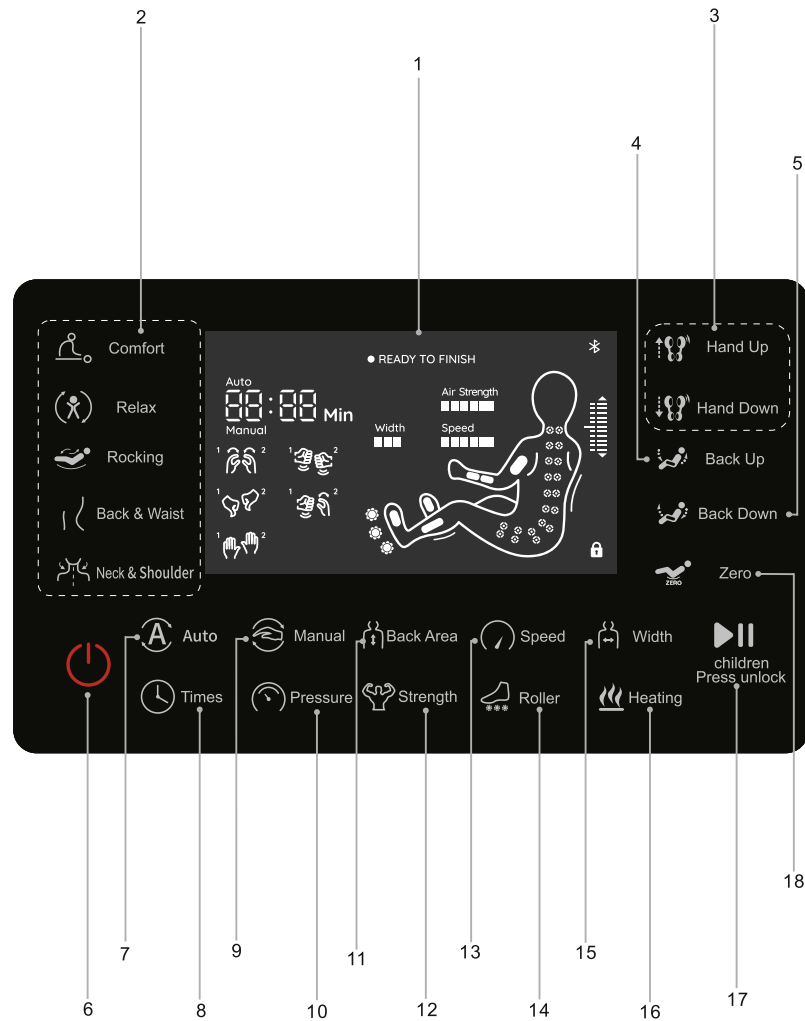

Product Structure

1.LCD Display:

- Shows all massage functions.

2.Auto Massage Button:

- Refer to page 17 for detailed instructions.

3.Mechanism Adjustment Button:

- Adjusts the massage pressure points for the shoulder area. Massage position adjustment (in fixed point or partial mode).

4.Rise Button:

- Adjusts the backrest to rise.

5.Recline Button:

- Adjusts the backrest to recline.

6.Power On/Off Button:

- Turns the massage chair on or off.

7.Auto Programs Button:

- There are 7 kinds of massage procedures, please refer to page 11 of this manual for details.

8.Timer Button:

- Adjusts the timer settings. Refer to page 20 for details.

9.Manual Massage Button:

- Refer to page 18 for details.

10.Air Pressure Zone Button:

- Adjusts the air pressure massage zones. Refer to page 18 for details.

11.Massage Area Button:

- Adjusts the massage area. Refer to page 18 for details.

12.Air Pressure Intensity Button:

- Adjusts the intensity of the air pressure massage. There are five levels.

13.Massage Speed Button:

- Adjusts the massage speed. There are five levels.

14.Foot Roller Button:

- Refer to page 18 for details.

15.Width Adjustment Button:

- Adjusts the width. There are three levels.

16.Heating Button:

- Turns the heating on or off.

17.Pause/Start/Child Lock Button:


- Refer to page 19 for details.

18.Zero Gravity Adjustment Button:

- There are four automatic reclining angles to choose from, suitable for individual preferences.

Product Structure

II. Armrest Shortcut Button Instructions:

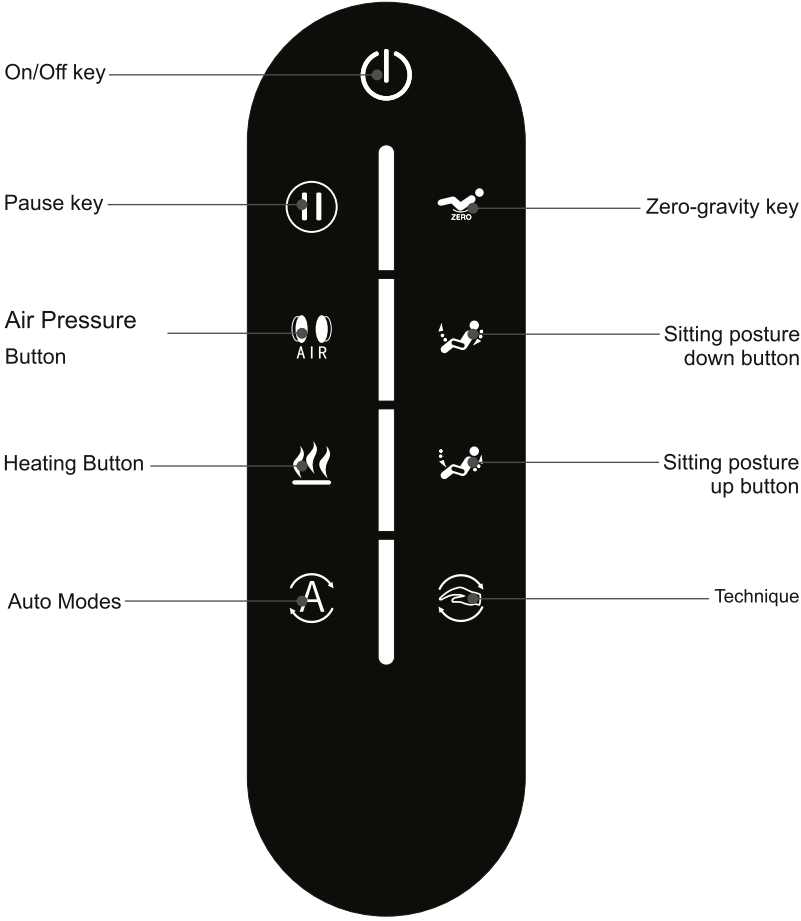

Product Structure


Function	Description
	Power On/Off Button: Short press this button to turn the armrest functions on or off.
	Pause Button: During the massage, press this button to pause all massage actions. Press it again to resume the massage from where it was paused.
	Air pressure key: press this button to switch the air pressure mode
	Heating Button: Press this button to turn the heating function on or off.
	Auto Mode Button: Short press this button to switch between different automatic massage modes.
	Zero Gravity Button: Adjust the massage chair to the zero gravity position.
	Back Down Button: Adjust the seating position to lower.
	Back Up Button: Adjust the seating position to raise.
	Techniques Button: Refer to page 18 for more details.

Operation Instructions

III. To Start the Massage:

- ① Press the Power On/Off Button to start the massage. The default mode is Comfort Massage.
 - ② The massage chair will automatically adjust its angles.
 - ③ The massage chair will automatically detect the position of your shoulders. Please ensure you are sitting comfortably in the chair.
 - ④ Shoulder Position Adjustment: If the detected position is not accurate, use the Massage Mechanism Adjustment Up/Down Buttons to adjust the position to your preference. There are 10 levels of shoulder position adjustment. If there is no operation within 10 seconds, the massage function will start automatically.
- Note: During the startup process, you can select an automatic massage mode. Repeatedly selecting the same automatic mode will skip the startup process and directly activate the massage.

Button	Description	Display
 Hand Up	Move the massage balls upward to a suitable position	
 Hand Down	Move the massage balls downward to a suitable position	

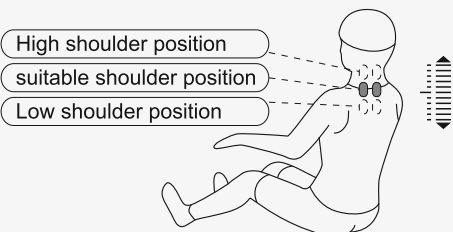

The diagram illustrates the shoulder position adjustment process. It shows a person sitting in a chair with their back to the viewer. Three horizontal dashed lines indicate different shoulder positions: 'High shoulder position' (top), 'suitable shoulder position' (middle), and 'Low shoulder position' (bottom). A vertical double-headed arrow to the right of the person indicates the range of adjustment.

Operation Instructions

· Automatic massage

Function	Button	Description	Display
Automatic massage	 Comfort	Comfort Massage: Most comfortable massage experience.	Auto 01
	 Relax	Relaxing Massage: Gentle and soothing deep massage to relieve body fatigue and promote relaxation.	Auto 02
	 Rocking	Rocking Massage: Imitates a rocking chair for relaxation and better sleep.	Auto 03
	 Back & Waist	Back and Waist Massage: Focuses on the back and waist area.	Auto 04
	 Neck & Shoulder	Shoulder and Neck Massage: Targets shoulders and neck for relief.	Auto 05
	 Auto	Full Body Massage: Invigorating massage for the whole body.	Auto 06
		Spine Care Massage: Emphasizes spinal relaxation.	Auto 07
		Fatigue Recovery: Relieves fatigue and improves microcirculation.	Auto 08
		Meridian Relaxation: Promotes meridian balance and enhances the immune system.	Auto 09
		Sitting Comfort: Reduces excess fat accumulation in hips and thighs.	Auto 10
		Soothing Sleep: Improves sleep quality through acupoint massage.	Auto 11
		Leisure Health: Combats sedentary lifestyle by improving body functions.	Auto 12

Operation Instructions

· Upper body manual massage

Function	Button	Massage ball adjustmeet	Display
Technique	 Manual	Knead: Speed.	
		Beat: Speed, width.	
		Knead pat: Speed.	
		Shiatsu: Speed, width.	
		Knock: Speed, width.	
Speed	 Speed	5 speed adjustable.	Speed 
Width	 Width	The width of the third gear can be adjusted.	Width 
Back stretch	 Back Area	Fixed position point massage.	H1 Manual
		Small area local round trip massage.	H2 Manual
		A round trip massage.	H3 Manual
		Upper Back: A round-trip massage on the upper back.	H4 Manual
		Lower Back: A round-trip massage for the lower back.	H5 Manual
	 Hand Up	Message Position Adjustment: (In fixed point/local mode, you can adjust the massage position).	The massage mechanism moves upward.
	 Hand Down		The massage mechanism moves downward.

· Pneumatic massage

Function	Button	Description	Display
Air pressure mode	 Pressure	Full Body Air Compression Massage: Provides air compression massage for the arms, shoulders, legs, and feet.	
		Upper Body: Focuses on air compression massage for the arms and shoulders.	
		Lower Body: Focuses on air compression massage for the legs and feet	
Leg: Barometric	 Strength	5 levels of strength can be adjusted.	Air Strength 

· Foot roller massage

Function	Button	Description	Display
Foot roller	 Roller	Press this button to activate or deactivate the foot roller massage. It has four modes that can be cycled through: Off, Weak, Medium, and Strong.	

Operation Instructions

· Heated massage

Function	Button	Description	Display
Heat	 Heating	Press this button to activate or deactivate the back and calf heating function. After 3 minutes of activation, you will experience a warm sensation.	

· Pause/start massage button

Function	Button	Description	Display
Pause/start	 Children Press unlock	Press this button during the massage to instantly pause all massage actions. Press it again to resume the massage from where it was paused. If the pause duration exceeds 20 minutes, the massage chair will automatically shut down.	
Child Lock		Press and hold the Child Lock button for 3 seconds to lock the massage chair. The "🔒" symbol will appear on the display, and all other buttons will be disabled. To unlock the chair, long press the Child Lock button again for 3 seconds, and the "🔒" symbol will disappear from the display, restoring normal button functions.	

· Adjust lying angle

Function	Button	Description
Sit up	 Back Up	Sit-up Button: Press and hold to raise the backrest and lower the calf rest slowly with a "beep... beep..." sound until it stops at the top position. Release the button to stop the sit-up process instantly.
Lay down key	 Back Down	Recline Button: Press and hold to lower the backrest and raise the calf rest gradually with a "beep... beep..." sound until it stops at the bottom position. Release the button to stop the recline process immediately.
Lie down automatically	 Zero	Zero Gravity: Each press switches to a different automatic recline mode, with a total of four modes that cycle continuously.

Operation Instructions

• Other manual functions


Function	Button	Description	Display
Timing		Default timer: 20 minutes. Each press adds 5 minutes, up to 30 minutes max. After 30 minutes, it cycles back to 5 minutes with each press.	20min

IV. Bluetooth Speaker Operation Instructions:


1. Enter the smart device main menu, Open "Settings" and select the "Bluetooth" options. Open "Bluetooth", and Bluetooth will automatically "Search for a New Bluetooth Device".
2. The smart device will search for the corresponding Bluetooth model (e.g. IMCM-XXXX), Click the "Match" button, if you are asked whether to match with the device, you just select "Match" to complete matching.
3. Turn on "Music Player" in the smart device and select the song to play.

V. Ending the Massage:


1. During the massage, press the power button on the remote control to immediately deactivate all massage functions, and the massage chair will reset to its initial position.
When the massage timer reaches the set time, all massage functions will automatically shut off. The massage chair will remain in its current position and not reset. To reset the chair, press the power button.
 2. To completely turn off the massage chair, cut off the power supply as shown in the illustration (Power Supply Cut-off Diagram).
- Note: Please refer to the provided illustration for the power supply cut-off procedure.

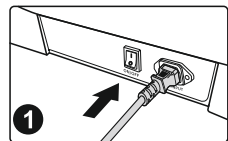

Power off ("0" position)

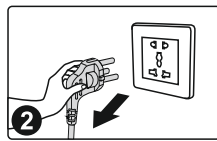

Take off the power plug

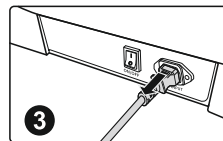

Take off the product power cable.

Cleaning and Maintenance

Clean PU leather and plastic parts

Wipe the leather with a soft, dry cloth.

- Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.
- When using commercially available leather care products (rags), please follow the instructions for use.

- If the PU leather is particularly dirty, wipe it by the following methods.

- ① Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.
- ② Use the above soft cloth to wipe the leather surface.
- ③ Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.
- ④ Wipe with a wrung soft cloth.
- ⑤ Let it air dry naturally.


- When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.

- Do not use a hair dryer to dry the surface.

- As the color of the fabric will stain the surface of the PU leather, be careful when wiping the chair with denim and colored fabrics.

- Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.

- PU leather may be discolored, so when using hair dye, please cover the touched part with a towel.

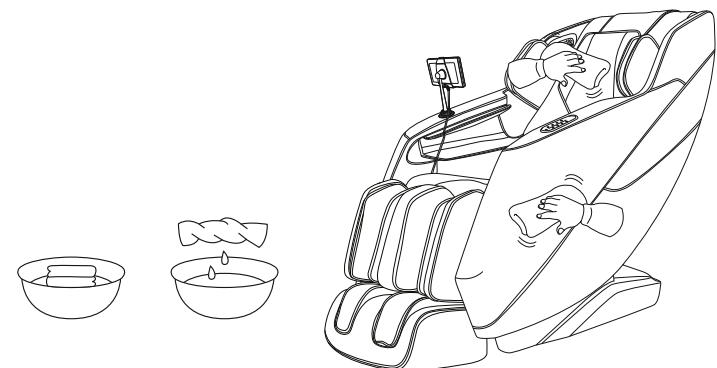

Troubleshooting

Fault	When the calf mechanism or the backrest reaches a certain position, press the corresponding adjustment button and it will no longer change, and a continuous "beep, beep" sound will be emitted.
Solution	Due to product structure design and ergonomic requirements, this product has a limited protection design for the limit state of attitude adjustment. At the same time, a reminder sound will sound when the limit is reached.
Fault	The function does not work or some functions do not work after the machine is turned on.
Solution	After the machine is turned on by pressing the switch key, it is necessary to manually select an automatic massage program or other working state. If it is not operated, the machine will automatically shut down after 20 minutes. If the manual operation mode is selected, the functions that are not selected may be disabled, and the working mode needs to be manually set in the manual mode.
Fault	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials, there will be a normal slight noise when rubbing at the relative movement, which is a normal phenomenon. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.
Fault	The massage wheel did not reach the shoulders or neck.
Solution	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.
Fault	The unit is damaged. The power cord or power plug is abnormally hot.
Solution	To prevent accidents, be sure to contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or doubts about this product.

Product Specifications

Model: A361
 Configure:34
 Name: Massage Chair
 Rated voltage: 110-120V~ 60Hz
 Rated power: 100W
 Rated time: 20min
 Safety structure: Class I

Material description: PVC, PA, steel parts, electric and electron components

MATERIAL	PU	LEATHER	CLOTH	WOOD