


正面


210X285MM



## Assembly Instructions

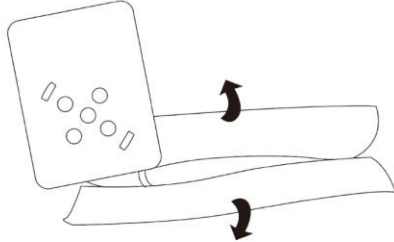

Tear off the bottom velcro and take out the battery.

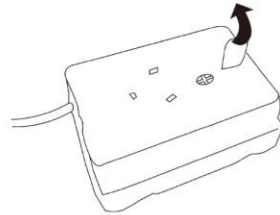

Remove the safe plastic on battery.



Press the mark on animal hand, then it will make noise.

ADULT SUPERVISION IS RECOMMENDED  
REMOVE ALL PLASTIC  
FASTENERS AND HANG TAGS  
BEFORE GIVING TOY TO CHILD.  
THESE ATTACHMENTS ARE  
NOT PART OF THE TOY.  
COLORS AND CONTENTS MAY VARY  
RATIONS

### FOR BEST PERFORMANCE:

- Use only the batteries recommended.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix new and used batteries together.
- Remove batteries when toy is not in use.
- Remove exhausted batteries from toy and dispose of in accordance with the battery manufacturer's recommendation.
- Do not attempt to recharge non-rechargeable batteries.
- Do not use rechargeable batteries.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.

### ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

Max weight 60kg.

**ATTENTION:** The batteries included in this item are intended for in-store use.

It is possible that these batteries may become weak or discharged prior to purchase and the customer may need to replace the batteries with fresh cells to insure proper operation.

Contact us!

We are here to help!

customerservice@aosom.com or 1-877-644-9366

### WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

反面

210X285MM

## Assembly Instructions

**WARNING: THIS TOY MUST BE ASSEMBLED BY AN ADULT.**

### LIST OF PARTS:

1. TOYS	1 PC
2. WOODEN ROCKER	1 PC
3. WOODEN HANDLES	2 PCS
4. WASHER RINGS	4 PCS
5. WING NUTS	4 PCS

### ASSEMBLY INSTRUCTIONS

**STEP 1:**  
INSERT THE ATTACHED SCREWS UNDER THE TOYS LEGS INTO THE HOLES ON THE WOODEN ROCKER.

**STEP 2:**  
PLACE THE WASHER RINGS AND WING NUTS ON THE SCREWS AND TIGHTEN BY HAND.

**STEP 3:**  
SCREW IN THE TWO HANDLES INTO THE HOLES LOCATED ON THE NECK OF THE TOYS.

**FOR EXAMPLE:**

