
Assembly Instruction

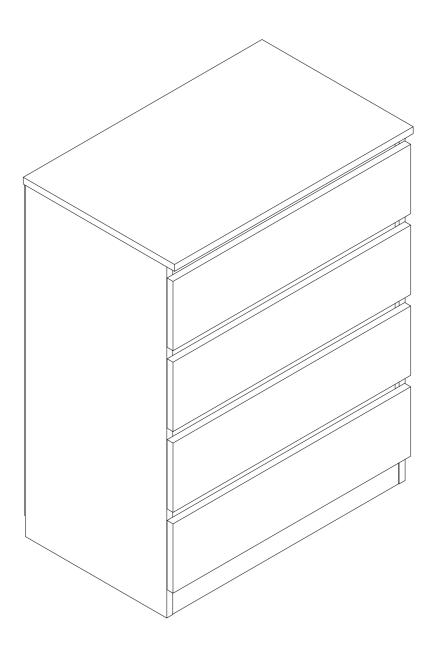

WARNING!


Children have died from furniture tipover. Fixed wall device have been included with this product; you must install the fixed wall device according to these instructions in order to minimize the risk of furniture. If you have any questions about this product or the Fixed wall device, please contact us immediately.

Never allow children to climb or hang on furniture, including drawers or cabiner doors.


In addition to installing the restrains, to help prevent tip-over.

- 1. Never put a TV or other heavy objects on top of this product.
- 2. Do not stand on the product.




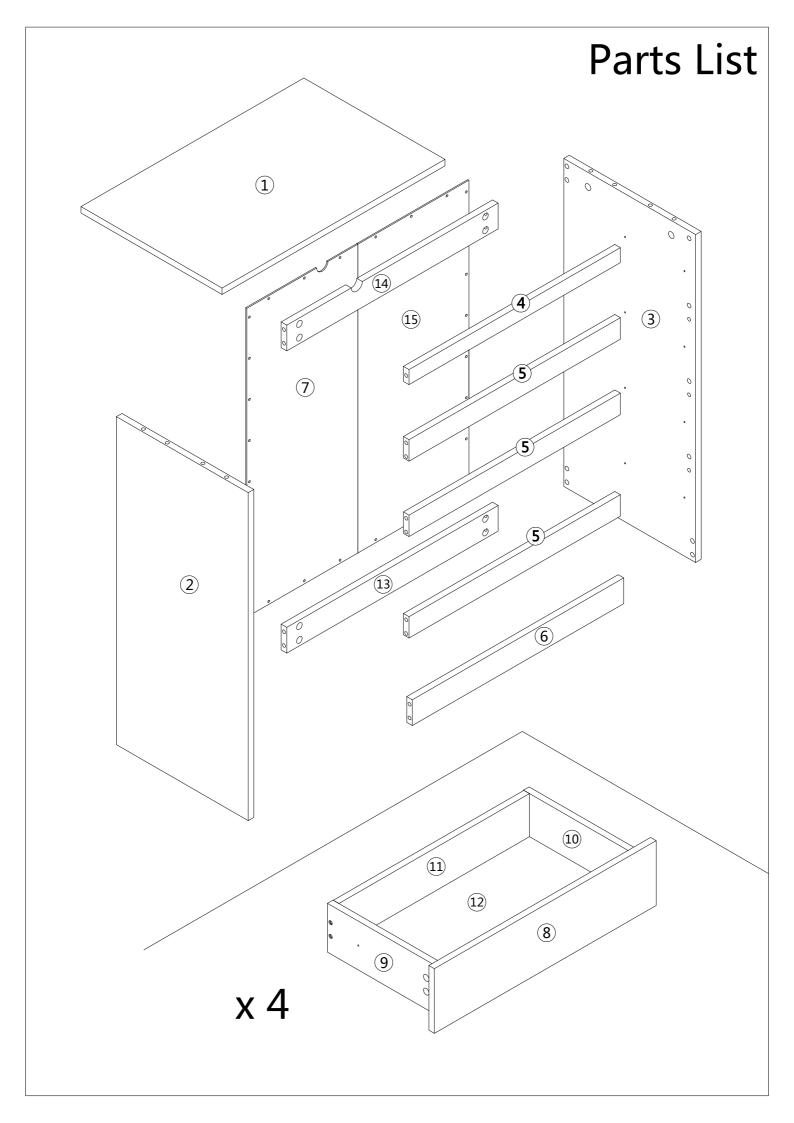

Parts List

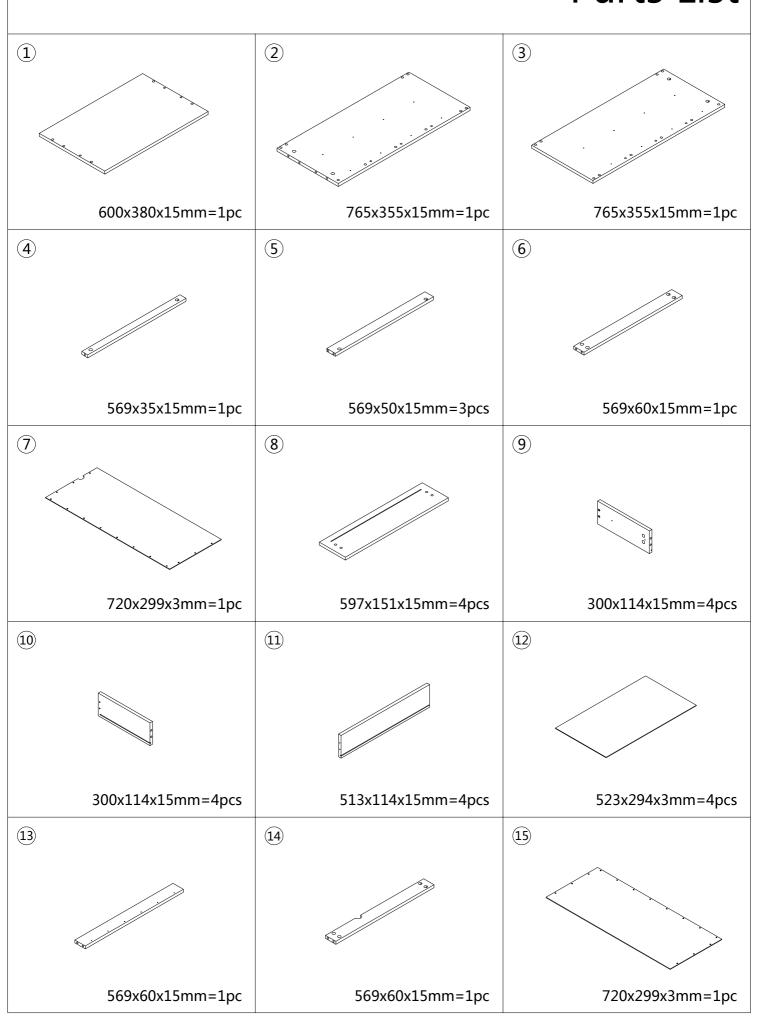


Hardware

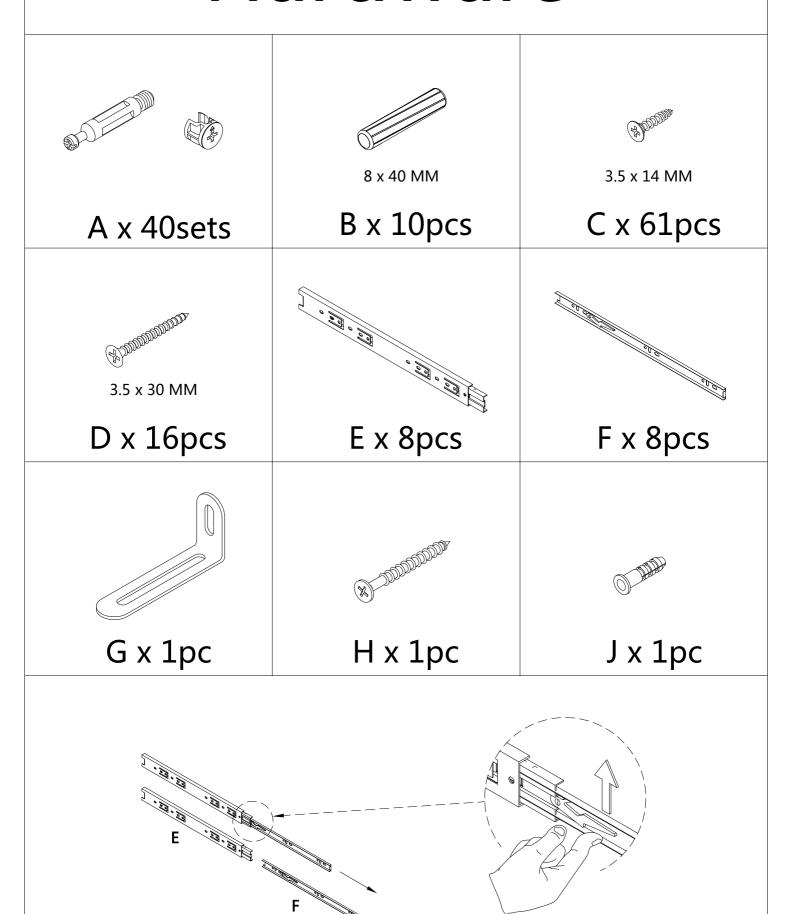


Step 1


C x 16 E x 8

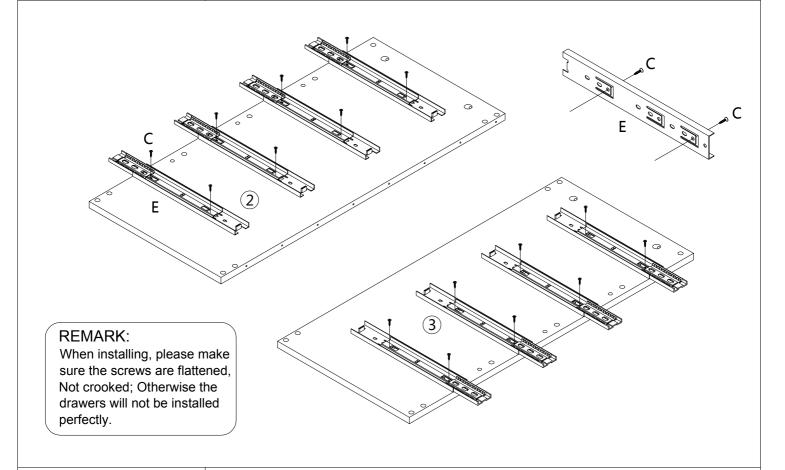



Step 2


A x 10 B x 3

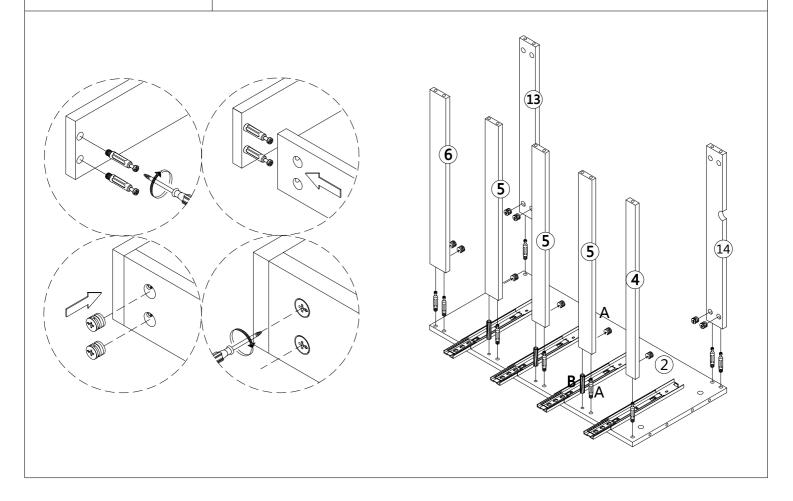

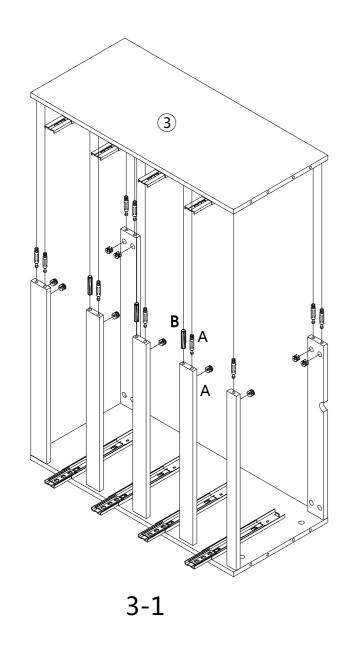

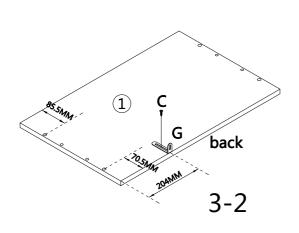


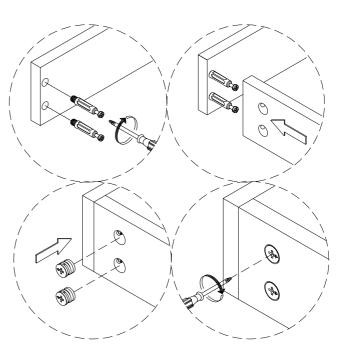

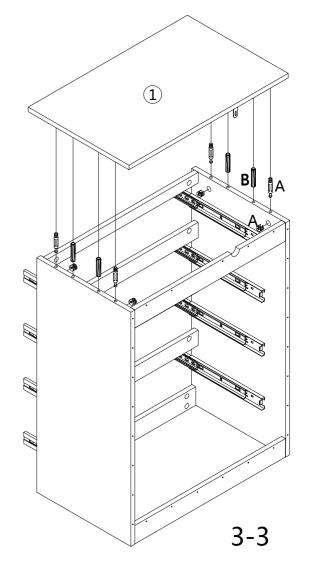

Step 4

C x 28 H x 1 J x 1

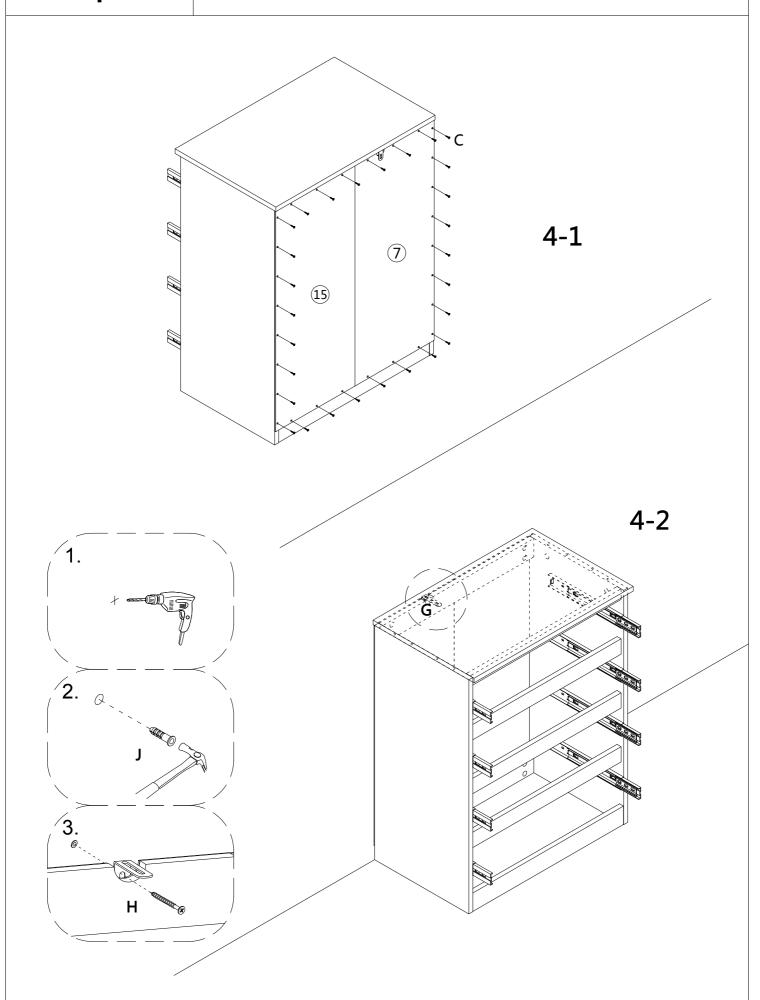

Step 5

A x 16 C x 16 D x 16 F x 8

