 




# Russell Hobbs

## Ceramic Heater

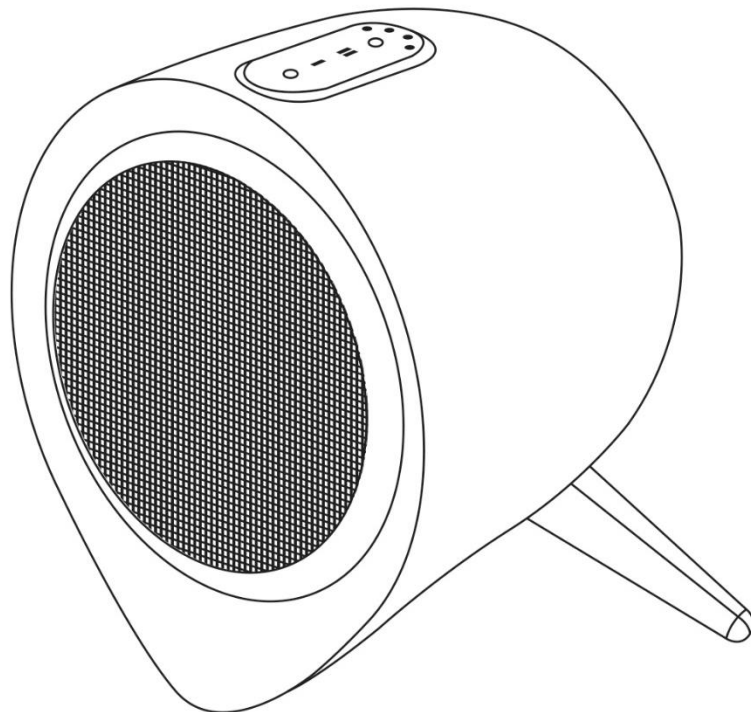

**Model Number: RHMCH1009-SCA (B-SCA)**

**220-240V AC 1500W 50Hz/60Hz**

This product is only suitable for well insulated spaces or occasional use

**PLEASE RETAIN**  
**FOR FUTURE REFERENCE**

# CONTENTS

	<b>Page(s)</b>
Safety Instructions and Electrical Safety	<b>3 - 5</b>
Feature Diagram	<b>6</b>
Control Panel	<b>7</b>
Using your heater	<b>8 – 10</b>
Cleaning and Care	<b>11</b>
Problem Solving	<b>12</b>
Guarantee and Customer Services	<b>13</b>
Connection to the Mains Supply	<b>14</b>
Specification	<b>15</b>
Disposable Information	<b>16</b>

# SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be observed, including the following:

- Read all instructions.
- Check that your mains voltage corresponds with the rating on the appliance.
- This appliance must be positioned upright on the floor away from curtains, furniture or wall coverings and other flammable items.
- The appliance must not be left unattended while it is connected to the mains supply.
- Do not touch hot surfaces. Use the handle or the controls.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid. Do not operate with wet hands.
- Do not let the cord hang over the edge of a worktop, table etc. or touch hot surfaces.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
- This appliance must not be immersed in any liquid.
- To disconnect remove the plug from the mains outlet. Do not pull the plug out by the cord.
- Never remove parts from the appliance, such as the feet, screws and so on.
- Never use the appliance near a bath, shower or a swimming pool.
- Never place flammable objects or clothing on top of the appliance.
- **WARNING: Allow clearance of at least 100cm around the top and sides and a 150cm at the front.**

# SAFETY INSTRUCTIONS

- Never use the appliance in a room with explosive gas such as petrol, or while using any kinds of flammable glues, sprays or solvents.
- Prevent overheating of the appliance by keeping the air inlets and outlets clean and free of anything that may cause blockage. Check all inlets and outlets regularly for accumulated dust. DO NOT COVER.
- Do not place any part of your body near the air inlet, outlet or on the fins ,to avoid personal injury, electric shock or fire.
- If overheating should occur, the built-in overheating safety device will shut the appliance off.
- Caution: Some parts of this product can become very hot and cause burns. Particular attention must be given when children or vulnerable people are present.
- Do not insert any foreign objects into the grill.
- Keep all grills clear of any draped fabric or curtains.
- The appliance must not be located immediately below a mains socket. Do not use the appliance with a programmer, timer or any other device that switches the appliance on automatically. A fire risk exists if the appliance is covered or positioned incorrectly.
- Do not operate this appliance for any thing other than its intended use.
- This appliance is not intended for commercial use
- **This product is intended for household use only.** Do not use outdoors.
- This product is only intended for heating.
- **Warning:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to electrical parts.

 
# SAFETY INSTRUCTIONS

- **Warning:** Children should not use this appliance. Close supervision is necessary when any appliances are used near children.
- **Warning:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to make sure that they do not play with or use the appliance.
- **Warning:** In order to avoid overheating, do not cover the heater.

## Electrical Safety


- Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 220 – 240V AC; 50Hz. Connection to any other power source may damage the unit.
- This product may be fitted with a non re-wireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged in any way, it should be cut off and an appropriate plug fitted. This should be carried out by a qualified electrician. The plug removed must be disposed of safely, as insertion into a 13 Amp socket is likely to cause an electrical hazard.

# FEATURE DIAGRAM

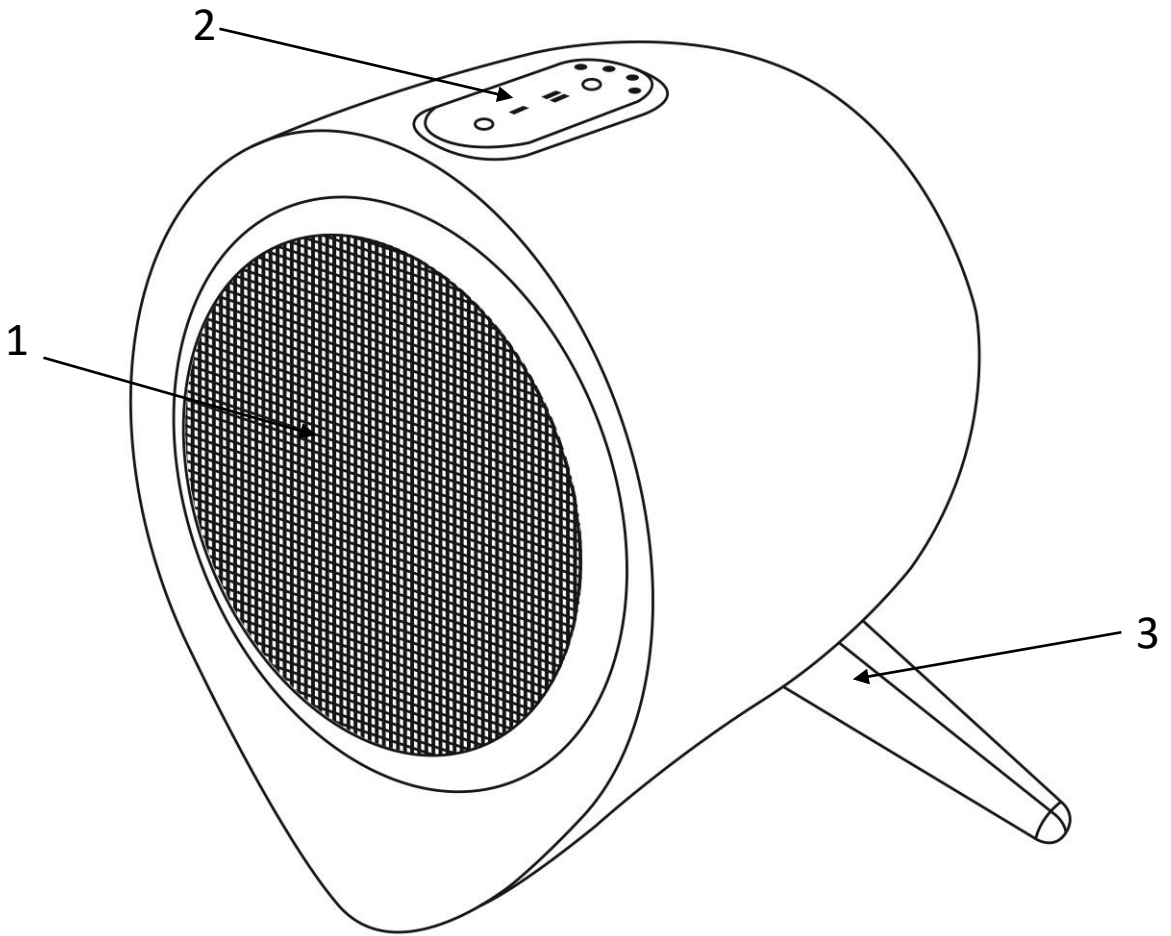

 1. Air outlet
2. Control panel
3. Legs



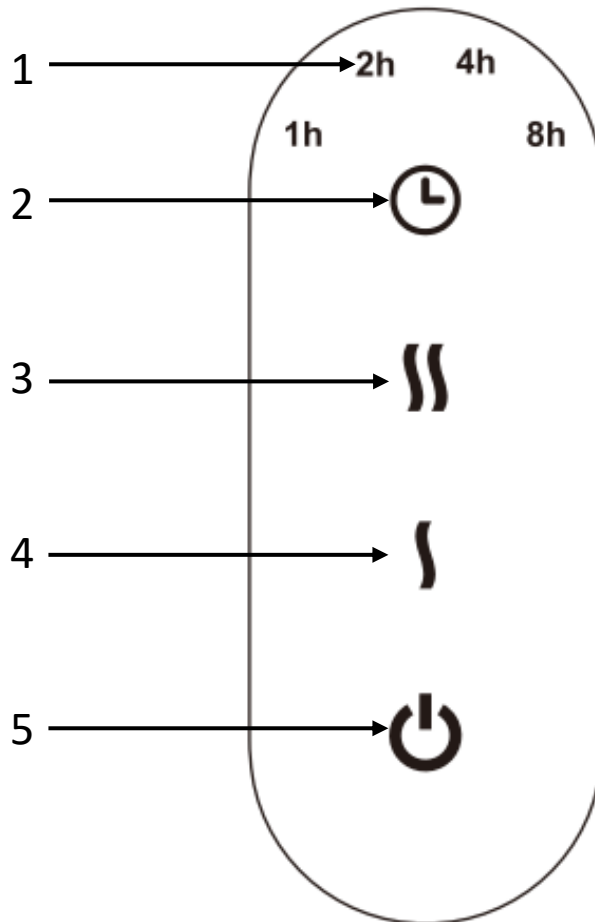










# CONTROL PANEL



1. Timer indicators
2. Timer button & indicator
3. High heat setting (1500W) button & indicator
4. Low heat setting (900W) button & indicator
5. Power On/Off button & indicator

# USING YOUR HEATER





**Note: An audible beep will be heard when any button is pressed.**

1. Before connecting to the mains socket, position the appliance away from curtains, furniture or wall coverings and other flammable materials.
2. Insert the mains plug into a suitable 13 Amp mains socket. Turn on the socket and the  button on the control panel will illuminate.
3. To activate the heater, press the  button. The heater will start to operate at  low setting (900W) and the  button will illuminate on the control panel.
4. Press the  high setting (1500W) and both the  and  buttons will illuminate on the control panel.
5. You can press the  low setting (900W) and  high setting (1500W) during operation and change to either setting.
6. To switch the heater off, press the  button. The heater will stop heating.
7. The heater will stop heating automatically if tipped over when in operation. The unit will start operating again when moved upright, and the  button and a heat setting is selected (  or  ).

# USING YOUR HEATER

**Note: An audible beep will be heard when any button is pressed.**

## Timer Function

1. The timer function can be set during operation at any time when the  low setting (900W) or  high setting (1500W) are selected.
2. To set the timer, press the  button, the timer indicator will illuminate and the **1h** will illuminate. The appliance will operate for 1 hour.
3. If you want to set the timer for longer then press the  button until you reach your desired time. When the timer is set the corresponding indicator or indicators will illuminate.
4. The maximum time that can be set is 15 hours.

Press	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
I N D I C A T O R	1h	X		X		X		X		X		X		X		X
	2h		X	X			X	X			X	X			X	X
	4h				X	X	X	X					X	X	X	X
	8h								X	X	X	X	X	X	X	X
Time (hours)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	

5. To cancel the timer, press the  button for 3 seconds.

# USING YOUR HEATER

## Safety Protective Devices

The appliance is fitted with an over heat protection system and a tip over switch.

- Overheat protection - the power to the heating elements will automatically cut off if the temperature of the heating elements exceeds a certain limit. In the event of overheating, the heater will stop operating. Switch the appliance off and allow it to completely cool.
- Tip over switch - The unit needs to be placed on a flat and firm surface to ensure that the tip over switch is balanced. If in the event that the unit tips over or is placed on an uneven or soft surface the unit will not operate as the tip over switch will be activated and the appliance will cut out.
- Note: the safety tip over switch is housed within the product. When the product is moved you may hear the tip over switch moving. It will make a rattling noise but please note this is normal.



This symbol means “DO NOT COVER”

# CLEANING AND CARE

## **WARNING: Electrical Shock Hazard.**

Before you clean the appliance, disconnect the mains plug from the wall socket.

- Allow the appliance to cool down completely before cleaning.
- Do not immerse cord, plug or appliance in any liquid or allow moisture to come into contact with electrical parts.
- Clean the outer surface using a moist cloth and wipe over with a dry, soft cloth.
- Do not use harsh detergents, abrasives or spray on cleaners.
- Don't allow water to seep into the openings or come into contact with electrical connections.
- Allow sufficient drying time before operating again.
- Clean the air inlets and outlets regularly with a vacuum cleaner using the brush attachment (with regular use, at least twice a year).
- When the appliance is not in use. We recommend that, the heater is re-packed in its original packaging and stored in a cool, dry place.

# PROBLEM SOLVING

## **My appliance does not work when I turn it on:**

1. Check that your appliance is plugged in and the power is turned on at the mains socket.
2. Try another mains socket.
3. Check the appliance is in an upright position.
4. If the appliance still doesn't work, do not try to repair it yourself.
5. Check the tip over switch has not activated by lifting the appliance up and rotating it before placing the feet on a firm and flat surface

## **If your appliance power is automatically cut off, follow the step below:**

1. Unplug your appliance from the mains socket and allow it to completely cool down.
2. Inspect your appliance. Clean the air inlet and air outlet with a vacuum cleaner if necessary. If there are any signs of physical damage (e.g. melting, or burning of the case), do not attempt to use the appliance. Please leave all maintenance work to qualified personnel.
3. Plug in the appliance and switch it on again. If it cuts off again, move the appliance to a better ventilated location.

# GUARANTEE AND CUSTOMER SERVICES

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

## **The following conditions apply:**

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

**This does not affect your statutory rights.**

## Customer Services & Spare Parts:

<b>Region</b>	<b>Contact</b>	<b>Website</b>
UK & Northern Ireland	0345 209 7461	mda.russellhobbs.com
Ireland	1 800 938982	ie.mda.russellhobbs.com
Rest of Europe	europe@productcaregroup.com	de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com

# CONNECTION TO THE MAINS SUPPLY


This appliance is designed to operate from a mains supply of 220-240V~50Hz/60Hz.

Check that the voltage marked on the product corresponds with your supply voltage.

## **How to change the fuse**

1. Slot the end of a screwdriver into the recess in the fuse holder of the plug.
2. Pull the fuse holder upwards until free of the plug and slide the fuse out.
3. Replace the fuse and replace fuse holder, pushing down until locked into place.

**Important:** Only ever use a 13 amp fuse.

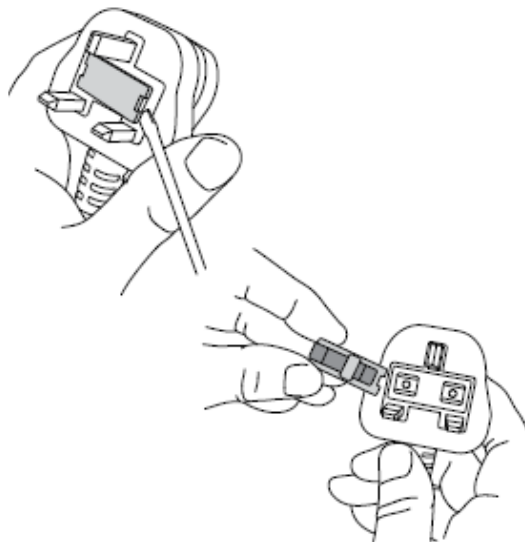

# SPECIFICATION

Model number	RHMCH1009-SCA (B-SCA)
Rated voltage	220V - 240V ~ 50Hz/60Hz
Power consumption	1500W
Product dimensions (CMS)	H21.5 X W18.7 X D18.7 CM

 
Model number	RHMCH1009-SCA (B-SCA)					
Item	Symbol	Value	Unit	Item	Unit	
<b>Heat output</b>				<b>Type of heat input, for electric storage local space heaters only</b>		
Nominal heat output	$p_{nom}$	1.5	kW	manual heat charge control, with integrated thermostat	No	
Minimum heat output (indicative)	$p_{min}$	0.82	kW	manual heat charge control with room and/or outdoor temperature feedback	No	
Maximum continuous heat output	$p_{max,c}$	1.5	kW	electronic heat charge control with room and/or outdoor temperature feedback	No	
				fan assisted heat output	No	
<b>Auxiliary electricity consumption</b>				<b>Type of heat output/room temperature control</b>		
At nominal heat output	$e_{l,max}$	0.000	kW	single stage heat output and no room temperature control	No	
At minimum heat output	$e_{l,min}$	0.000	kW	Two or more manual stages, no room temperature control	No	
In standby mode	$e_{l,SB}$	0.000	kW	with mechanic thermostat room temperature control	Yes	
				with electronic room temperature control	No	
				electronic room temperature control plus day timer	No	
				electronic room temperature control plus week timer	No	
				<b>Other control options (multiple selections possible)</b>		
				room temperature control, with presence detection	No	
				room temperature control, with open window detection	No	
				with distance control option	No	
				with adaptive start control	No	
				with working time limitation	Yes	
				with black bulb sensor	No	
Contact details	Product Care Trading Ltd, Unit 1 Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom					
	Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland					



# Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1 Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom / Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.

UK  
CA

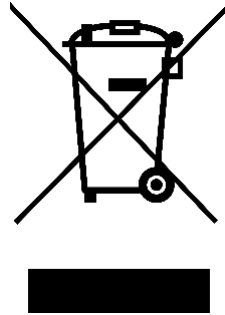

The 'wheelie bin' symbol is known as the 'Crossed-out wheelie bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit [www.sedex.org.uk](http://www.sedex.org.uk) for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.