

Owner's Manual

Silver Mirror Fountain with Decorative Stones and LED Light



Purchased your product online?

We would really appreciate it if you can share your experience with others by reviewing our product on the website from which you purchased.

CONTENTS

Contents	1
What's Included.....	2
Features.....	3
Specifications.....	3
Assembling & Using Your Product.....	4
Replacement Parts.....	9
Troubleshooting.....	10
Caution.....	11
Warranty.....	12
Maintenance.....	13
Notes.....	14

WHAT'S INCLUDED



Fountain Top
1x



Fountain Tray
with Light
1x



Fountain Base
1x



Fountain Pump
1x



Pump Valve
1x



Transformer
1x



Cleaning Cloth
1x



Bag of Rocks
1x



Cleaning Brush
1x

FEATURES

- Relaxing water flow.



- Made of durable metal construction

- Integrated Spotlight to draw attention to soothing water ripples

SPECIFICATIONS

Power Requirements.....Standard Household 120V
Water Capacity.....6.5 Gallons / 25 Liters
Tubing Diameter..... 79" I.D.

ASSEMBLING & USING YOUR PRODUCT

Unpack all components carefully. Check to ensure all parts have been removed from the packaging.

1. Place the Fountain Base on a smooth and level surface.



2. Locate the Fountain Tray and route the light cord through the hole in the tray.



3. Route both the Fountain Pump and Fountain Tray cords through the hole in the back of the Fountain Base.



4. If the Sponge is not attached to the bottom of the Fountain Base, place the Sponge under the Fountain Pump to reduce excess vibration.
5. Place the Fountain Top into the Fountain Base with the mirror facing forward.

CAUTION: *It's important to lean the fountain up against a wall until filled with water or the fountain may tip over.*



6. Tighten the wing nuts preinstalled into the Fountain Base to secure the Fountain Top to the base.



7. Locate the Pump and leave setting to default water flow (MAX).




Alpine Quick Tip

Turn counter-clockwise to reduce water flow.

Turn clockwise to increase water flow.

8. Connect the Pump Valve into the Fountain Pump then connect the Pump Value to the PVC connector and fully tighten.

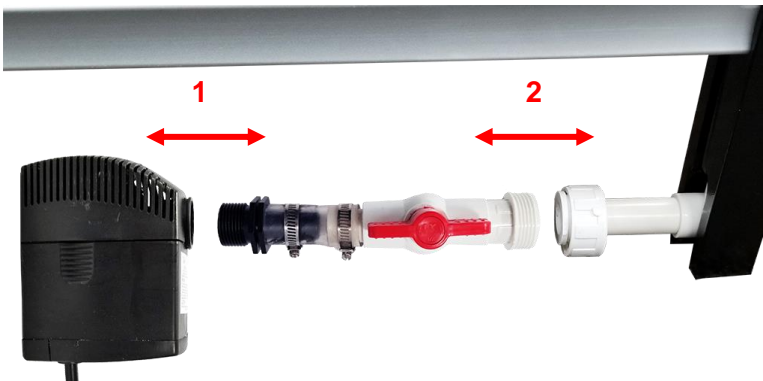

9. Lay Pump and Valve on top of the sponge in the Fountain Base.



10. Add 6.5 gallons of water into the Fountain Base, being careful not to overflow and cause splashing. Make sure the water completely submerges the pump and the water runs clear during operation.

NOTE: *We recommend that you use distilled water to prevent scale build-up. The first time you operate the pump it can take up to 5 minutes for the air to be completely expelled and water begins to flow properly.*



11. Connect the light cord from the Fountain Tray to the Transformer.



12. Plug the transformer and the pump's power cord into your local power supply.



13. Place the Fountain Top cover onto the Mirror.



14. Place the Fountain Tray onto the Fountain Base



15. Add rocks to Fountain Tray and enjoy your new Fountain. **NOTE:** *Don't forget to add water regularly as water will evaporate over time.*



TROUBLESHOOTING

If you have any questions and/or problems, please contact the retail store where you purchased this fountain.

- **If your pump fails to run**
 - Check the circuit breaker or try a different outlet to make sure the pump is receiving electrical power.
 - Check the pump discharge and tubing for any kinks and/or obstructions.
 - Any buildup obstructing the water flow can be flushed with a garden hose.
 - Check the rotor by removing the front cover and plate to access the impeller area. Turn the rotor and make sure that the rotor is not jammed or broken.
- **If your pump “spews”**
 - Check the water level to make sure the pump is completely submerged and there is enough water in the basin to operate your fountain. Not having enough water will cause your pump to spew.
- **If your pump is making abnormal loud noises**
 - Disconnect the pump from the electrical power supply and remove the front cover and plate.
 - Carefully grip the impeller and gently pull the impeller/rotor assembly out of the pump housing.
 - Rinse the impeller/rotor assembly and clean the cavity with clean water. If breakage or damage is found, contact your local retailer for parts.

CAUTION



- **Always unplug the pump from the electrical outlet before cleaning & handling.**
- **Use with clean water only, do not place the fountain and/or parts in any other liquid.**
- **Periodically change water & clean the pump to keep free from microorganisms.**
- **Disconnect and store the unit in a dry place if not in use for an extended period of time, or during freezing weather.**
- **Do not lift, carry or pull the pump by the power cord.**
- **Do not exceed the maximum voltage & wattage on transformer.**
- **NEVER LET THE PUMP RUN DRY.**

LIMITED WARRANTY INFORMATION

Thank you for choosing the product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

- **Water Damage**

The products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage, is considered negligence, and will not be covered under this warranty. The use of "hard water," and/or caustic cleaners, can affect the paint or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility of us.

- **Paint & Color (Retention and/or Loss)**

The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading, within the first year from date of purchase, with the above exclusion.

- **Procedure/Service**

Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. When contacting us, you must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. **Item is covered under two year limited warranty from the date of purchase. If your purchase was after our 30-day grace period, payment information will be requested for shipping charges.**

- **Not Covered Under Warranty**

The limited warranty will NOT cover cases of damages due to:

1. Inadequate care and/or neglect
2. Environmental and/or natural elements
3. Immersion in water, unless specified
4. Improper Installation/Storage and/or Maintenance

This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc. which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim.

MAINTENANCE

If the water does not flow through the top panel after several minutes or the water flow does not flow along the sides of your mirror:

1. Adjust the water flow with the Red Lever on the Valve inside of the Fountain Base.
2. Increase the Pump flow.
3. If the problem persists, unplug the Fountain and remove the top cover from the Fountain Top. Wipe the entire mirror with the cloth provided. Turn on the Fountain and use the Brush with a back and forth motion to clean the stainless steel barrier at the top of the Fountain until the desired flow effect is achieved.
4. If the water does not flow completely to the sides of the mirrored glass panel, leave the Fountain on and use the Brush on the sides of the mirror to redirect the flow of the water.

Note: When operating the fountain, **do not** touch the stainless barrier located on the top of the fountain with bare hands. This could scratch the surface.

NOTES