



Laundry Pedestal Installation Instructions

Models: PEDSPWD

Compatible with Models: SPWD2202W | SPWD2203P | SPWDRISERWH | SPWDRISERSS

The Summit Laundry Pedestal elevates your Washer/Dryer Combo from the floor, making it easier to load and unload laundry. The leveling legs allow you to adjust the unit to your preferred height.

What's Included:



Instructions:

1. Place the pedestal upside down on a level surface.
2. Attach the four leveling legs, ensuring that the pedestal is leveled.
3. Flip the pedestal over.
4. Place the washer/dryer on top of the pedestal and ensure it is aligned at all four corners.

If you find that you still need help with your installation, call our Customer Service facility at 800-932-4267 (**Ext. 513**) or visit summitappliance.com/support between 9:00 AM and 5:00 PM ET. We will do our best to answer your questions.