 
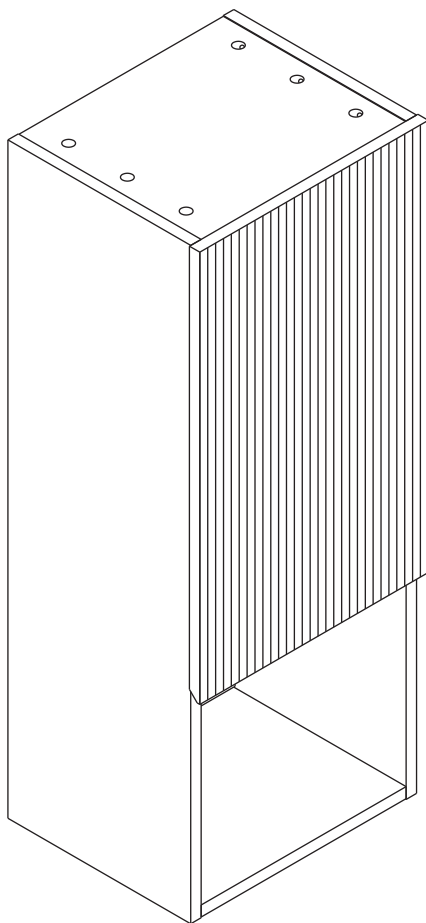 
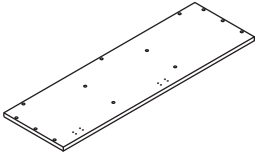 
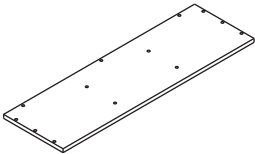 
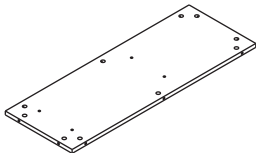 
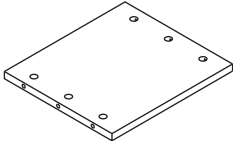 


Assembly Instructions





Bathroom Vanity

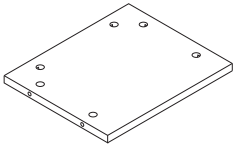

ASSEMBLY INSTRUCTIONS

1		x1			
2		x1			
3		x1			
4		x2			
5		x2			
6		x1			

    ASSEMBLY INSTRUCTIONS



A	 Ø6x26mm	x34			
B	 Ø15x9mm	x34			
C	 Ø3.5x14mm	x12			
D	 Ø3.5x50mm	x4			
E		x4			
F		x4			
G		x4			
H		x2			

ASSEMBLY INSTRUCTIONS



Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL

  
Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

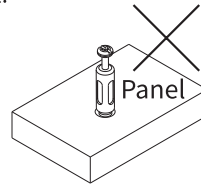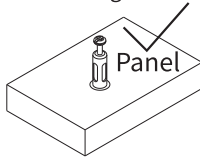

  The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

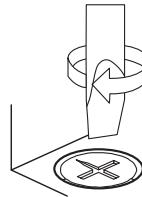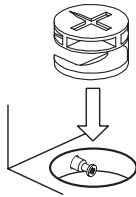

Turn the cam lock clockwise to tighten.

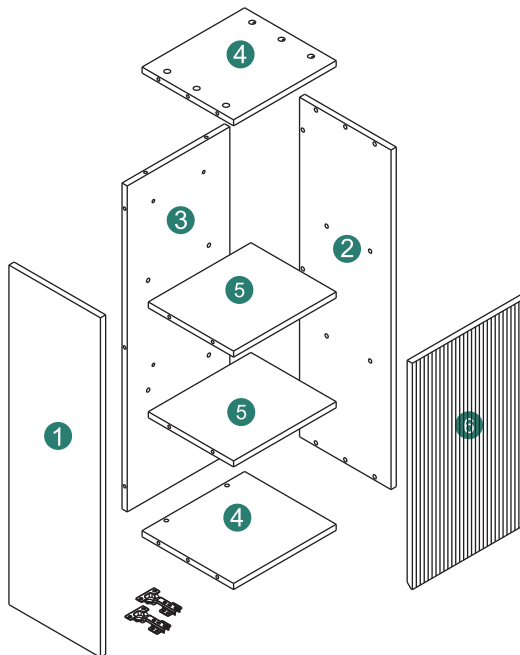 

ASSEMBLY INSTRUCTIONS

 
1



A 34 pcs




The floor needs to be covered with paper or carpet protective material before installation!

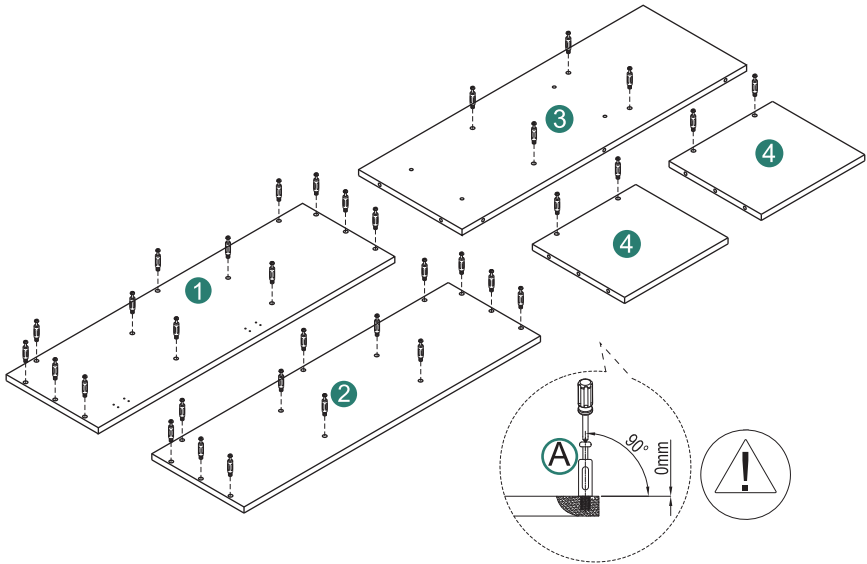

2




 B 8 pcs


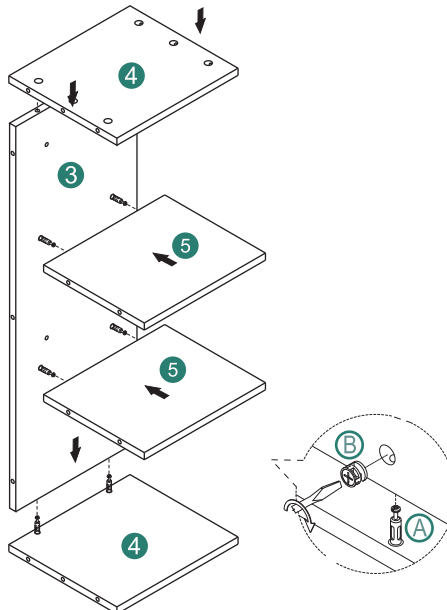


ASSEMBLY INSTRUCTIONS



 
3

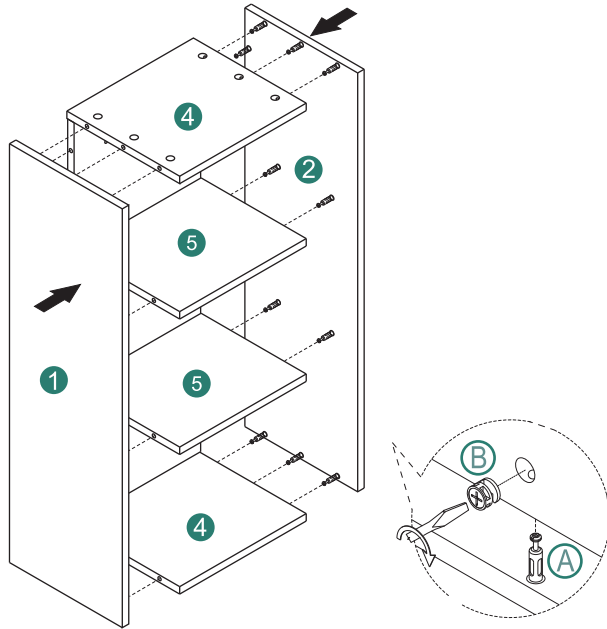

4

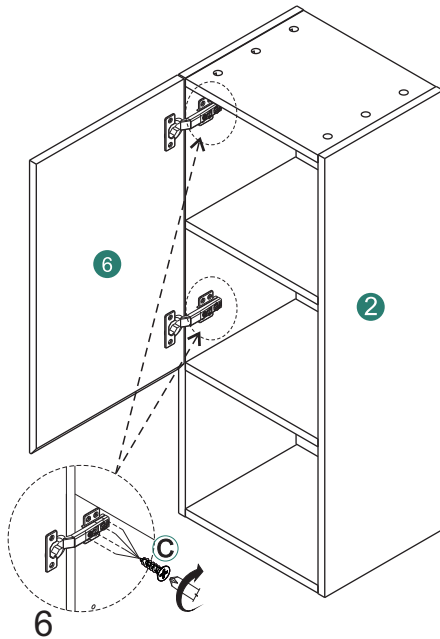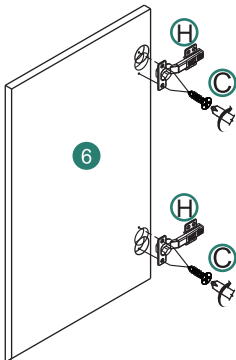  


ASSEMBLY INSTRUCTIONS

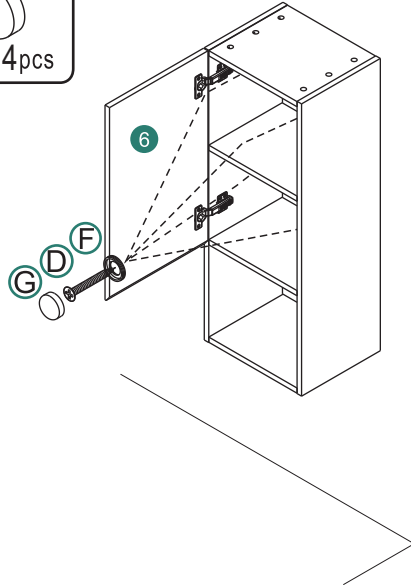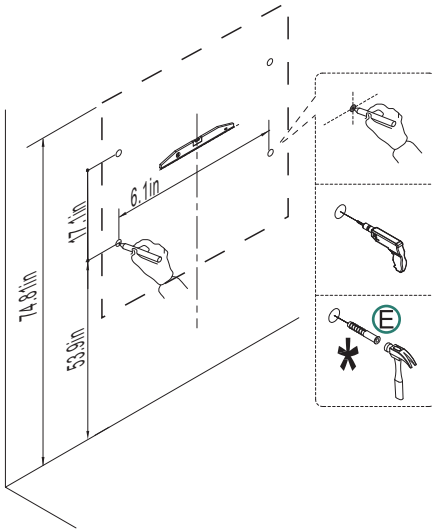   


HINGE ADJUSTMENT AND REMOVAL INSTRUCTION



 
DOOR INSTALL

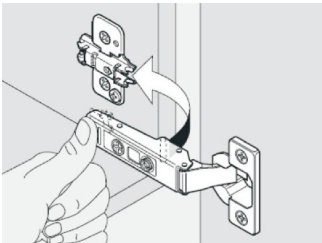

DOOR REMOVE

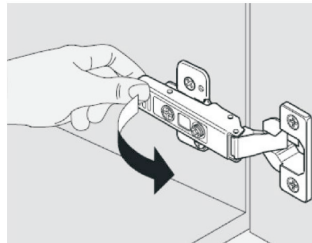 

HOW TO ADJUST HINGES (if required)

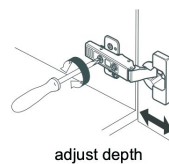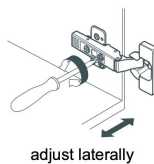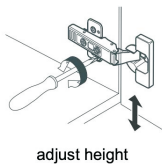   

DRAWERS REMOVAL & RE-INSTALLATION (if required)

 
REMOVAL

7

RE-INSTALLATION


Side adjustment

Side adjustment of the door is made by using the indicated screw.

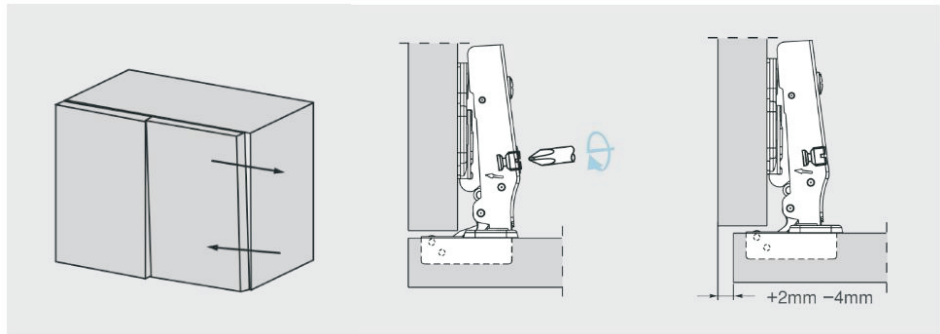

Depth Adjustment

 Depth adjustment is made without loosening any screw. The door can be moved in or out by rotating the cam adjuster on the hinge arm.

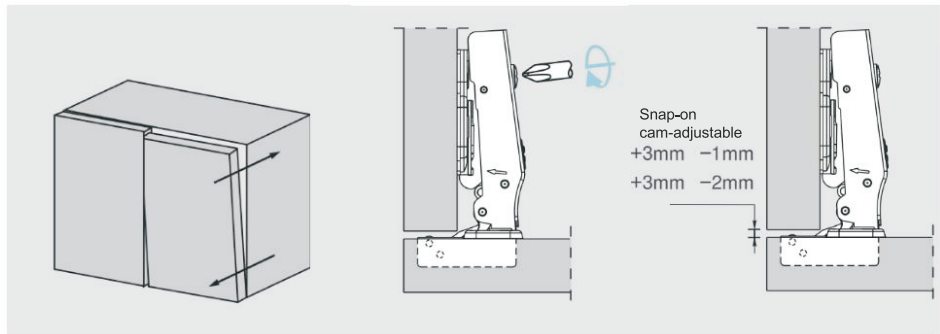

Height Adjustment

By loosening the two fixing screws to allow the mounting plate to slide up or down, the door can be adjusted vertically by $\pm 2\text{mm}$. After retightening the screws, the Depth adjustment is done.

