


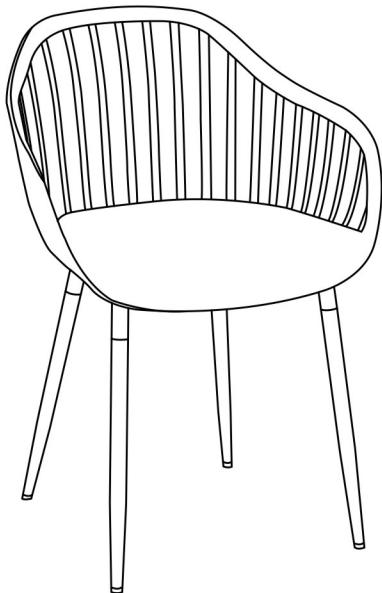






 




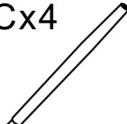

# Installation & Assembly








Ax1 	Bx1 	Cx4 	Dx4  M6x30MM
Ex4  M6x16MM	Fx8 	Gx8 	Hx1 
Ix4 			

SPARE (Ersatzteile)

 




Dx1  M6x30MM	Ex1  M6x16MM	Fx1 
Gx1 	Ix1 	
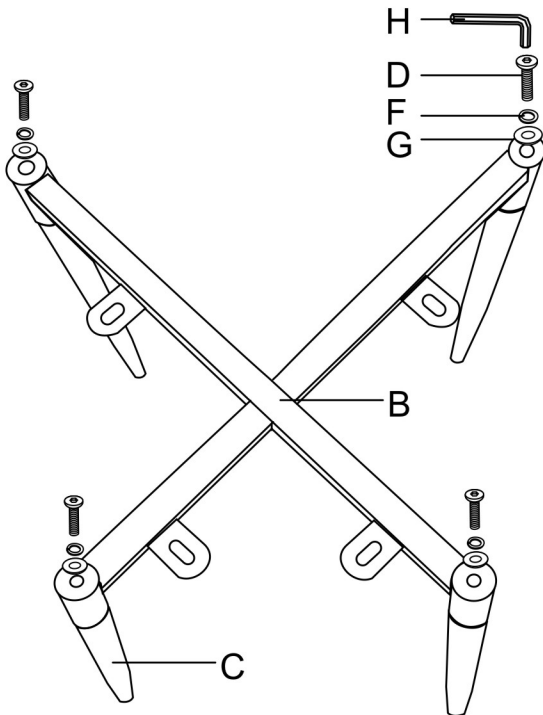
## STEP 1

D	 M6x30MM	4
F		4
G		4
H		1



## STEP 2

E	 M6x16MM	4
F		4
G		4
H		1
I		4

