 
 
 



STEP(SCHRITT/étape/PASO/PASSO/KROK) 1

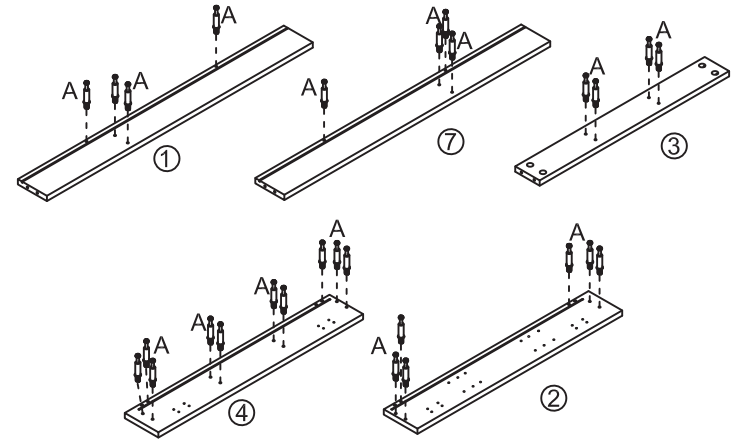

STEP(SCHRITT/étape/PASO/PASSO/KROK) 2

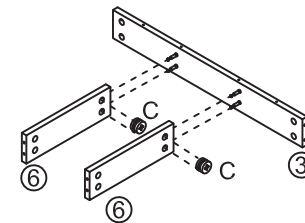


 
STEP(SCHRITT/étape/PASO/PASSO/KROK) 3

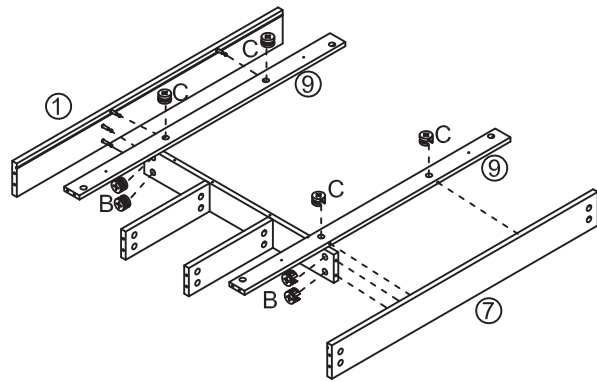

Cx 4

Bx 4

  STEP(SCHRITT/étape/PASO/PASSO/KROK) 4

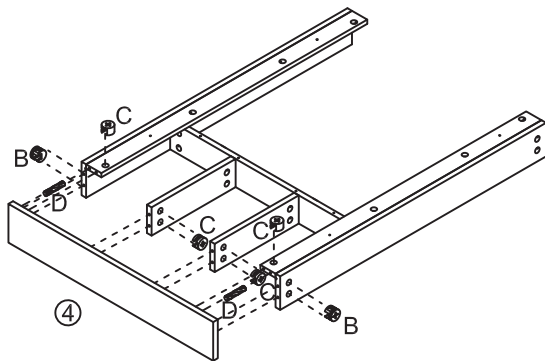


Cx 6



Dx 2

Bx 4

 STEP(SCHRITT/étape/PASO/PASSO/KROK) 5

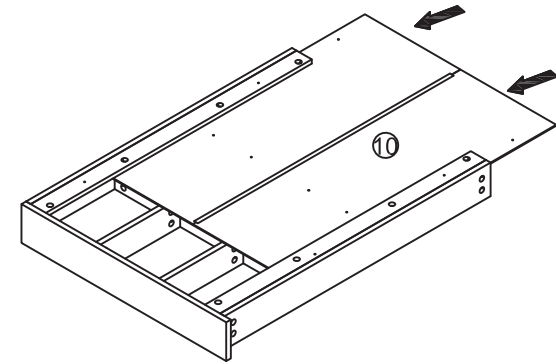

STEP(SCHRITT/étape/PASO/PASSO/KROK) 6


 
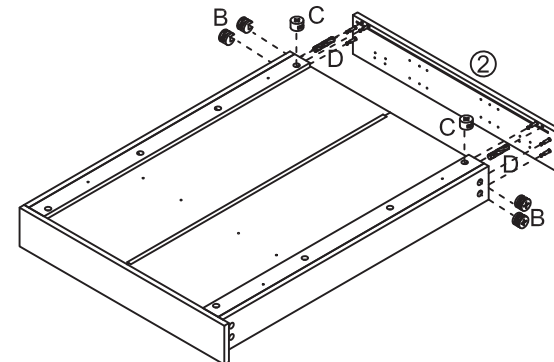 


Cx 2



Bx 4

Dx 2

   
STEP(SCHRITT/étape/PASO/PASSO/KROK) 7

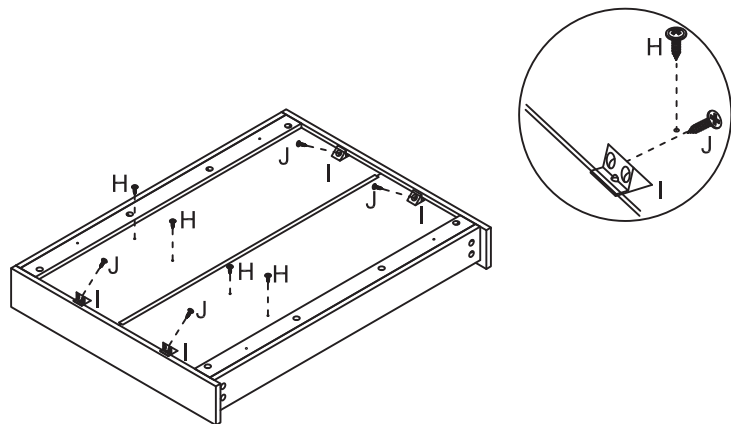


STEP(SCHRITT/étape/PASO/PASSO/KROK) 8

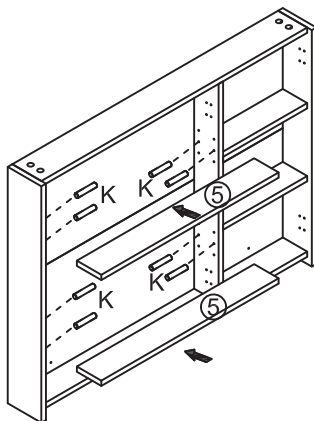  

STEP(SCHRITT/étape/PASO/PASSO/KROK) 9

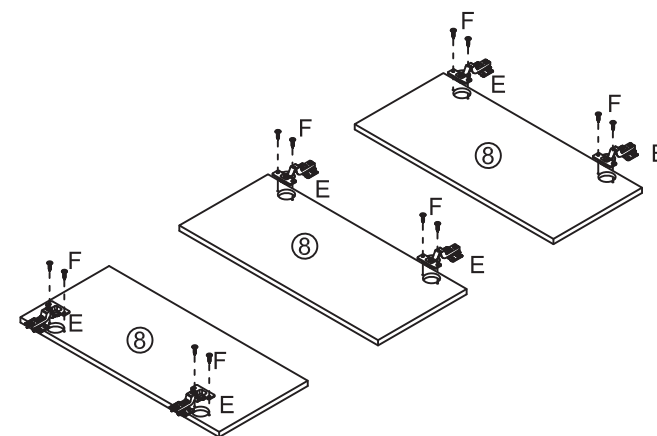 


STEP(SCHRITT/étape/PASO/PASSO/KROK) 10

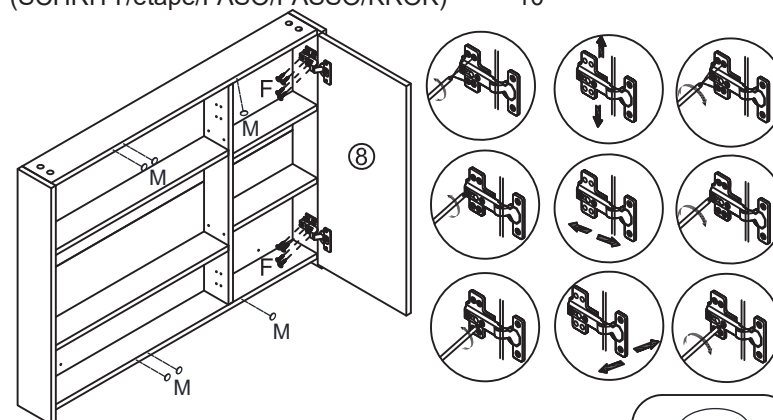 

The position of the door gap can be adjusted by adjusting the tightness of the screw.
 /Die Position der Türnaht kann durch Einstellen der Schraubenfestigkeit eingestellt werden.
 /La posizione della fessura dell'uscio può essere regolata con la regolazione della tenuta della vite.
 /La posición del espacio de la puerta se puede ajustar ajustando la tensión del tornillo.
 /Vous pouvez ajuster le serrage de la vis pour repositionner la porte.
 /Polożenie szczeliny drzwiowej można regulować, dokręcając lub poluzowując śruby.




 STEP(SCHRITT/étape/PASO/PASSO/KROK)1

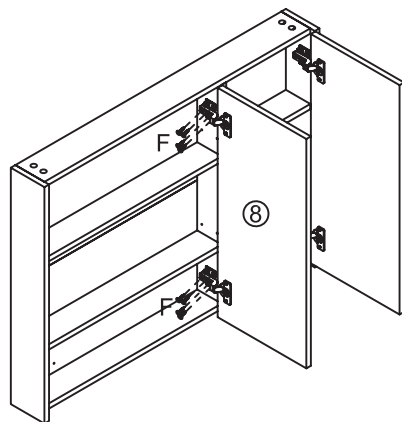


F x 8

 STEP(SCHRITT/étape/PASO/PASSO/KROK) 12

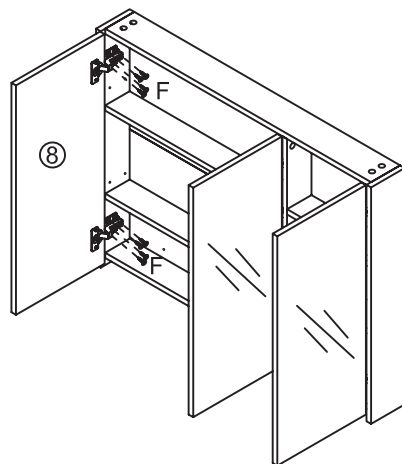

F x 8

 STEP(SCHRITT/étape/PASO/PASSO/KROK) 13

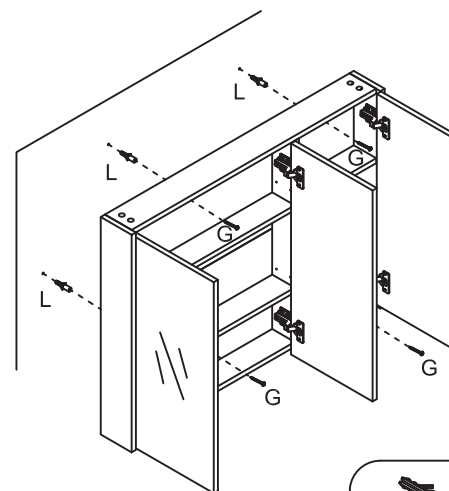

L x 4



G x 4

STEP(SCHRITT/étape/PASO/PASSO/KROK) 14

