

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

720317
END TABLE

ITEM:720317



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

 
 
 




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 40 MINUTES

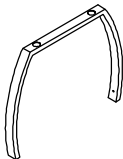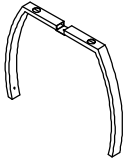PARTS IDENTIFICATION

 

 
 


A	TOP		1PC
B	UPPER LEG FRAME		1PC
C	LOWER LEG FRAME		1PC
D	LEG		4PCS
E	SHELF		1PC

ITEM:720317



ASSEMBLY INSTRUCTIONS


HARDWARE IDENTIFICATION

1	BOLT (1/4" x 12mm BLK)		9PCS
2	LONG BOLT (ϕ 1/4" x 127mm BLK)		4PCS
3	CAP (20 x 40mm BLK)		4PCS
4	L BRACKET (27 x 27mm)		4PCS
5	WASHER		4PCS
6	ALLEN KEY (4mm)		1PC



ITEM: 720317 ASSEMBLY INSTRUCTIONS



 
STEP 1 Do not tighten until each step is completed or instructed.

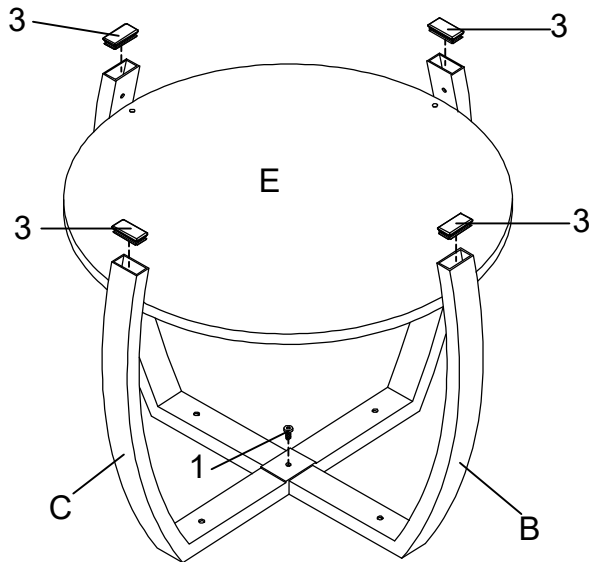

  
STEP 2

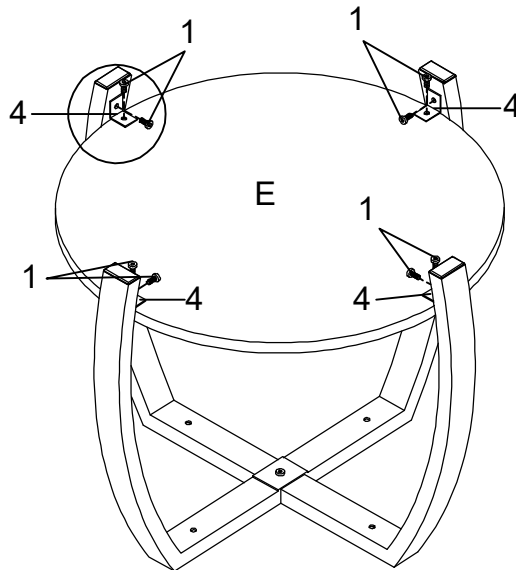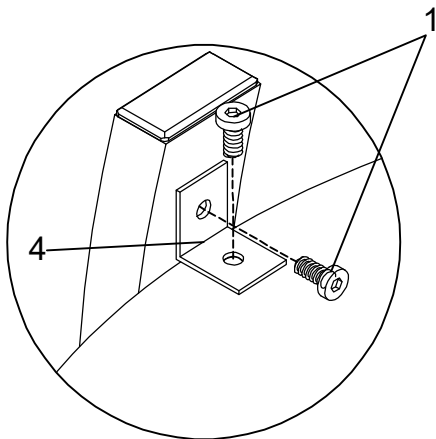

 ITEM: 720317
ASSEMBLY INSTRUCTIONS
STEP 3

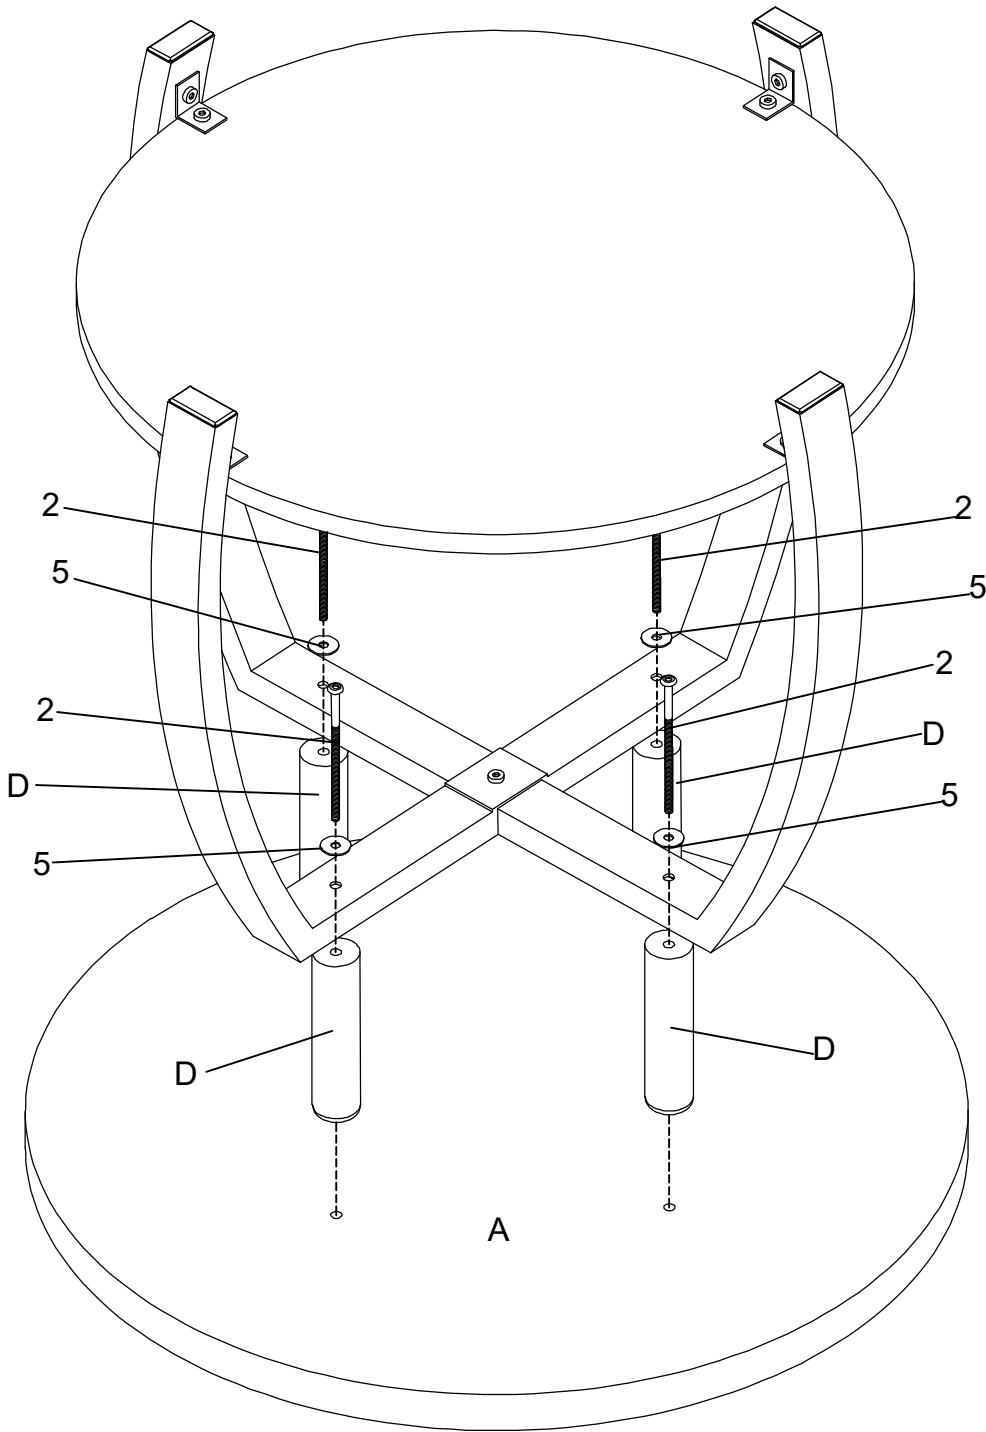

COMPLETE

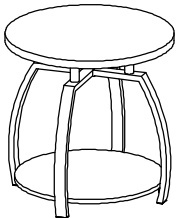 


ITEM: 720317 ASSEMBLY INSTRUCTIONS



Product Size : DIA 584 X 591 H (MM)

 Product Size : DIA 23" X 23.25"

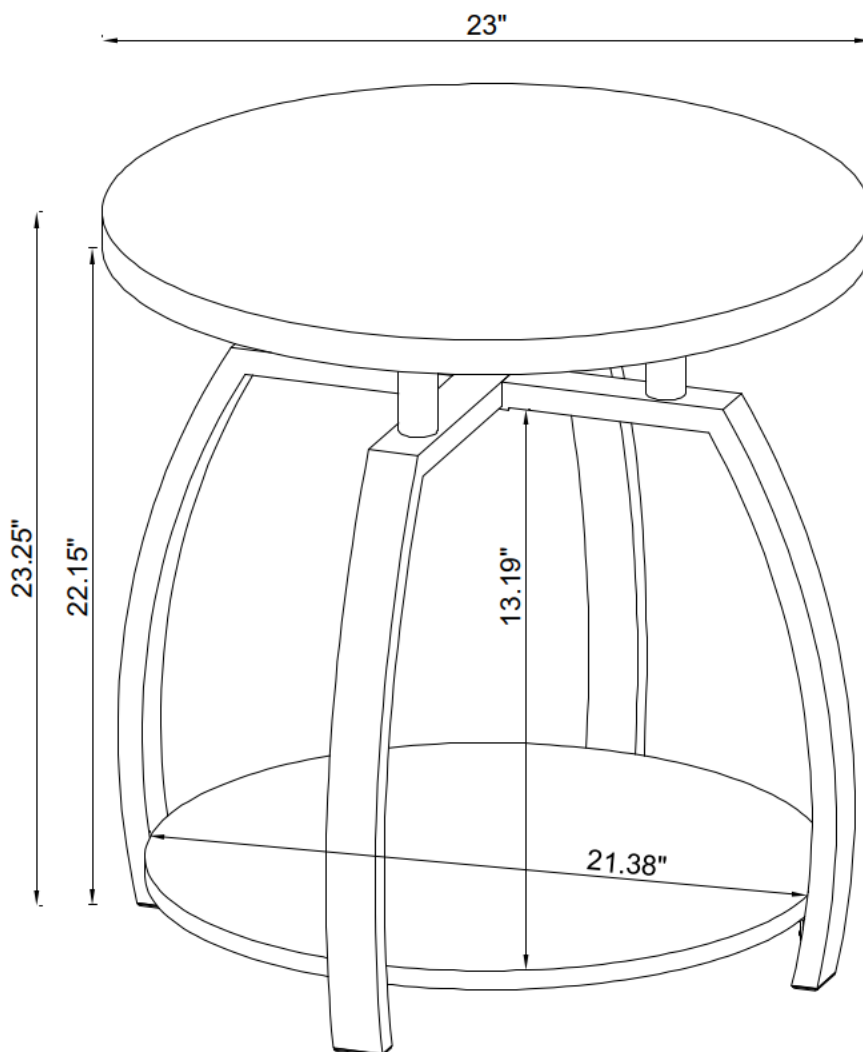

Note : Dimension tolerance $\pm 5\%$