

ASSEMBLY INSTRUCTIONS

Swivel Chair/Swivel Chair with Heat & Massage



Assembly & Operating Instructions

Please read these instructions carefully before assembling or operating this product.

Ensure you are familiar with all of the safety and operating instructions.

Introduction

The items come in a variety of bonded leather colour options to suit most decors, and are made to the highest quality and are CE marked.

The weight limit for this item is 18 Stone (115kg)

Important Safety Information

Please read all of these instructions fully before assembly or operation.



- NEVER stand on the chair
- Unpack and check that you have all of the parts and attachments shown
- To avoid risk of suffocation to children or animals, dispose of the plastic bags correctly
- Remove all packing materials and dispose of correctly
- Assembly is best carried out by 2 people
- For indoor household use only
- Ensure that only correct parts are used on the armchair. Periodically visually inspect the handset and power cord for signs of wear, chaffing or cracks
- When reclining the armchair, ensure that you will not collide with anybody behind you
- Carelessness Causes Fire. Caution should be taken to avoid fire. Please ensure that all cigarettes and matches are properly extinguished. Please be careful of other fire hazards such as electric and gas fires, etc. nearby
- The weight limit on the armchair is 18 stone (115kg). Please ensure that only one person uses the massage chair at any one time
- Do not use the massage chair in dusty, humid or damp environments as this could affect the electrical and mechanical parts of the armchair. The armchair may also be sensitive to temperature changes. If possible, try to gradually change the environment temperature. If this is not possible, do not use the armchair for the first hour after the temperature change
- Be careful with the cables on the massage chair. When plugging/unplugging parts, always grip the connectors (not the cables). Ensure that cables are free, not taut or wound around, and that there is no risk of cables being caught, snagged or chaffed
- Keep your body relaxed during the massage. If you require a more gentle massage, place a blanket or towel on the chair behind you
- Please consult your doctor before using the massage chair if you are convalescing, pregnant or have malignant tumour(s), or high fever
- If you suffer from any abnormal and/or serious pains when using the massage chair, switch off the massage function and consult your doctor
- If any of the following occur, switch off the massage chair and remove the power supply from the mains:
 - The massage chair does not work or has got wet
 - The fabric of the massage chair is damaged and parts are exposed
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance

IMPORTANT

This unit is intended for relaxation purposes only and should not be used in an attempt to treat any medical ailment. Please note that should you have any medical condition, be under a health professional or physicians care or should you have any medical device fitted (e.g. pacemaker etc.) you must consult a qualified medical practitioner before using the massage system.

PARTS DESCRIPTION

RECLINING BACK

SWIVEL BASE



STOOL

Chair Assembly Instructions

Your Swivel Chair will arrive semi assembled. **TAKE CARE.**
We recommend that you have help to move it during assembly.

The weight limit for this item is 18 Stone (115kg)

Keep these instructions for future reference

This is how this swivel chair is packaged inside the box, it is well protected with cardboard inserts all the way round to prevent damage during shipping



This is the contents inside of the box once you removed the protective packaging



The first thing to do is to build the base. Take one of the wooden legs for the chair and insert the bolt and washer through the top hole in the leg.



Insert the second bolt and washer through the lower hole in the leg.



Align the bolts with the corresponding holes in the central hub and screw them in.



Use the allen key provided to tighten the bolts into the hub.



Repeat this process with all five legs until the base is complete.



There is a hole in the base of the main chair frame that slots onto the pin at the top of the hub.





There is a hole in the base of the main chair frame that slots onto the pin at the top of the hub.



Makes sure the chair frame is seated securely on the pin. It should now be able to stand on its own.

The next step is to attach the bottom of the rear section to the base of the chair.
Tilt the rear section upwards to align the two holes at the bottom of the chair.



Align the holes at the bottom of the chair and then secure by placing a bolt through each hole.



Then secure the bolt by attaching a nut using the tools provided







The rear section is now fully attached to the base



Next, attach the arm mounting plates to side frame. Screw the bolts through the mounting plate into the corresponding hole in the side frame and tighten with the allen key.








Tighten both bolts using the allen key.



Insert the recline control handle into the corresponding hole on the right hand side frame.

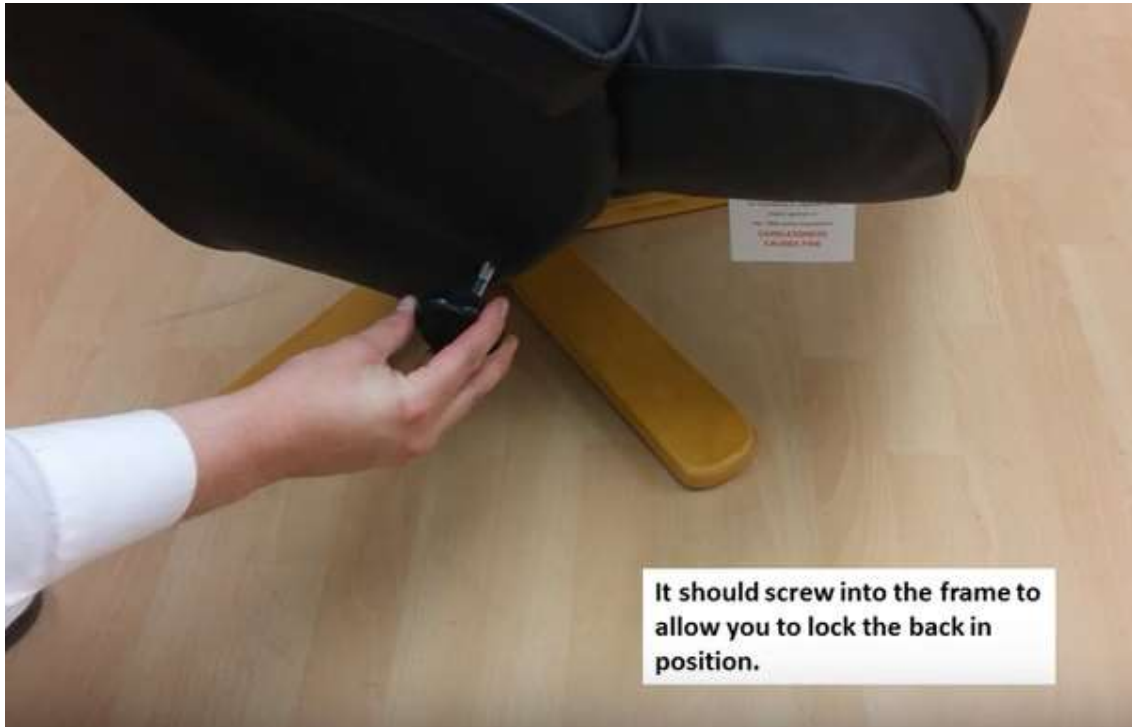

Take one of the wooden legs for the stool and insert the bolt and washer through the top hole in the leg.



Take one of the metal backing plates and use the bolt to attach it loosely to the back of the leg.









Use the allen key to fully tighten both bolts. This will tighten the metal plate securing the leg to the footstool centre piece.



Repeat this with all 4 legs on the footstool.



Turn the footstool pad upside down, place the footstool leg assembly upside down on top and align the holes up with the holes in the pad.



Insert the bolt into one of the holes and tighten using the allen key. Repeat this with all four bolts.



IF YOU HAVE A MASSAGE/MASSAGE & HEAT SWIVEL CHAIR PLEASE FOLLOW THE FOLLOWING INSTRUCTIONS











Massage & Heat Functions

- Your Chair will require one plug socket

MASSAGE HANDSET



Care and Maintenance

Storage:

- Keep the chair dry and clean. Use a dust sheet to protect the chair if it will not be used for a long period
- Do not expose the chair to strong sunlight or high temperature, as this could cause the fabric to fade
- When not in use, switch off and disconnect from the mains
- Do not put any heavy articles on to the armrests or footstool as this could damage the armchair and/or caused it to become unstable.
- Do not sit or stand on the armrests or footrest.

Cleaning:

- Do not rub the surface of the chair with hard or coarse objects
- Use a damp cloth with mild detergent to clean the fabric upholstery
- Then wipe with a dry cloth. Do not use detergents containing solvent as this could damage the fabric
- Only use a dry cloth to wipe the handset

Troubleshooting

Symptom	Cause	Possible Solution
Noisy operation	Noise occurs during use Noise from pulsator, especially when no one is sat in the chair	These are normal sounds during operation. Possibly from friction between the massager and the upholstery
The chair will not switch on	No power. Loose or missing connection	Check the power is on Check the PSU is fully in the mains socket Check the handset is connected

Fair Wear and Tear Policy

Your new armchair is covered by a one year warranty. Please note however this warranty does not include:

- Damage from misuse, and use over the specified weight limit
- Material fading over time or through sunlight
- Damage from spills or leaks
- Collision damage (running against walls, etc.)
- Accidental tears and damage
- Cigarette and match burns
- Damage by pets from (but not limited to) animal/pet claws, soiling and smells

Warranty

Your armchair comes with a comprehensive twelve month warranty. The warranty conditions are below.

1. Should any part of the armchair require repair or full or part replacement as a result of a manufacturing or material defect within twelve months of receiving the armchair, parts will be supplied free of charge. Note: The guarantee is not transferable
2. Any repaired or replaced parts will be covered by this warranty for the balance of the warrant period on the armchair
3. Consumable items supplied will not generally be covered during the normal warranty period unless such items require repair or replacement clearly as a direct result of a manufacturing or material defect. Such items include (among others) upholstery, batteries
4. The above warranty conditions apply to brand new chairs. If you are unsure whether your chair is covered, check with the service agent/dealer
5. Under normal circumstances, no responsibility will be accepted where the armchair has required assistance as a direct result of:
 - a. The armchair part not having been maintained in accordance with the manufacturers recommendations
 - b. Failure to use the manufacturers specified parts
 - c. The armchair or part having been damaged due to neglect, accident or improper use
 - d. The armchair or part having been altered from the manufacturers specification or repairs having been attempted before the service agent/dealer is notified
 - e.

In the event of your armchair requiring attention, please contact your service agent/dealer and give all relevant details so they can act quickly.

'This does not affect your statutory rights'

**Made In China
Imported by**

KH Direct Ltd
Units Scf 1-2 South Core
Western International
Southall
Middlesex
UB2 5XJ

