





Open the Small Box to take out the Wooden Legs With Plastic Gasket(D), Middle Leg with 1 Plastic Gasket(E) ,Bolts(①), Washers(②), Spring Washers(③), Allen Key(④) and Plastic Gaskets(⑤).

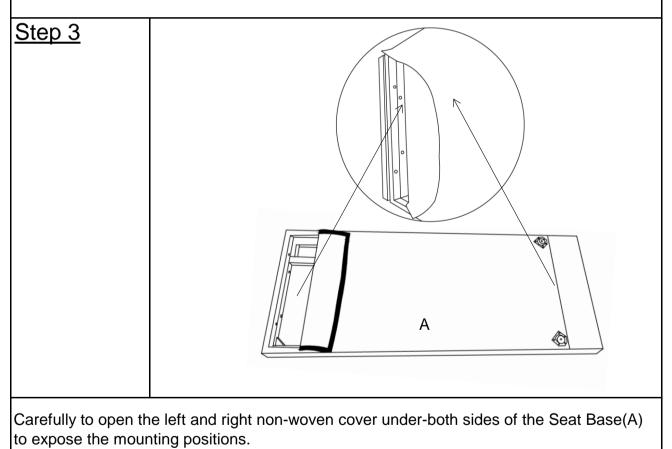

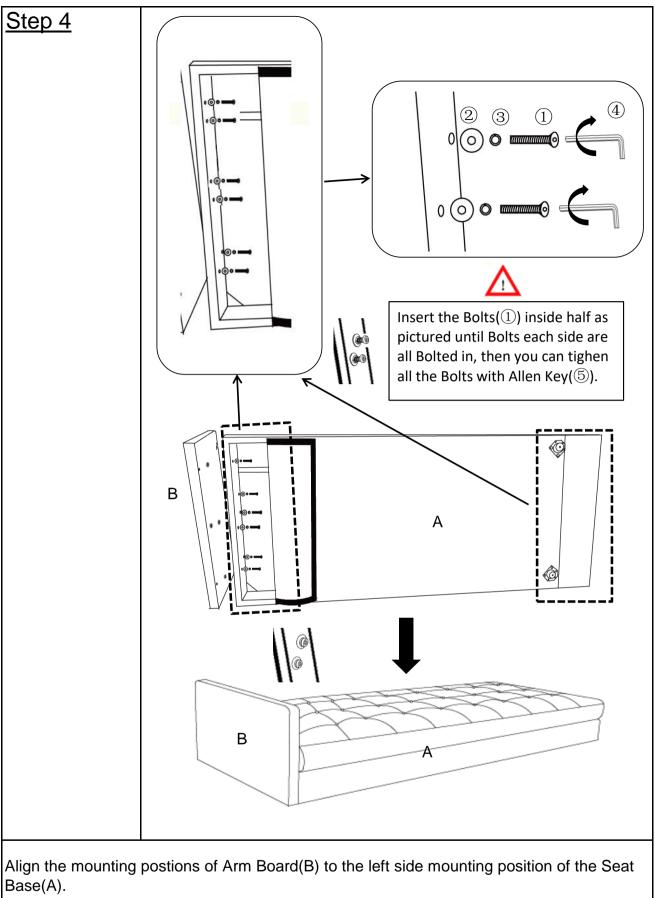

Then attach using Bolts(①), Spring Washers(③) and Washers(②) with the Allen Key(④). **Tighten the Bolts fully in a sequential manner.**

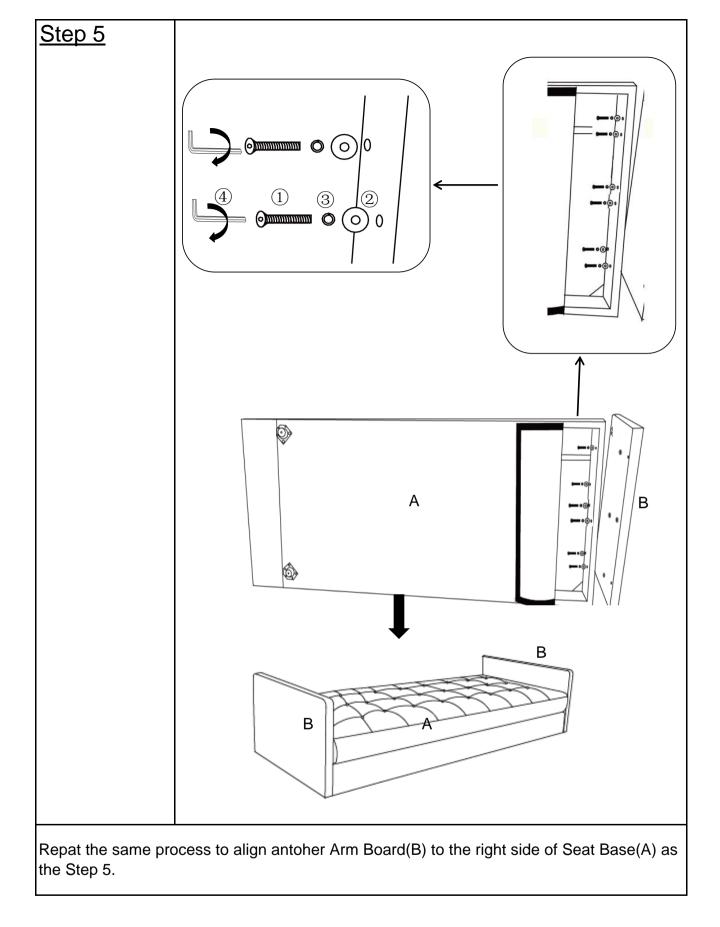

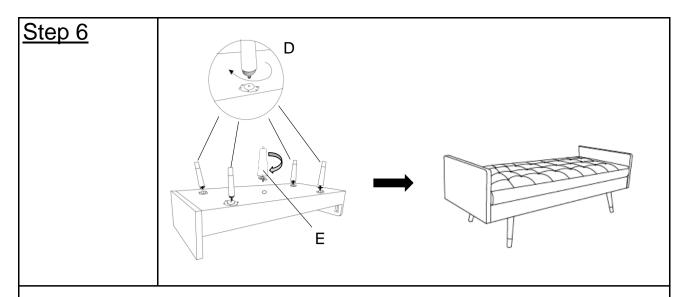


Install the Wood Legs with Plastic Gasket(D) and Middle Leg with 1 Plastic Gasket(E) onto the bottom of the Chaise.

Tighten by turning the Leg clockwise.

With assistance from your adult partner, lift the Chaise up then put it down as indicated in the picture.

Note: The use of Gasket is OPTIONALand are especially useful to help alleviate slight wobbleness. Some Legs may need more than one Gasket whilst some Legs may not need any.

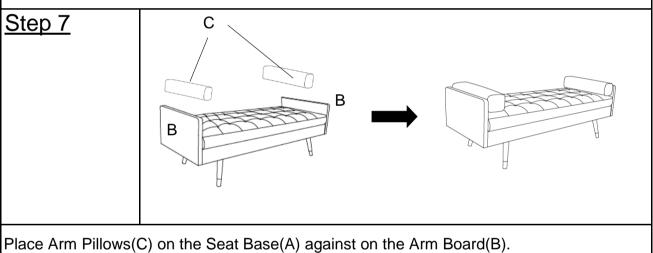

Your Chaise is ready for use.

This Chaise can only be used on a flat, level surface.

| Care & Maintenance | |
|--------------------|---|
| ↓ 瞬 | Furniture may scratch floors. We recommend using furniture pads to protect your floors. |
| 0 | Do not put hot items directly on furniture surface. |
| 0 | Do not clean furniture with harsh cleansers or polish. |
| ØÖ | Do not place furniture under direct sunlight. |
| 0 | Do not place furniture near heating or cooling vents. |
| 0 L | Do not write on furniture without a padded barrier to protect the surface. |
| ø | Do not place furniture outside . For indoor use only. |
| 0 | Not for commercial use. For residential use only. |
| 0 | Stains may be removed with mild soap solution and damp cloth. |
| 0 🏌 | Children should not climb or jump on the furniture. |
| 1 | Dust and pick-up spills using a clean, non-colored, lint-free cloth. |