

OVENTE®

NON-STICK ELECTRIC

CREPE MAKER

WITH WOODEN SPATULAS

CRM1122B



Before use, please read this manual thoroughly and save for future reference.

ovente.com

NON-STICK ELECTRIC CREPE MAKER

CRM1122B

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	3
PARTS AND FEATURES	5
USING YOUR CREPE MAKER	6
CARE & MAINTENANCE	7



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- ⚠ Read all instructions.
- ⚠ Do not touch hot surfaces. Use handles or knobs.
- ⚠ To protect against electrical hazards, do not immerse cord, plugs or the appliance in water or other liquid.
- ⚠ Use the appliance with the provided power base only.
- ⚠ Protect the appliance and power base from moisture. DO NOT allow water to be poured or splashed on the appliance or the power base.
- ⚠ Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- ⚠ This appliance is not intended for use by persons, (including children), with limited physical, sensory or mental abilities or who lack the necessary experience and/or skills unless these persons act under the supervision of a person responsible for their safety or they were instructed by such a person on how to use the appliance.
- ⚠ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- ⚠ Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty.



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- ⚠ The use of accessories or attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- ⚠ Do not use outdoors.
- ⚠ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- ⚠ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ⚠ Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- ⚠ Do not use appliance for other than intended use.
- ⚠ Do not leave unit unattended while in use.
- ⚠ Extreme caution must be used when moving an appliance containing hot liquids.
- ⚠ Unplug the unit from the wall outlet:
 - if it malfunctions
 - if it is not being used

PARTS & FEATURES

COOL-TOUCH HANDLE

Easy to take and prevent high temperature burns

NON-STICK COOKING PLATES

The cooking surface is non-stick, so no scraping or mess which is easy to clean

LED INDICATOR LIGHTS

Comes on when you switch on your crêpe maker

TEMPERATURE CONTROL

Allows you to vary the temperature of your crêpe maker.

WOODEN SPATULA

The thin edges spatula are crafted to effortlessly flip crepes.

WOODEN CREPE SPREADER

Evenly distribute batter to make crepes with uniform thickness





USING YOUR CREPE MAKER

BEFORE FIRST USE

- Read the instructions.
- Remove all packing material and stickers. Do not remove the rating label.
- Clean the baking surface by wiping with a damp cloth.
- Season the baking surface by wiping with a paper towel moistened in a small amount of vegetable oil. This needs to be done only the first time that the crepe maker is used.
- Discard the first crepe

HOW TO USE

- Place the maker on a dry level surface.
- Plug into the wall outlet.
- To preheat the crepe maker, select the temperature by rotating the thermostat knob clockwise to the desired temperature setting.

Warning: Do not touch the baking plate. Appliance is getting hot!

- After a few minutes, the indicator light will turn on. Now the Crepe Maker is hot and you can start baking.
- This maker can be used for a wide variety of foods, baking times will vary depending on food products, temperature settings and desired results.



CARE AND MAINTENANCE



AFTER-USE MAINTENANCE

- Remove plug from outlet and allow to cool.
- Simply wipe off with a slightly dampened paper towel after each use
- Place Crepe Maker in any plastic food storage bag so it remains clean and cooking surface is not subject to abuse when stored. We suggest that you retain the original carton for storage of your Crepe Maker.

DO NOT use an abrasive sponge on exterior surfaces.
DO NOT wash the Crepe maker under running water.
DO NOT allow water to drip into the housing or onto electrical components



ELECTRICAL REQUIREMENTS

Item No. : AD-P30

Voltage / Frequency : 120V/60Hz

Rated Input Power : 1500W Temperature

Setting : 200°C

Dimension : 30CM

Net Weight : 950g



OVENTE WARRANTY

LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our roasting pans with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call 1-855-926-2626.

Visit us at ovente.com



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

ovente.com