
72 INCH TV STAND

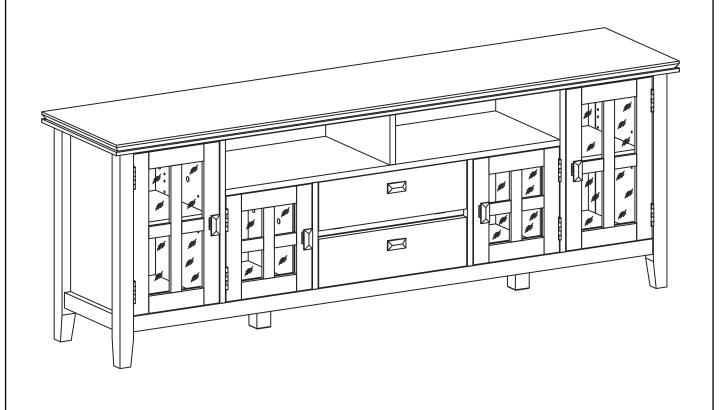



FOR REPLACEMENT PARTS OR HELP WITH ASSEMBLY PLEASE CONTACT US

PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET

TO RETURN THE PRODUCT:

PLEASE CONTACT THE RETAILER

WHERE THE ITEM WAS PURCHASED FROM

ENTER TO WIN

Upload an image of our furniture in your home with a short review to our facebook page for a chance to

Win up to \$3000 of our furniture!!!



IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.


CARE and MAINTENANCE


To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.


To avoid dulling of the finish, do not place furniture in direct sunlight.


Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

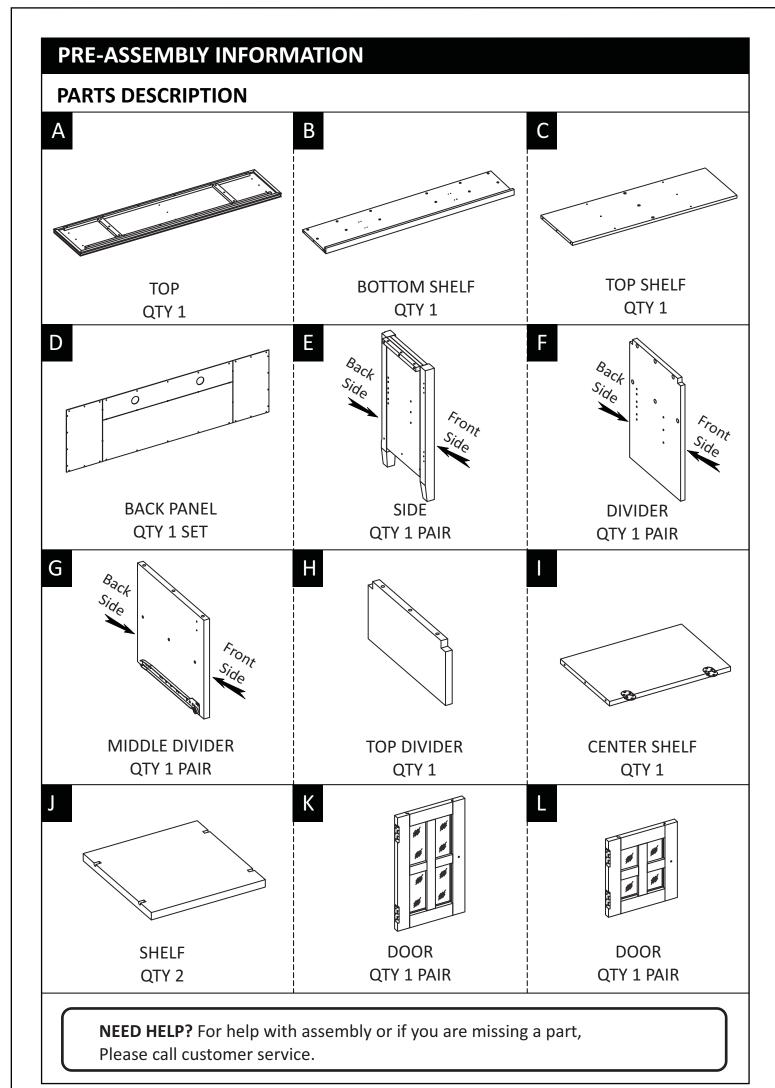

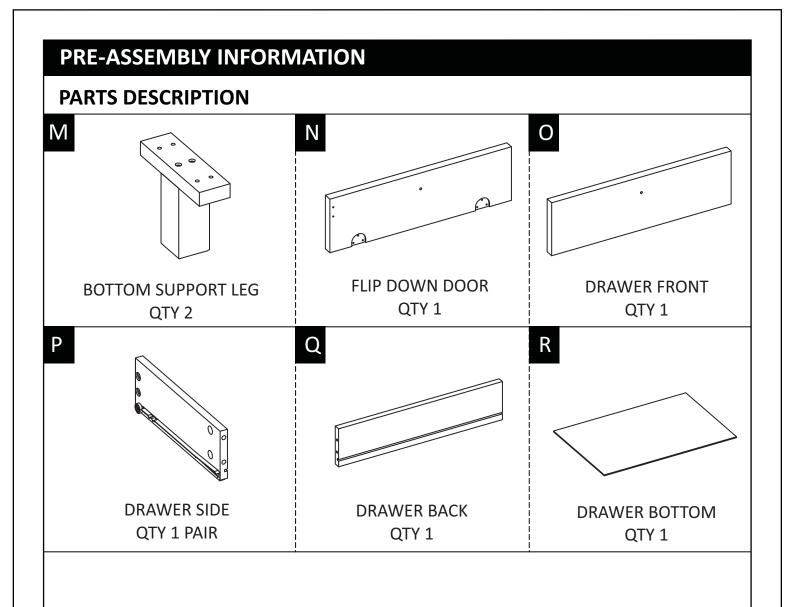


NEED HELP? For help with assembly or if you are missing a part, Please call customer service.

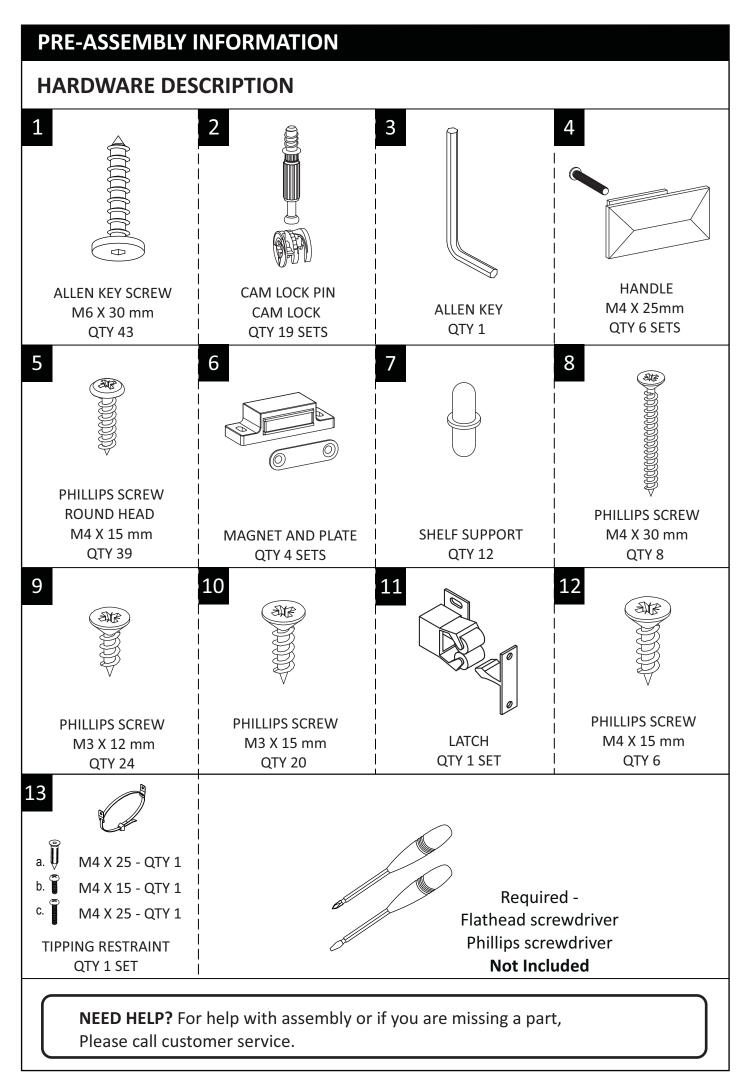

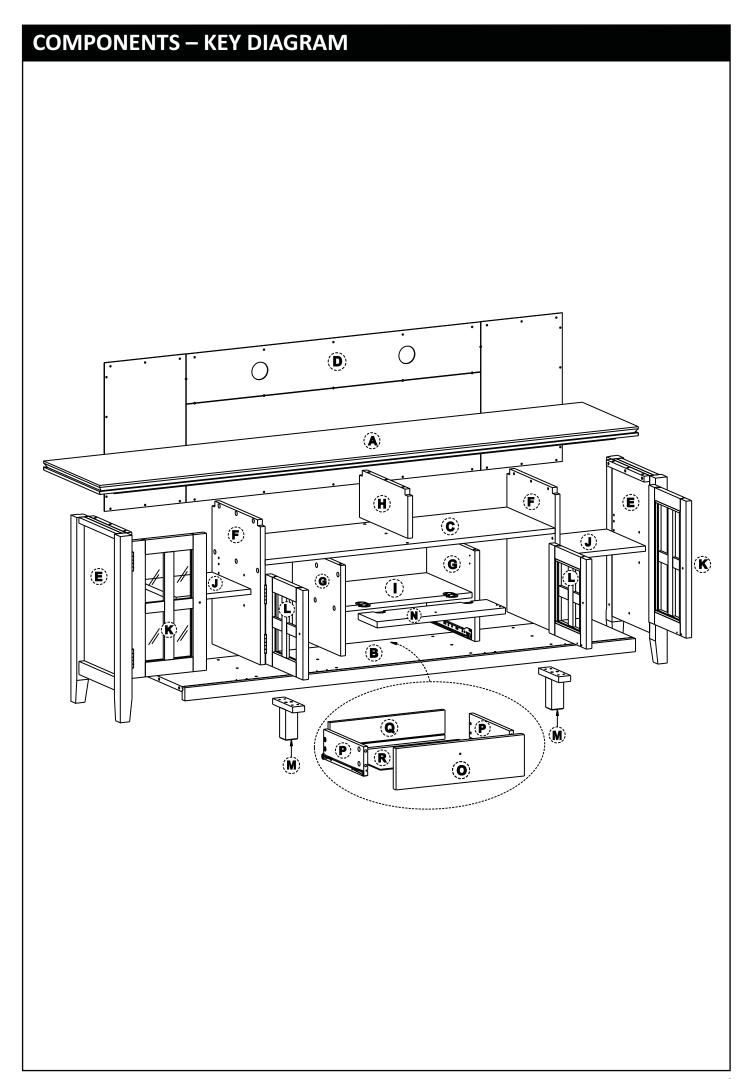


STEP 1

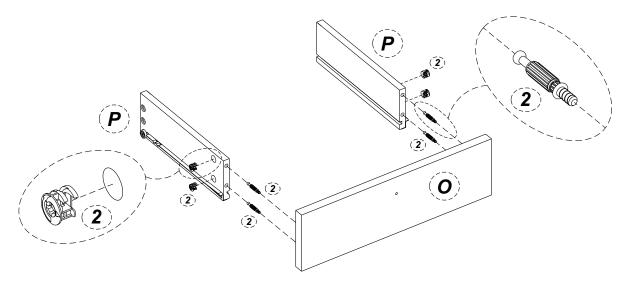


- 1. Attach 4 Cam Lock Pins (2) to back of Drawer Front (0).
- 2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (P).
- 3. Insert 2 Cam Locks (2) into pre-drilled holes on each Drawer Side (P).
- 4. Use flathead screwdriver secure Cam Locks.

STEP 2

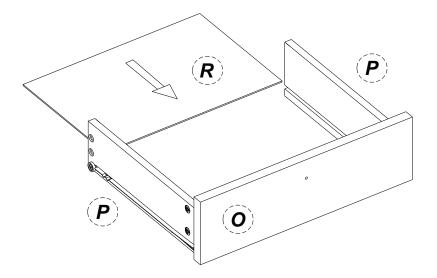


1. Slide Drawer Bottom (R) firmly into slots on Drawer Sides (P) and Drawer Front (O).

STEP 3

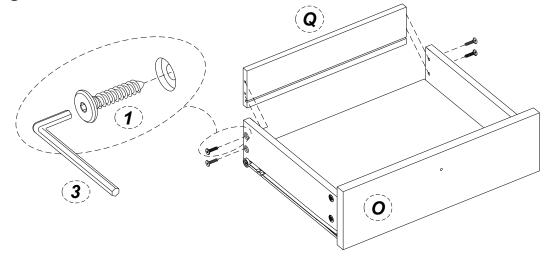


- 1. Align Drawer Back Q with Drawer Bottom R and press firmly into slot .
- 2. Attach back using 2 Allen Key Screws 1) through pre-drilled holes on each Side P.
- 3. Use Allen Key 3 to tighten screws. Do not over-tighten.

 
STEP 4




NOTE: The screwdriver is not included in the hardware pack.

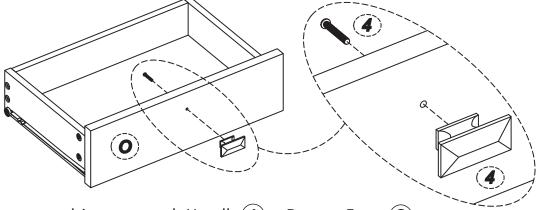

1. Use Phillips screwdriver to attach Handle 4 to Drawer Front (0).

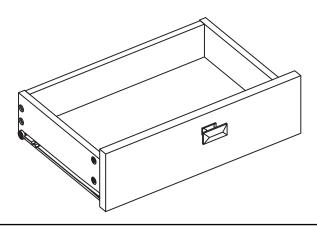

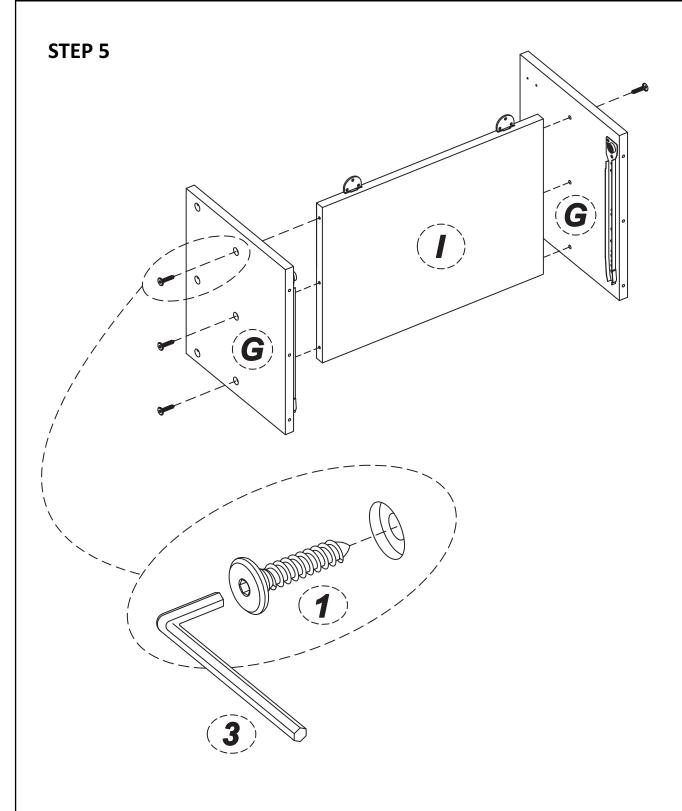


- 1. Attach Centre Shelf (1) to each Middle Divider (G) using 3 Allen Key Screws (1).
- 2. Use Allen Key 3 to tighten screws. Do not over-tighten.

STEP 6




NOTE: The screwdriver is not included in the hardware pack.

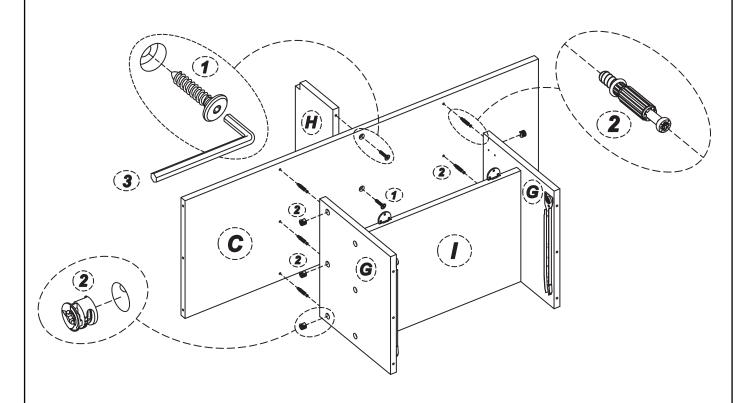


- 1. Attach 6 Cam Lock Pins 2 into pre-drilled holes on the bottom of Top Shelf C.
- 2. Align Cam Lock Pins with pre-drilled holes on Middle Divider (G).
- 3. Insert 3 Cam Lock (2) into pre-drilled holes on each Middle Divider (G).
- 4. Use flathead screwdriver to secure Cam Lock .
- 5. Attach Top Divider (H) to Top Shelf (C) using 3 Allen Key Screws (1).

STEP 7

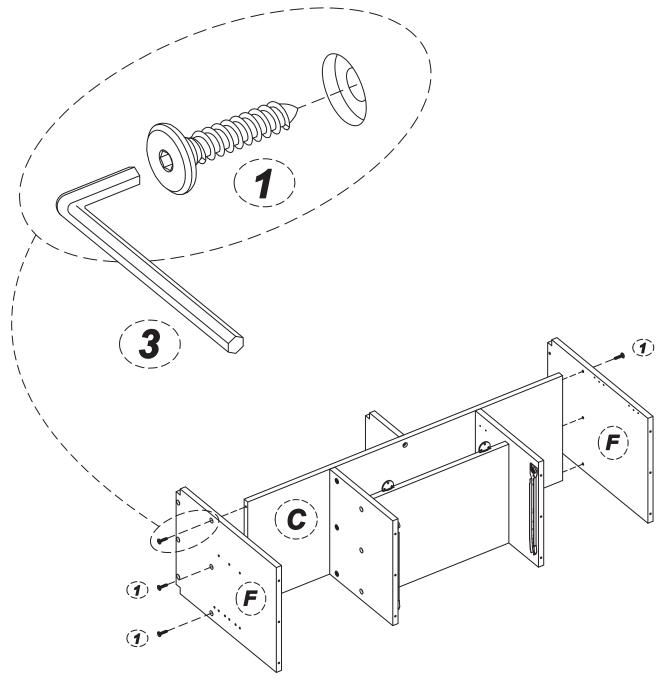


- 1. Attach Top Shelf © to each Divider F using 3 Allen Key Screws 1.
- 2. Use Allen Key 3 to tighten screws. Do not over-tighten.

STEP 8

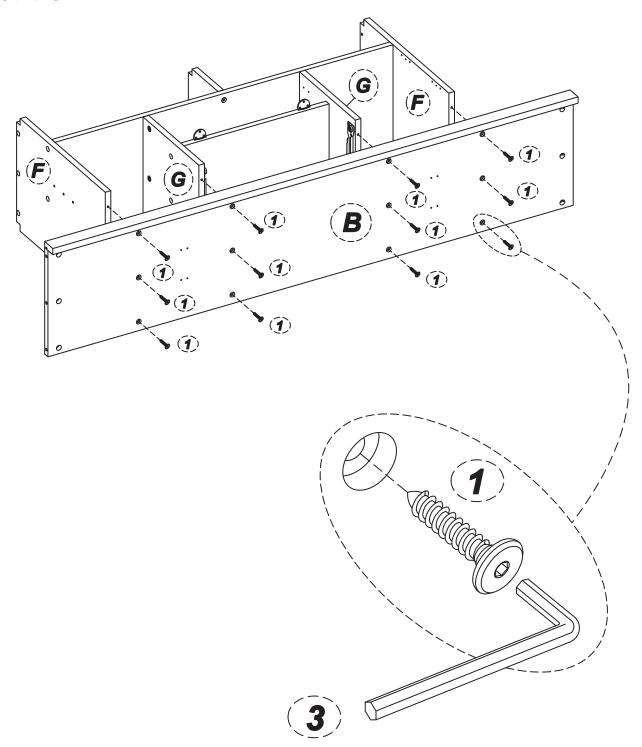


- 1. Attach Bottom Shelf B to Dividers F & G using 12 Allen Key Screws 1 (3 Allen Key Screws / each Divider).
- 2. Use Allen Key 3 to tighten screws. Do not over-tighten.

 STEP 9




NOTE: The screwdriver is not included in the hardware pack.

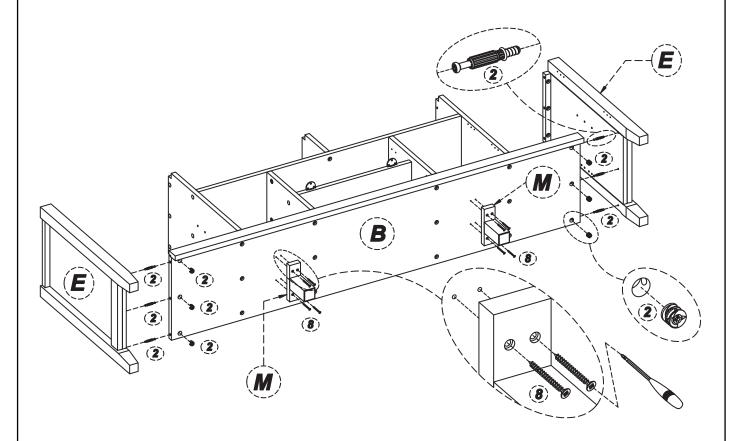

- 1. Attach 3 Cam Lock Pins ② to each Side E.
- 2. Align Cam Lock Pins with pre-drilled holes and attach Bottom Shelf B.
- 3. Insert 6 Cam Lock (2) into pre-drilled holes on Bottom Shelf (B).
- 4. Use flathead screwdriver to secure Cam Lock .
- 5. Attach 2 Bottom Support Legs (M) to Bottom Shelf (B) using 8 Phillip Screws (8).

STEP 10

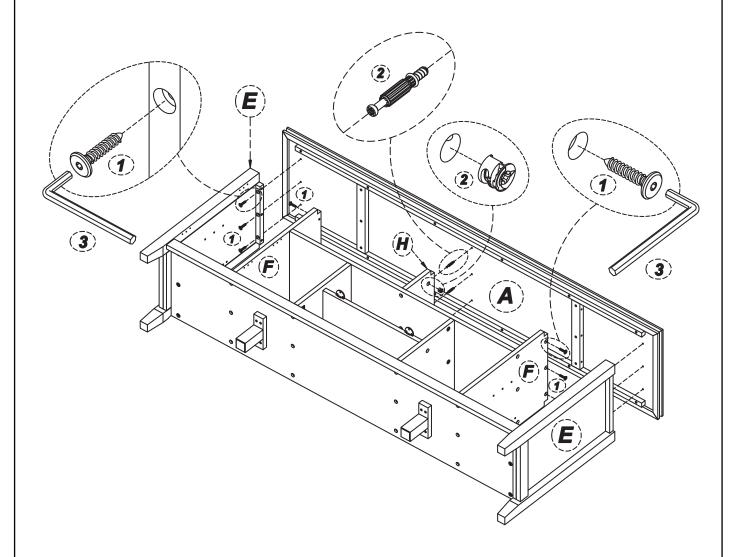


- 1. Attach 3 Cam Lock Pins 2 into pre-drilled holes on bottom of Top A (at center).
- 2. Align Cam Lock Pins with pre-drilled holes on Top Divider (H).
- 3. Insert 3 Cam Locks 2 into pre-drilled holes on Top Divider H.
- 4. Use flathead screwdriver to secure Cam Lock .
- 5. Attach 2 Sides (E) and 2 Dividers (F) to bottom of Top (A) using 12 Allen Key Screws (1) (3 Allen Key Screws/ each part).


STEP 11




NOTE: The screwdriver is not included in the hardware pack.

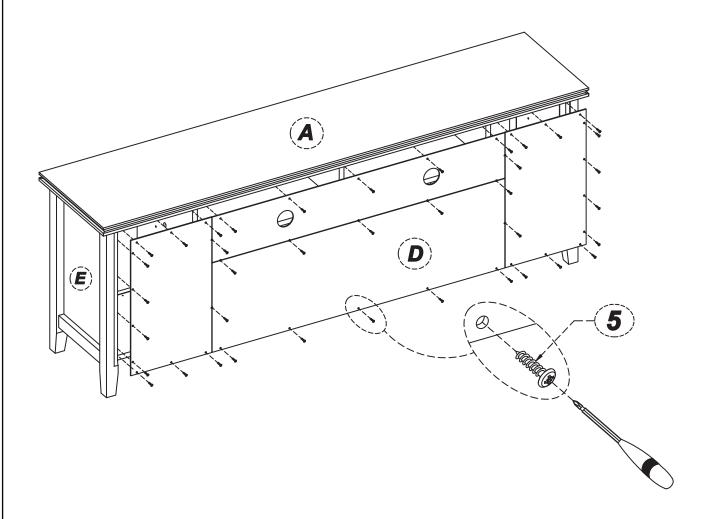


- 1. Attach Back Panels (D) to back of cabinet using Phillips Screws Round Head (5) into pre-drilled guide holes.
- 2. Use Phillips screwdriver to tighten screws.

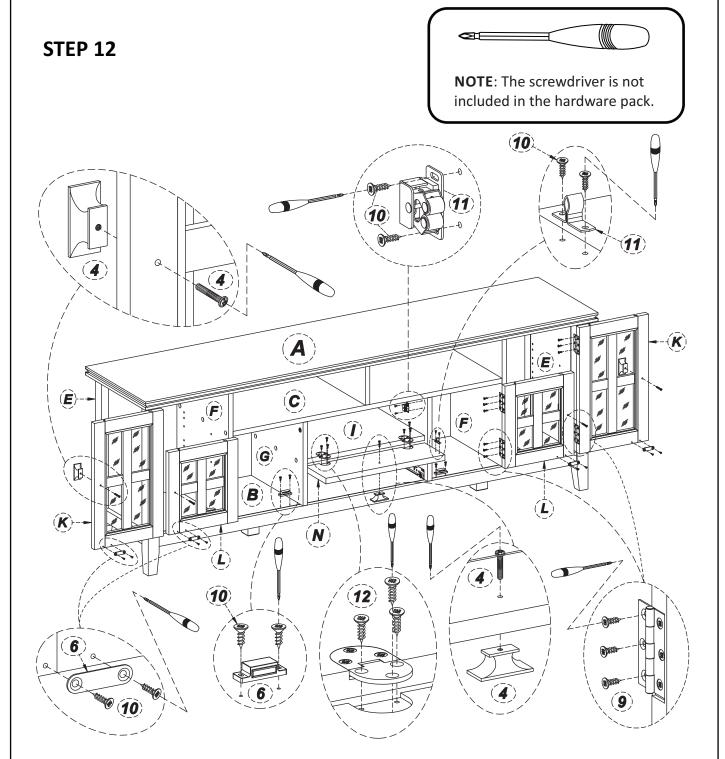

- 1. Attach hinges on Doors (K) to Sides (E) using Phillips Screw (9) into guide holes.
- 2. Attach hinges on Doors (L) to Divider (F) using Phillips Screw (9) into guide holes.
- 3. Attach hinges on Center Shelf (1) to Flip Down Door (N) using Phillips Screw (12).
- 4. Attach 4 Magnet Plates 6 to bottom corner of Door Kand Door Using Phillip Screw 10 into guide holes.
- 5. Attach 4 Magnets (6) using Phillip Screw (10) into guide holes on Bottom shelf (B).
- 6. Attach Latch 11 to Divider G and Flip Down Door N using Phillip Screw 10 into guide holes.
- 7. Use a Phillips screwdriver to attach Handles 4 to Doors K, L & Flip Down Door N through pre-drilled holes.

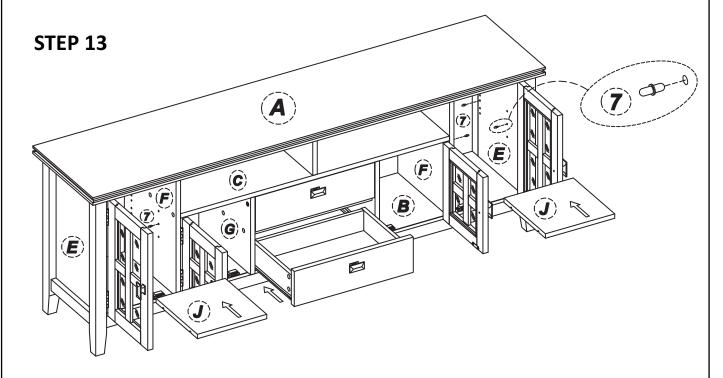


- 2. 2 Shelf Supports 7 may be used on back top of each Shelf 1 as a tipping restraint.

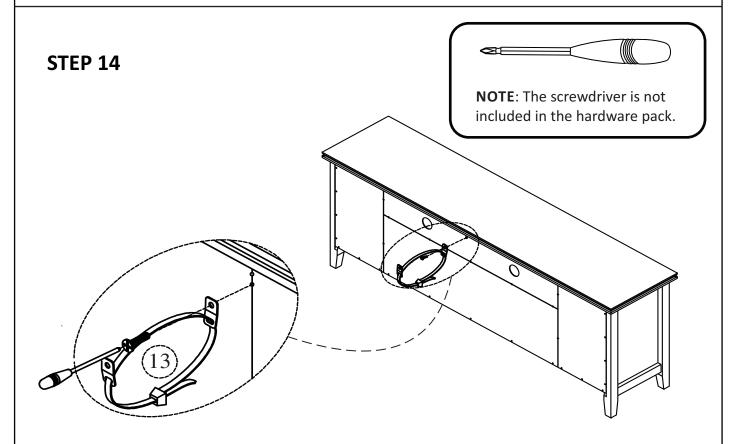


NOTE: Injuries and damage can occur from furniture tip-over. It is important to use the safety bracket included. If the tipping restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

 STEP 15



NOTE: The screwdriver is not included in the hardware pack.

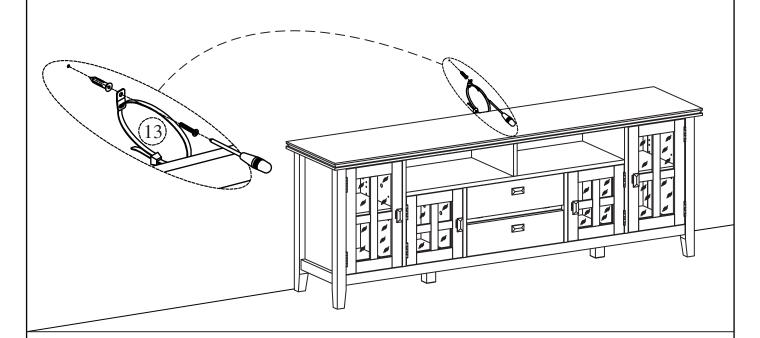

1. To attach Tipping Restraint 13, follow instructions on Tipping Restraint package.

When you determined the location for your unit, install the Furniture Tipping restraint. Carefully follow the instructions contained on the package.

WARRANTY Thank you for purchasing product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights. In case of any malfunction of your product (failure, missing parts, etc.) please contact us or by email. We reserve the right to repair or replace the defective product, at its discretion. This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavyduty or daily professional/commercial usage are not guaranteed. Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

| Questions, problems, missing parts? |
|---|
| Before returning your product please email Customer Support or call Customer Support For more information visit us on our website Like us on facebook |
| |
| |