


Product #:	WHHD2049
Product Name:	3-Piece Frosted Faux Cedar Branch Giftbox Holiday Decoration Set with Battery Operated Lights

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

INSTRUCTIONS:

- To insert batteries, open the battery box cover. Each gift box requires 3 x AA batteries (not included).
- Insert 3 x AA batteries, ensuring you follow the diagram in the battery box.
- Close the cover by sliding the cover back on the battery box.
- By pressing the button on the battery box, you can achieve the following:
 1. ON
 2. OFF

Battery Compartment

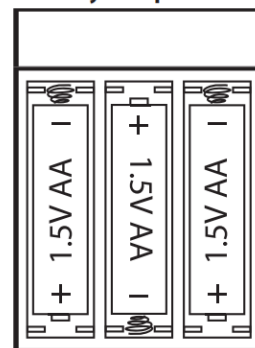

Storage Tips:

- Remove batteries from battery compartment.
- Store the product in a cool, dry location protected from sunlight where the temperature does not exceed 35°C (95°F).

WARNINGS:

- This product is for indoor decorative use only.
- Retain the box for storage and future reference.
- Carefully remove from packaging.
- To avoid risk of suffocation to animals or children, dispose of the plastic bag immediately.
- This is not a toy. For decorative purposes only. Keep children and pets away from the product.
- Choose a suitable location and ensure the products do not cause an obstruction or a potential hazard.
- Position on a flat level surface.
- Do not illuminate while the product is still within its packaging.
- Do not connect the item electronically to any other item.
- Do not leave the product operating unattended.
- Do not allow any plastic parts to come into contact with heat or flames or submerge in water.
- Batteries are to be inserted with the correct polarity.
- Remove batteries and store them in a cool, dry place when not in use.
- The supply terminals are not to be short-circuited.
- Important: bulbs are not replaceable.
- Color reproduction is accurate within the limitations of the manufacturing process. Also note, colors will vary under different lighting.