

ASSEMBLY INSTRUCTIONS

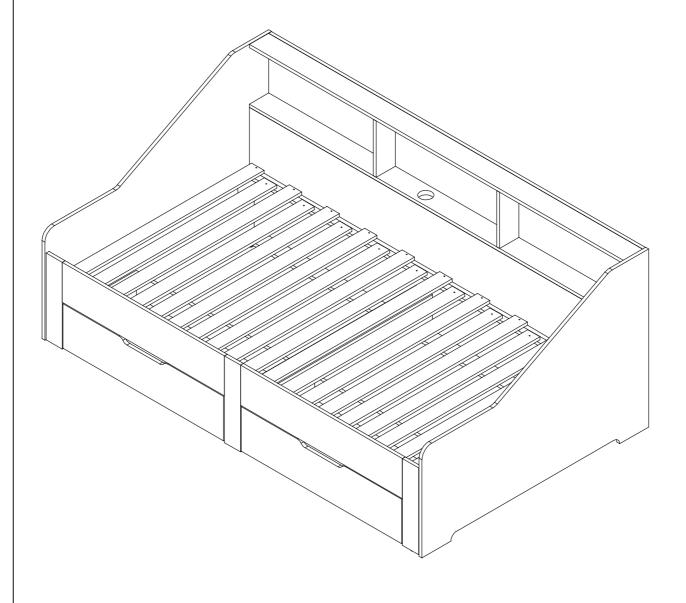


WF317433 / 317434 / 317435


Detail View

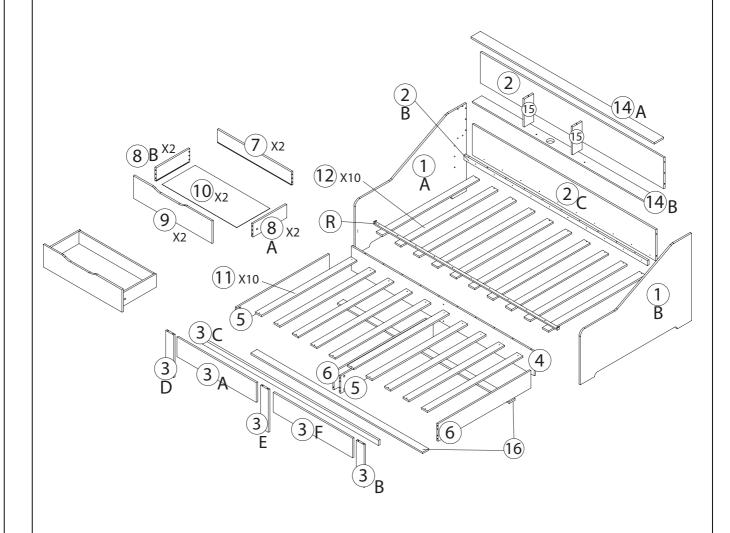


Part List

  
WF317433





WF317434

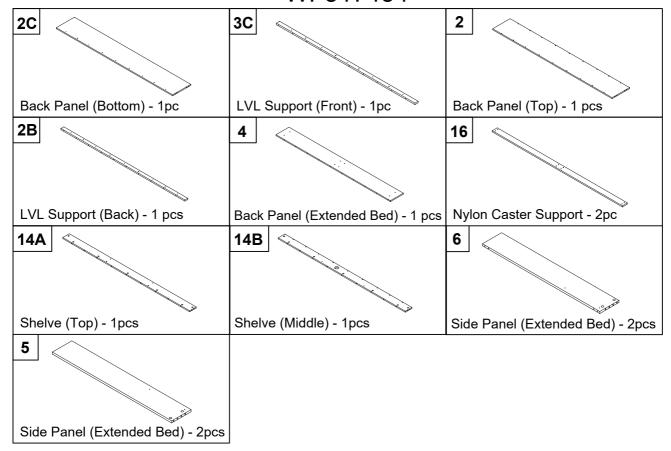


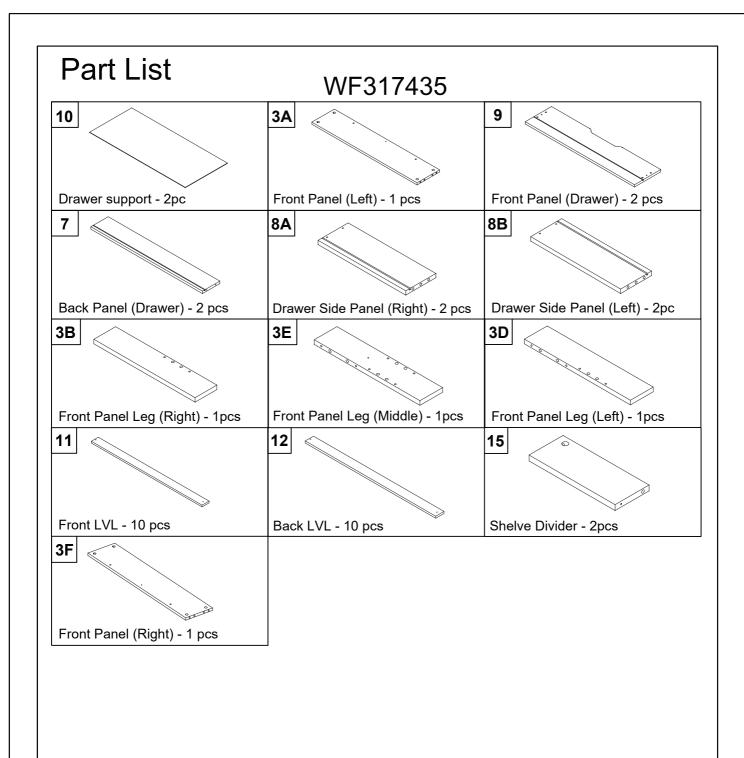


Hardware List WF317435

A		
		Ø8*30mm
Cam Nut (49pcs)	Cam Bolt (49pcs)	Wood Dowel (52pcs)
D	E	
Ø8*40mm	Ø4*30mm	Ø4*38mm
Wood dowel (8pcs)	Chip Board Screw (10pcs)	Chip Board Screw (10pcs)
G	H	
Ø4*25mm	Ø3.5*16mm	Ø6*40mm
Chip Board Screw (40pcs)	Chip Board Screw (35pcs)	JCBCW Screw (24pcs)
J Ø6*16mm	K	L
JCBC Screw (2pcs)	Drawer Slide 14" (2sets)	PVC Door Stopper (4pcs)
M	N	O
USB Port (1set)	Allen Key M4 (1pcs)	Stop Nylon Caster (6pcs)
P	Q	S
5/8"	Ø6	Ø8*20mm
Glider with Nails (4pcs)	Washer (2pcs)	Wood Dowel (8pcs)

 Hardware List WF317434



ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

 



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!

