

OUTDOOR FURNITURE COVER

USER & CARE MANUAL

Before Use

1. Make sure the furniture is clean, cool and completely dry before covering.
2. Remove or protect sharp edges that could puncture or tear the cover.
3. Remove loose cushions when possible, especially during long-term storage or humid weather.

Installation

1. Unfold the cover and place it evenly over the furniture.
2. Pull the cover down gently on all sides. Do not force or overstretch the fabric.
3. If your cover includes straps, buckles, drawcords or an elastic hem, secure them around the furniture to help prevent movement in windy conditions.
4. Keep any ventilation openings clear and avoid low areas where rainwater can collect.

Cleaning / Washing Instructions

Recommended	Hand wash or spot clean using warm water and a soft cloth, sponge or soft brush.
For heavier dirt	Use a small amount of mild soap if needed, then rinse thoroughly with clean water.
Do not	Machine wash, machine dry, dry clean, iron, or use bleach, harsh detergents, solvents or abrasive cleaners.
Drying	Air dry completely before placing the cover back on furniture or folding it for storage.

Care & Storage

- Remove standing water, leaves, snow and other debris as needed.
- Allow airflow under the cover to help reduce condensation and moisture buildup.
- Before storing, make sure the cover is clean and completely dry.
- Fold loosely and store in a clean, dry location away from direct heat.

Safety

- Keep away from open flames, fire pits, heaters, hot grills and other hot surfaces.
- Do not use the cover while furniture or equipment is hot.
- This cover is not a toy. Keep packaging and securing cords away from children.
- During severe storms or extreme winds, move the cover and furniture to a protected location when practical.