

 
Bean Bag Couch User Instruction

Unboxing Instructions

Important: Please read these instructions carefully before unboxing your bean bag couch.

1


Vacuum-Sealed Packaging

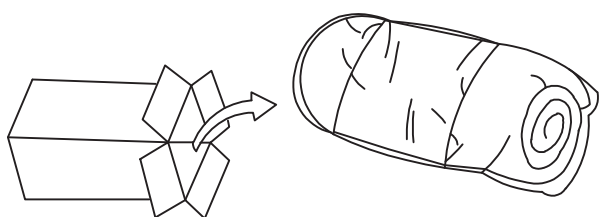

Note: Avoid using sharp objects to open the outer carton box to prevent damage.

2


Unpack the Plastic Bag

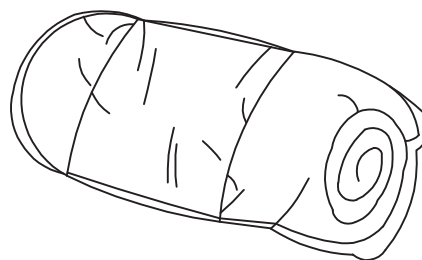

Carefully remove the plastic bag around the couch.

3


Fluff the Cushion

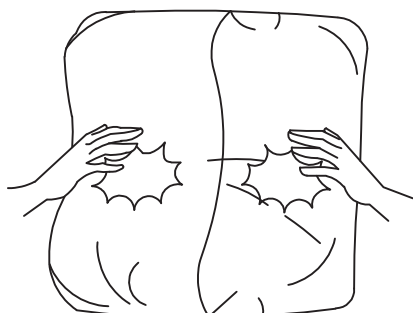

Gently pat and shake the inner cushion for about 10 minutes to ensure the foam fills the bag evenly.


4

Let the Cushion Expand

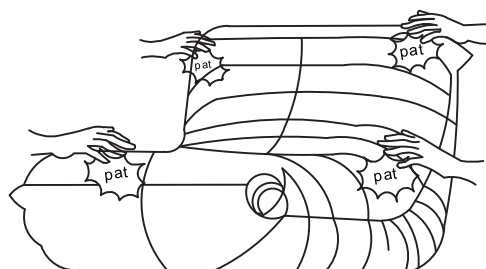

Place the couch in an upright position and allow the inner cushion to expand for 72 hours. Pat the couch and adjust the outer shape to help it fully take form.

5

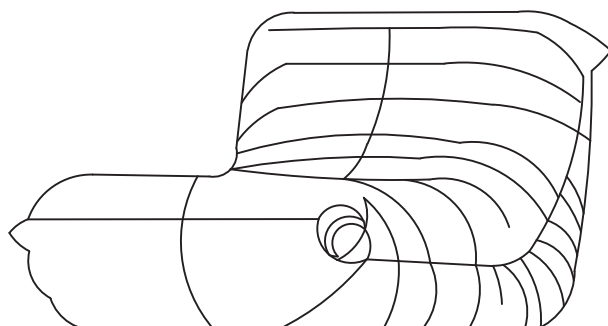

Enjoy Your Perfect Couch

After 72 hours, your bean bag couch should be fully expanded and ready to use!



If You Buy Multiple Ones:

It's likely that your couches may not all arrive on the same day if your order includes multiple ones. Please relax and feel free to contact us if you need any help.

Care Instructions

1. Unpack & Lay the Couch Flat

Unbox the package and lay the compressed couch flat on the floor.

2. Remove the Plastic Bag

Carefully remove the plastic bag, making sure not to use sharp objects like knives that could damage the fabric.

3. Allow the Couch to Rebound

Once the bag is opened, the bean bag couch will begin to expand. For the best results, keep the environment well-ventilated and dry. We recommend gently tapping the couch to help it regain its full shape and elasticity. Typically, the couch will be mostly expanded within 72 hours.

4. Creases and Wrinkles

There may be noticeable creases on the fabric when the couch is first unboxed due to the nature of compressed packaging. To smooth out these wrinkles as fast as possible, you can use an iron (on a low setting) to flatten the fabric.

5. Avoid Damp Floors

To prevent potential mold growth, avoid placing the couch on damp or wet floors for extended periods, and ensure proper ventilation.

6. Cleaning Tips

Use a specialized fabric cleaner to remove dirt or oil stains from the couch.

7. Need Help?

Feel free to reach out if you have any questions or concerns. We're here to assist you within 24 hours.