

ASSEMBLY INSTRUCTIONS

DINING CHAIR

ASSEMBLY REQUIREMENTS

1-Person Assembly

Assembly Time Per Chair (Approximate)


30 MINUTES

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.



We appreciate your business!

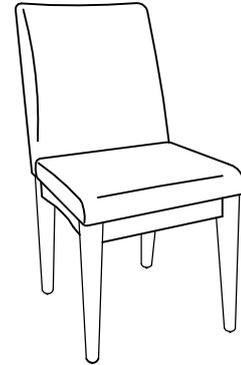

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Part List and Hardware List and ensure they are complete before you start assembling.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Please check all of the parts and quantities are included before assembly. Contact customer service for missing parts.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

CLEANING - Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.

FITTINGS - Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.

This product is for indoor and household use only - not for commercial use.

ASSEMBLY INSTRUCTIONS


DINING CHAIR

PART LIST (FOR 2 COMPLETE CHAIRS)

NO.	COMPONENT	QTY.
P1	CHAIR SEAT WITH BOX FRAME	2 PCS.
P2	LEFT FRONT LEG	2 PCS.
P3	RIGHT FRONT LEG	2 PCS.
P4	LEFT BACK LEG	2 PCS.
P5	RIGHT BACK LEG	2 PCS.

HARDWARE LIST (FOR 2 COMPLETE CHAIRS)

NO.	DESCRIPTION	QTY.
H1	JCBC BOLT M6 x 60 MM 	16 PCS.
H2	1/4" SPRING WASHER 	16 PCS.
H3	1/4" FLAT WASHER 	16 PCS.
H4	ALLEN KEY 	1 PC.

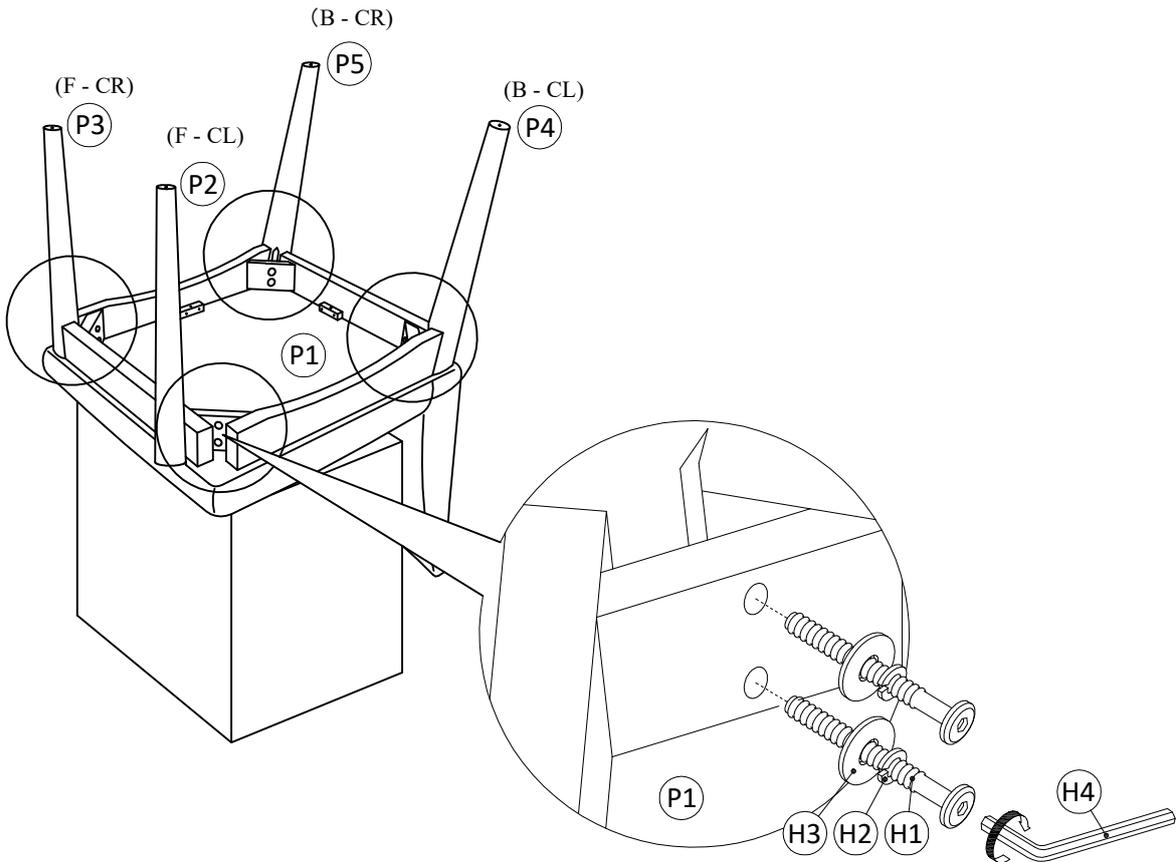

- Place the Chair Seat with Box Frame (P1) bottom-side up on an elevated surface that does not scratch or damage the part.
- Position Chair Legs (P2, P3, P4, P5) against the corners of the box frame and align the screw holes on the (P2, P3, P4, P5) to the screw holes on the corner block of the apron.
- Insert JCBC Bolt (H1) fitted with Spring Washer (H2) and Flat Washer (H3) into each hole. Use Allen Key (H4) to drive (H1) to fasten the Chair Legs (P2, P3, P4, P5) to corner block. Do not tighten (H1) completely at this time until both screws are in place on each leg.
- Tighten all of the JCBC Bolt (H1) used in this step - do not over tighten.