
ASSEMBLY INSTRUCTIONS

STEP 1

Unfold CABINET BODY (A).

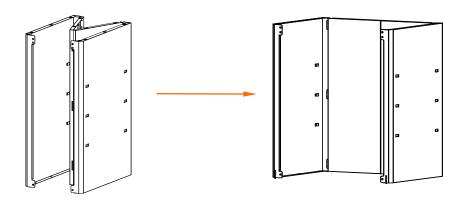

A (1)




STEP 2

Two people are recommended for ease of assembly. Stand the unfolded CABINET BODY (A) upside down on the floor.

Note: There is a 40mm diameter hole on the back panel of the CABINET BODY (A). When the CABINET BODY (A) is upside down, this hole should be in the upper left corner of the back panel.

Turn BOTTOM PANEL (C) upside down. Tilt the front diagonally downward. First, insert the lip into the inner side of the tab of CABINET BODY (A) at the right side, then insert into the left side.

Follow the order indicated, insert (12) BLACK SCREWS (L) through holes on BOTTOM PANEL (C) and tighten fully with a Phillips screwdriver. Insert (4) BLACK SCREWS (L) through the tabs on the front of CABINET BODY (A) and tighten fully to BOTTOM PANEL (C).

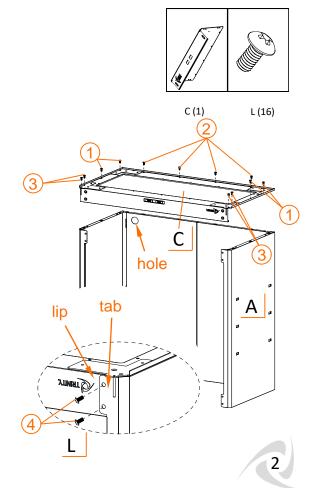


ASSEMBLY INSTRUCTIONS

STEP 3



J (4)

Screw FEET LEVELERS (J) into each preinstalled nut in four corners of the BOTTOM PANEL (C).

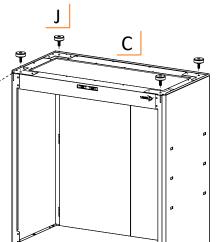


STEP 4


Stand the unit right side up.

Tilt front of TOP PANEL (B) diagonally downward. First, insert the lip into the inner side of the tab of CABINET BODY (A) at the right side, then insert into the left side.

Follow the order indicated, insert (8) BLACK SCREWS (L) through holes on TOP PANEL (B) and tighten fully with a Phillips screwdriver. Insert (4) BLACK SCREWS (L) through the tabs on the front of CABINET BODY (A) and tighten fully to TOP PANEL (B).

 tab



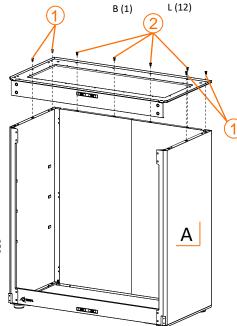

ASSEMBLY INSTRUCTIONS

STEP 5


Note: RIGHT DOOR (E) has a lock on it.

Attach LEFT DOOR (D) to the cabinet by sliding the LEFT DOOR (D) onto the pivot of door hinge which is welded to the BOTTOM PANEL (C)

Position LEFT DOOR HINGE (F) at the left front corner of TOP PANEL (B). Make sure to insert the pivot of DOOR HINGE (F) fully into the cylinder on the LEFT DOOR (D). Align holes on DOOR HINGE (F) to pre-installed nuts on TOP PANEL (B). Insert BLACK SCREWS (L) through these holes. Tighten fully with a Phillips screwdriver.

Repeat for RIGHT DOOR (E).


Adjust FEET LEVELER (J) as needed to ensure your cabinet is level and stable.

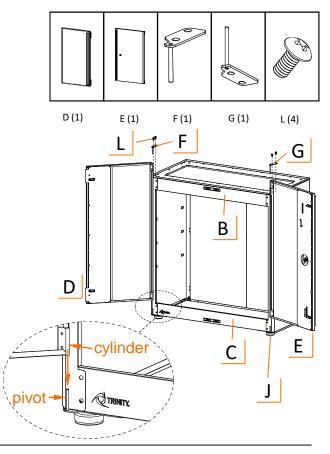

STEP 6

Attach SHELF SUPPORT (I) by hooking it over the position tab at the desired height. Make sure all four SHELF SUPPORTS (I) are at the same level.

Tilt SHELF (H) diagonally to move it inside the cabinet. Place SHELF (H) on top of all four SHELF SUPPORTS (I).

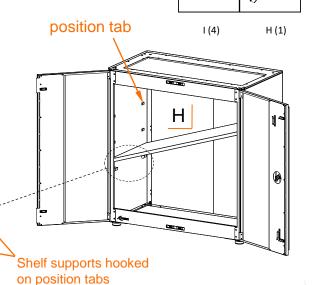


USAGE INSTRUCTIONS

SHELF ADJUSTMENT

Ensure all products have been removed from the shelf.

To adjust the shelf height position, take the shelf out of the cabinet, re-attach the shelf supports to the position tabs at your desired height.


Tilt the shelf diagonally to move it inside the cabinet. Place the shelf on top of all four shelf supports.

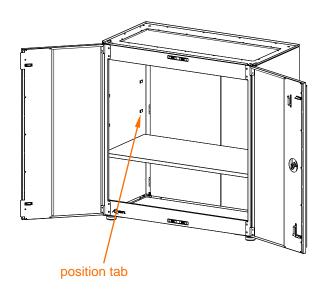


LOCK AND UNLOCK

Insert the key into the lock on the right door. Turn it clockwise 90 degree to lock the door. Turn it counter-clockwise 90 degree to unlock the door.

Before locking the unit, make sure the doors are fully closed.

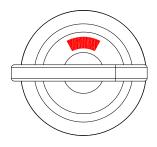

Red indicates locked

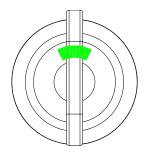

Green indicates unlocked