

Remote Control Operating Instructions

Remote Control Operating Instructions

Power/Calibration Button: Press briefly to turn on the light, press for a long time to calibrate. Once calibration is successful, the LED light will flash rapidly. After calibration, no other remote controls can control the LED light. When not calibrated, it is in the normal mode, and any other identical remote controls can control it.

Power On/Off/Reset Button: Short press to turn off the light, long press to clear the code. After clearing the code, the remote control will be in the active code state. The LED light will flash slowly in the active code state after successful code clearing. Any identical remote control can control it.

Color temperature adjustment ring: By clicking or sliding the color temperature adjustment ring, the display color temperature of the lamp can be changed.

Brightness adjustment: The brightness can be adjusted by using the plus and minus keys in any mode.

General lighting: Switch to the fixed neutral light mode and the brightness can be adjusted.

Warm light illumination: Warm light illumination mode, with adjustable brightness

Cold light illumination: Cold light illumination mode, with adjustable brightness

Night light mode: Offers low-brightness night light illumination. There are three modes to choose from: cold light, warm light, and neutral light. The brightness can be adjusted.

