

Please read completely before setting up your QUIK SHADE® Instant Canopy

It is your responsibility to read and save these instructions before attempting to set up your QUIK SHADE® Instant Canopy. We would also like to suggest that you follow these safety precautions, care and maintenance tips when using your QUIK SHADE®:

- 1. Never set up or continue to use in any rain, wind or storm conditions, especially lightning storms. Damage can occur to your QUIK SHADE® and put you and others in potential danger.
- 2. We suggest that you take your time in order to avoid bending the frame or pinching your fingers or hands while opening and closing the frame.
- 3. Avoid setting up your QUIK SHADE® on steep inclines.
- 4. Always use the provided stakes to secure your QUIK SHADE® to the ground unless you set up on concrete or asphalt.
- 5. Do not use your QUIK SHADE® for permanent shelter. It was designed for temporary use only.
- 6. Keep your QUIK SHADE® canopy away from heat and flames at all times. Do not barbecue or build fires under you QUIK SHADE®.
- 7. Never leave your QUIK SHADE® unattended.
- 8. Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives or bleach. Do not machine wash.
- 9. Never fold or store your QUIK SHADE® when it is wet or damp. Let it dry completely to avoid mildew.

10. ALWAYS USE COMMON SENSE.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

DO NOT RETURN YOUR CANOPY TO THE PLACE OF PURCHASE

Please contact Bravo Sports for questions, comments, parts & accessories, or assistance with any warranty related issues. Bravo Sports 12801 Carmenita Rd. Santa Fe Springs, CA 90670 quikshade.com

Toll free: (800) 248-5327 Canada: (877) 992-7286