 




INSTALLATION

Product Manual

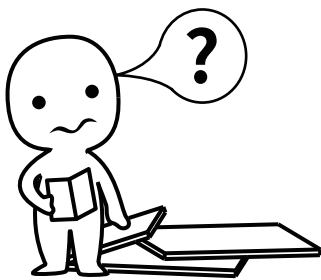


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

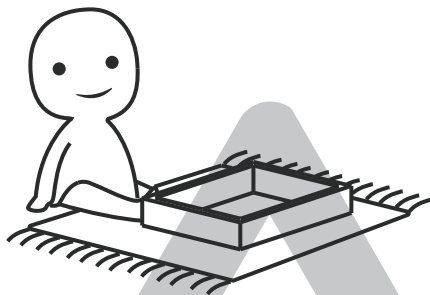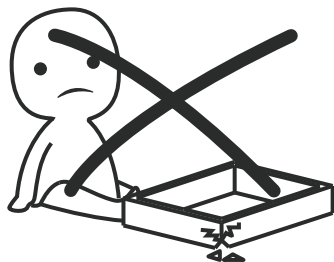



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

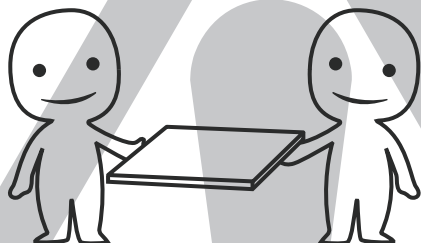

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

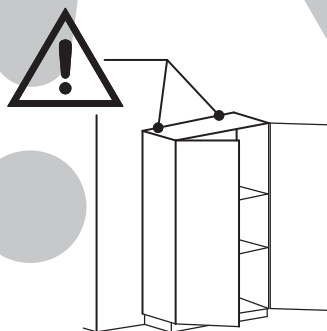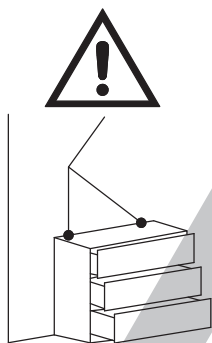

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

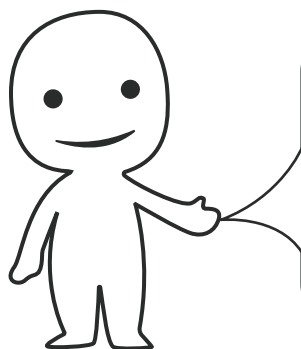


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 76




Ø 5 x 42mm

B x 76




Ø 15 x 10 mm

 C x 60



Ø 6 x 40 mm

 D x 18



Ø 5x 40 mm

E x 46

 


Ø 3.5 x 12 mm

F x 2



G x 6

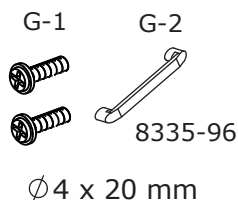


Ø 4 x 20 mm

H x 38




 J x 16




Ø 3.5 x 12 mm

 K x 4

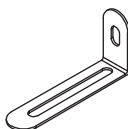

L x 16

 

Ø 26DW

M x 4



 
Ø 8x60 M5x55

N x 110



Ø 3.5 x 14 mm

P x 2

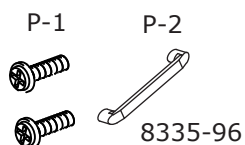




Ø 4 x 8 mm

Q x 2



   x 2

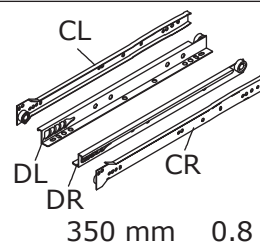

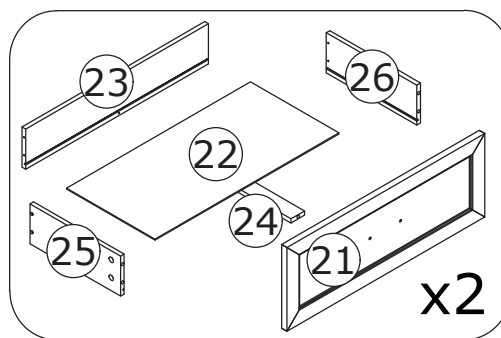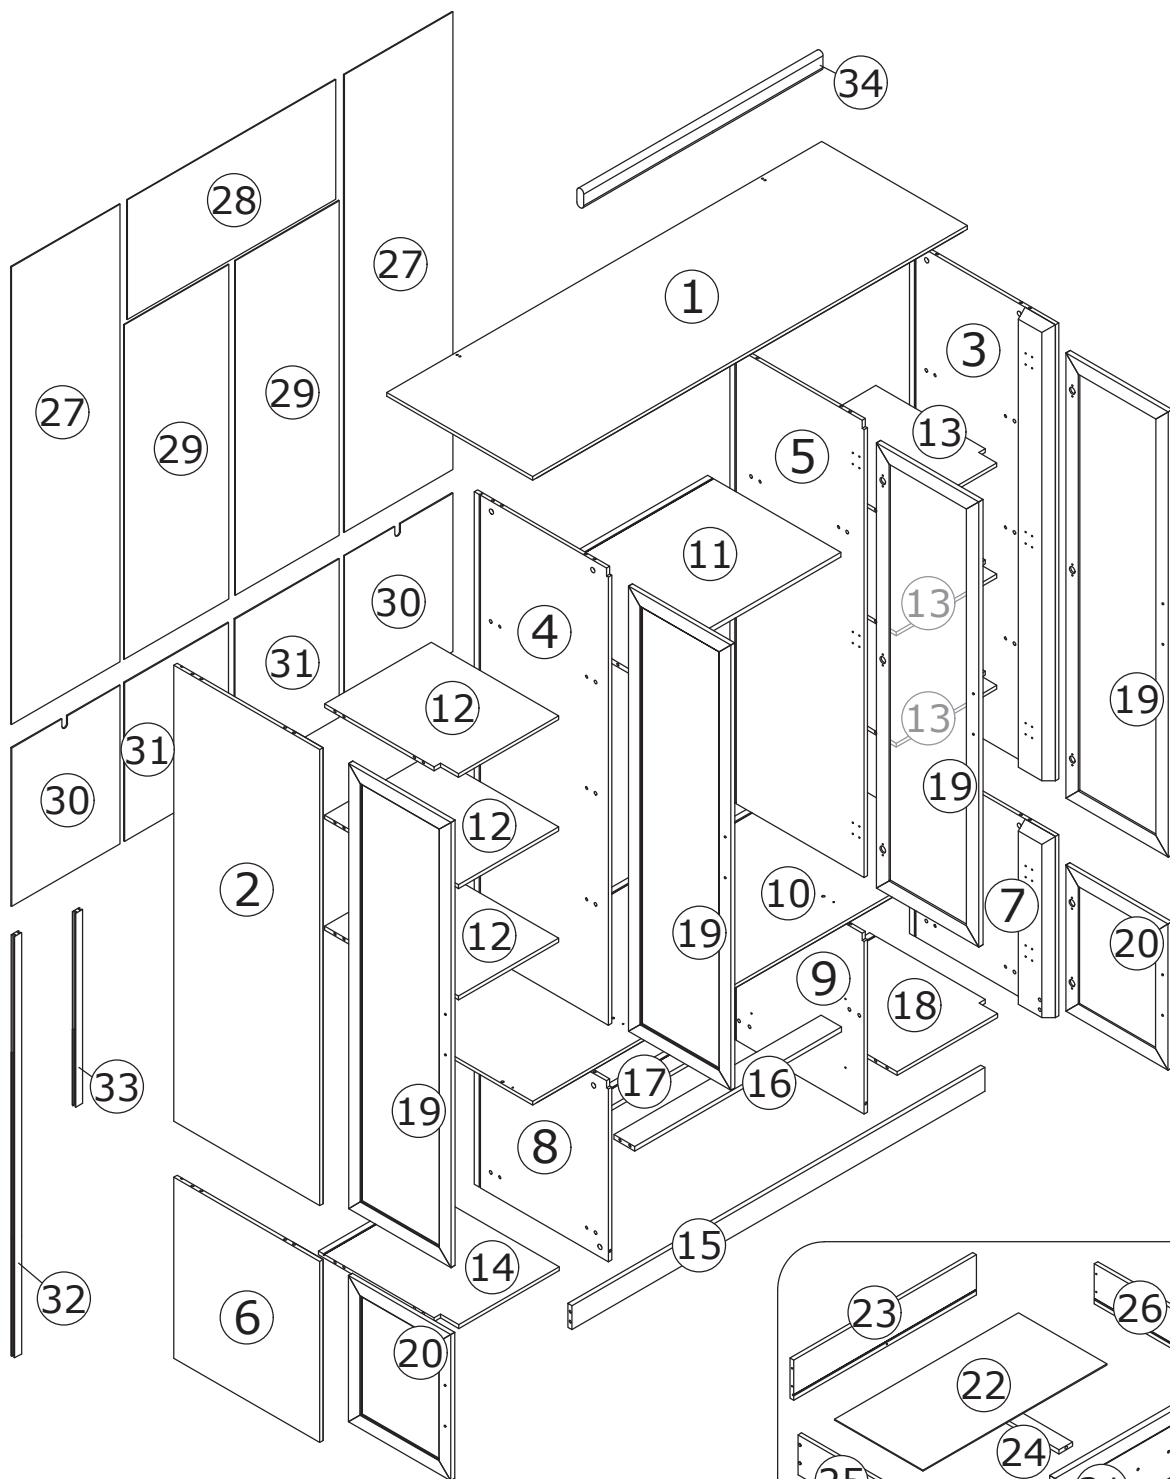


⚠ WARNING






Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

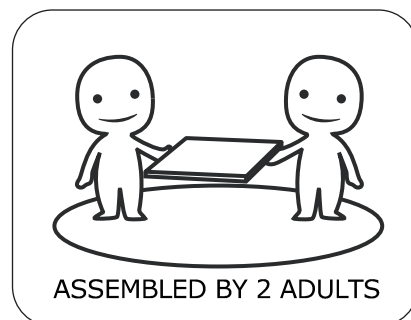




1

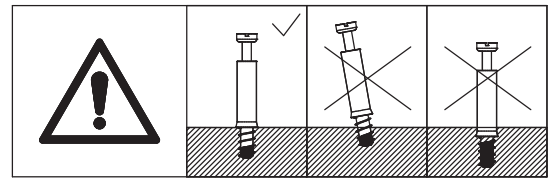  
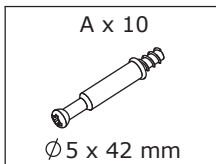 


 Screw threaded rods A into panels 6,
7 and 15 as shown.

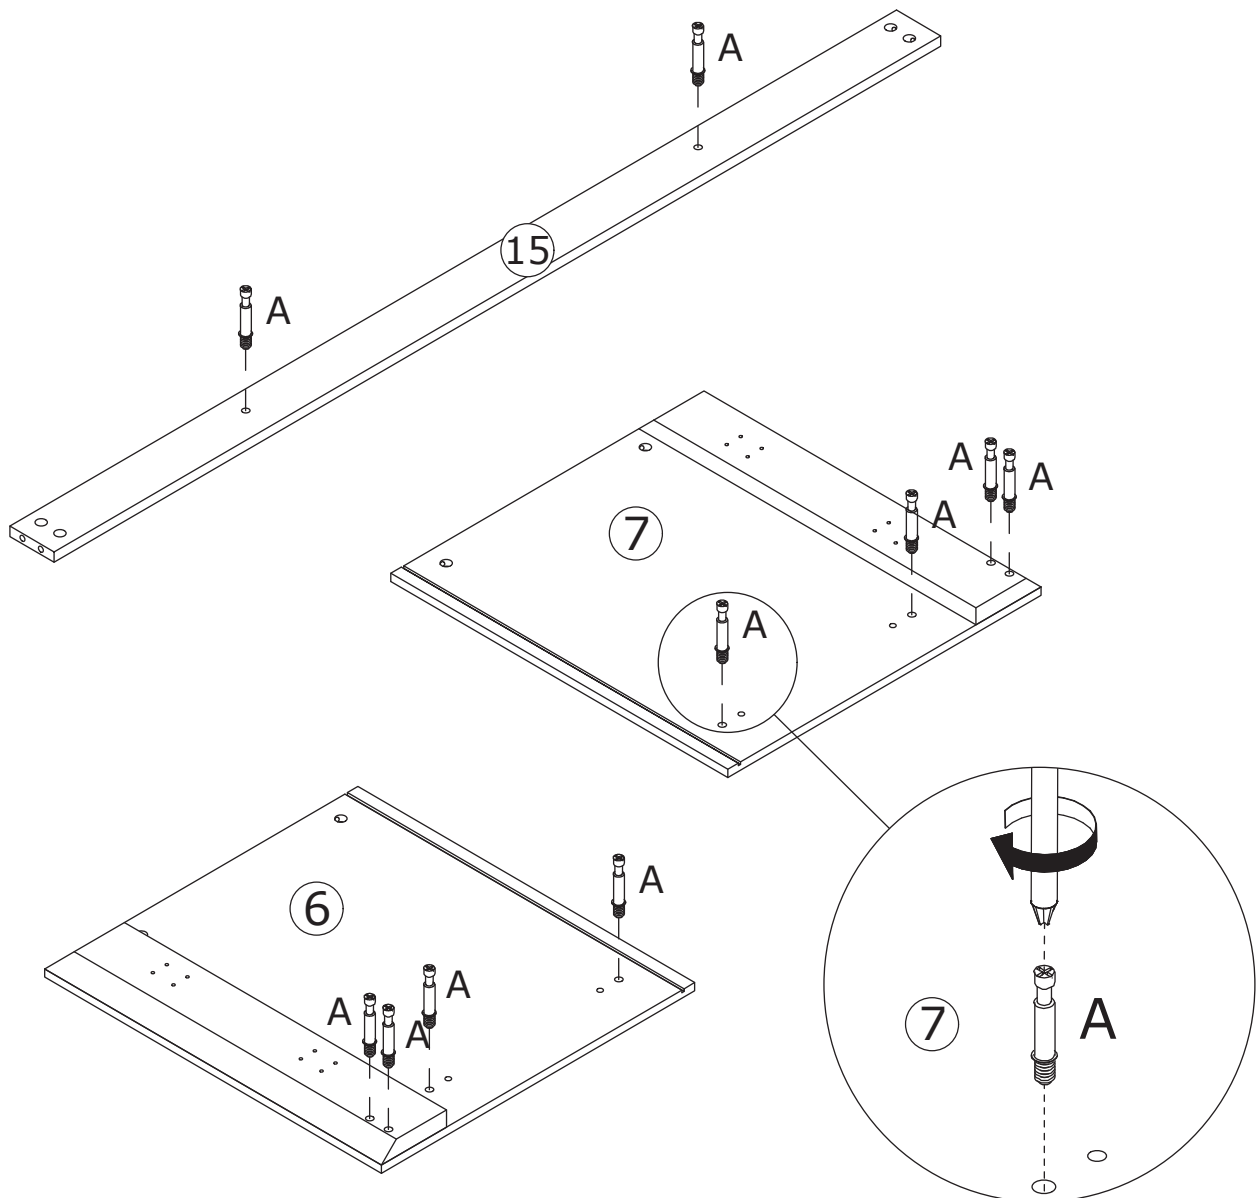


2

  
 
A x 6  Ø5 x 42 mm	E x 4  Ø3.5 x 12 mm	CL x 2  350 mm	
--	--	---	---

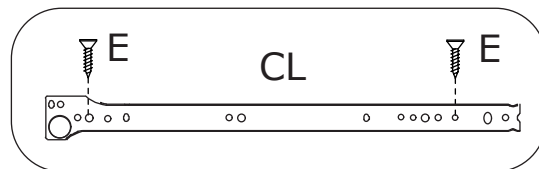 
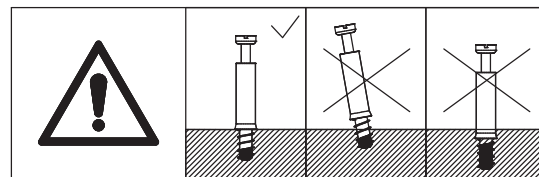 


 Attach slide rail CL to panel 8 using screw E, then screw threaded rods A into as shown.

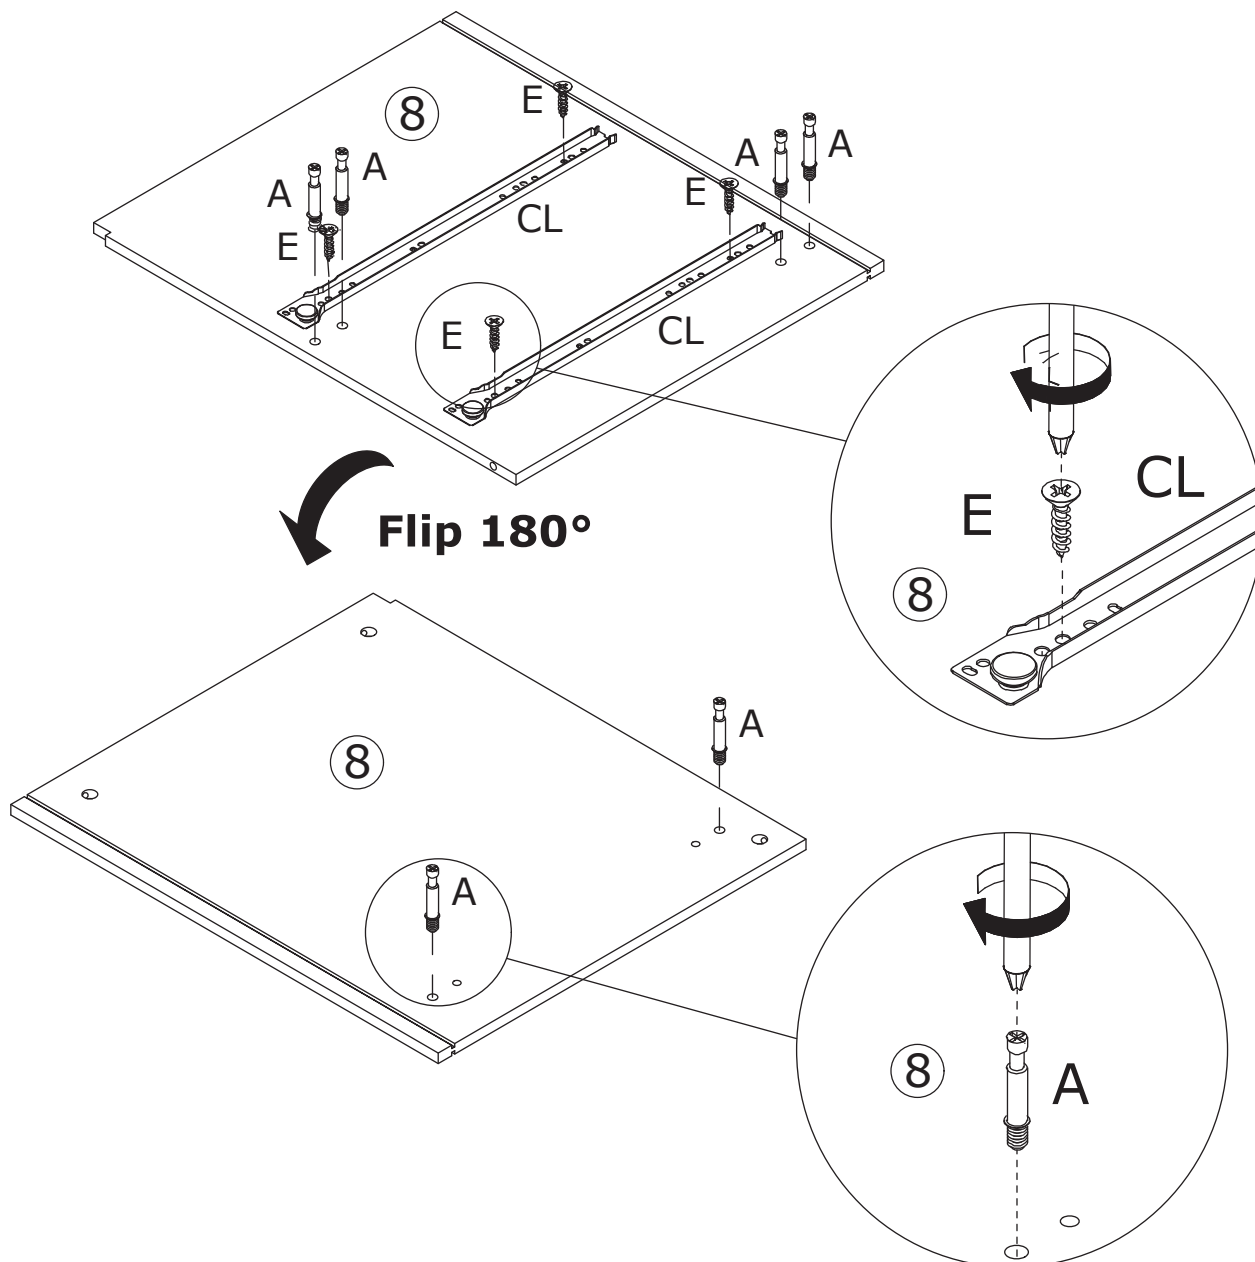


3

  A x 6  Ø5 x 42 mm	E x 4  Ø3.5 x 12 mm	CR x 2  350 mm	
--	--	---	---

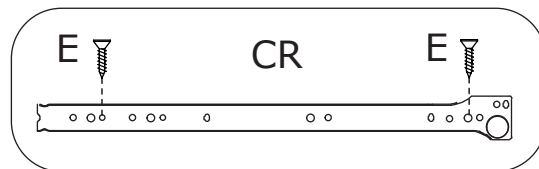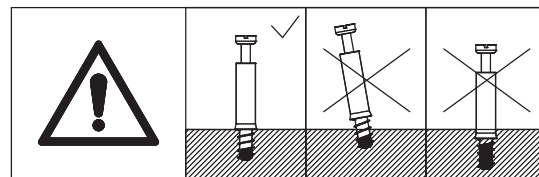  

 Attach slide rail CR to panel 13 using screw E, then screw threaded rods A into as shown.




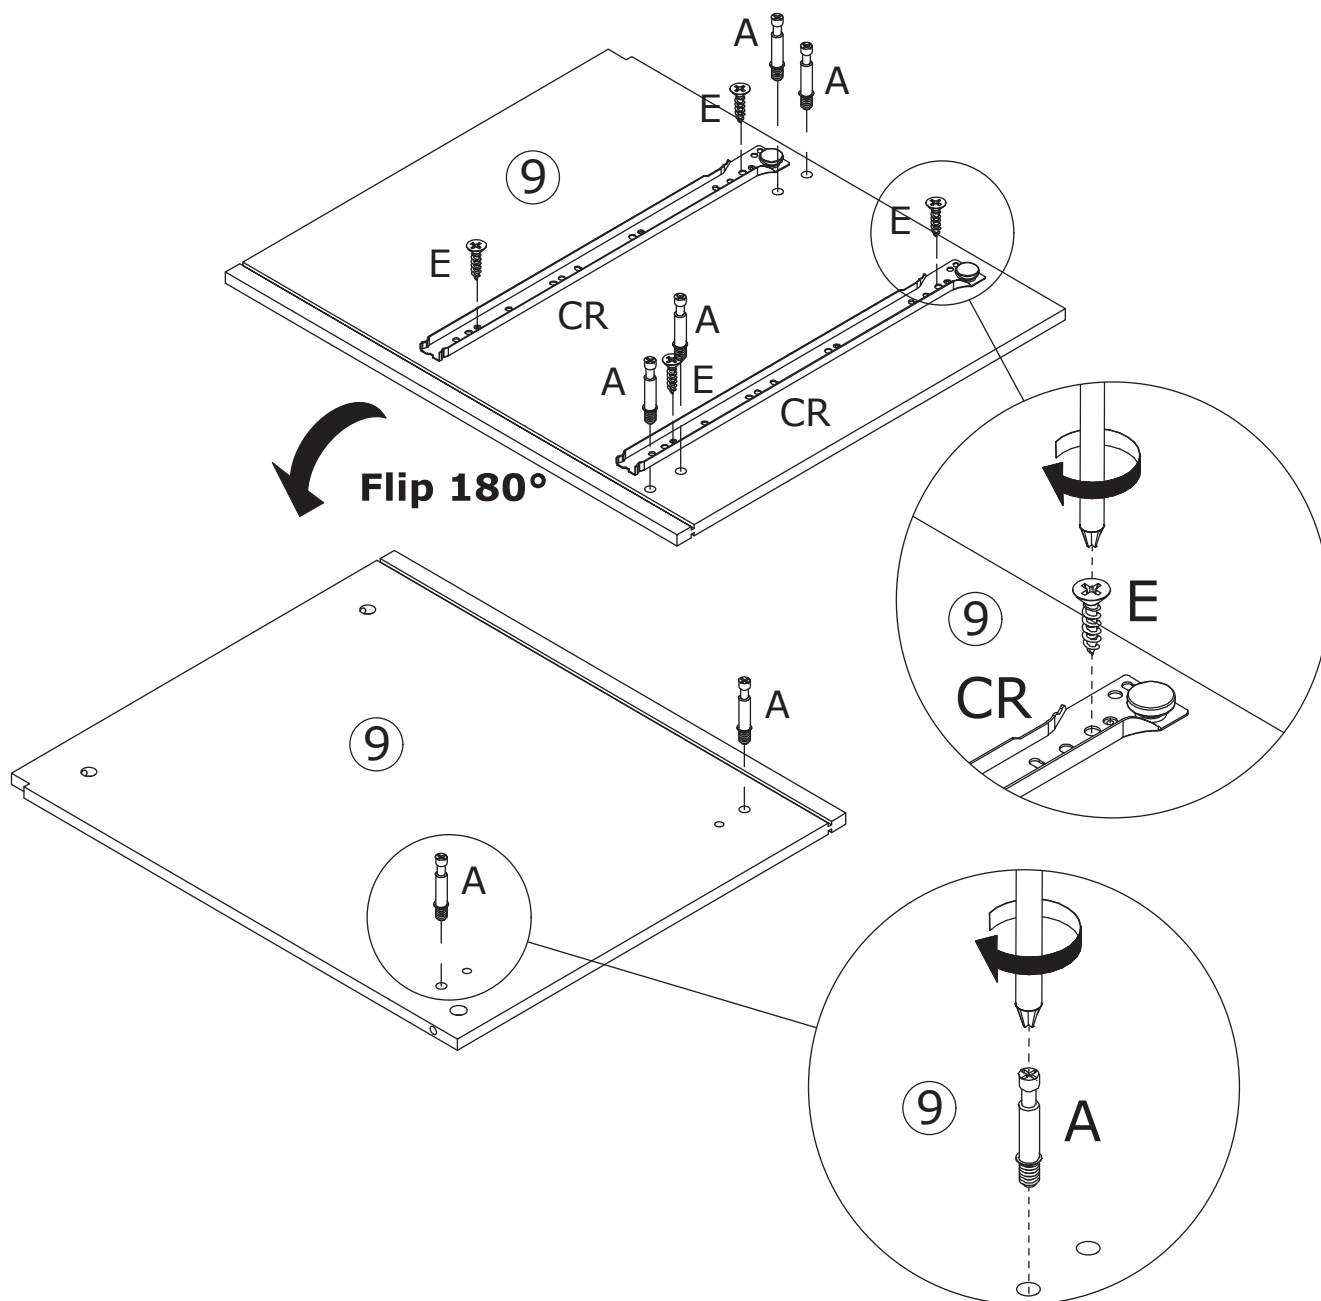


4


B x 8



    Ø 15 x 10 mm

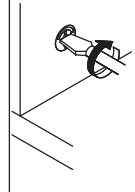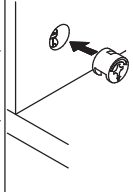

 Align panels 16 & 17 with panels 8 & 9 and tighten clockwise with cam lock B as shown.

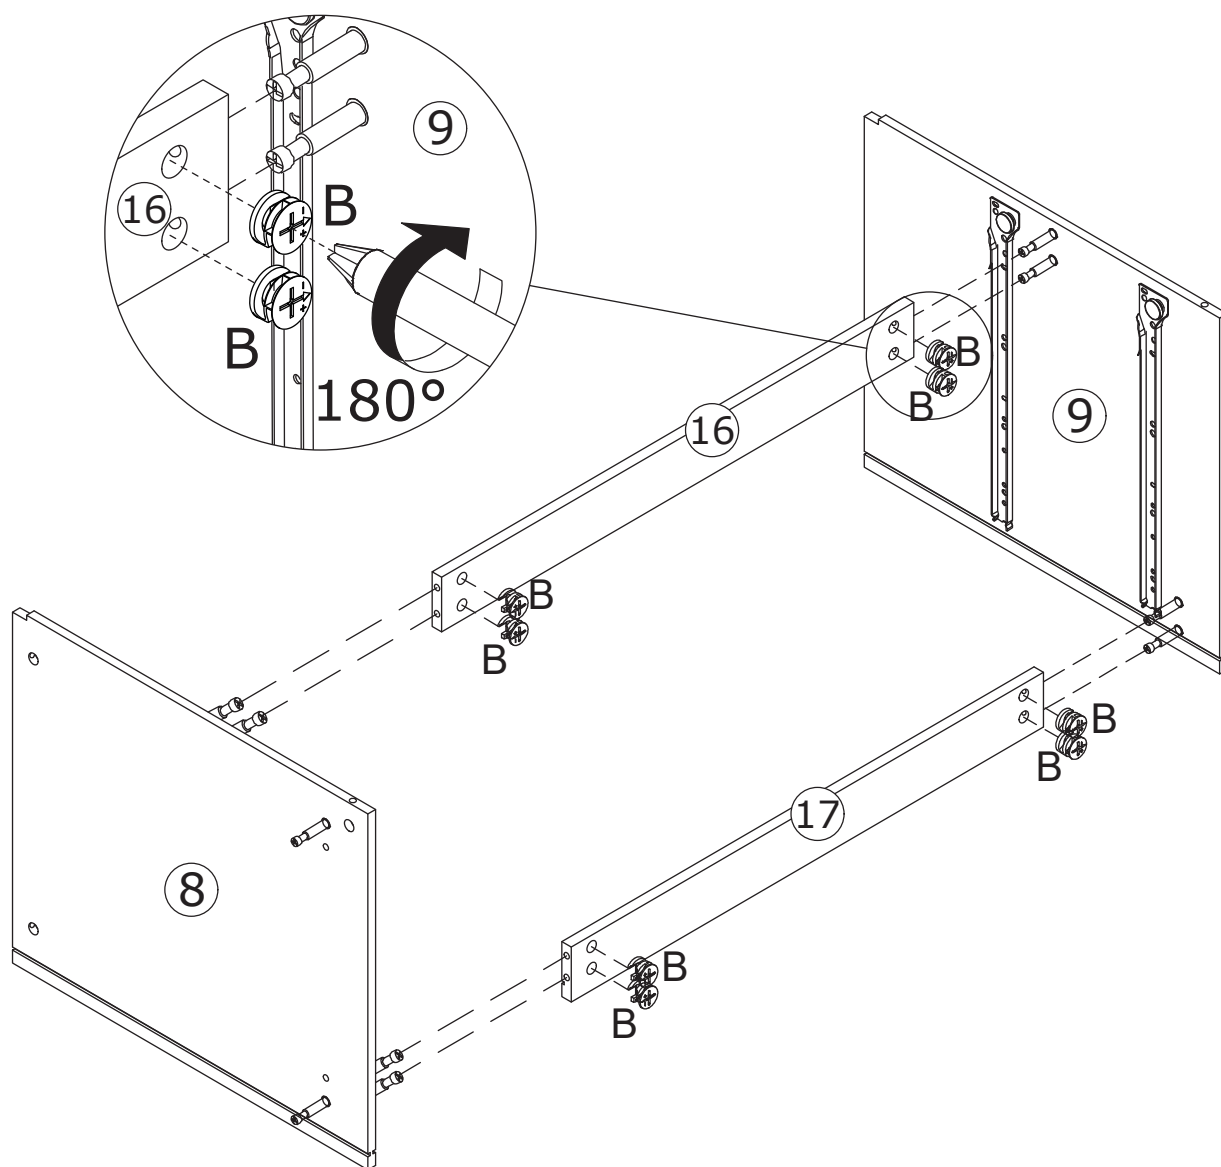

5

B x 6

 
 
 
 
 
 


Ø 15 x 10 mm


C x 4




Ø 6 x 40 mm

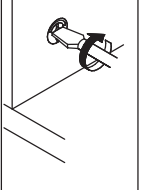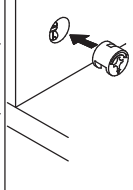

 
Align panels 14 and 18 with the holes on panels 8 and 9, secure them with dowel C, then tighten clockwise with cam lock B as shown. Align panel 15 with panels 8 & 9 and tighten clockwise with cam lock B as shown.

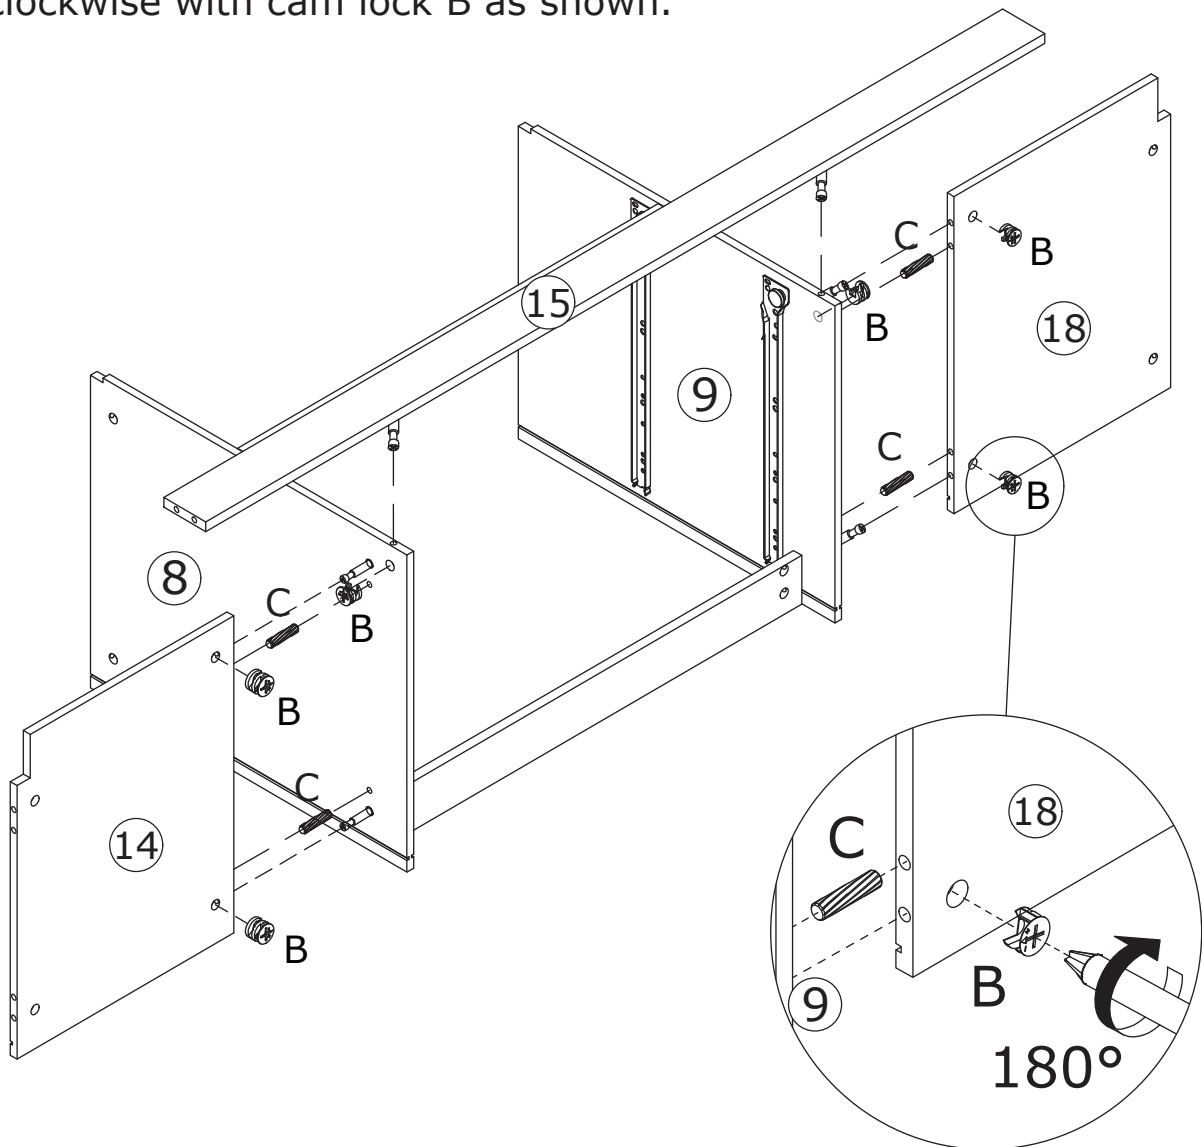

6

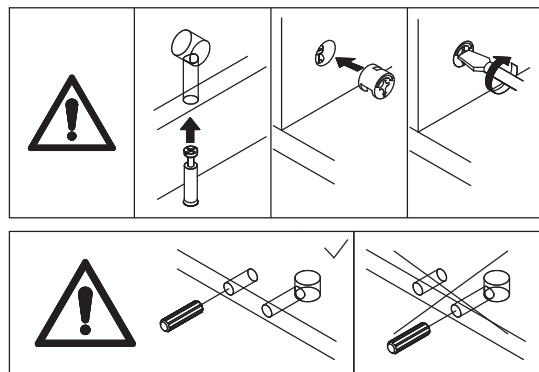 


 Align panels 14, 15 and 18 with panels 6 and 7, secure them with dowel C, then tighten clockwise with cam lock B as shown.



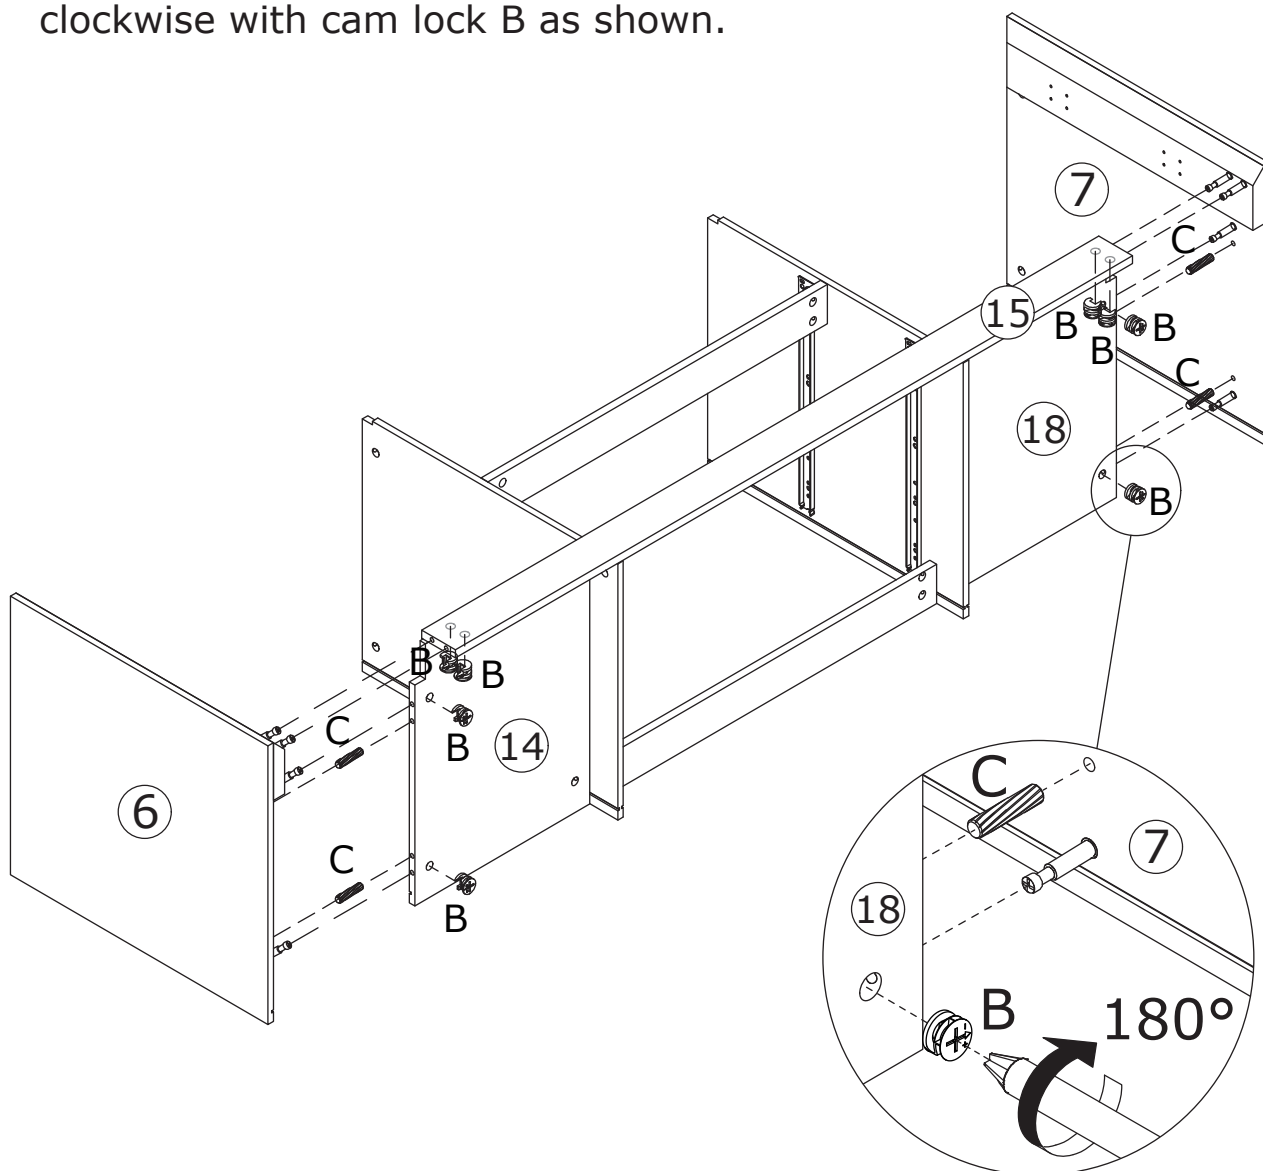


7

 
Insert panels 30, 31 and 33 into the grooves smoothly.

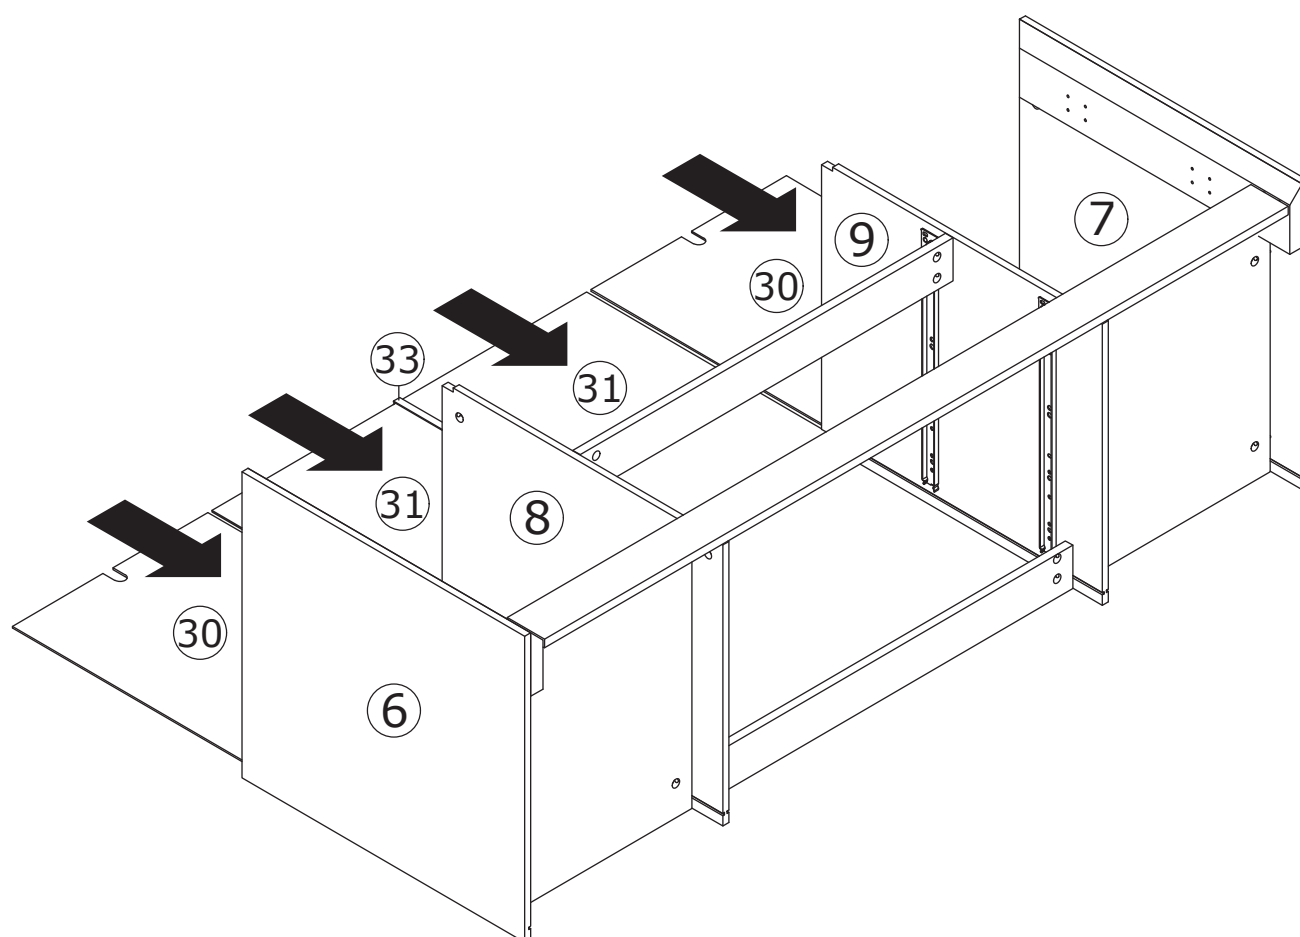



8

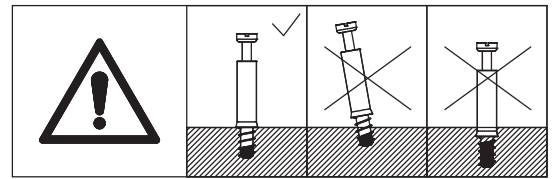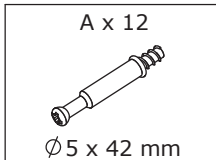   


 Screw threaded rods A into panels 2 and 3 as shown.

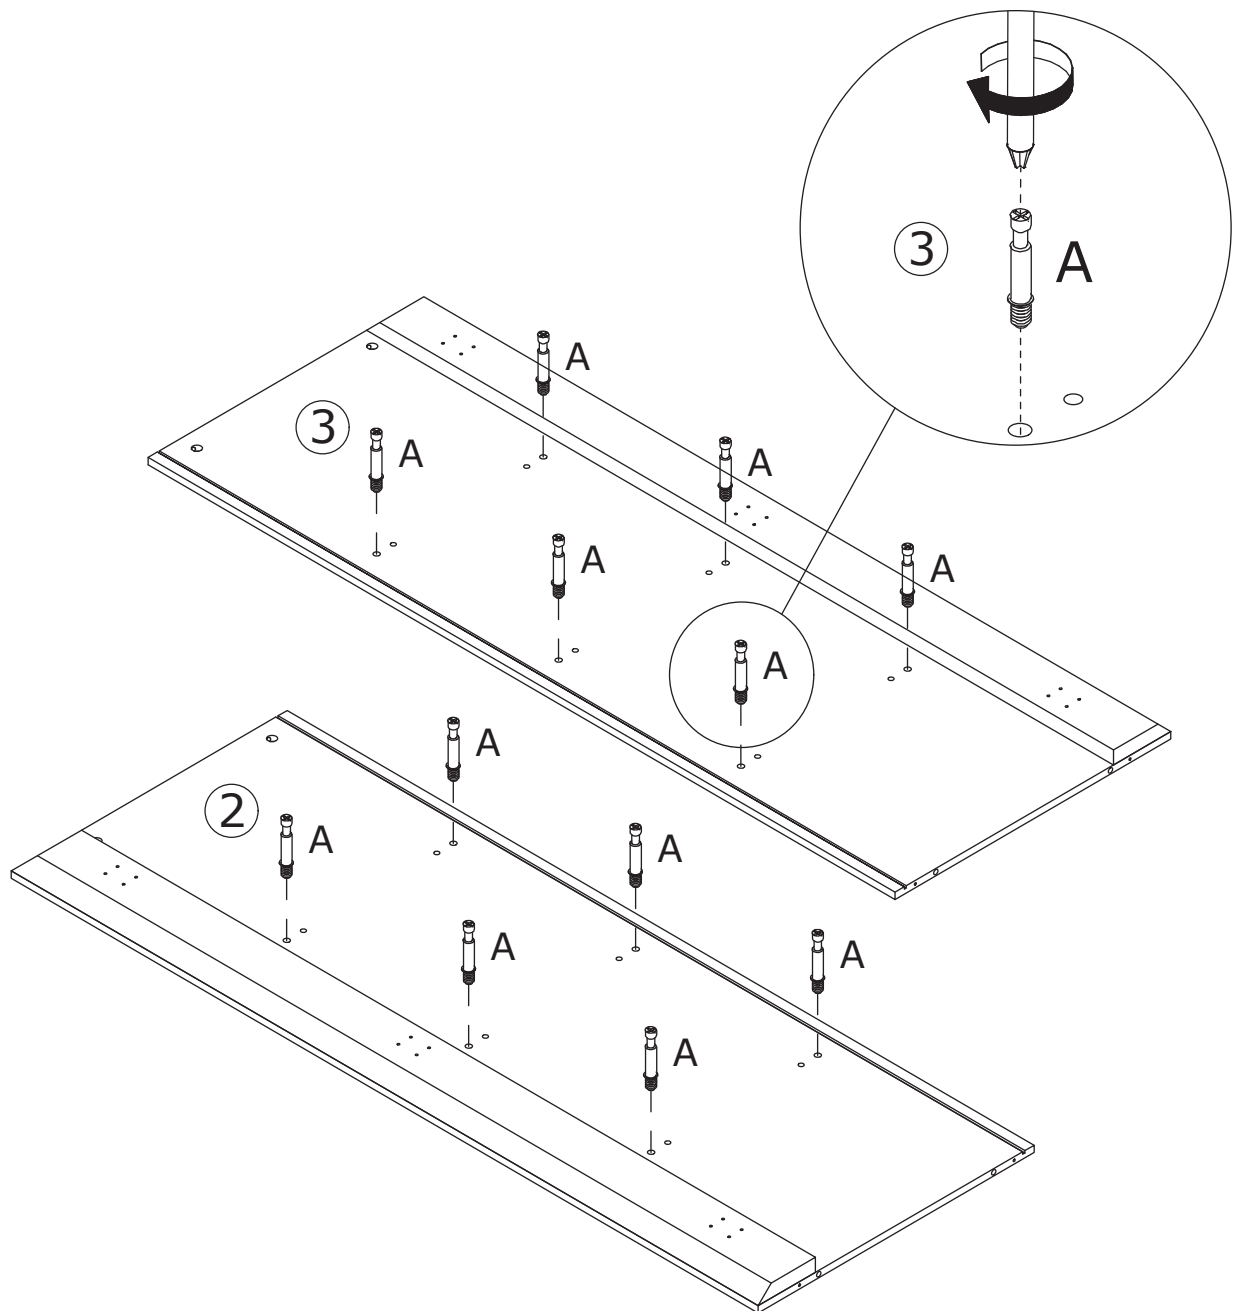


9

  A x 8  Ø5 x 42 mm	E x 2  Ø3.5 x 12 mm	Q x 1 	
--	--	--	---


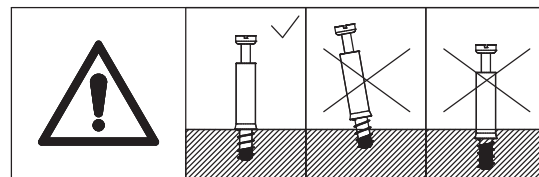 



Screw threaded rods A into panel 5 as shown.

 Secure part Q to panel 5 by using screw E as shown.

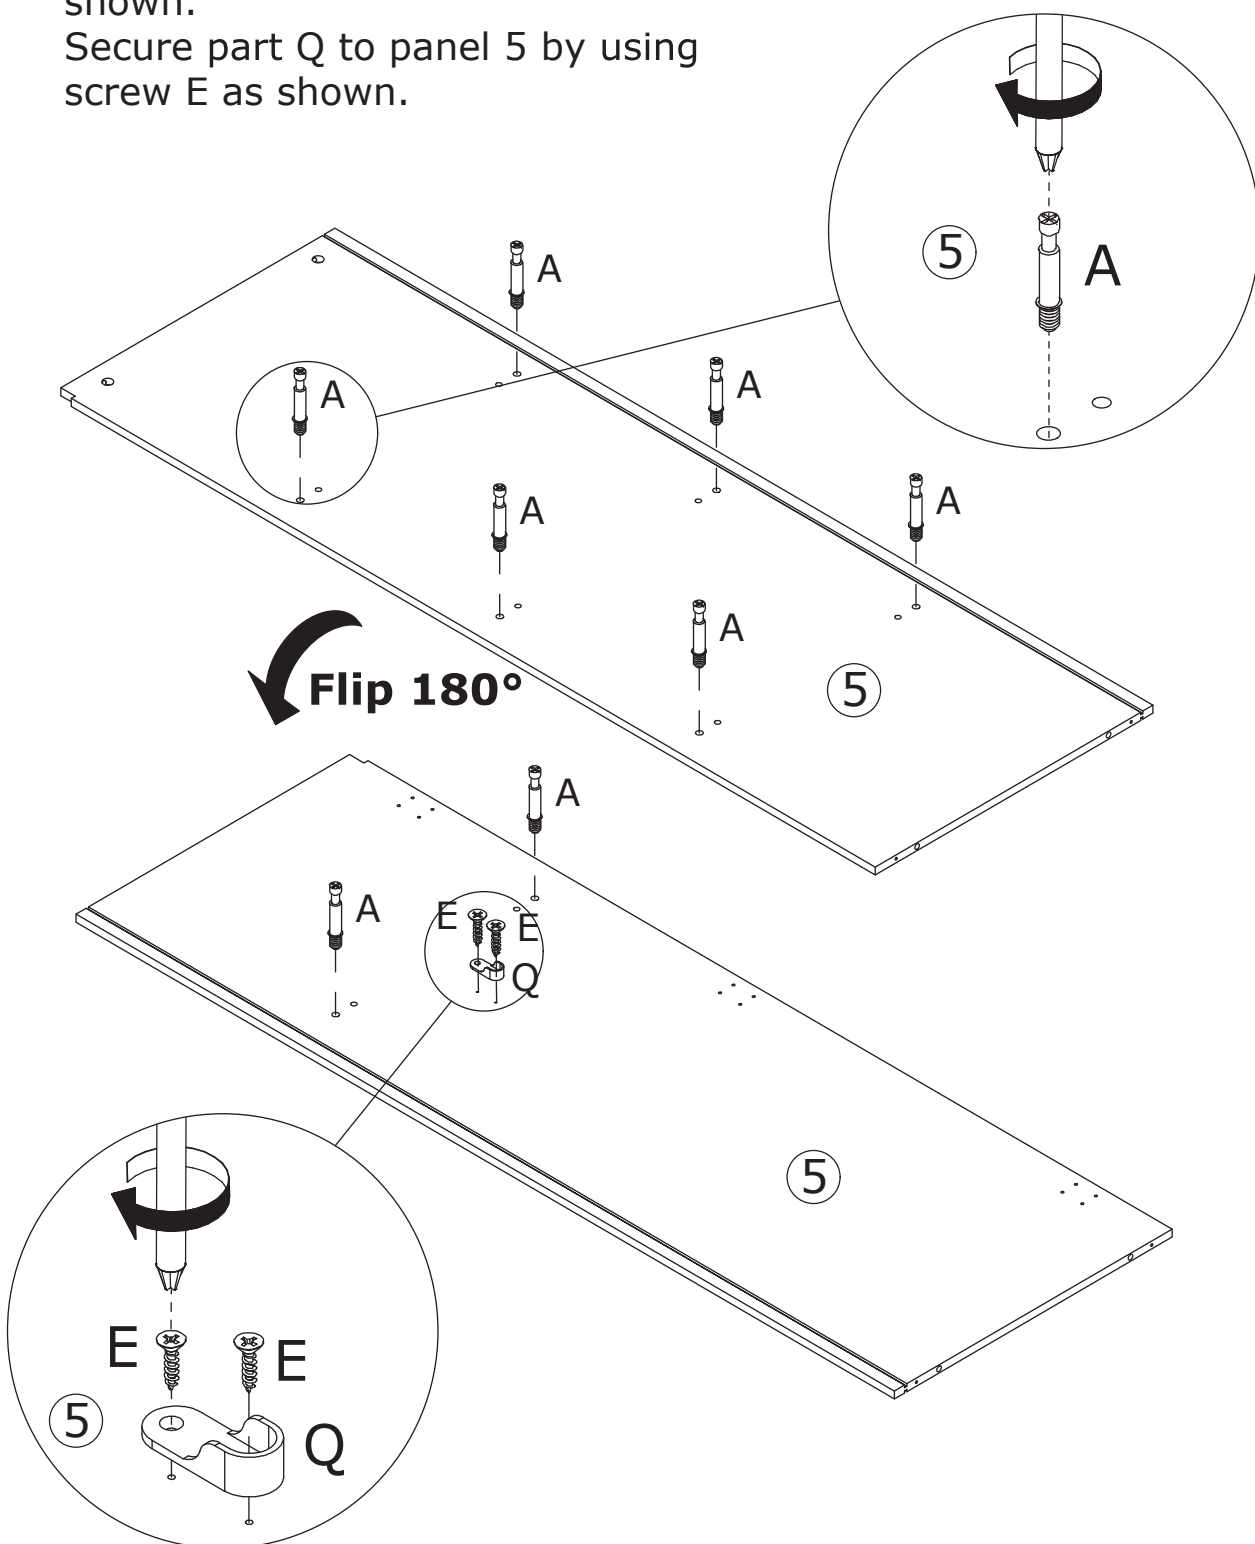


10

  A x 8  Ø5 x 42 mm	E x 2  Ø3.5 x 12 mm	Q x 1 	
--	--	--	---

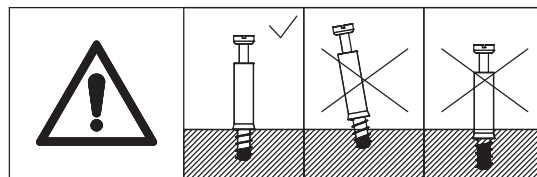 

Screw threaded rods A into panel 4 as shown.

 Secure part Q to panel 4 by using screw E as shown.

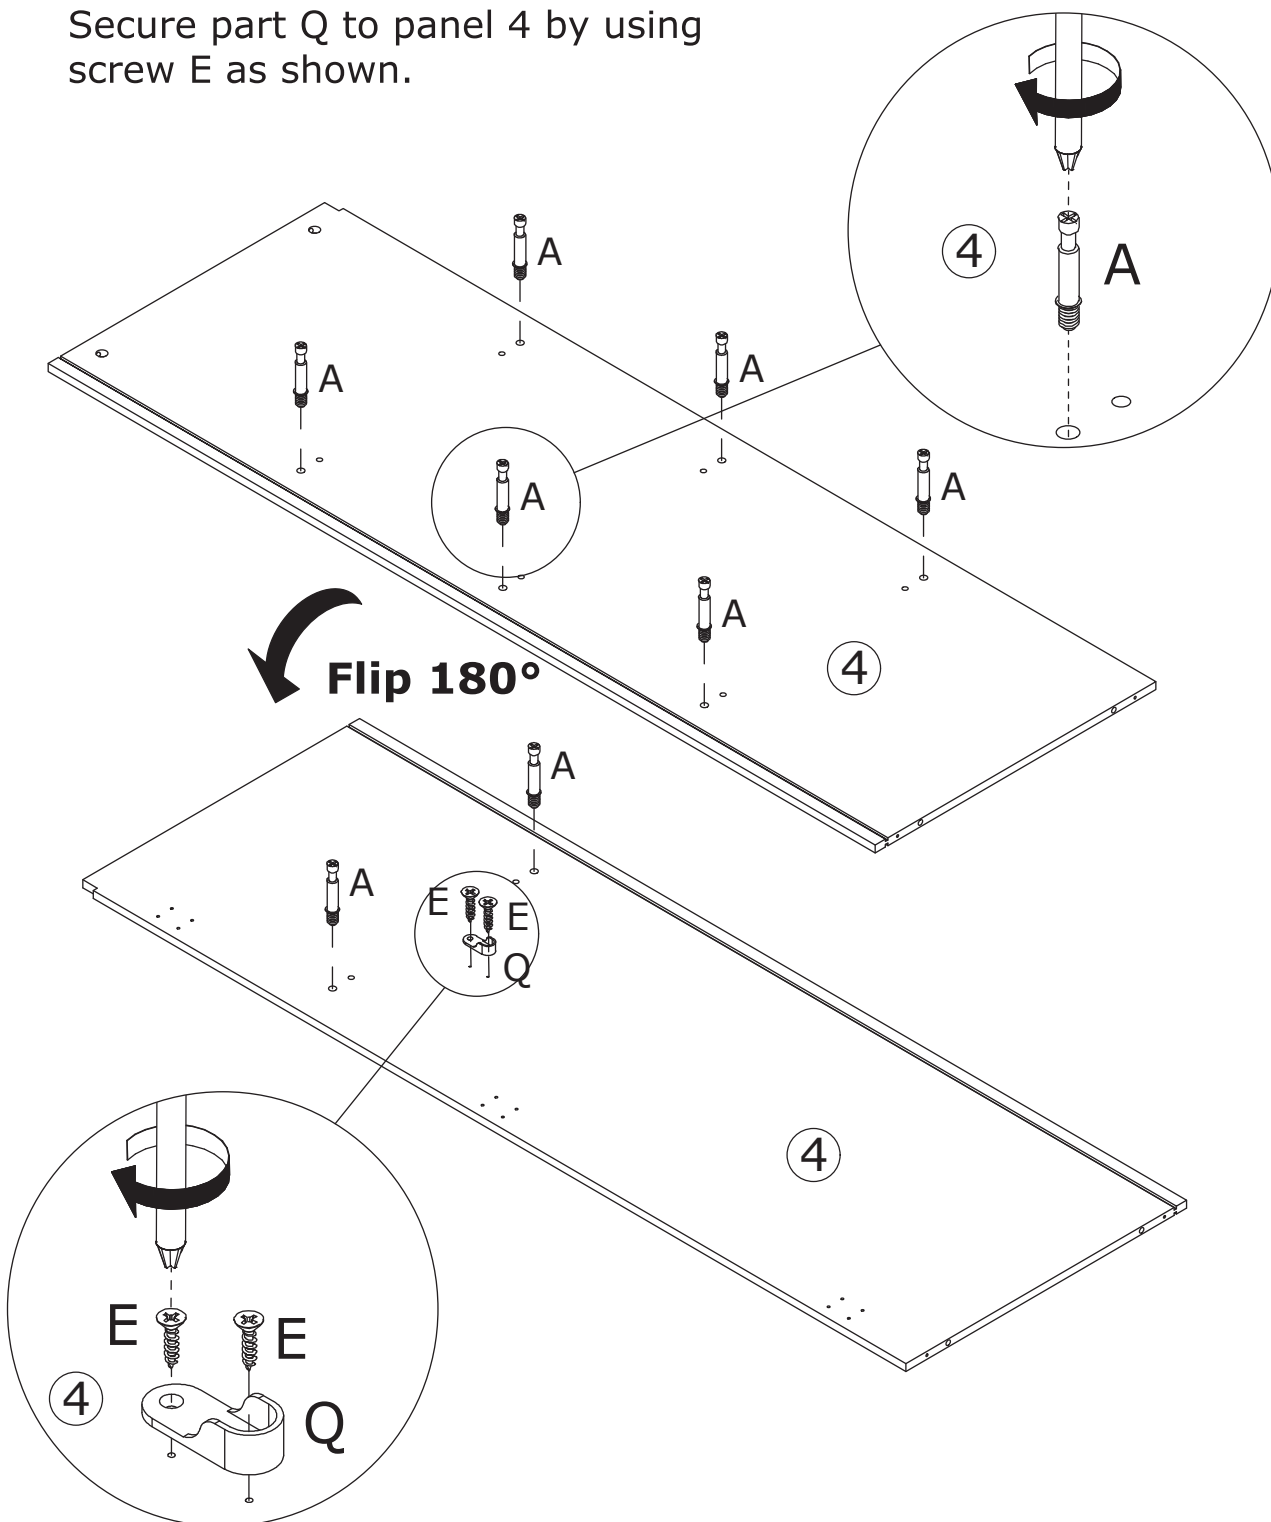

11

B x 4

 
 
 
 
 
 


Ø 15 x 10 mm


C x 4



Ø 6 x 40 mm

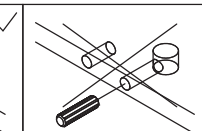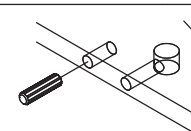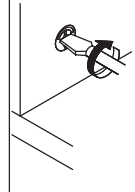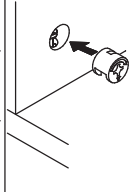

 Align panel 11 with panels 4 and 5, secure it with dowel C, then tighten clockwise with cam lock B as shown.

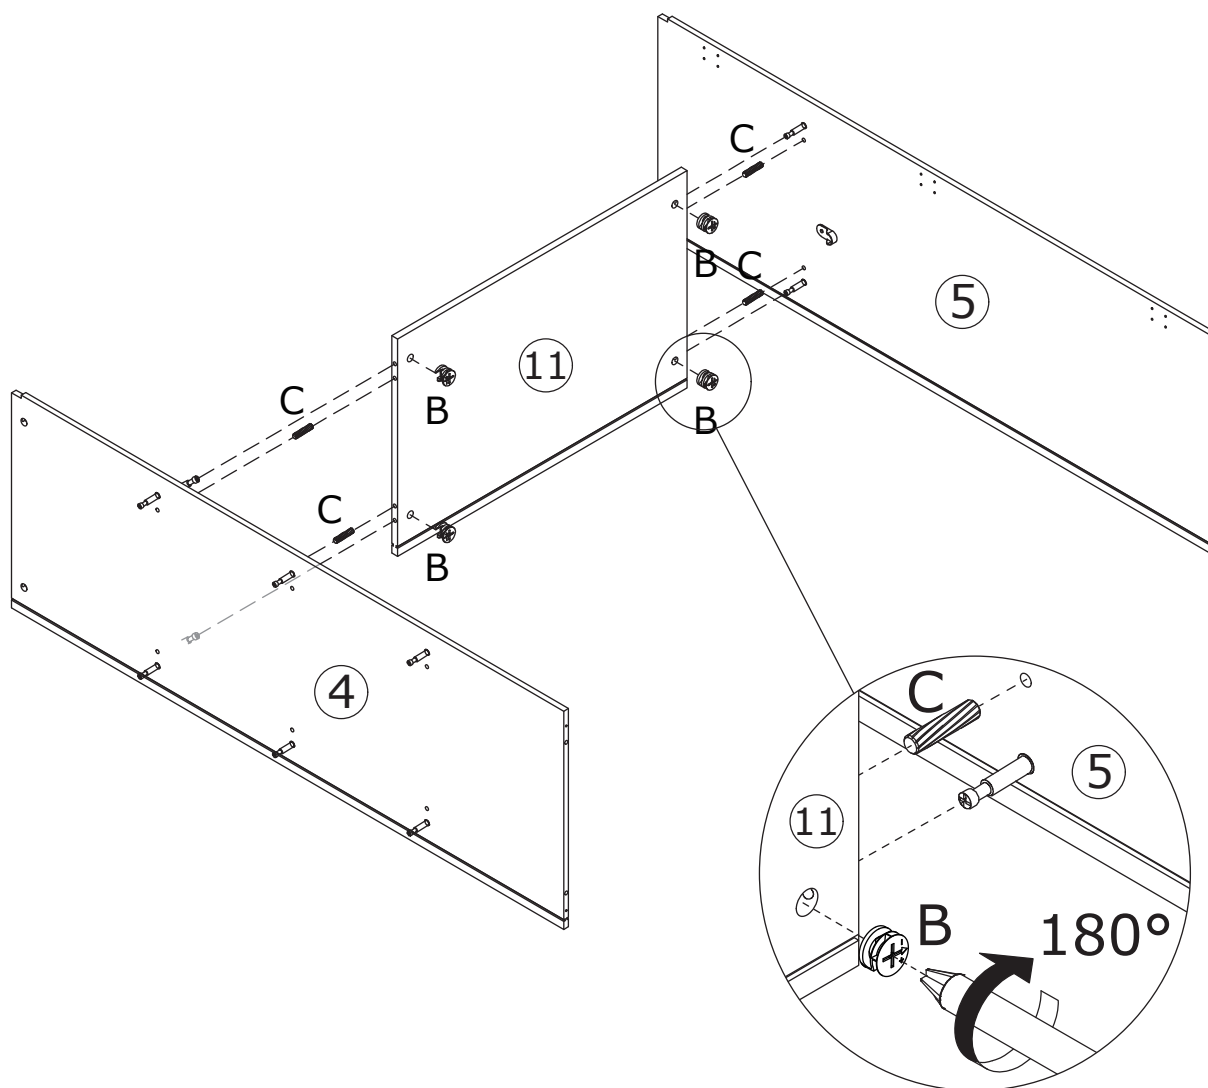

12

B x 12

 
 
 
 
 
 


Ø 15 x 10 mm


C x 12



Ø 6 x 40 mm

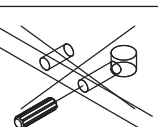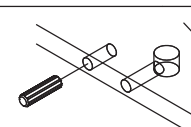

 Align panel 13 with panels 3 and 5, secure it with dowel C, then tighten clockwise with cam lock B as shown.

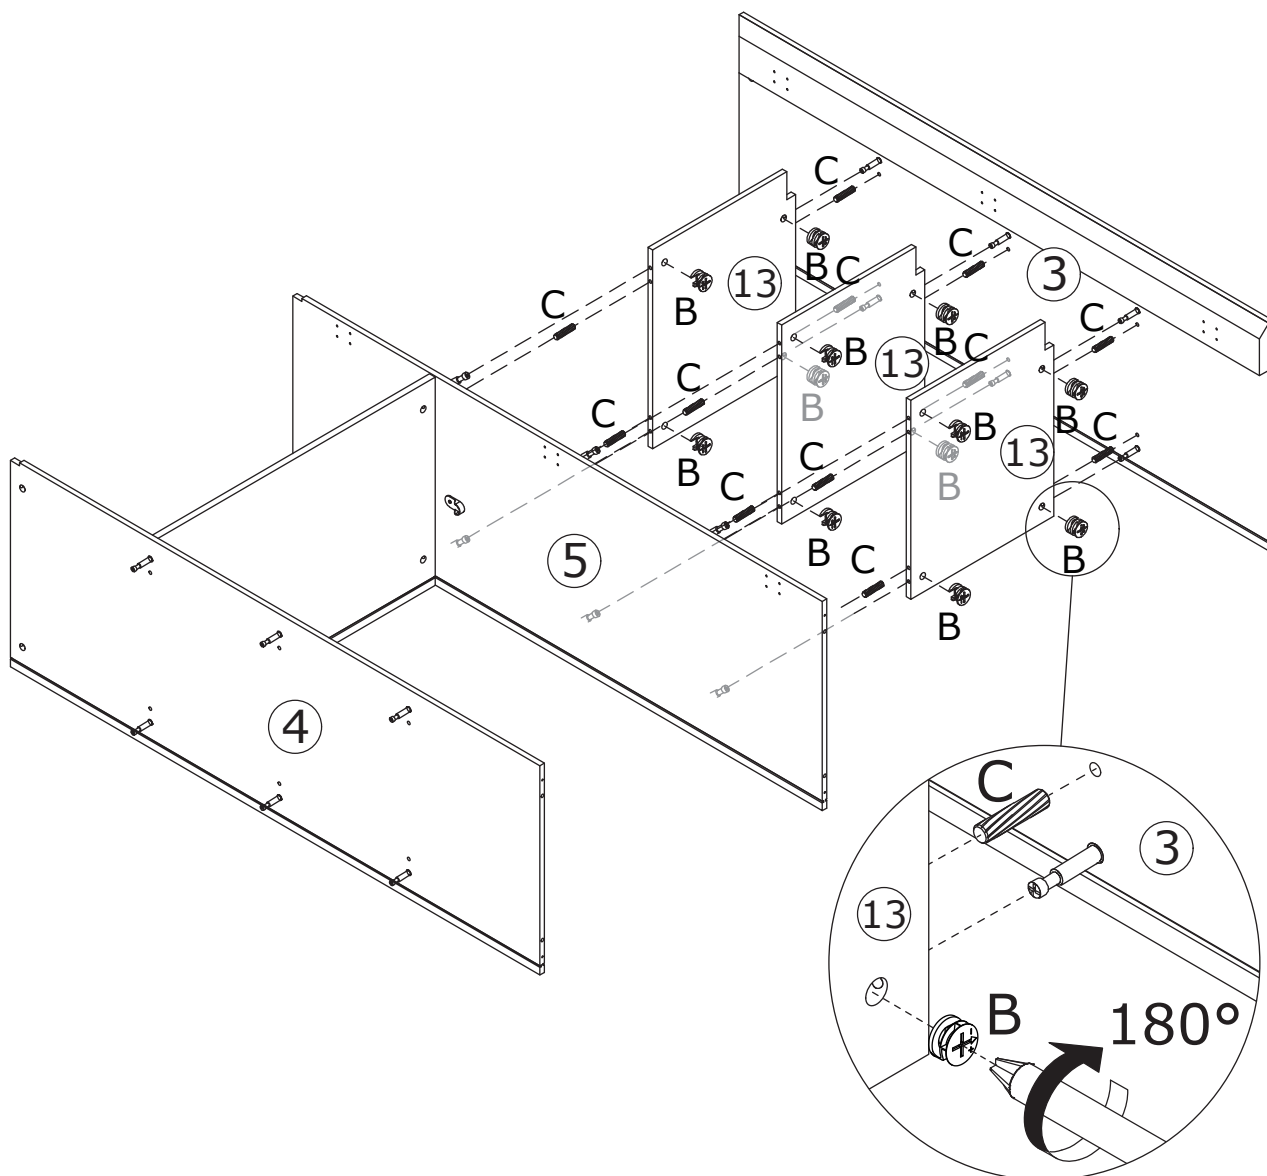

13

B x 12

 
 
 
 
 


Ø 15 x 10 mm


C x 12





Ø 6 x 40 mm




 Align panel 12 with panels 2 and 4, secure it with dowel C, then tighten clockwise with cam lock B as shown.

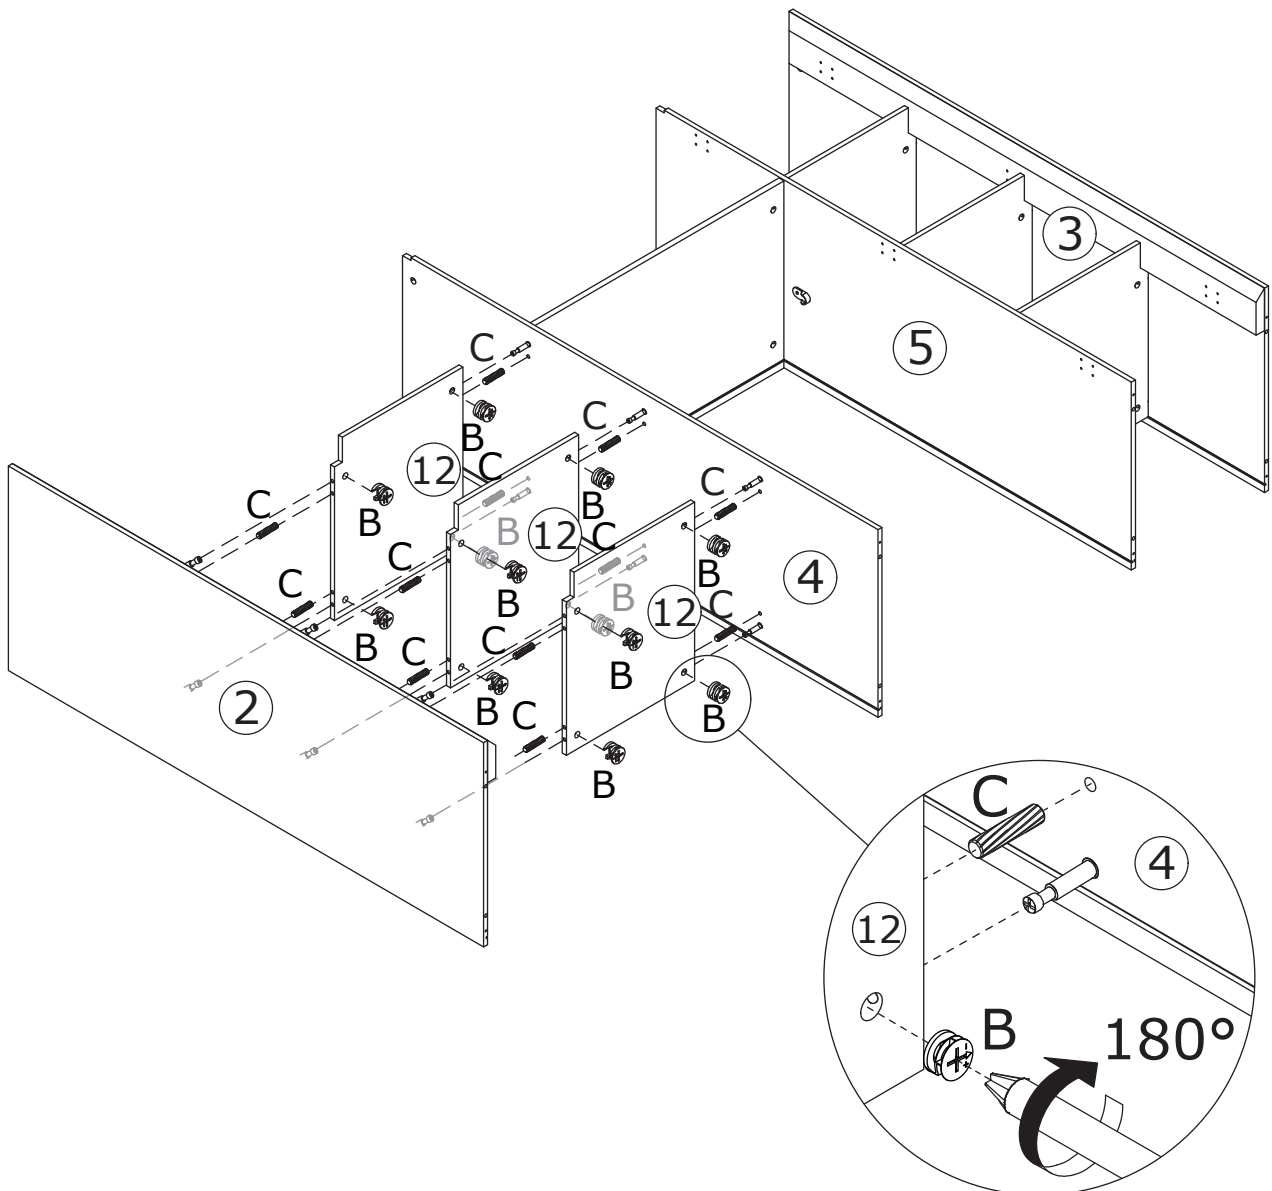


14

 
 
A x 8  Ø5 x 42 mm	K x 2 	J x 4  Ø3.5 x 12 mm	
--	--	--	---

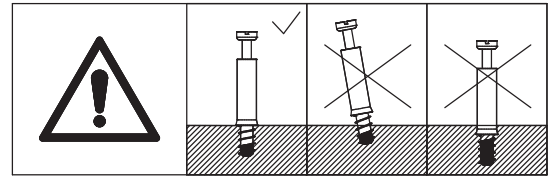 


 Screw threaded rods A into panels 1 , then attach anti-tip bracket K using screw J as shown.

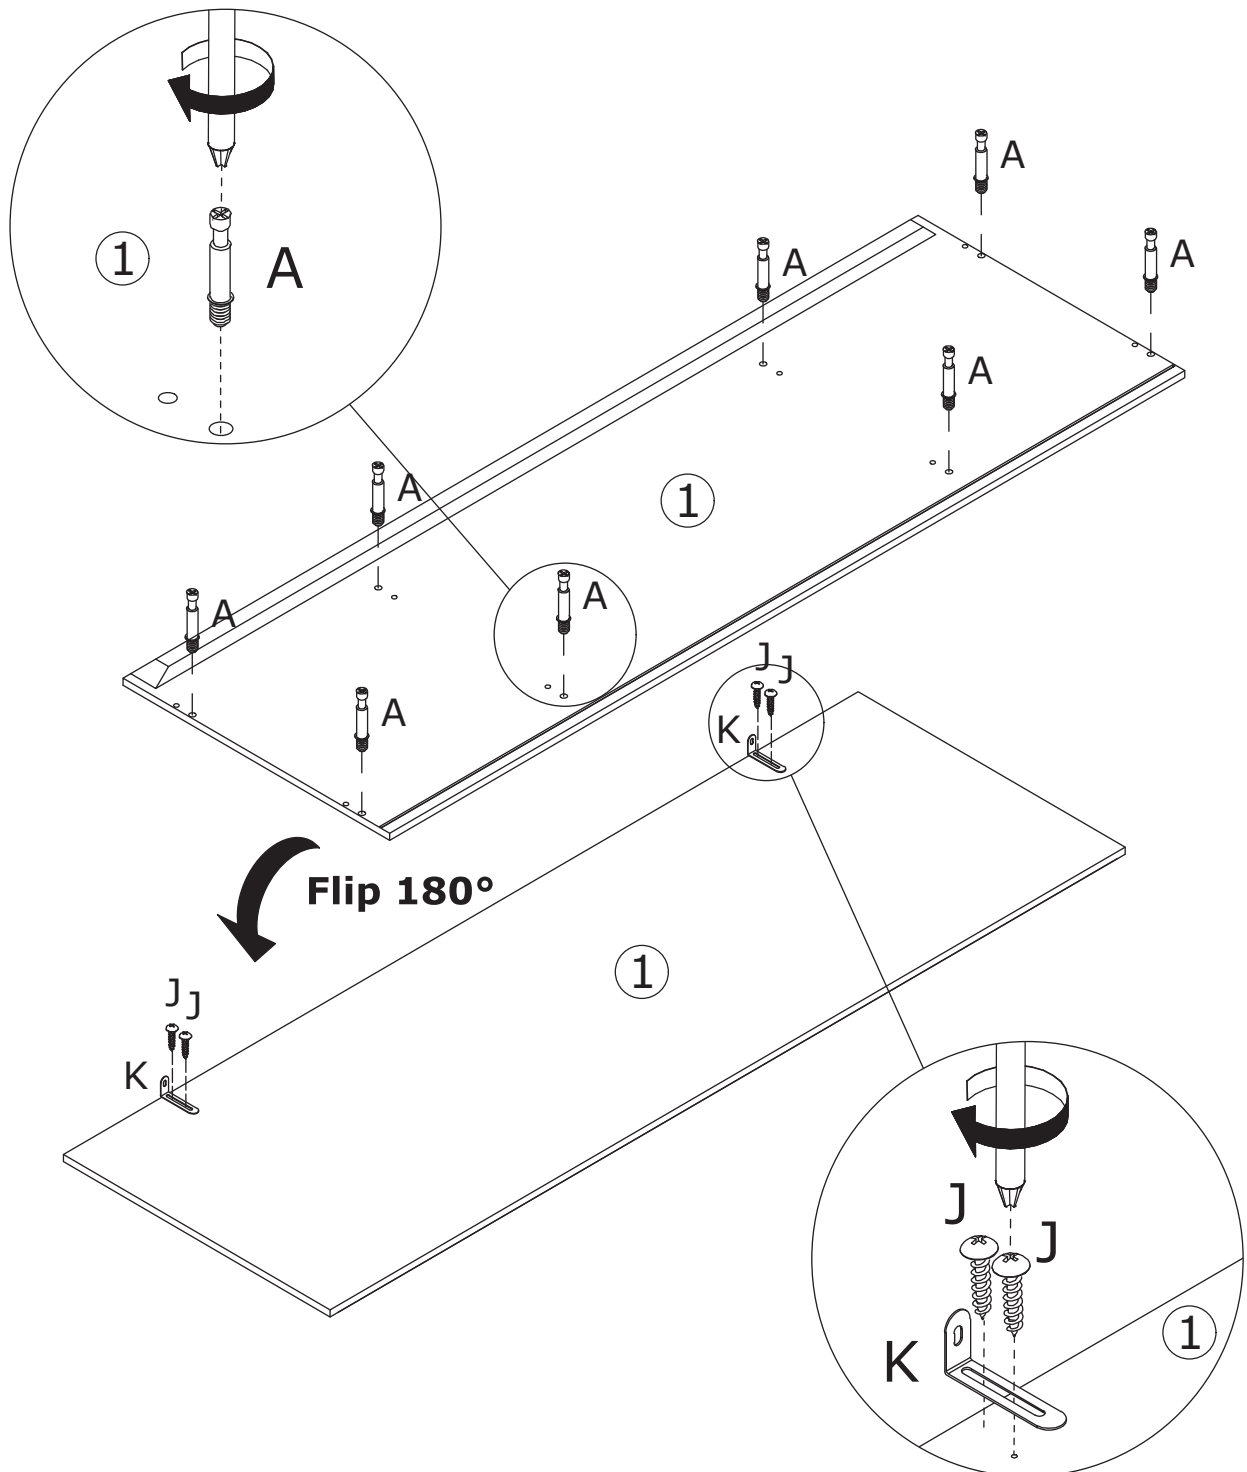


15

  A x 8  Ø5 x 42 mm	K x 2 	J x 4  Ø3.5 x 12 mm	
--	--	--	---

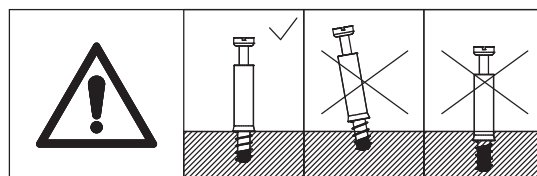 


 Screw threaded rods A into panels 10, then attach anti-tip bracket K using screw J as shown.

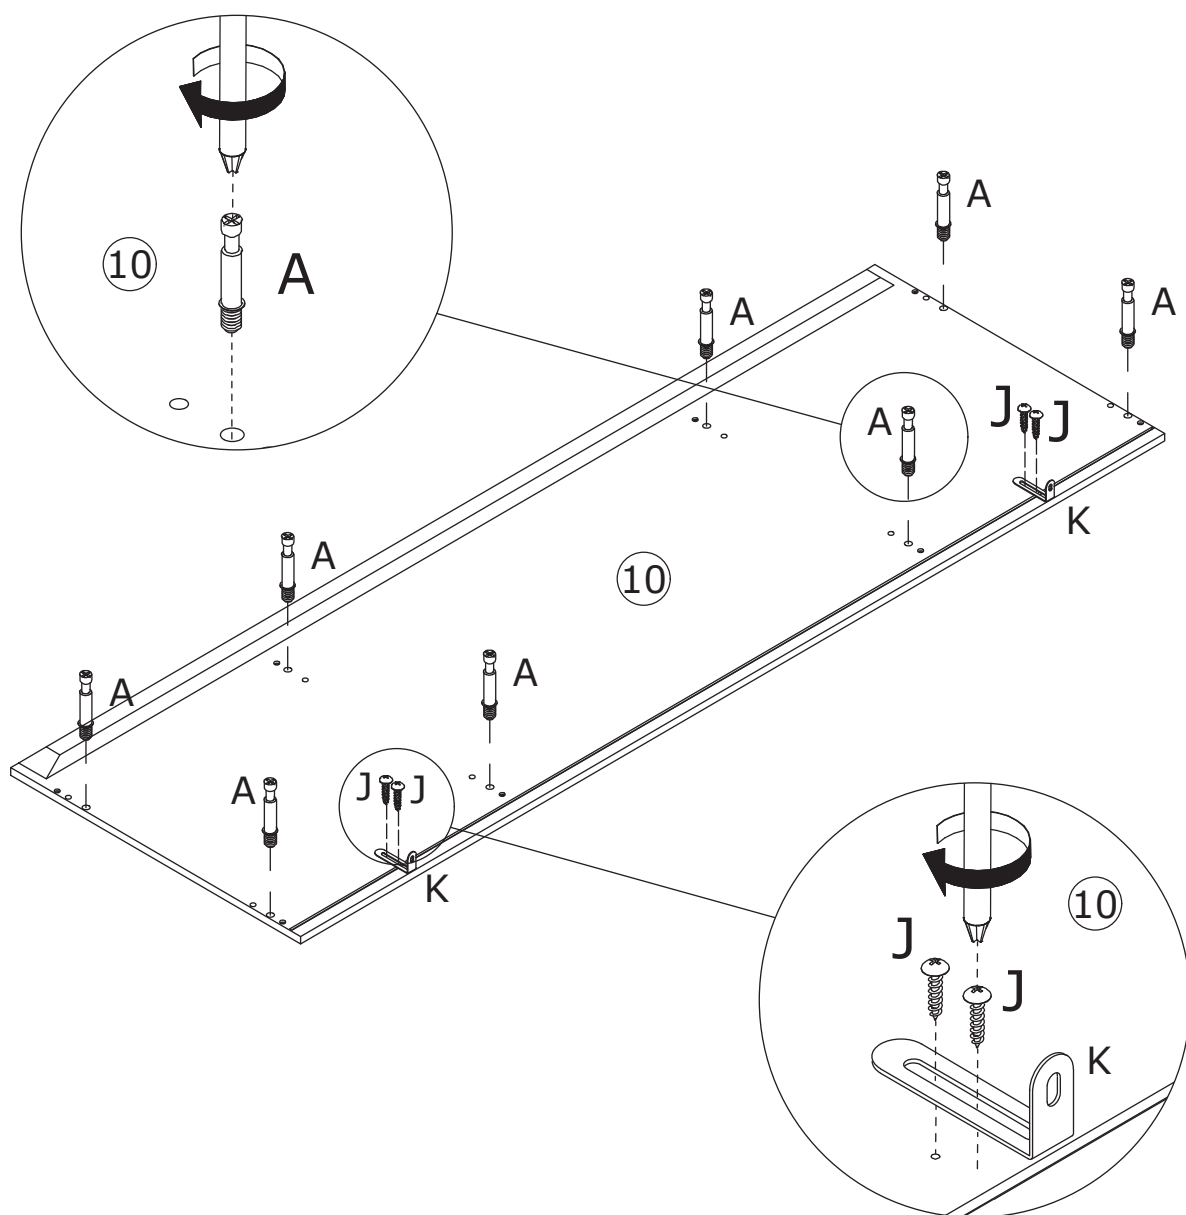

16

 Insert panel 28 into the grooves smoothly.

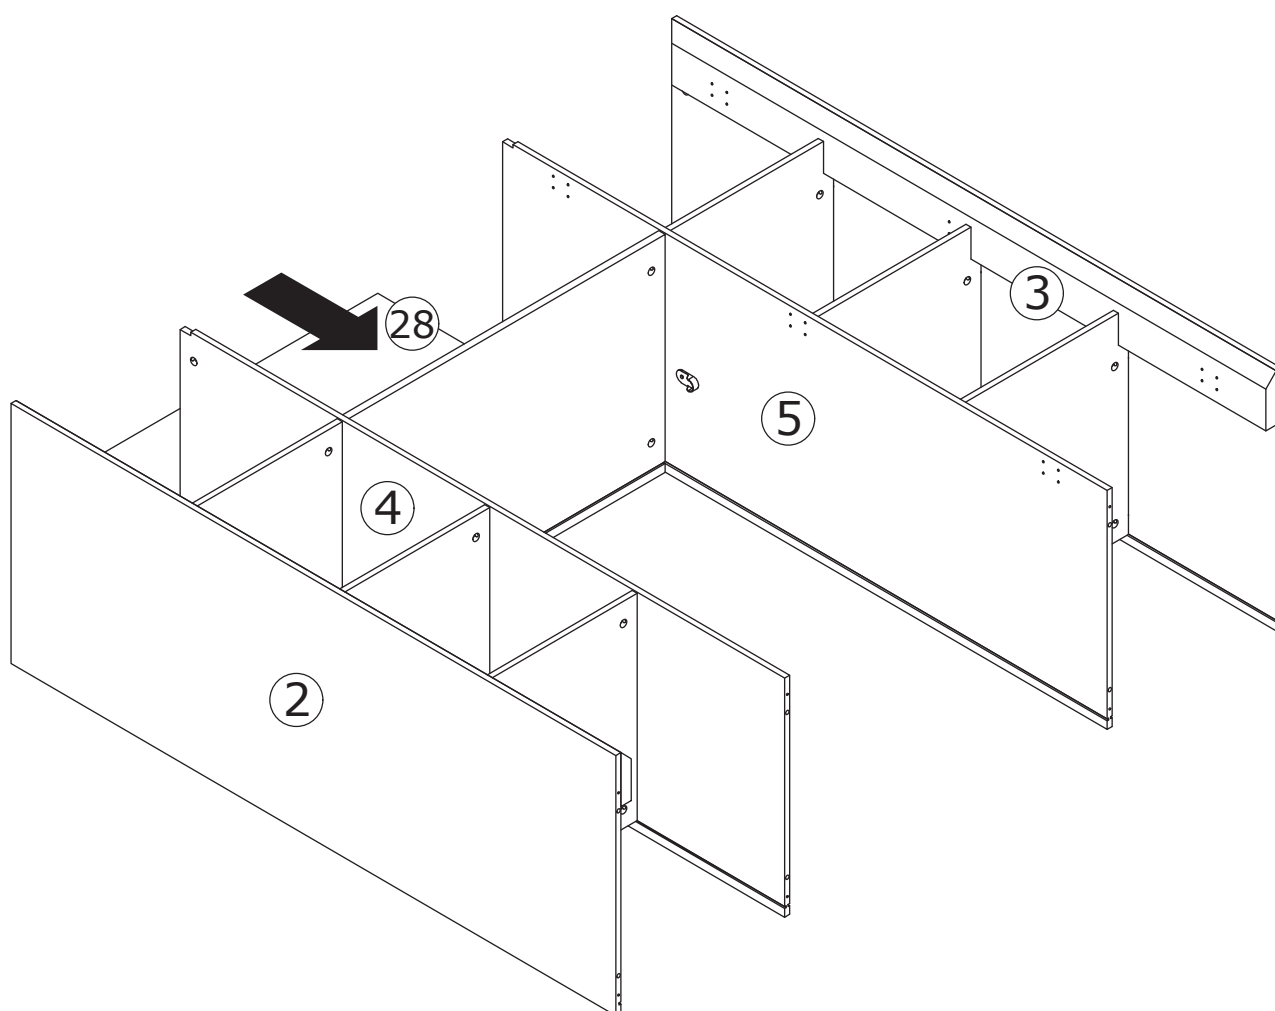

17

B x 8

 
 
 
 
 
 


Ø 15 x 10 mm



C x 8




Ø 6 x 40 mm

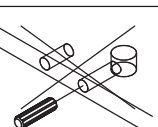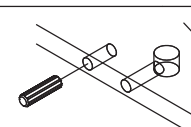

  Align panel 1 with panels 2, 3, 4 and 5,
secure it with dowel C, then tighten
clockwise with cam lock B as shown.

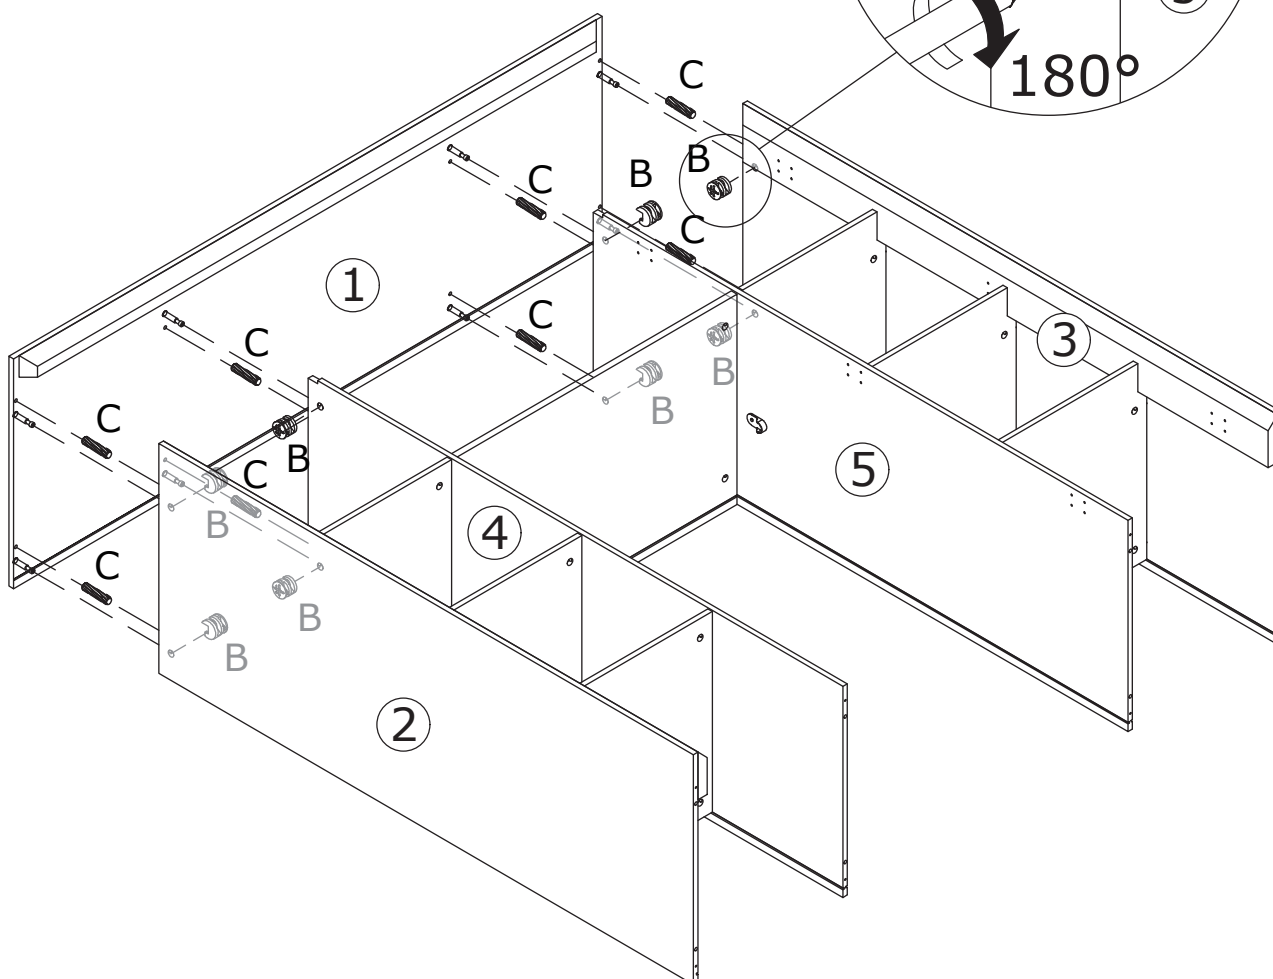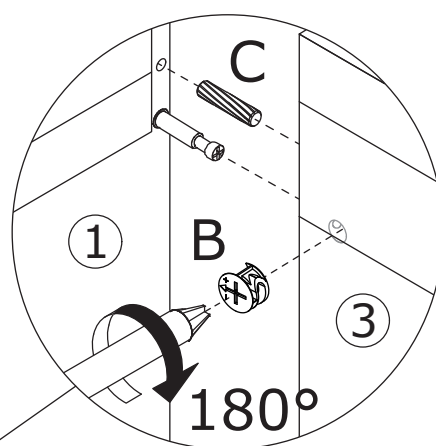


 Insert panels 27, 29 and 32 into the grooves smoothly.


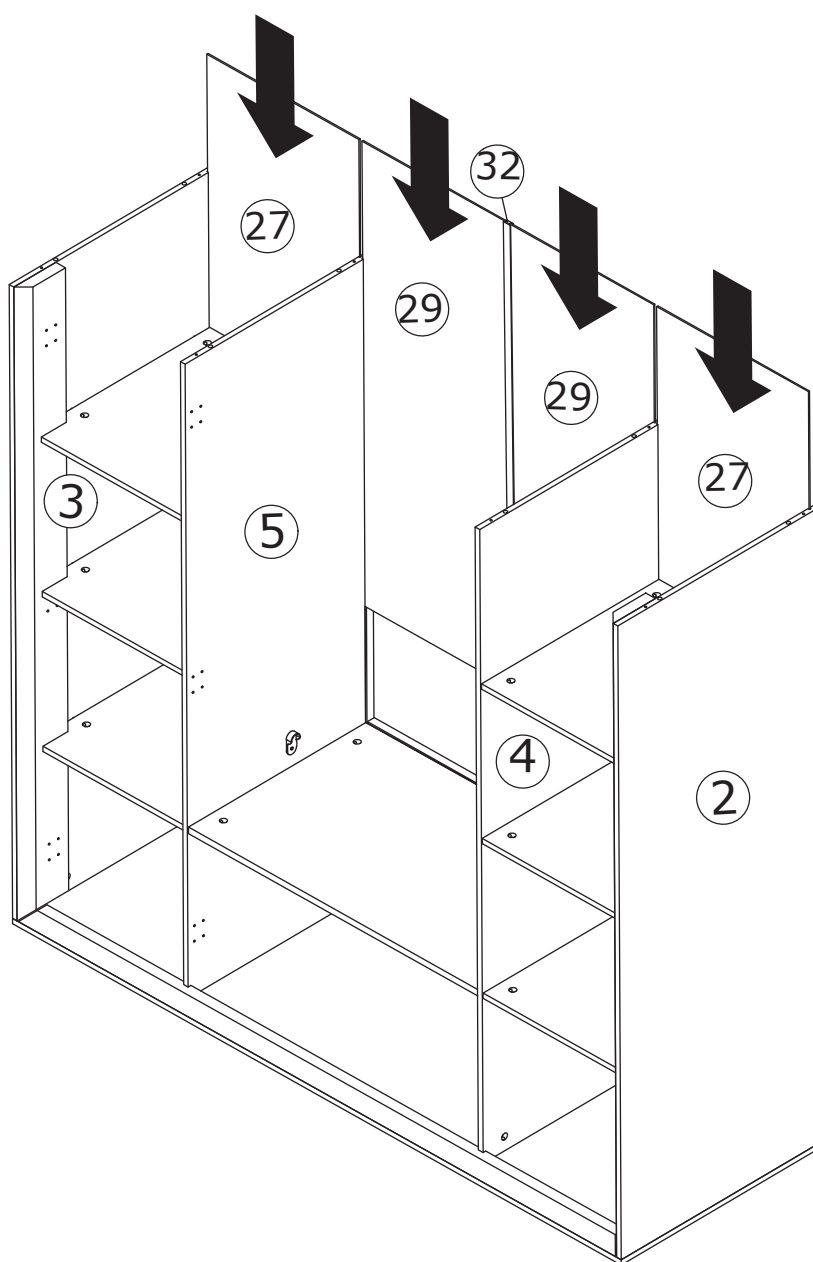


19




 
C x 8



D x 8

  

    Align panel 10 with panels 2, 3, 4 and 5, secure it with dowel C, then fasten with screw D as shown.

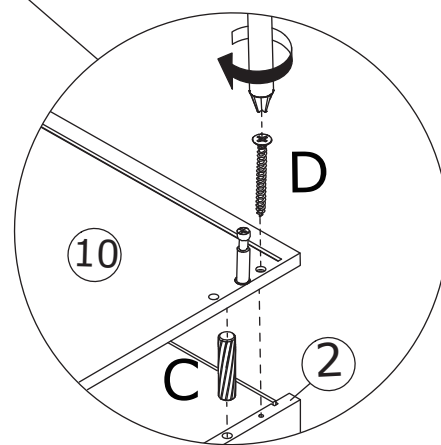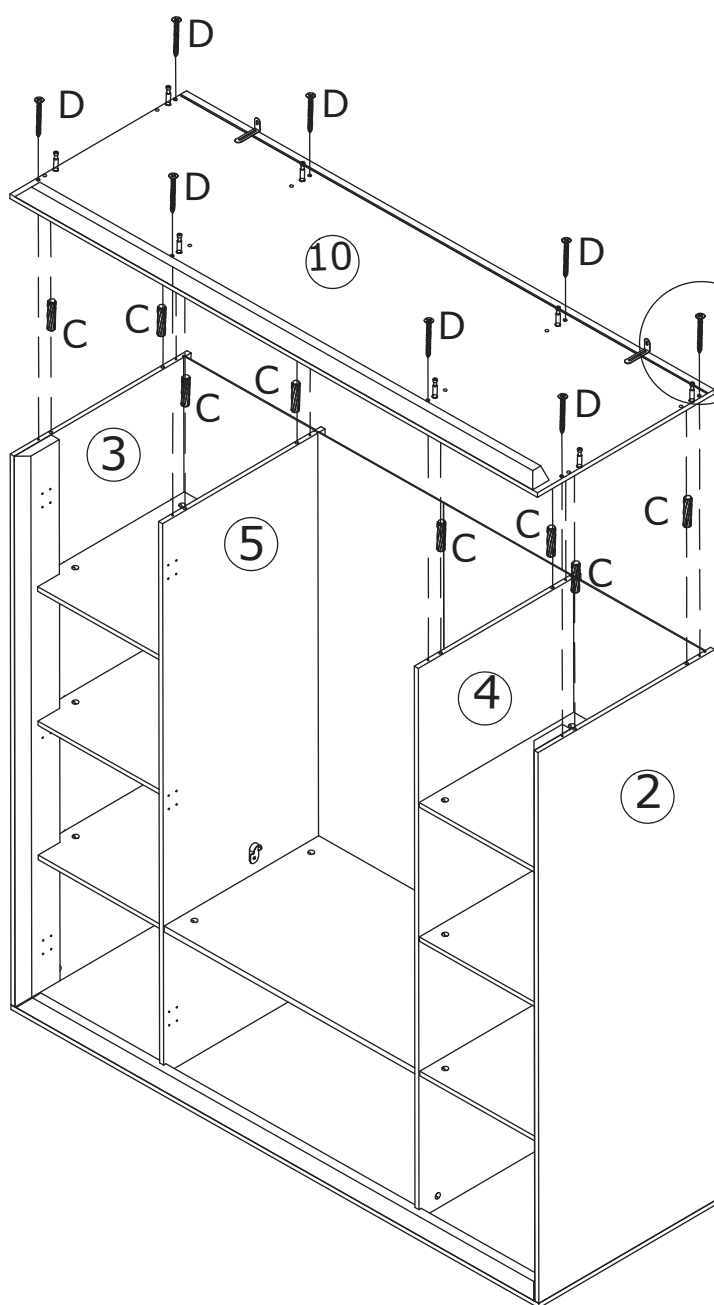

20

B x 8

 


Ø 15 x 10 mm




C x 8



Ø 6 x 40 mm



   Align panel 10 with panels 6, 7, 8 and 9, secure it with dowel C, then tighten clockwise with cam lock B as shown.

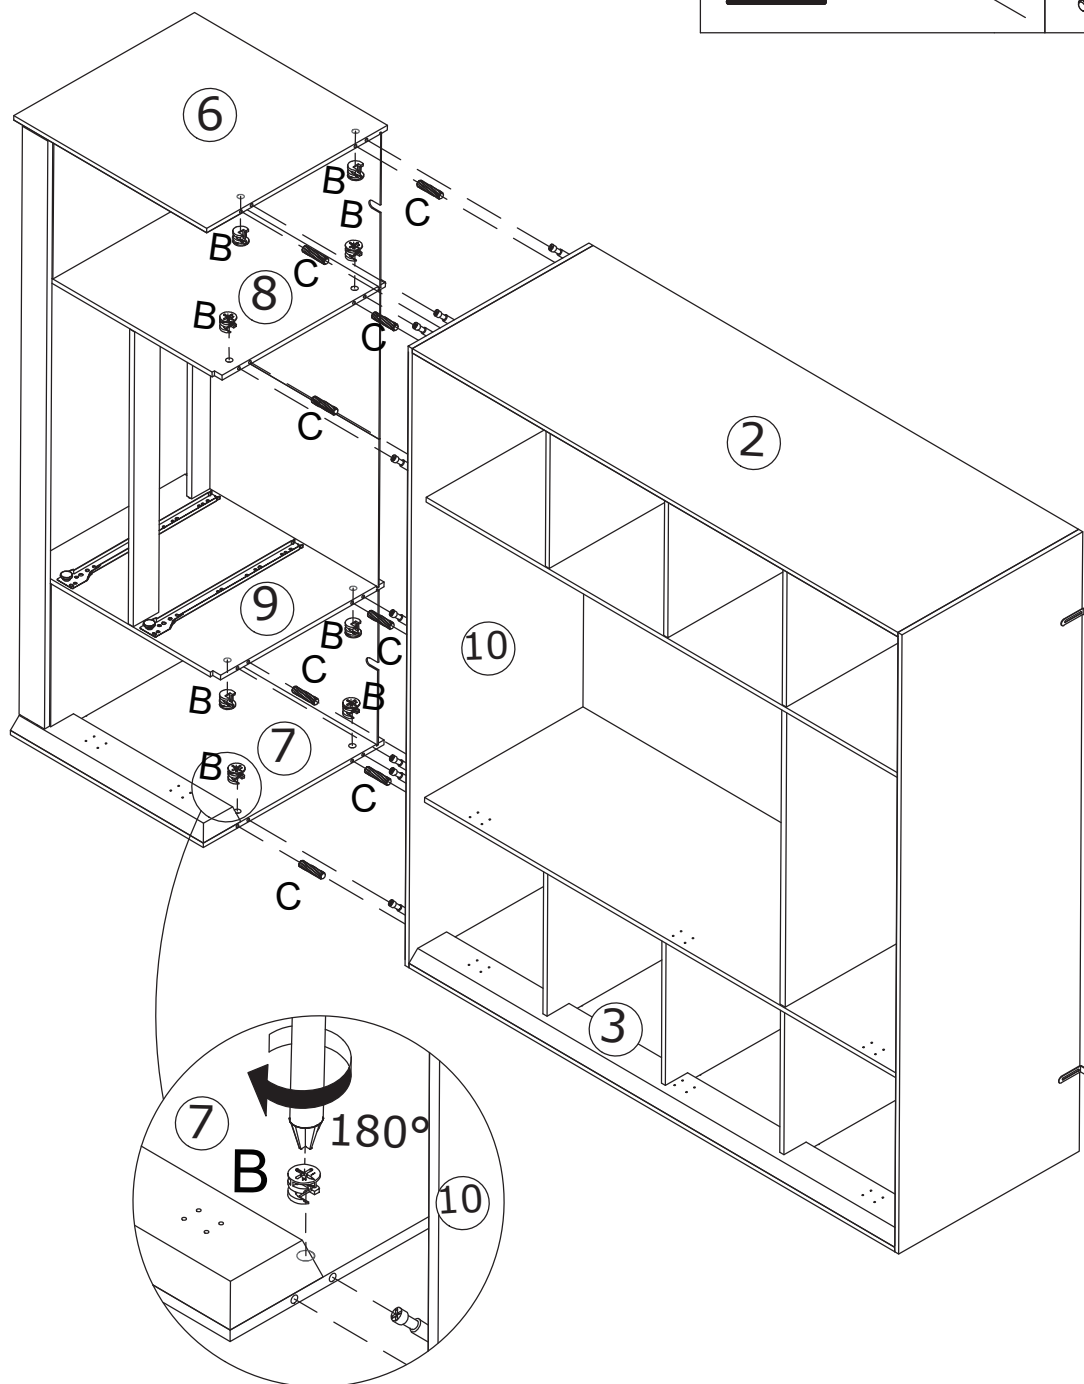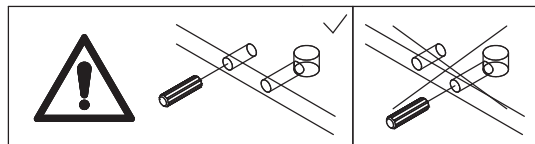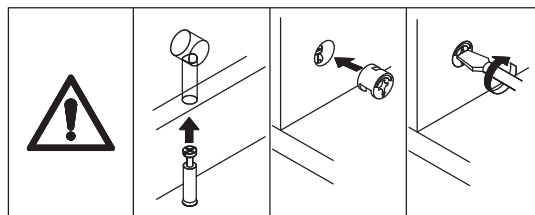

21

F x 2



H x 38



J x 8

 


Ø 3.5 x 12 mm


N x 38






Ø 3.5 x 14 mm



 
Use screw N to secure backplate clip
H to the back panels , then secure the metal plate F to the
cabinet body with screw J as shown.

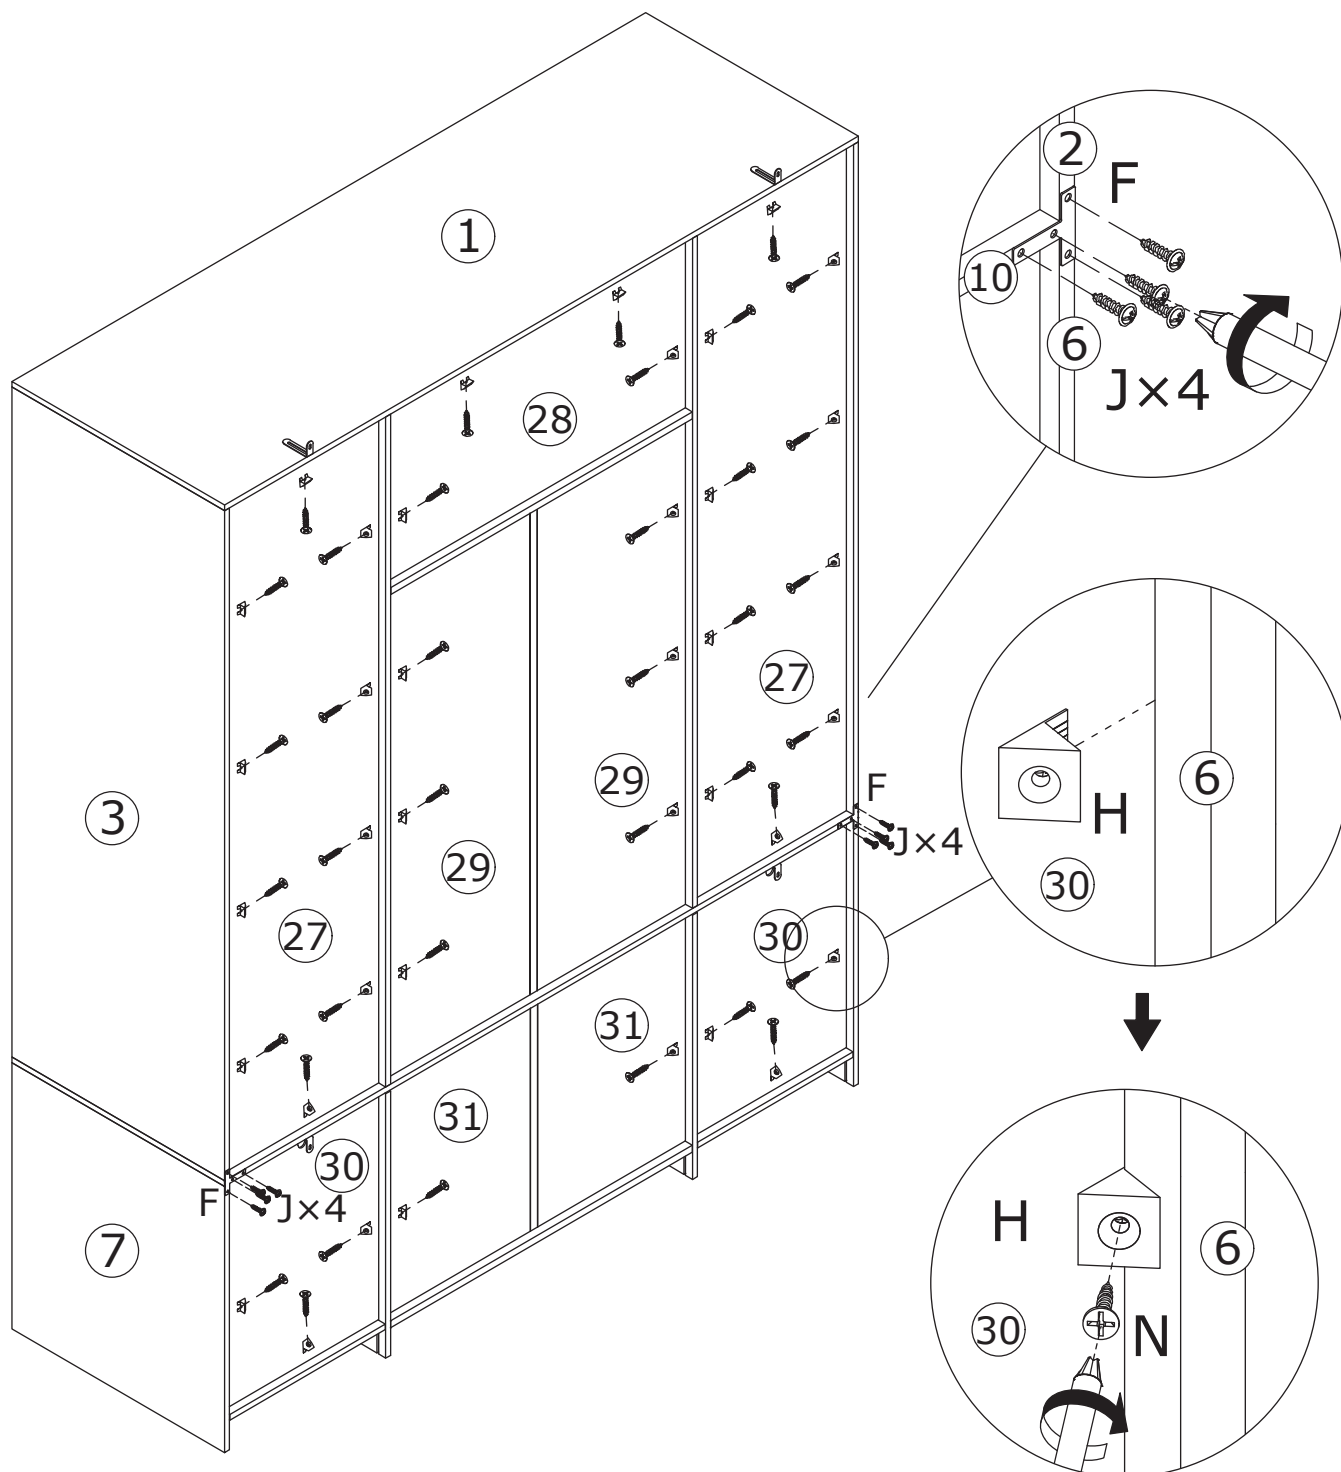

22

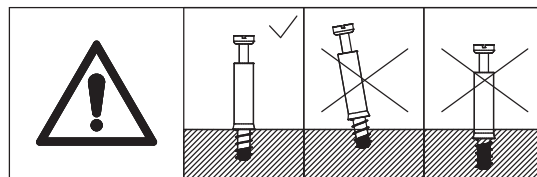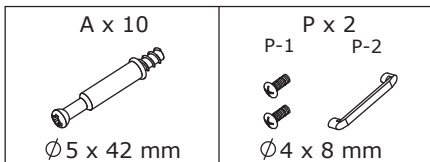   

 Screw threaded rods A into panel 21.
Attach handle P-2 using screw P-1.

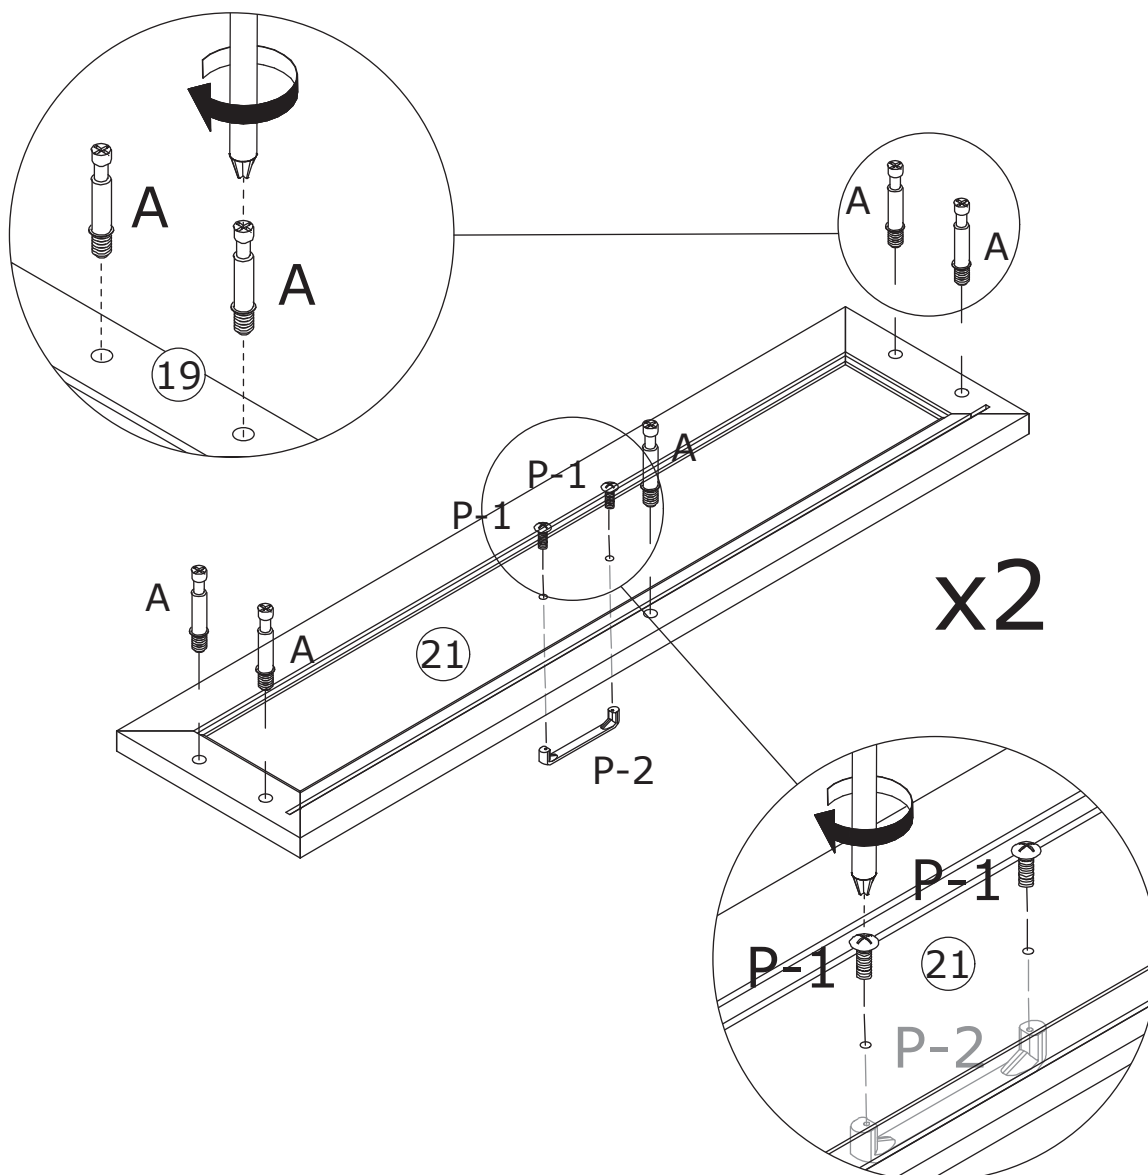


23


D x 10



 Ø5 x 40 mm




 Secure panels 25, 26 and 24
to panel 23 using screw D.

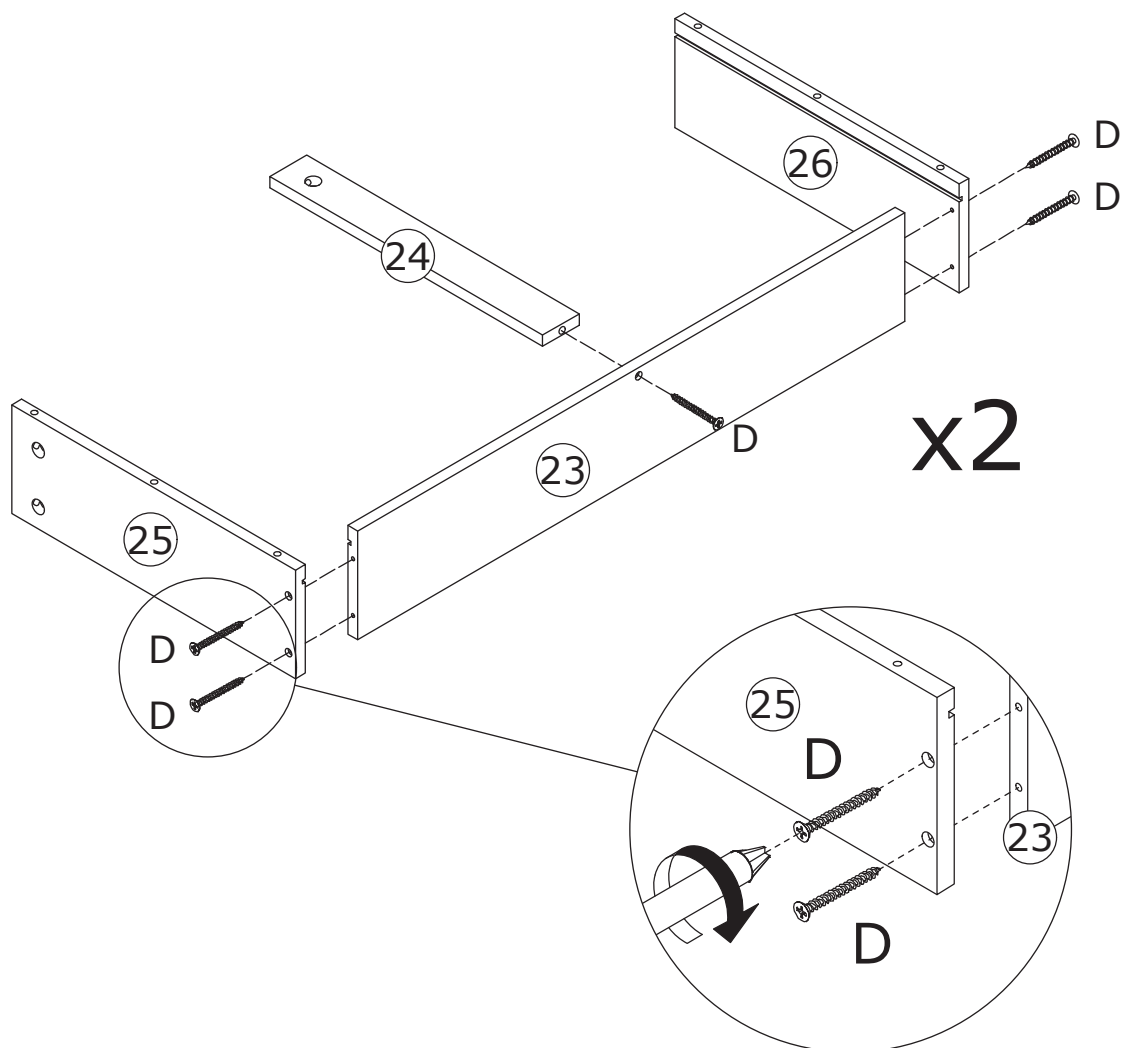

24

 Insert panel 22 into the grooves
smoothly.


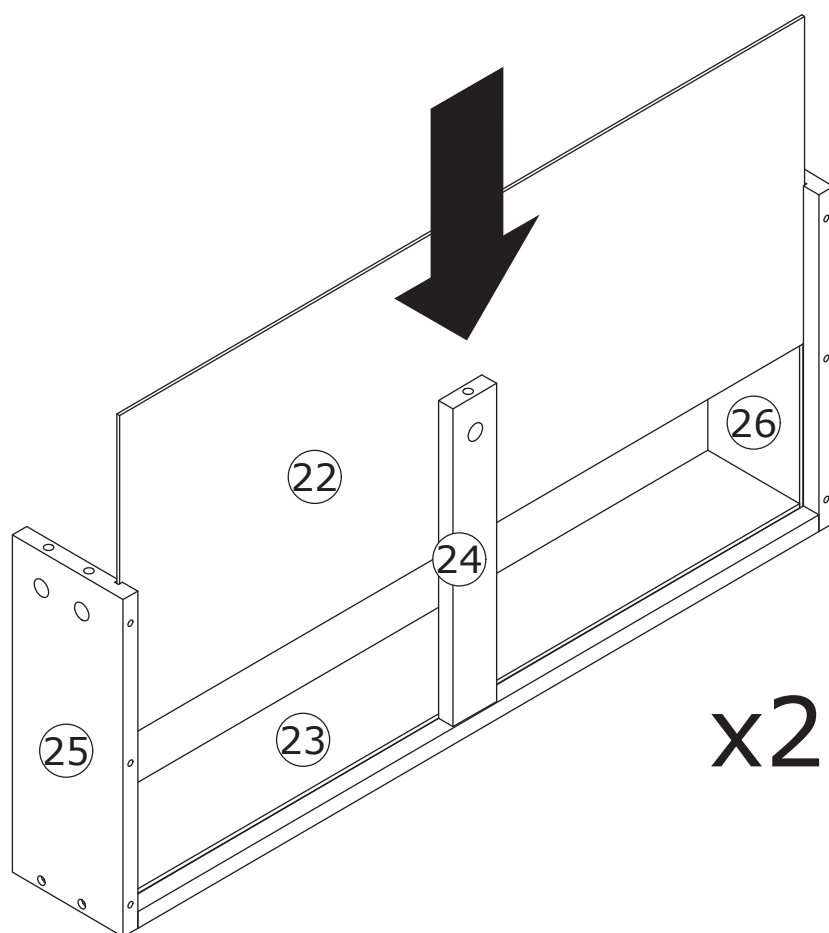


25


B x 10



  Ø 15 x 10 mm

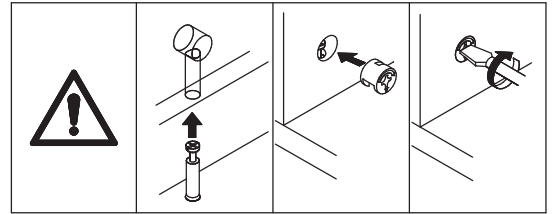

 Align panels 24, 25 and 26 with panel 21 and tighten clockwise with cam lock B as shown.

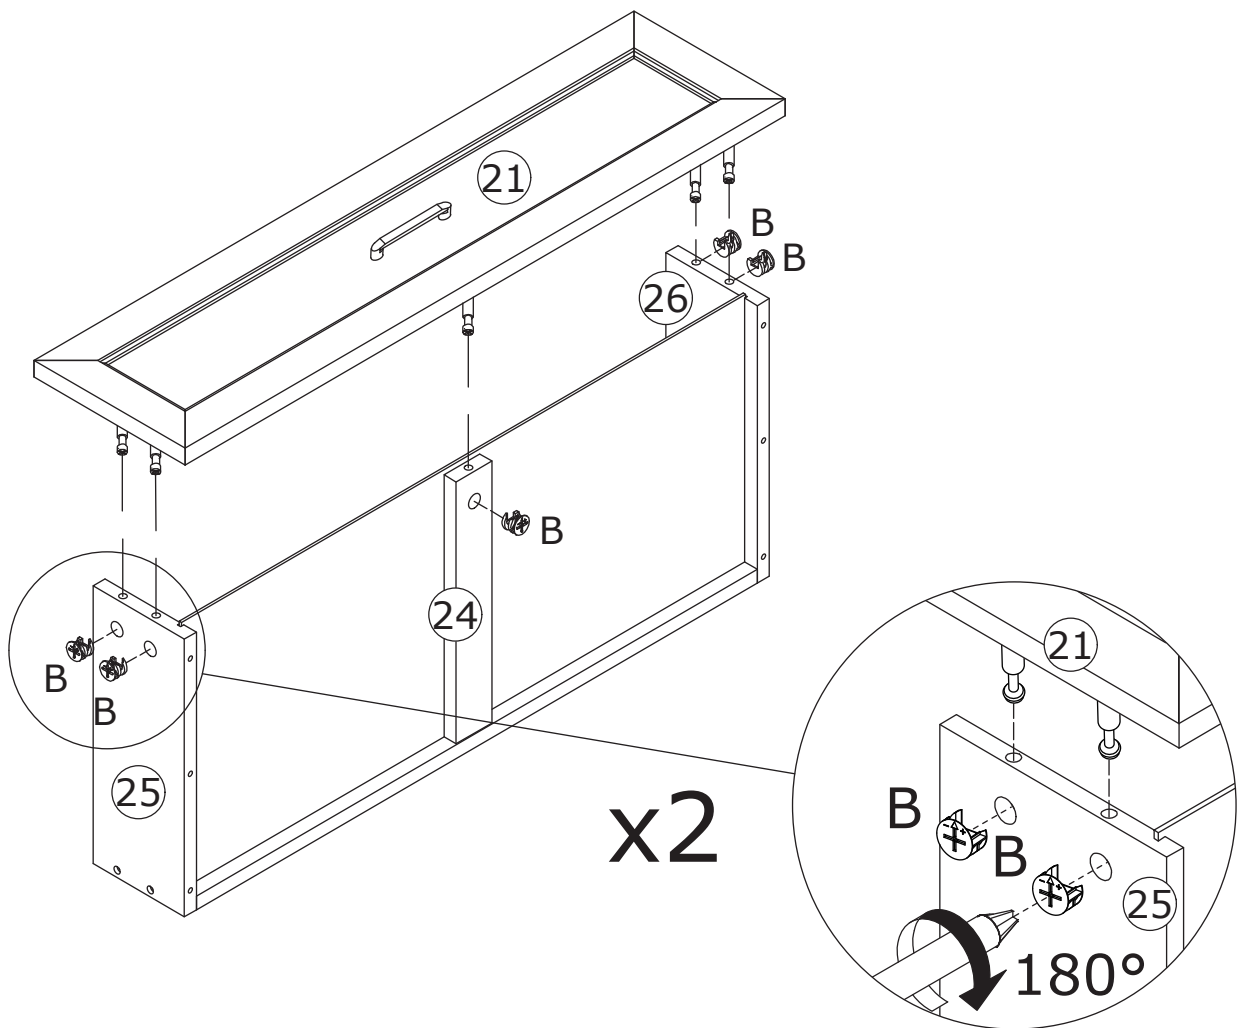


26

E x 8



Ø 3.5 x 12 mm

 DL x 2






350mm


DR x 2



   
350mm

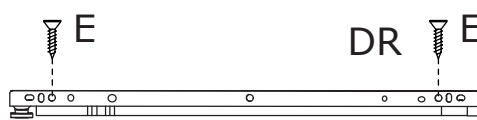



 
Fix slide rails DL and DR to panels 25 and 26 with screw E as shown.

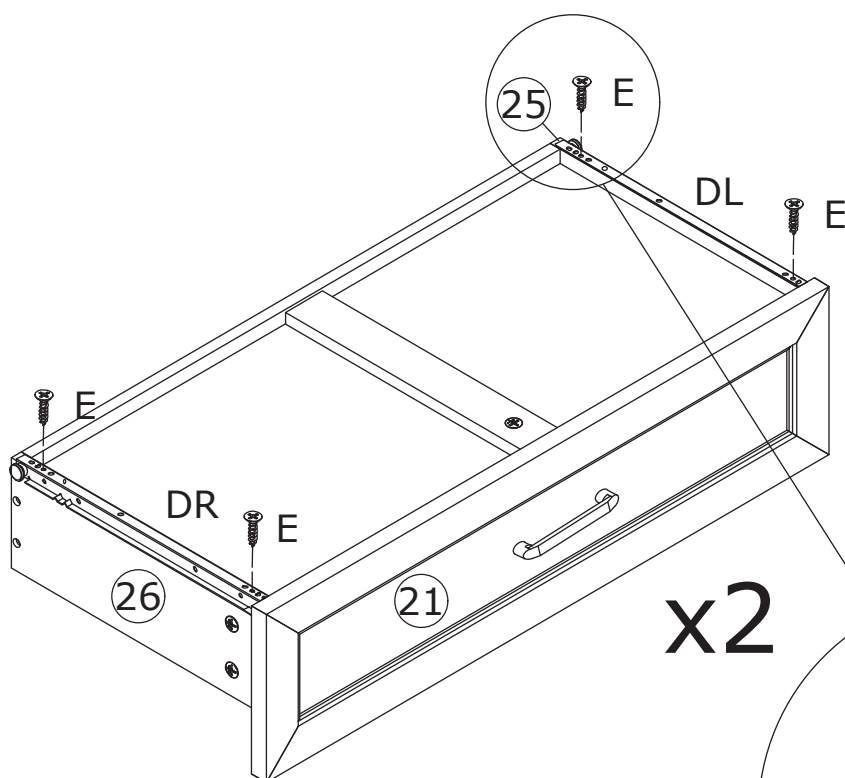

x2

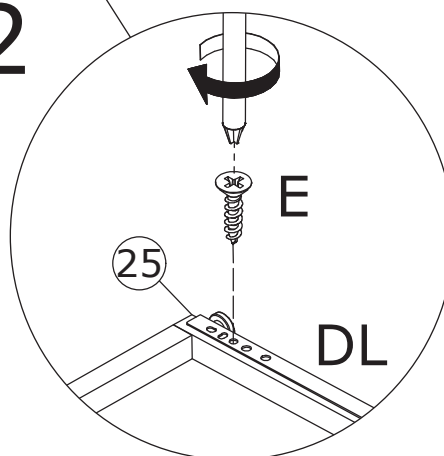 


27

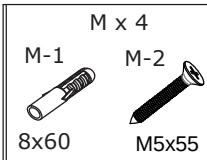   


Mark the wall position through anti-tip bracket K with a pen, drill holes, then secure plastic anchor M-1 to the wall with a hammer. Fasten anti-tip bracket K to plastic anchor M-1 with screw M-2.

 
1.

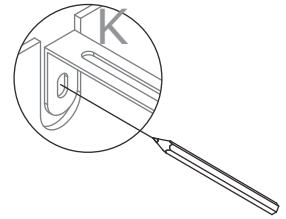



 
2.

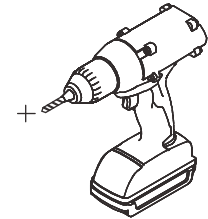

 
3.

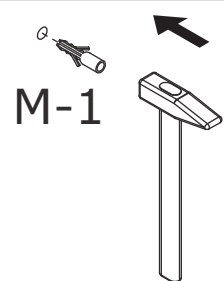

   4.

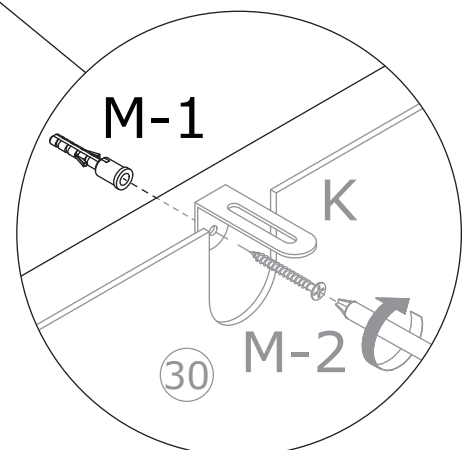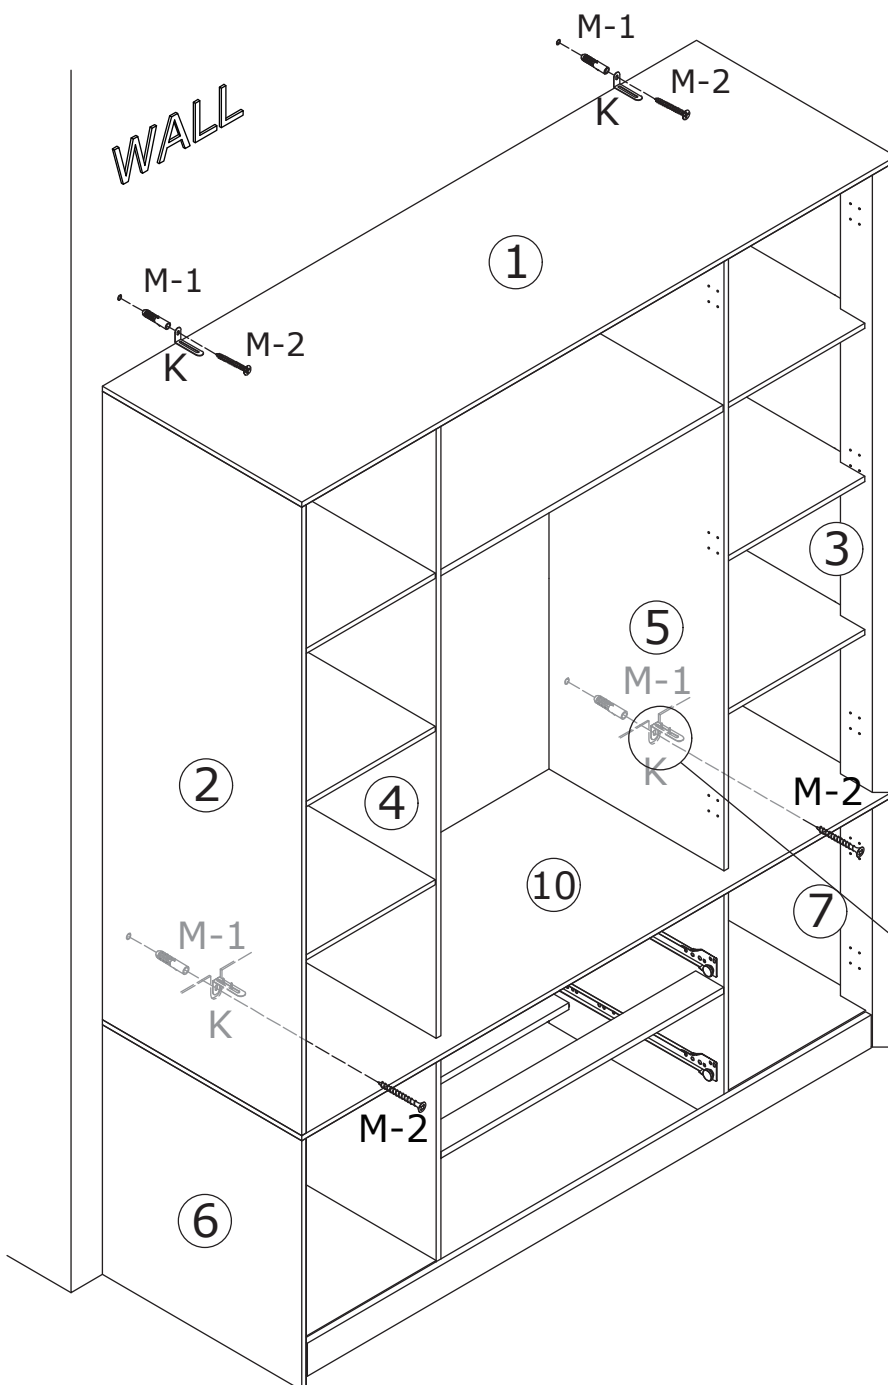
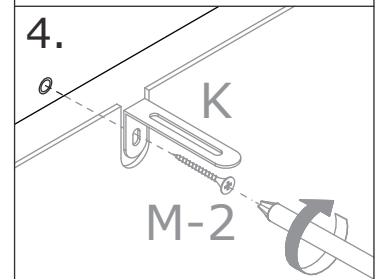


 Place clothing rod 34 into the unit as shown.

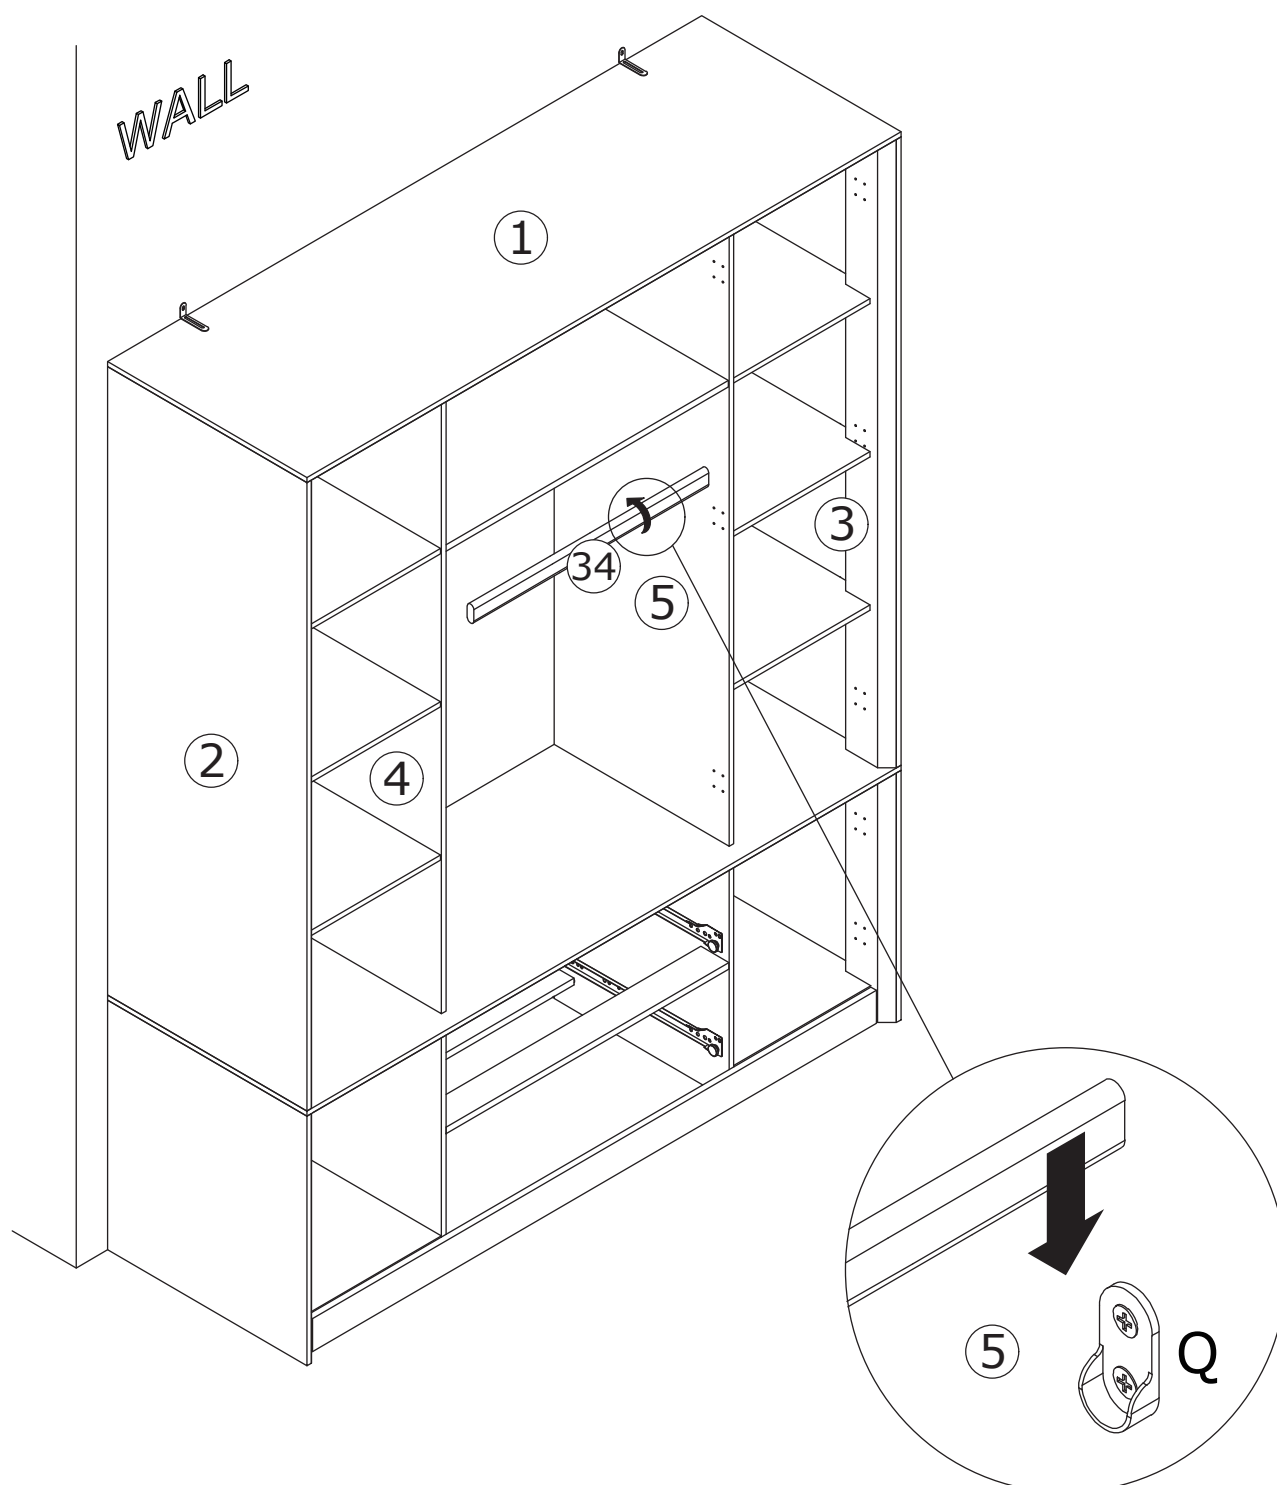

29

  Place the two drawers into the unit as illustrated.

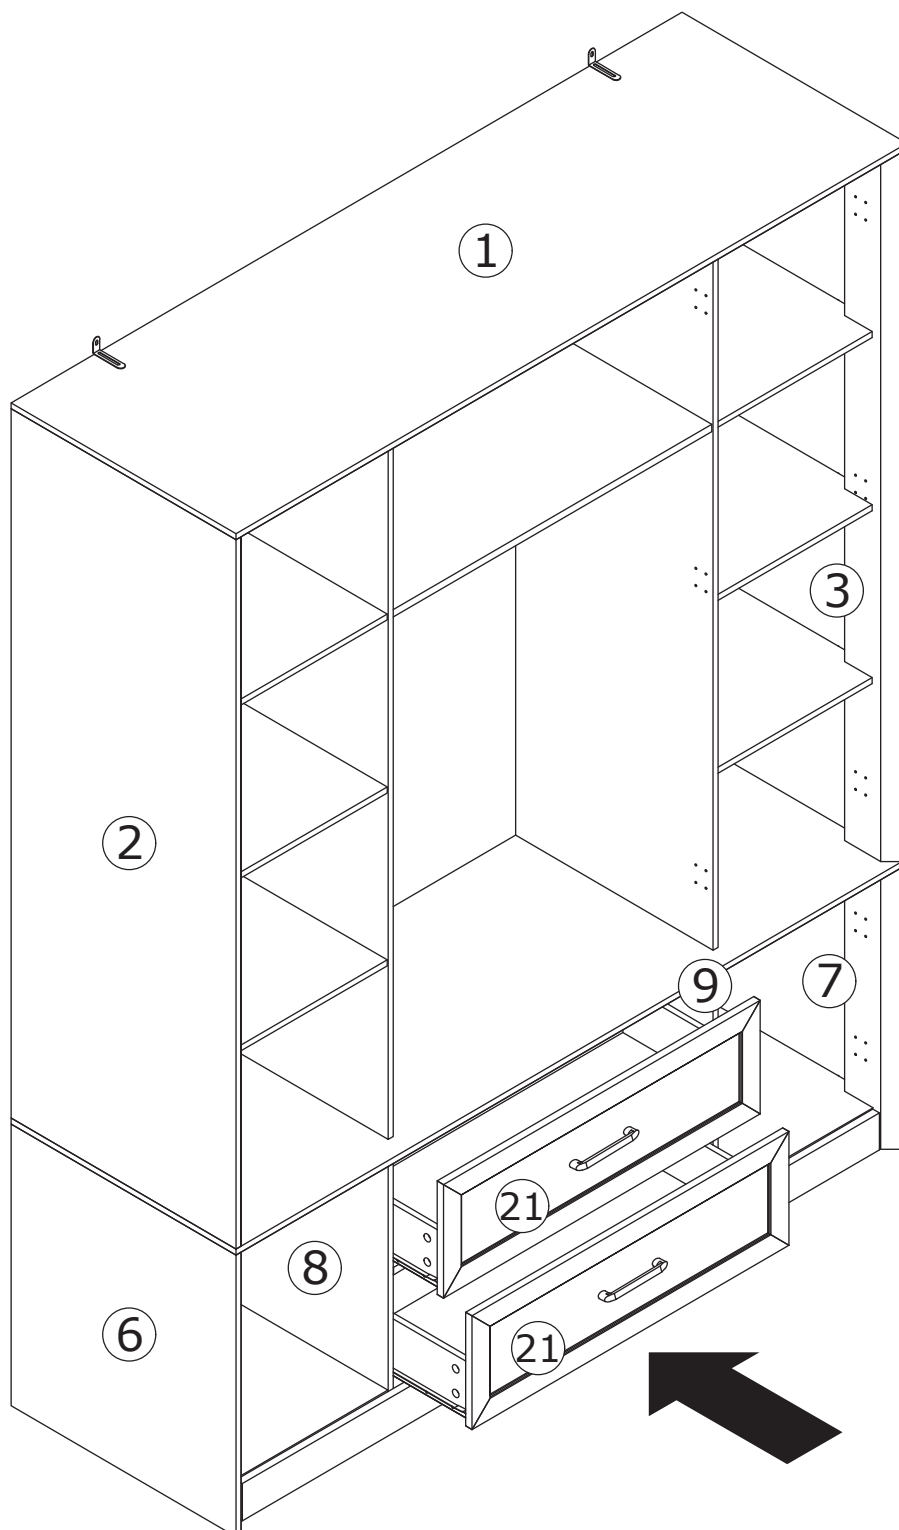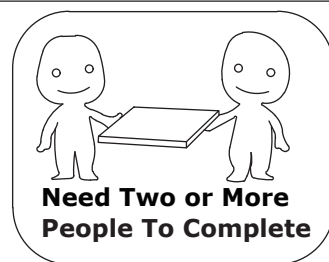


30


G x 2
G-1 G-2
Ø 4 x 20 mm

L x 6

 
N x 12
Ø 3.5 x 14 mm



 
Secure hinge L to panels 19
using screw N,
then attach handle G-2
with screw G-1 as shown.

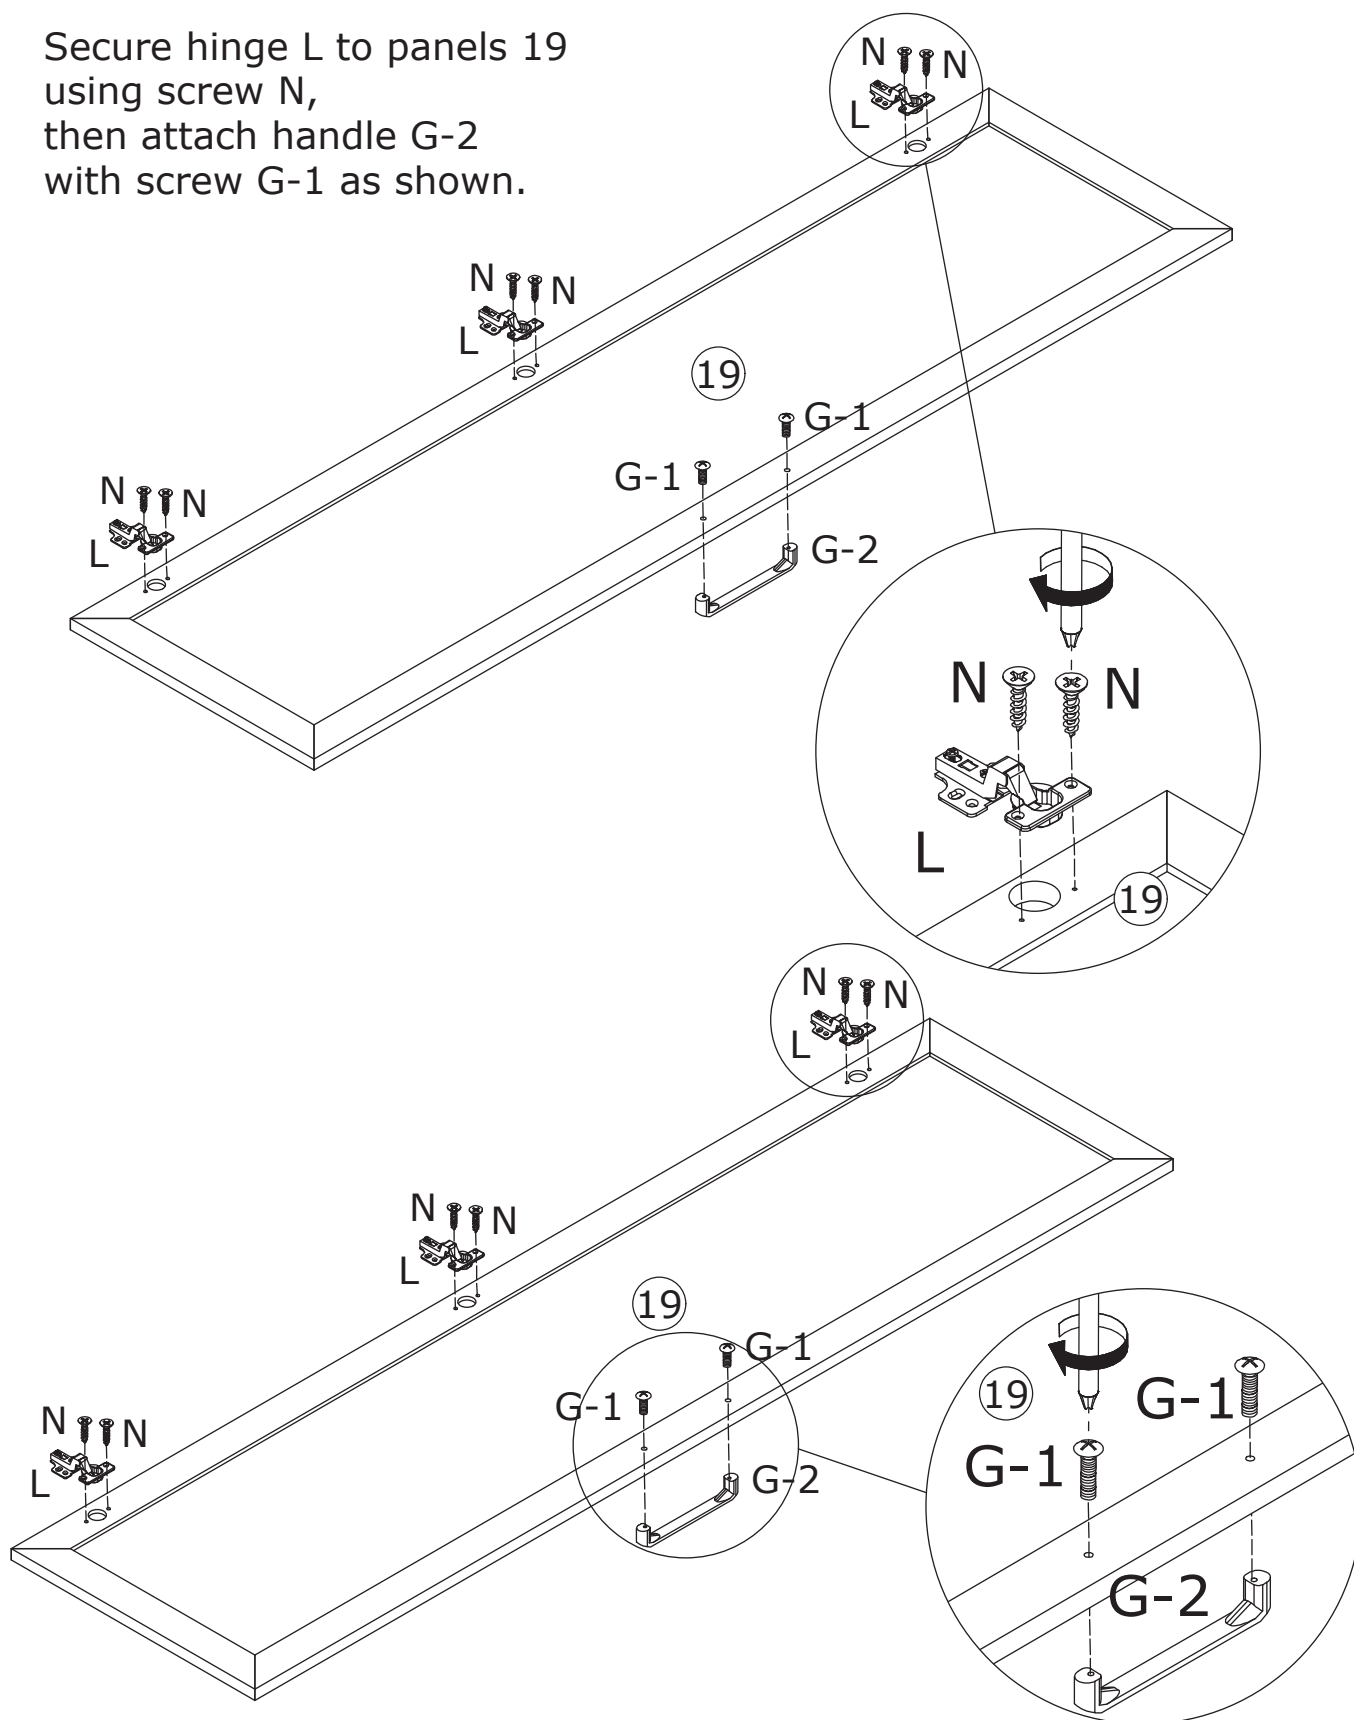


31

 G x 4 G-1 G-2  Ø4 x 20 mm	L x 10 	N x 20  Ø3.5 x 14 mm	
--	---	---	---

 
Secure hinge L to panels 19 and 20 using screw N, then attach handle G-2 with screw G-1 as shown.



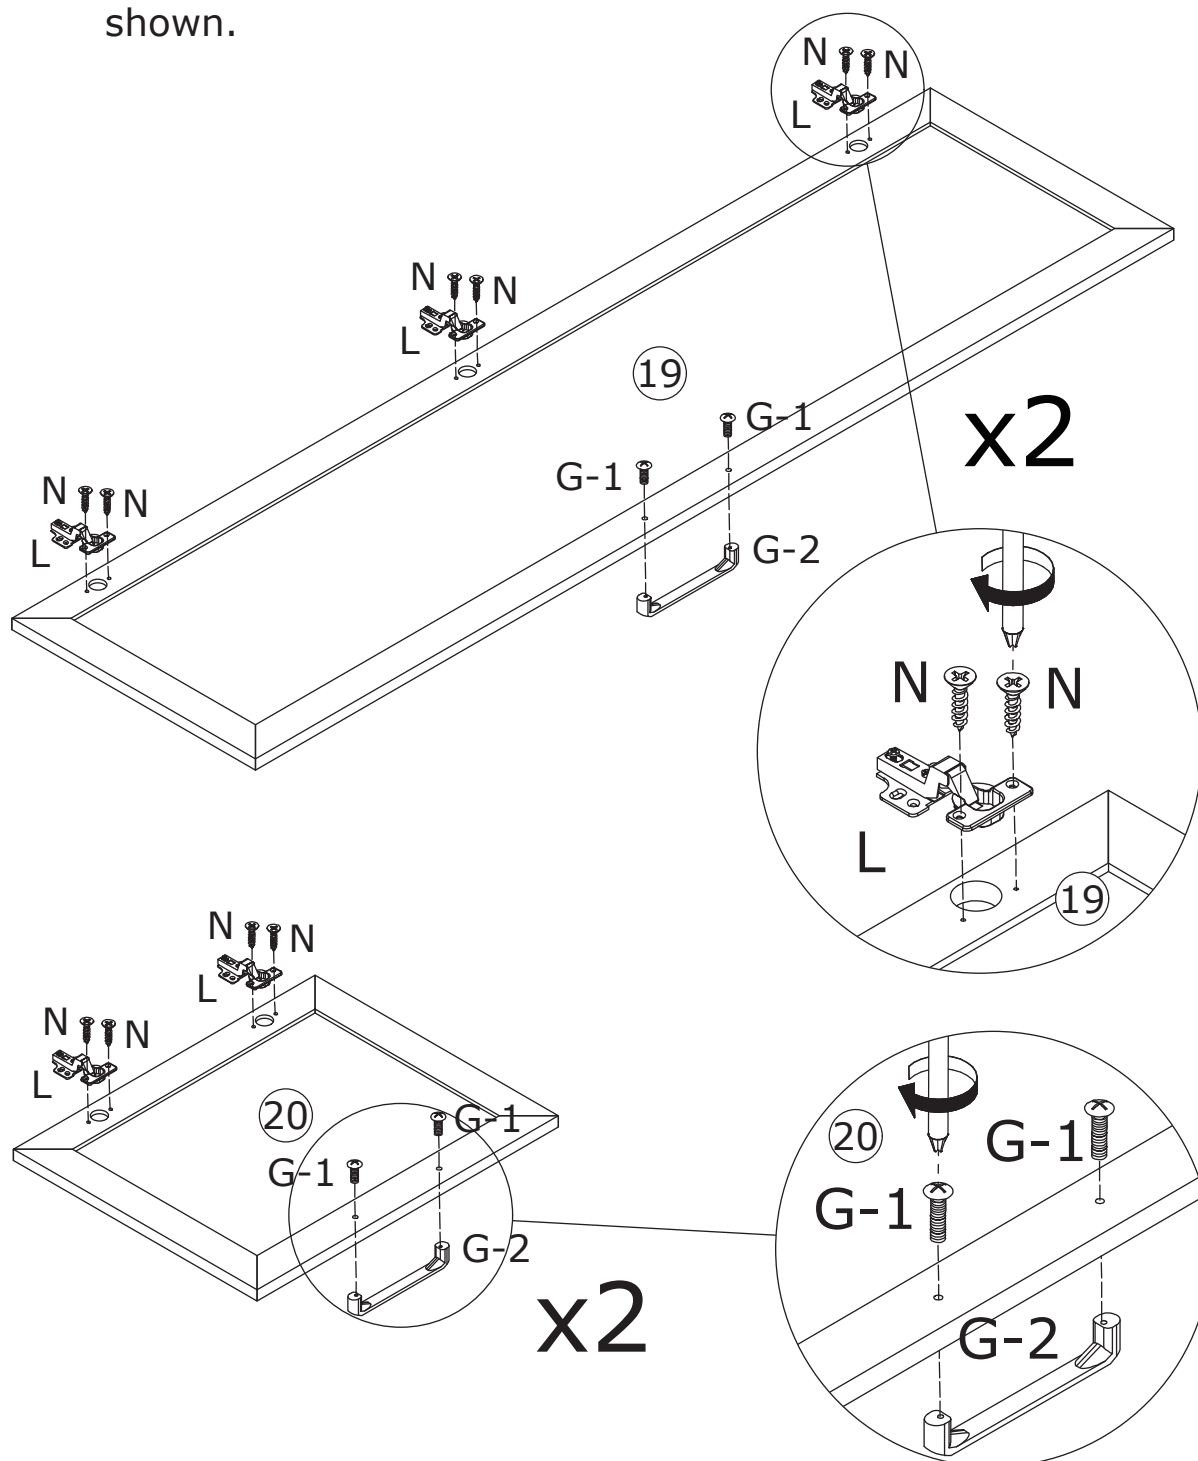


32

 
N x 40  Ø 3.5 x 14 mm	E x 24  Ø 3.5 x 12 mm	
--	--	---

    Secure panels 19, 20, 35 and 36 to panels 2, 3, 4, 5, 6 and 7 using screw N and E as shown.



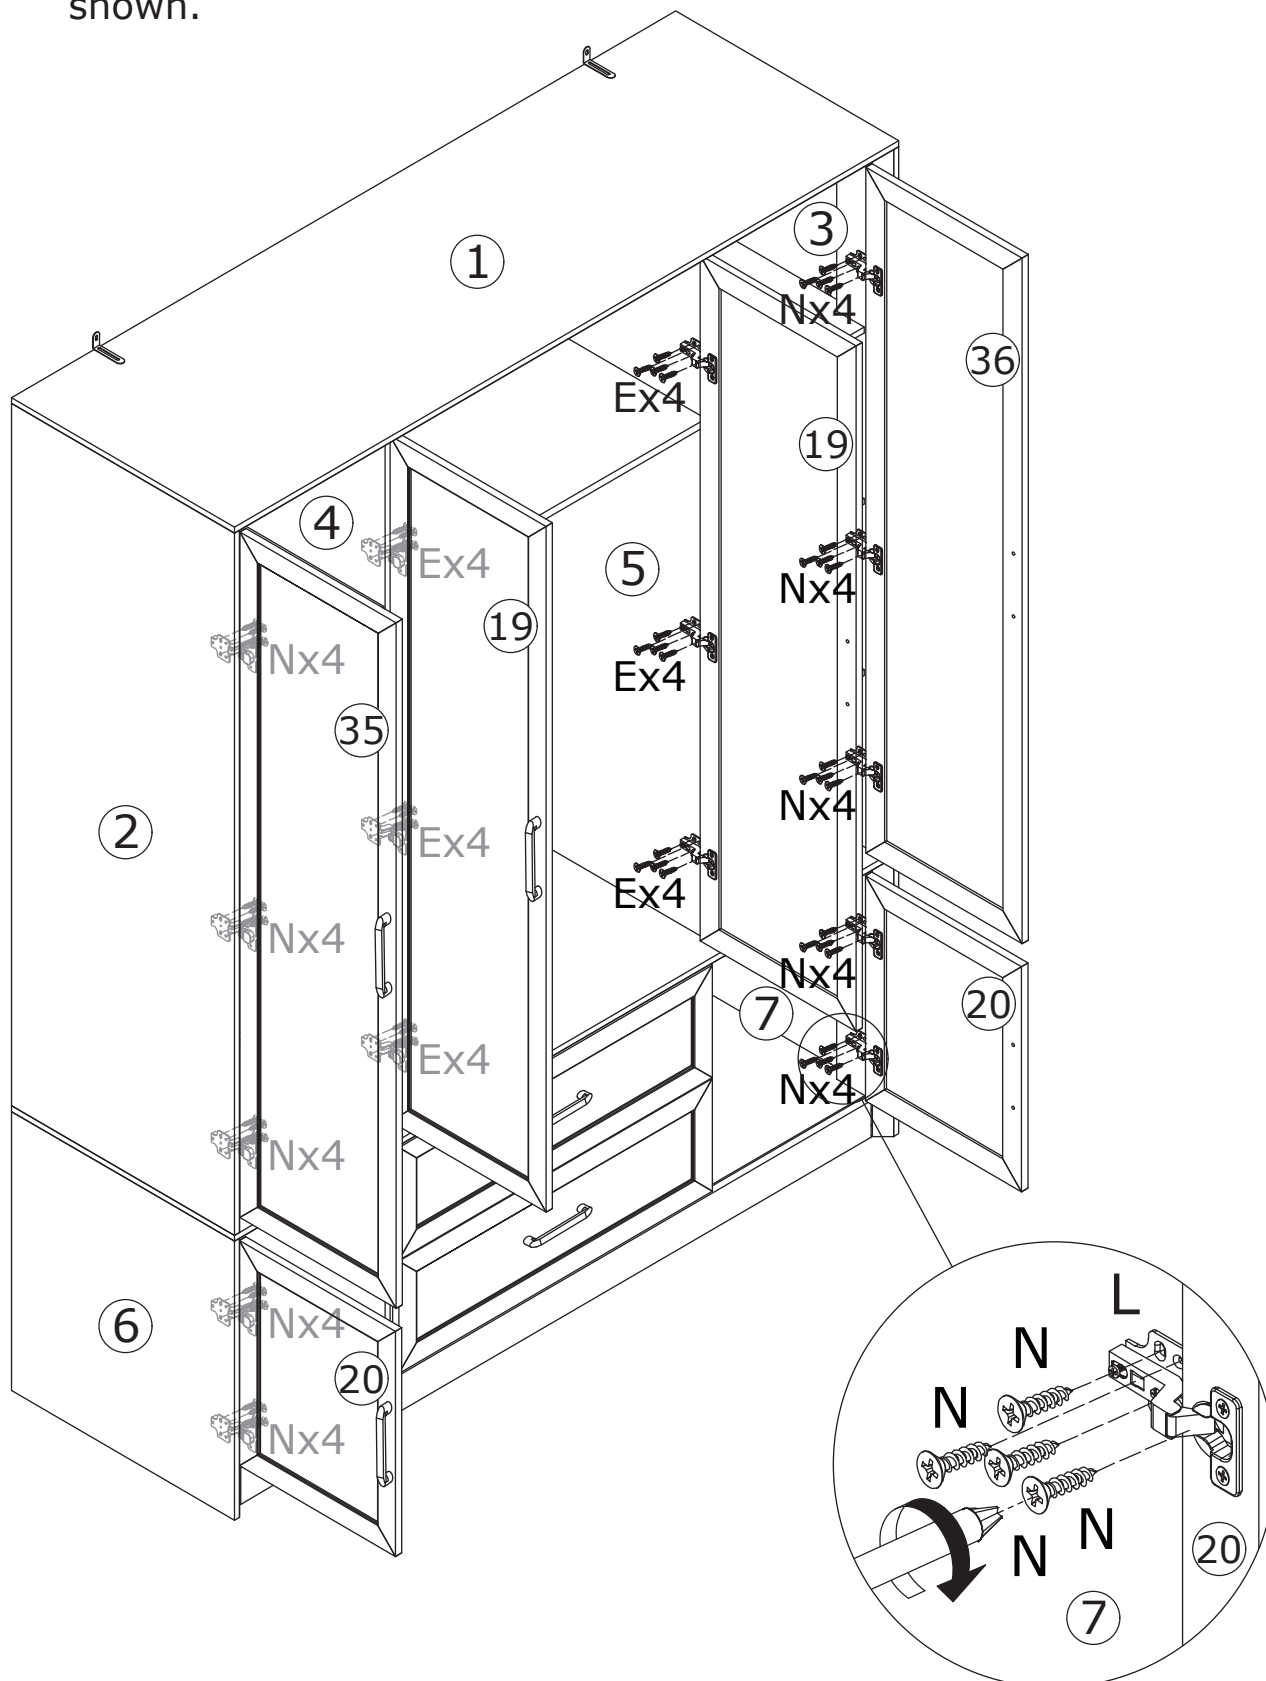


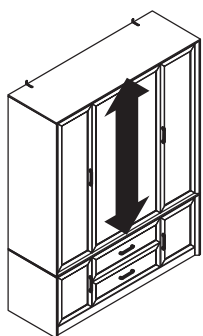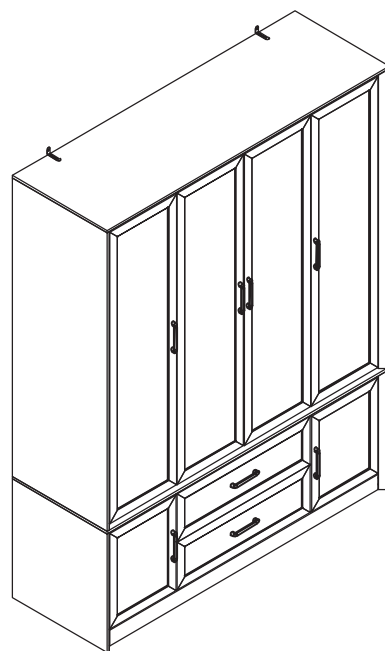


①

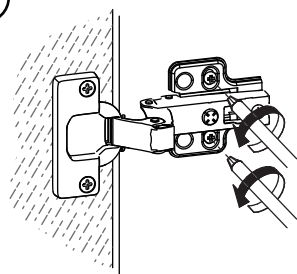 






②

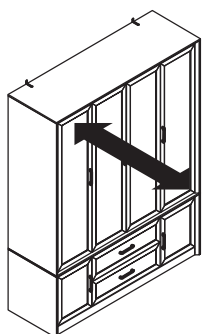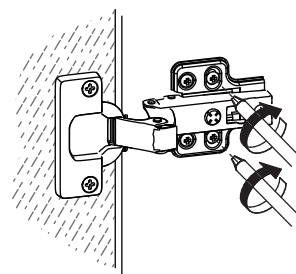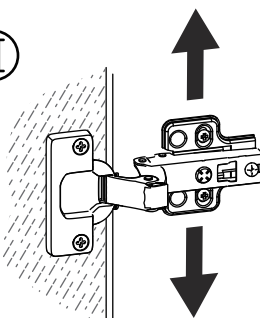   

①

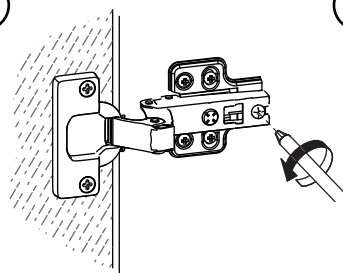 

②

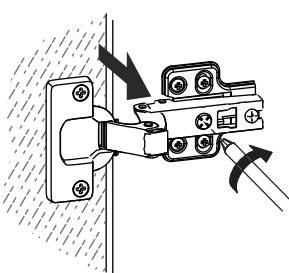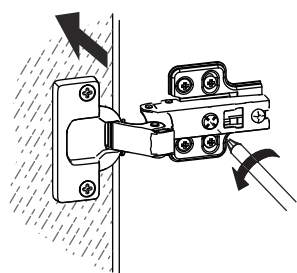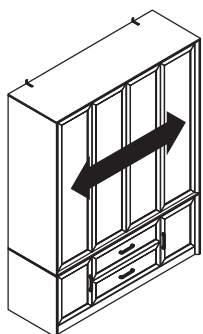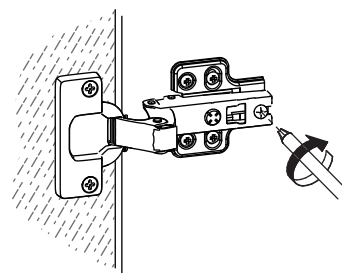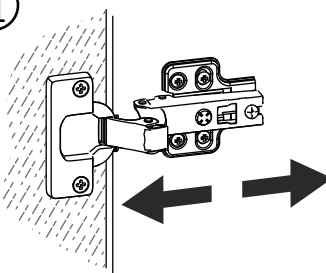     

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.