
# JUMPKING\* BACKYARD

# **Hanging Set**

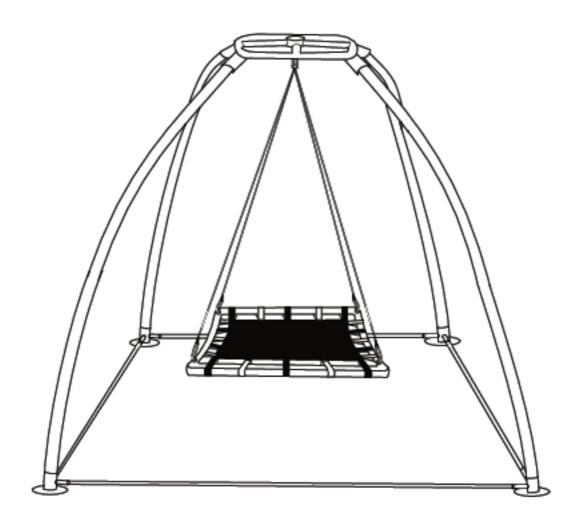

Got a Problem building your Hanging set or request a full range of accessories and replacement parts. Please call 0344 800 4060 or visit our website at: www.jumpking.eu

### IMPORTANT INFORMATION

- . WARNING! ADULT SUPERVISION & GUIDANCE REQUIRED AT ALL TIMES.
- . Recommended age 3+ years.

#### WARNINGS!

- . Only for domestic use.
- . Maximum user weight limit 90kg.
- . Not suitable for children under 3 years small parts, choking hazard.
- Long cord Strangulation hazard.
- . ONLY for residential outdoor use only.
- . The UFO frame is a conductor of electricity. Lights, extension leads and all other electrical equipment must never come into contact with the swing.
- . The product must be assembled by an adult and erected in accordance with assembly instructions.
- . Only one user. Collision hazard.
- . Do not use in strong wind condition
- . The following product dimensions:
  - Height from ground to top: 206 cm (2.06m)
  - Length: 220 cm (2.20m)
- Depth: 205 cm (2.05m)
- . The related product must be placed on a level surface at least 2m from any structures or obstructions such as fence, garage, house, overhanging branches, laundry lines or electrical wires.
- . DO NOT install the product over concrete, a sphalt or any other hard surface and not in the proximity of other conflicting instillation such as paddling / swimming pools, swings, slides or climbing frames.
- Inspect the product before each use. Any damaged or worn parts must be replaced before using the product.
- . Make sure there are no children / animals / obstructions underneath the product. Please don't use when it's windy or rainy as this can cause you to slip and become injured.
- Instruction to be given to the child in the proper use of the toy, particularly in the use of any braking system.
- A reminder that the toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- The minimum clearance between hanging seat and the ground shall be 350mm or above.
- Instructions that anchors shall be placed level with or under the ground in order to reduce tipping hazards.
- Information to keep the assembly and installation instructions for further reference.

#### CARE & MAINTENANCE

Regular care and maintenance of your product is required. This will help prolong its life and reduce the possibility of injury. Neglecting this can lead to a risk for users.

Inspect your product before each use using the checklist below as a guide. Take particular care in doing this at the start of each season and at regular intervals. Ensure all parts are intact and cannot become dislodged during play, tighten any screws or nuts and bolts where required.

PART	CHECKLIST	ок	NOT OK
All Parts (Tubing and screws)	Securely attached		
	Correctly positioned		
	No sharp edges or points present		
	No missing parts		
Hanging seat and ropes	No damage (bent/broken)		
	No missing parts		
C lips	No bent parts		
	No damage		
	No rusting or corrosion		

**IMPORTANT:** If any faults are found, the product MUST NOT BE USED. We advise that the product is dismantled and placed in a dry place until new parts are fitted.

Take care when moving the product. To be lifted by 2 people. Lifts lightly off the ground, keep the frame horizontal. Never drag to move it as this can displace parts. Always check that parts are positioned correctly after moving.

### BUILDING YOUR UFO SWING SET

- 1. This is a 2 person build.
- 2. Time for build is approximately 1 hour.
- Choose a good location:
  - Suggest on a level surface that is soft (wood chippings, sand or grass).
  - Ensure adequate overhead clearance. A minimum of 24ft (7.3m) from ground level, away from wires, trees and other possible hazards.
  - Ensure a clear space of 8.2ft (2.5m) around sides, away from walls, fences, structures, tarmac
    and other hard surfaces and play areas.

## WHAT YOU WILL NEED



Description: Allen Key (Included)




Description: Gloves




Description: Safety glasses



Description: Mallet

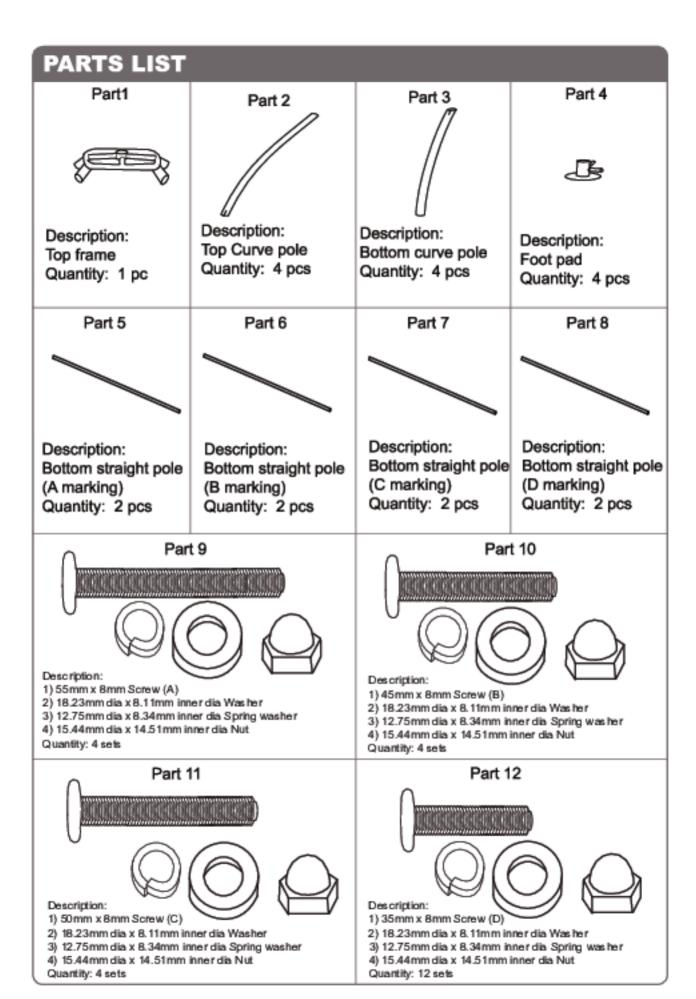

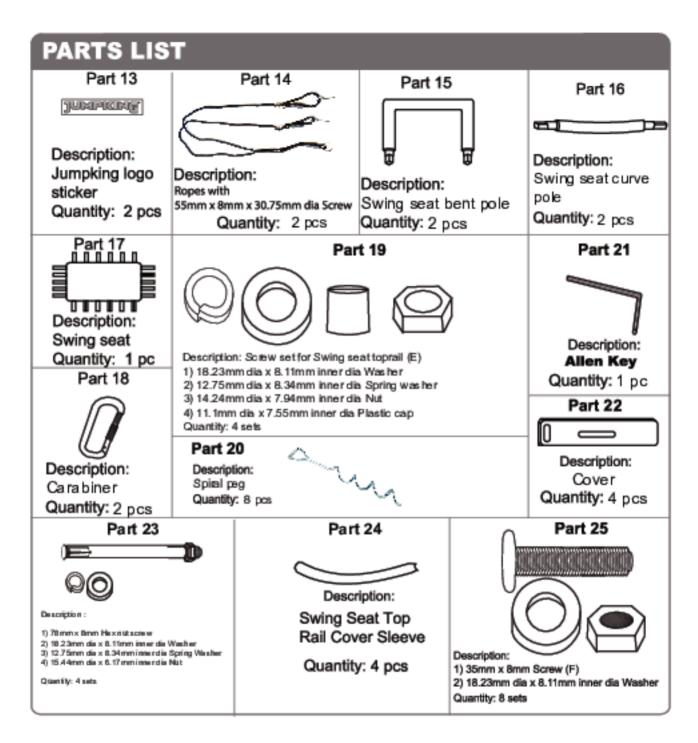


#### ASSEMBLY INSTRUCTIONS


- Place the UFO swing on level ground and not less than 6ft (1.8m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- Do not install the UFO swing over concrete, as phalt, packed earth or any other hard surface; a fall onto a
  hard surface can result in serious injury or death to the equipment user.

#### TIGHTENING NUTS & BOLTS


- For ease of installation, do not over-tighten the nuts initially when you are starting to assemble the
  equipment. This will allow for adjustments during installation.
- After you have finished assembling the main components of the swing, go back and fully tighten all nuts.
   Check the entire unit and make sure all parts are properly assembled before allowing children to use the UFO swing.


Assemble the frame according to below diagram: Make sure the metal pegs insert into ground.

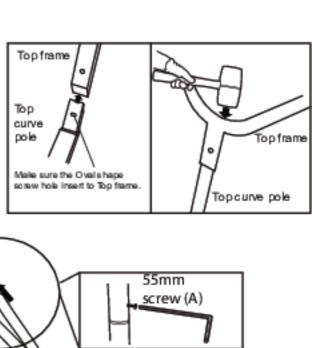

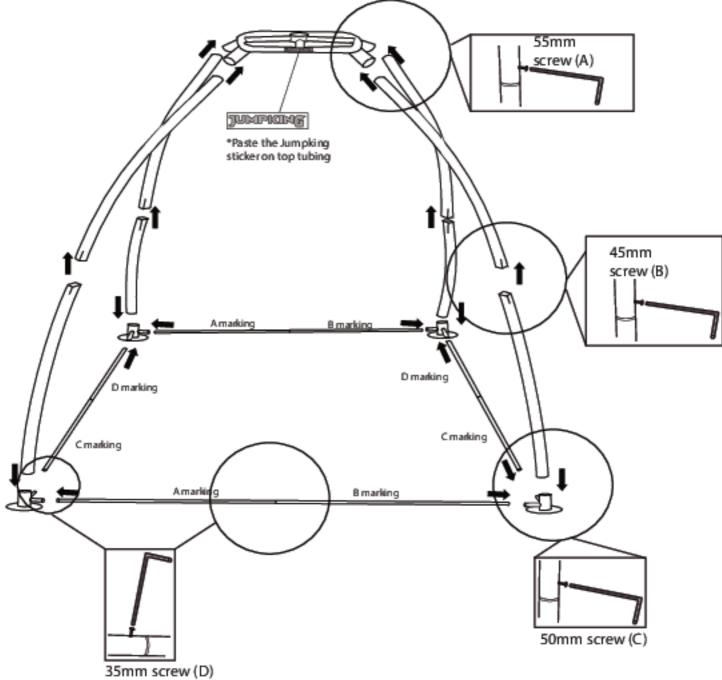

# Insert the tubing into the seat fabric.

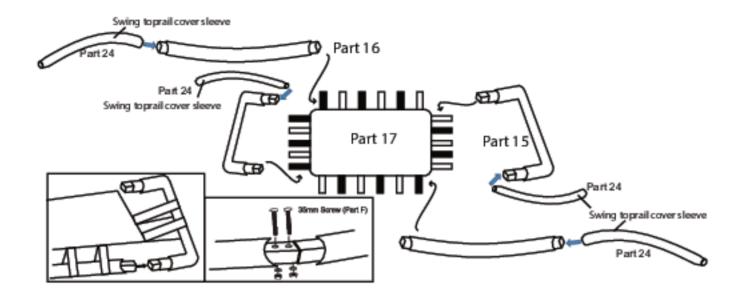

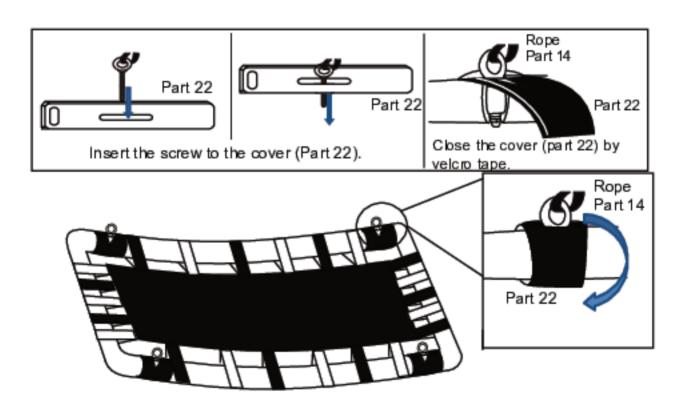

# Complete Swing Set

Swivel Motion (360 Degrees) - Connect the 2 carabiners on central hook



Front & Back Motion - Connect one carabiner to the left hook, and the other to the right hook, to create a "swinging" motion



Please note-you must maintain a minimum of 8 inches of ground clearance.