 


Model NO.: WG481/BBA004

Instruction

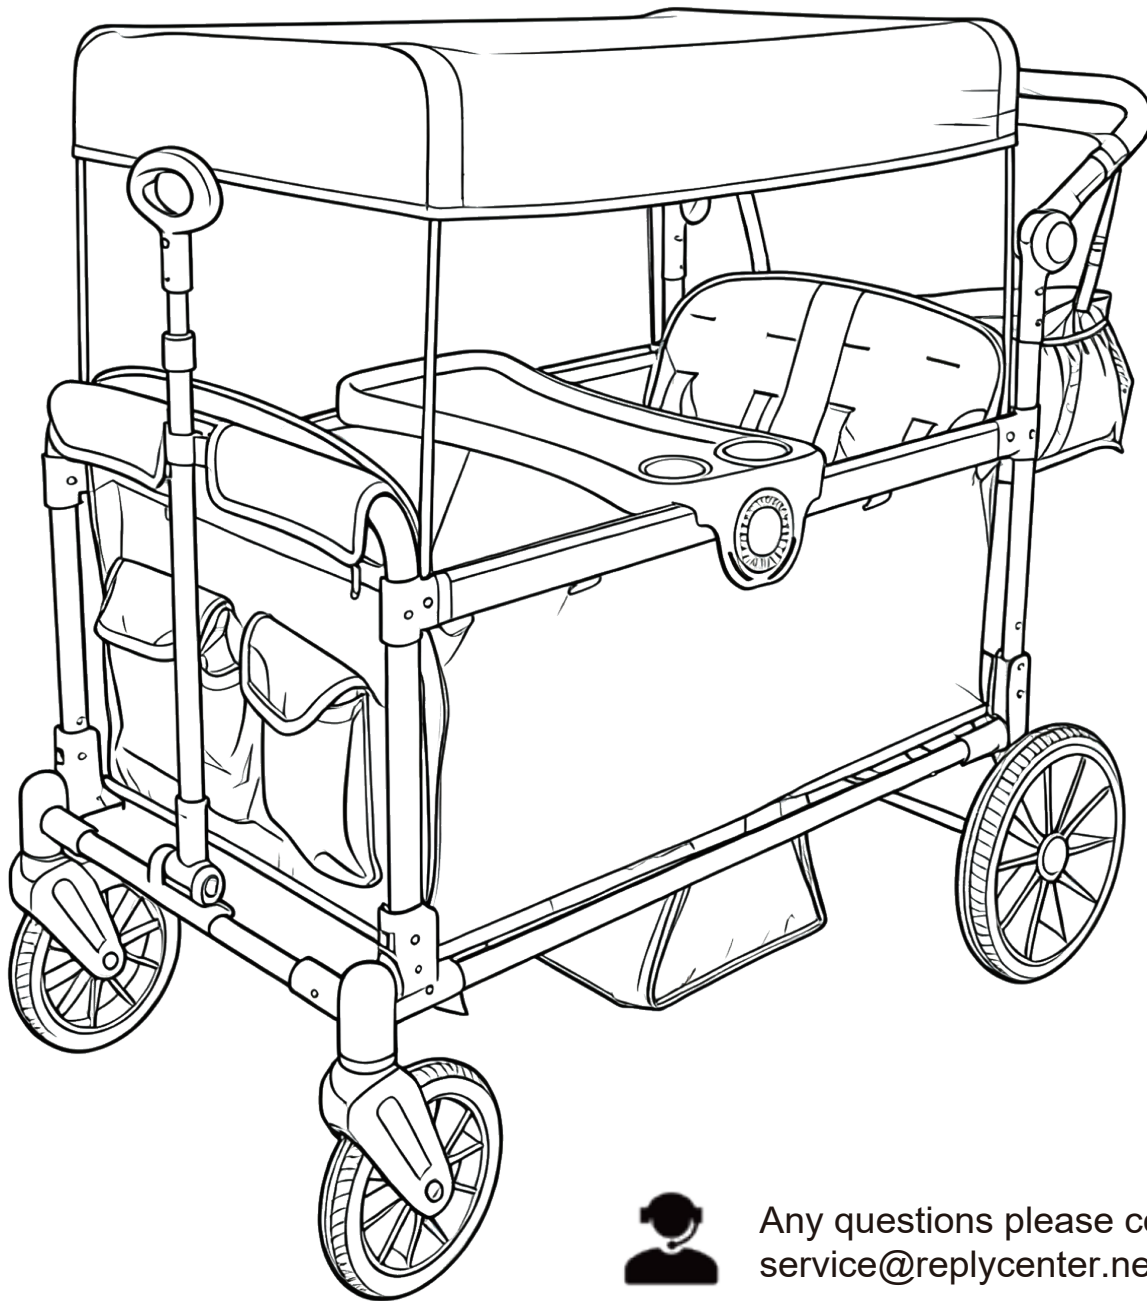

Any questions please contact us
service@replycenter.net

Important information:

1. Before installation, please refer to the manual to check each component.
2. If you encounter any problems during the installation process, please contact our service team for assistance

Read all instructions and labels before assembly and use of product.

KEEP INSTRUCTIONS FOR FUTURE USE.

WARNINGS

READ AND FOLLOW ALL WARNINGS AND INSTRUCTIONS!

FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY OR DEATH!


- **NEVER** leave children unattended. **ALWAYS** keep children in view while in the product.
- Adult assembly required. Take care when unpacking and assembling as it contains small parts and some items with sharp edges.
- To prevent a possible choking hazard, remove and discard packing material before using this product.
- Avoid serious injury from falling or sliding out. **ALWAYS** use restraint system.
- **DO NOT** carry or roll product on stairs or escalators with a child in it.
- **DO NOT** hang items on the parent's handle or place them on the canopy as they can tip the product over and injure a child.
- **ALWAYS** exercise care when going over curbs or steps, and never use the product for anything other than transporting your child. Use at a normal walking pace only; faster strolling can cause a loss of control and injury to the child.
- **DO NOT** place hot liquids in storage pockets. Spills can burn you or your child.
- **DO NOT** use the product if any parts are missing or broken.
- **ALWAYS** apply brakes when taking children in or out.
- **DO NOT** allow the child to stand on the footwell. The product may tip over and injure child.
- **DO NOT** allow the child to climb on, into or out of the Product unassisted.
- **DO NOT** carry additional children, goods, or accessories in or on this product except as advised in these instructions.
- The product is intended for use with one or two children per side and to accommodate only the additional weights in storage as listed in these instructions.
- To avoid tipping, always remove the heavier weight child from a seating position before removing the lighter-weight child.
- **DO NOT** allow the child to push or pull the product in any mode.
- **DO NOT** allow the child to sit, stand, or climb over the storage basket or child's tray.
- **DO NOT** step on parent's handle.
- **DO NOT** enable easy entry when the front seat is occupied.
- **DO NOT** allow the child to stand while the product is in motion.
- **DO NOT** allow the child to jump on the seat or footwell.
- **ALWAYS** ensure the product is in a fully locked position before using.
- Care must be taken when folding and unfolding products or changing handle modes to prevent finger injury to you or your child in hinge areas. Make sure the child is not in the seat or near the product when folding or unfolding.
- **NEVER** leave the product on a hill or incline, even with brakes set, to avoid the product from tipping.
- To avoid accidental rolling, **ALWAYS** set brakes when the product is not being used.

WARNINGS


AVOID STRANGULATION:

- **DO NOT** suspend strings or toys from the canopy.
- **DO NOT** place product anywhere near cords from window blinds, draperies, phones, etc.
- **DO NOT** place items with a string around your child's neck such as hood strings or pacifier cords.
- When making adjustments to the product, **ALWAYS** ensure that all parts of the body are clear of any moving parts of the product particularly when switching modes.
- The canopy is not intended to provide UV protection.
- Sharp or heavy objects placed in pockets may cause damage to the product, or injury to the child.
- The product is not suitable for running or skating.
- The product is for children 6-36 months within the weight and height requirements.
- Prevent tipping, do not place the weight more than the maximum.
- The maximum weight capacity of the tray is 4.4 lbs.
- **DO NOT** overload the tray as it can become unstable.
- The maximum weight capacity of the storage bag is 4.4 lbs.
- The maximum weight capacity of the wagon is 40 lbs for each child.
- The maximum weight capacity of the stroller in combination with any accessories is 160 lbs total.
- **DO NOT** place any child taller than 39 inches per seat in the product.
- **DO NOT** overload the product as it can become unstable.
- **ALWAYS** distribute weight as evenly as possible on each side of the product.

PARTS

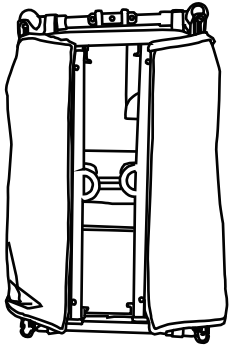


① Wagon Frame

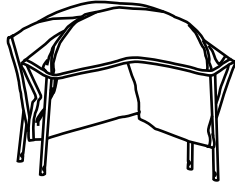


② Canopy




③ Pull Rod

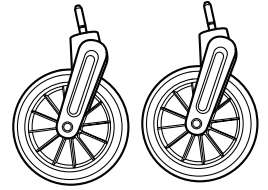


④ Front Wheel(x2)

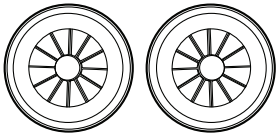

⑤ Rear Wheel(x2)

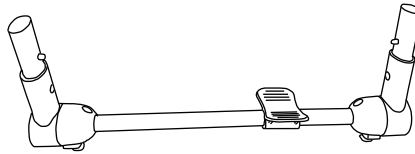


⑥ Rear Wheel Axle

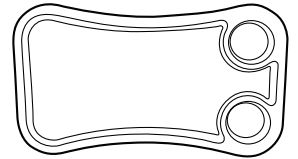

⑦ Plate

HARDWARE

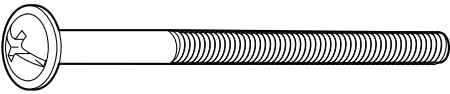

Ⓐ Bolt(x1)



Ⓑ Screw (x1)




Ⓒ Pull Rod Buckle(x1)



Ⓓ Nut(x1)


Tools Needed:

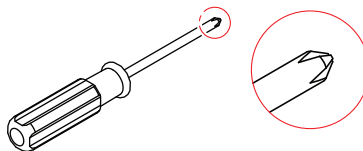

Philips Screw Driver (NOT INCLUDED)



1 Expand the Side Tube

1. Lift up the side tubes on both sides and unfold them in the direction shown in the figure

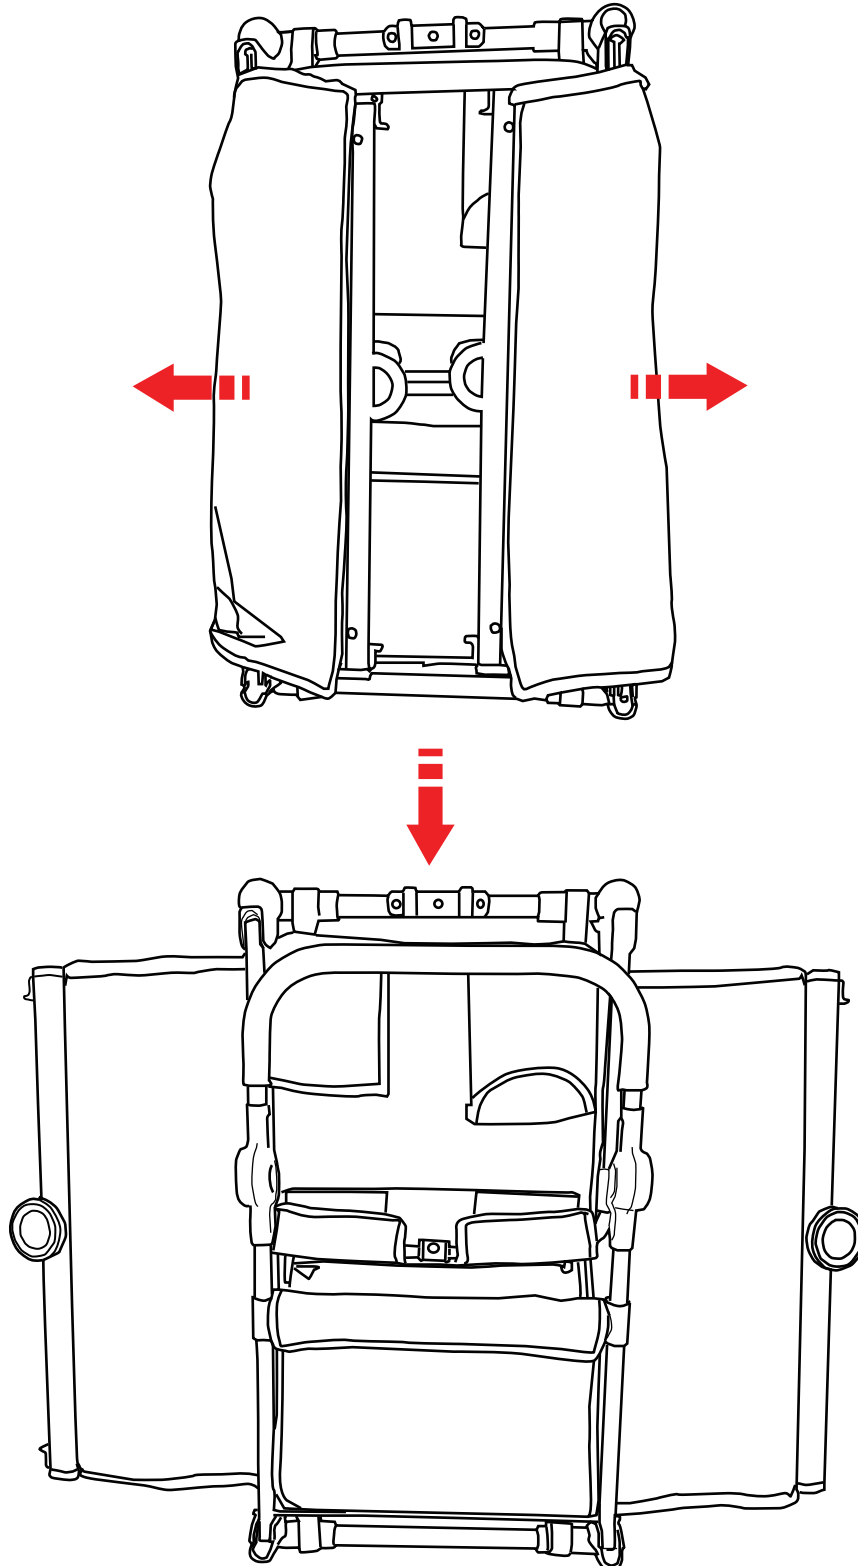


2 Assembled Rear Foot Tub

1. Pull the rear foot tube in the direction shown in the figure
2. Hearing a 'click' indicates that the open status has been completed

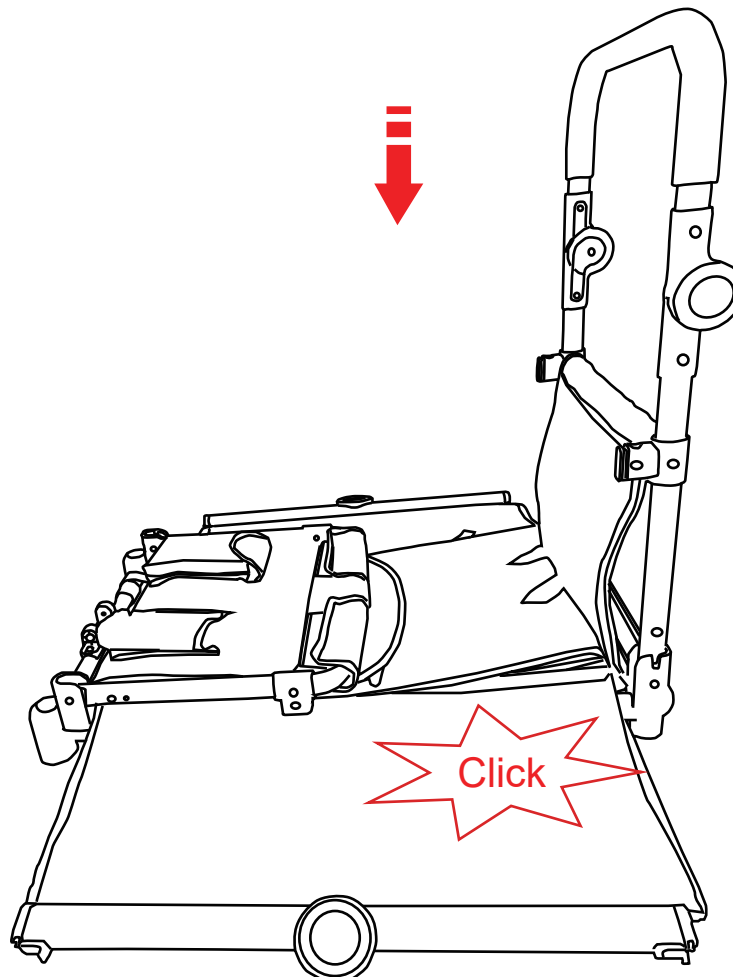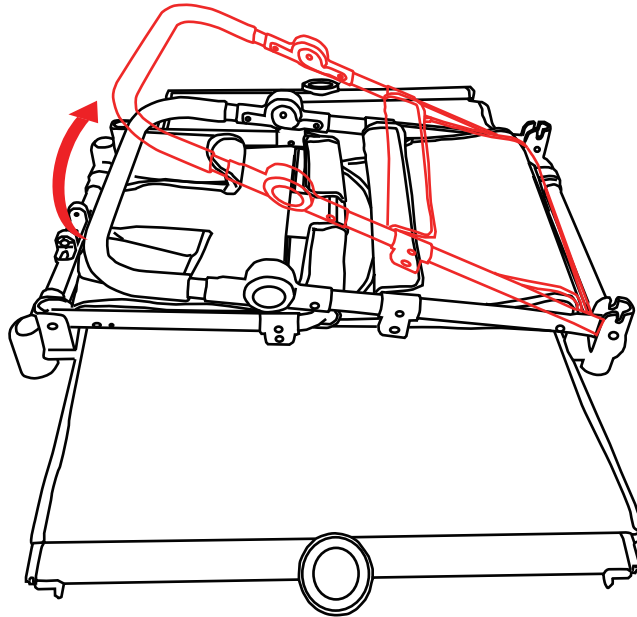



3 Assemble Front Foot Tube

1. Pull the front foot tube in the direction shown in the figure
2. Hearing a 'click' indicates that the open status has been completed

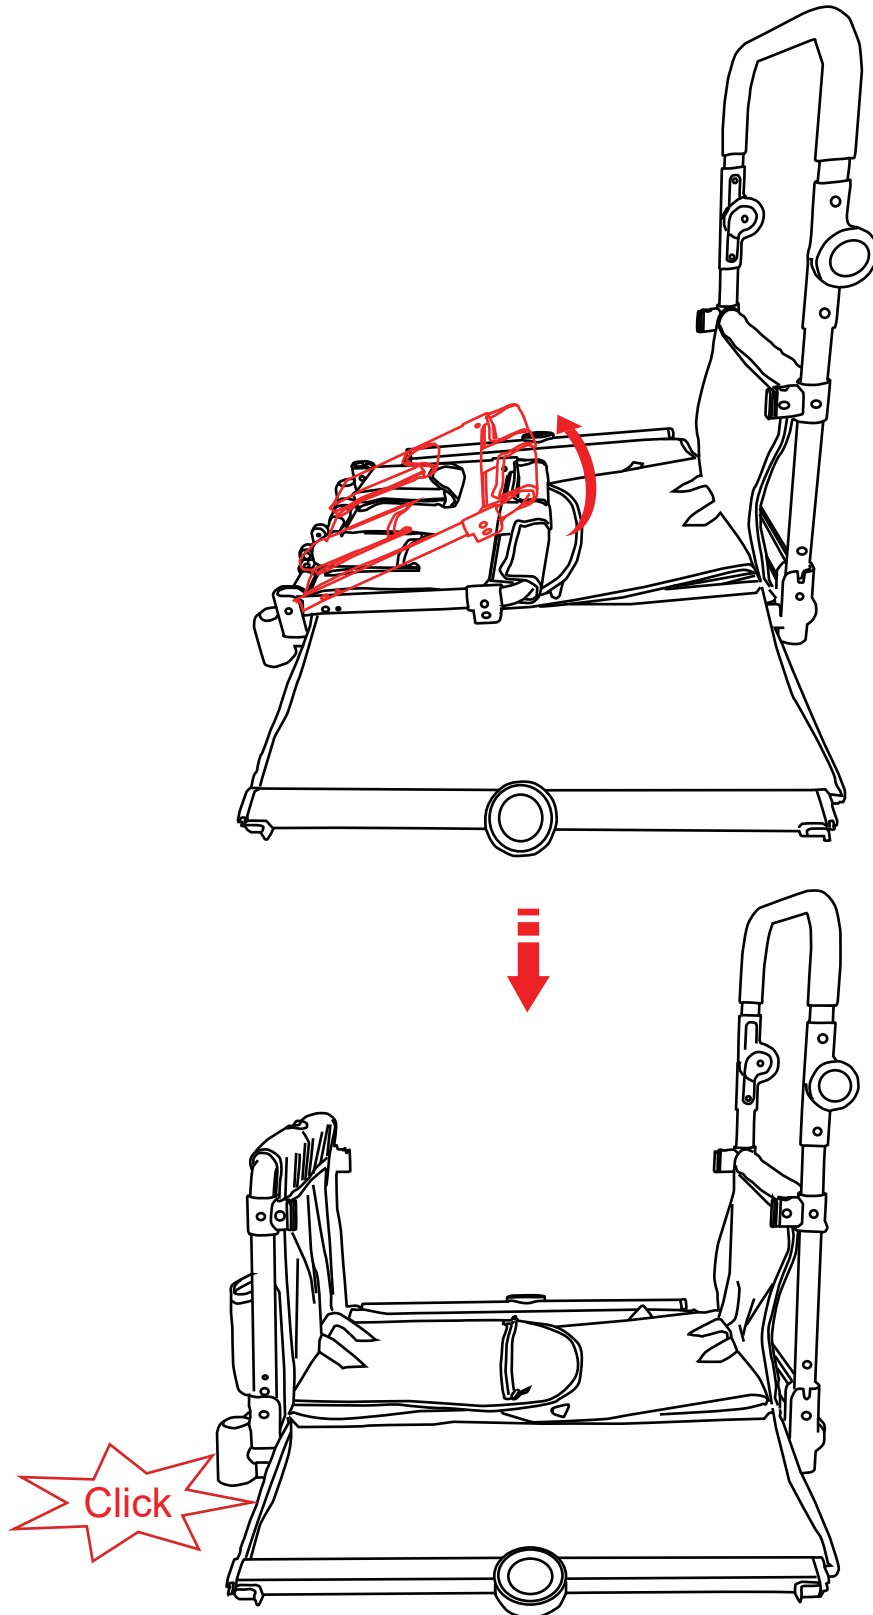


4 Assemble Seat Cushion


1. Pull up the seat cushions on both sides
2. Insert the opening lock tail zipper into the zipper head as shown in Figure ①
3. Pull in place in the direction of the arrow as shown in Figure ②
4. Follow the same steps to install the other side as well

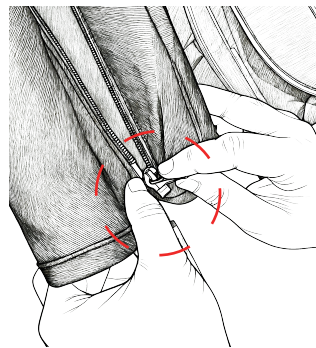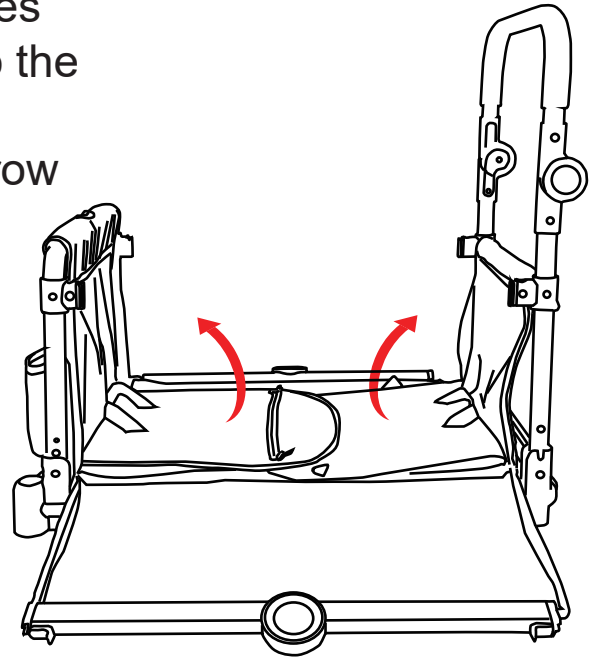


①

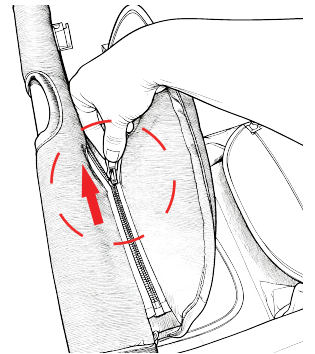


②

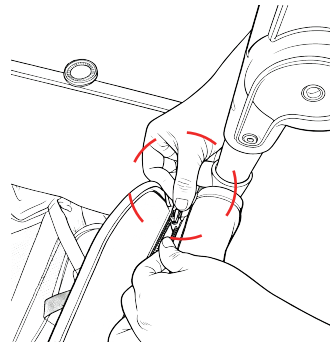

③


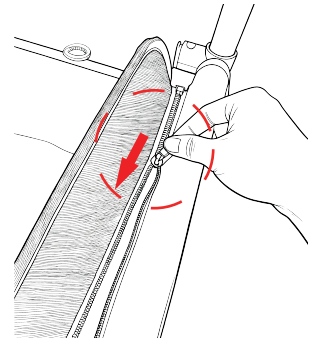


④

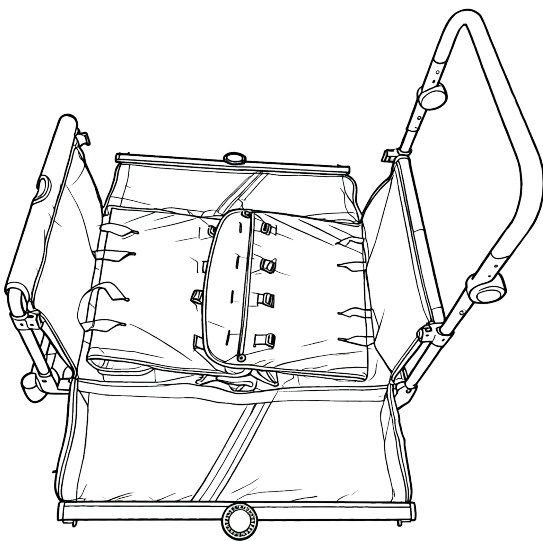


5 Expand the Side Tube

1. Lift the 2 side tubes towards the inside of the foot tubes on both sides

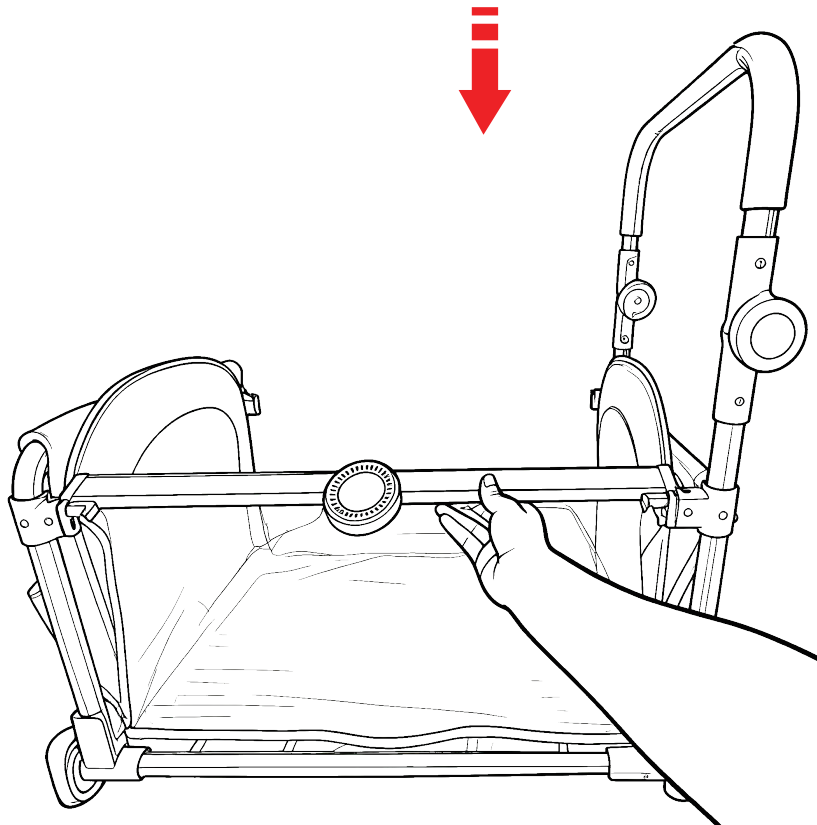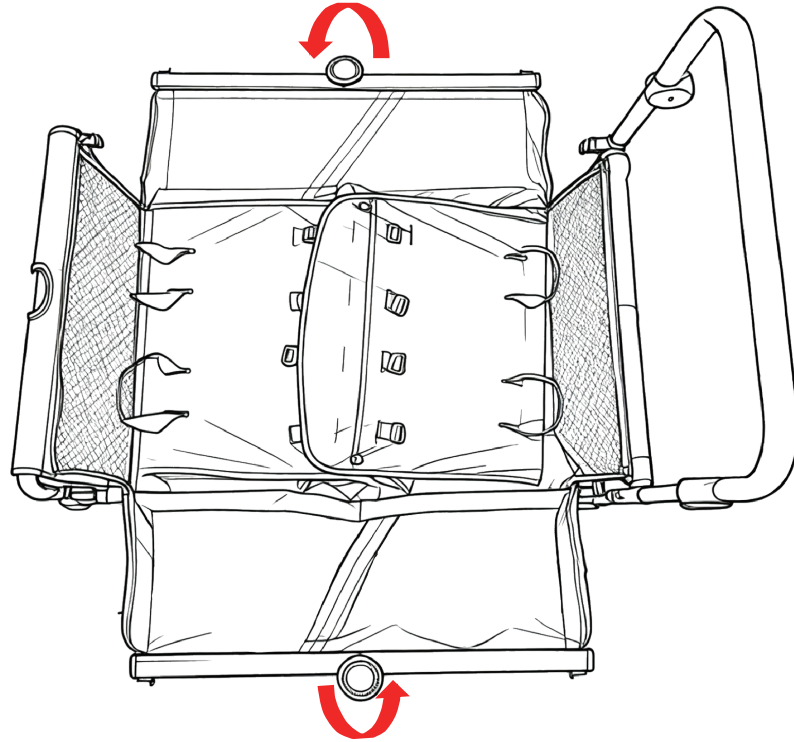


6 Expand the Side Tube

- 1.Align the side tube with the slot as shown in Figure ①
- 2.Insert it into the slot downwards, as shown in Figure ②
- 3.Upon hearing a 'click' sound, the assembly is completed

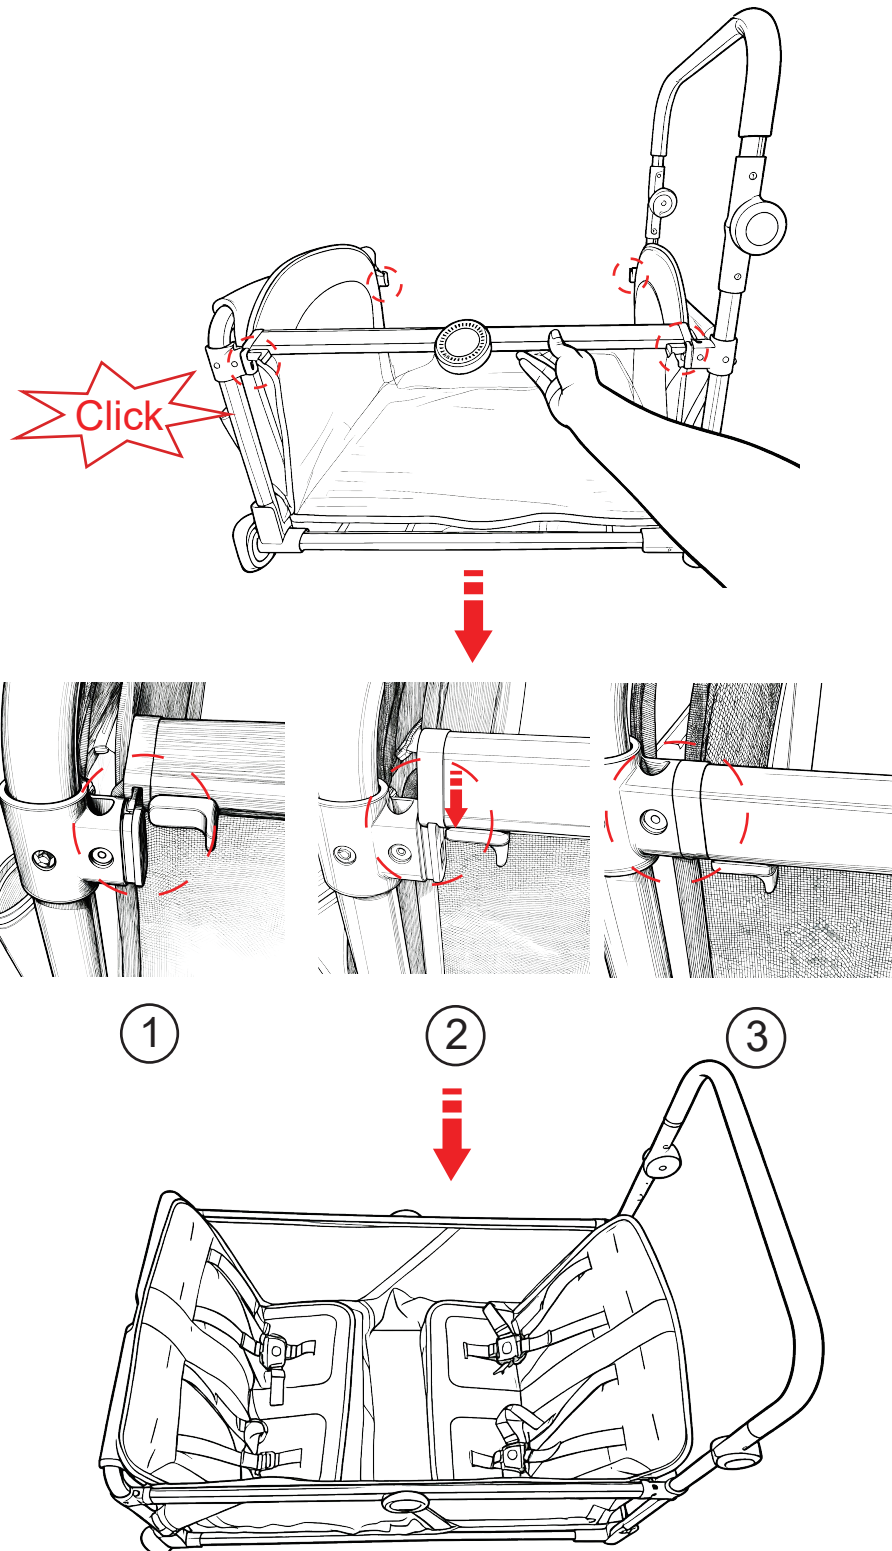


7 Fixed Side Tube

1. Pull the zipper in the direction of the arrows shown in figures ① - ③ to complete the installation of the side tube (4 locations)

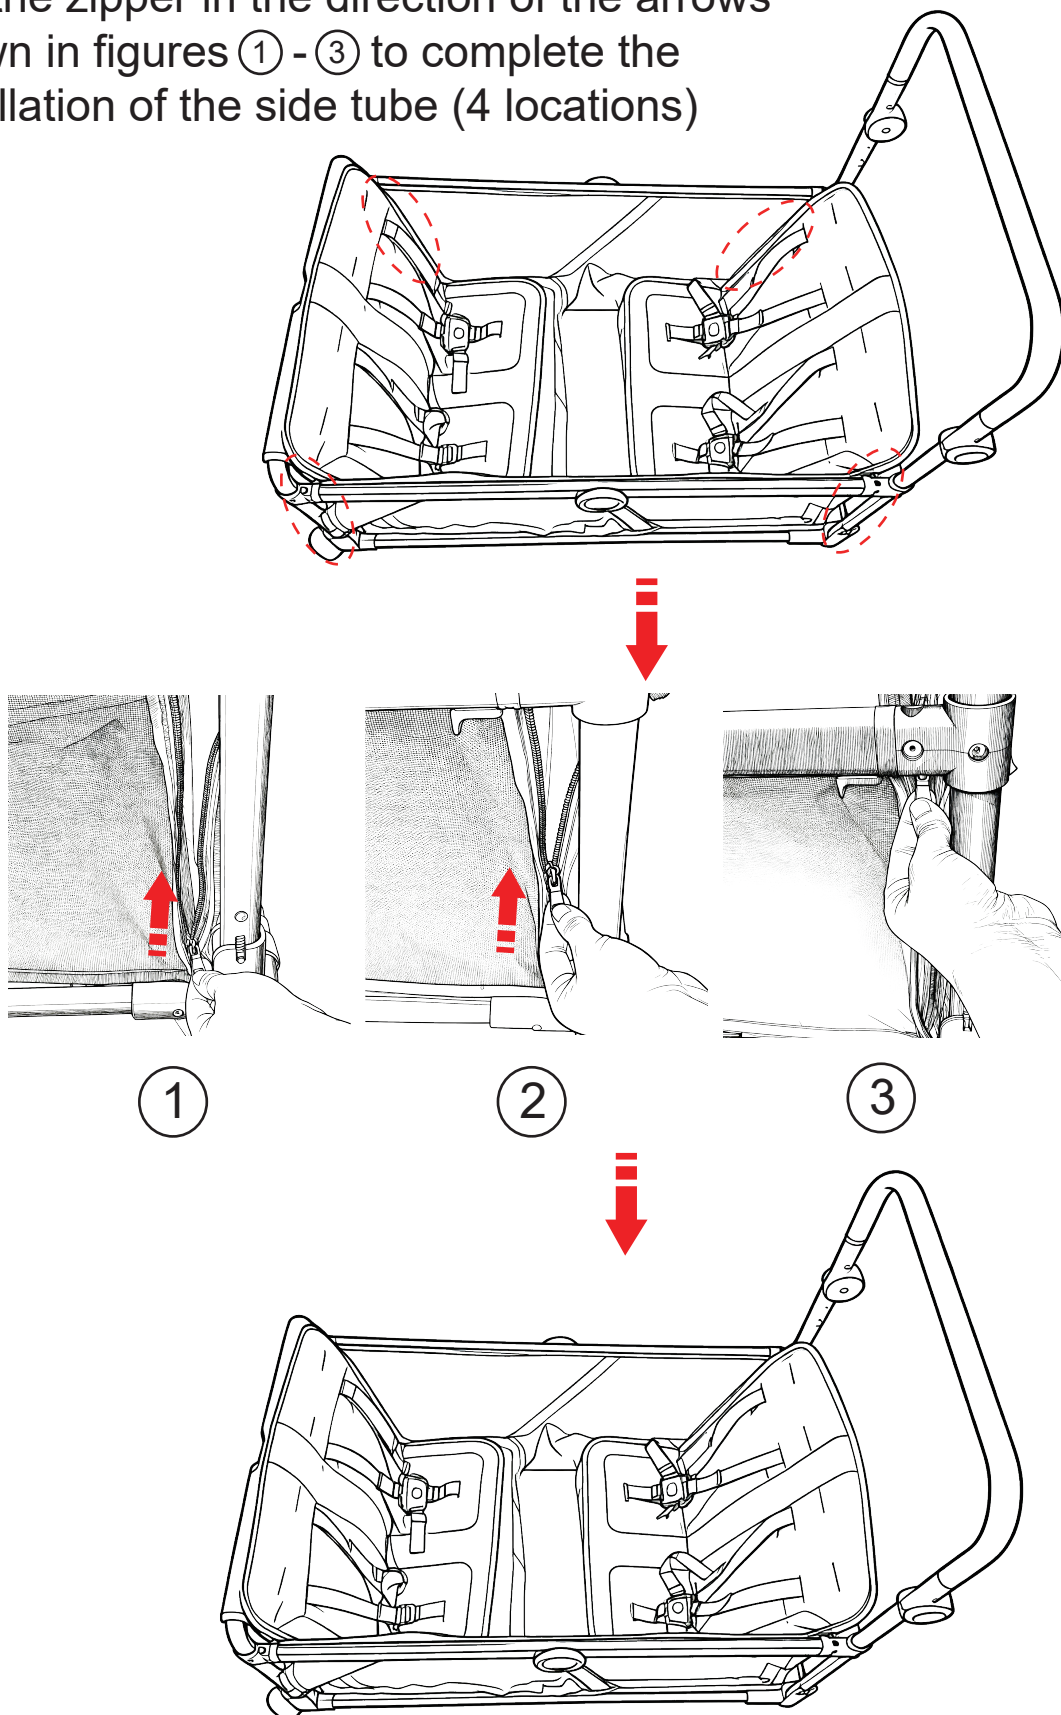


8 Install Front Wheel

1. Align the front wheels (Part ④) with the connection points on the trailer as shown in the diagram
2. Push the front wheels firmly in until you hear a 'click' sound
3. Gently pull each wheel to ensure they are securely fixed

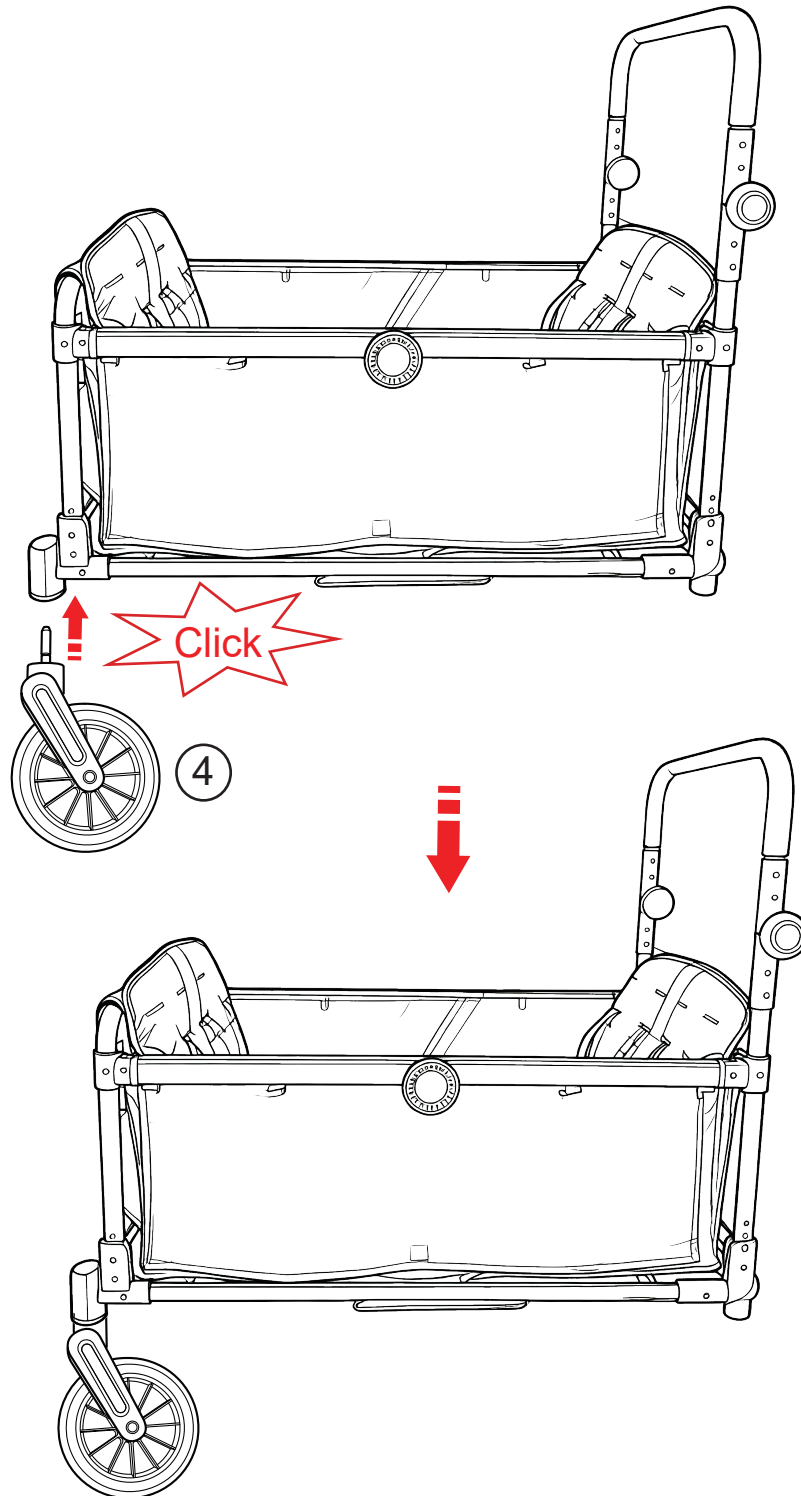



9 Install Rear Wheel Axle

1. Align the rear axle assembly (Part ⑥) into the rear foot tube
2. Push in the direction indicated by the arrow until you hear a "click" sound
3. Gently pull to ensure that the locking pin is installed in place

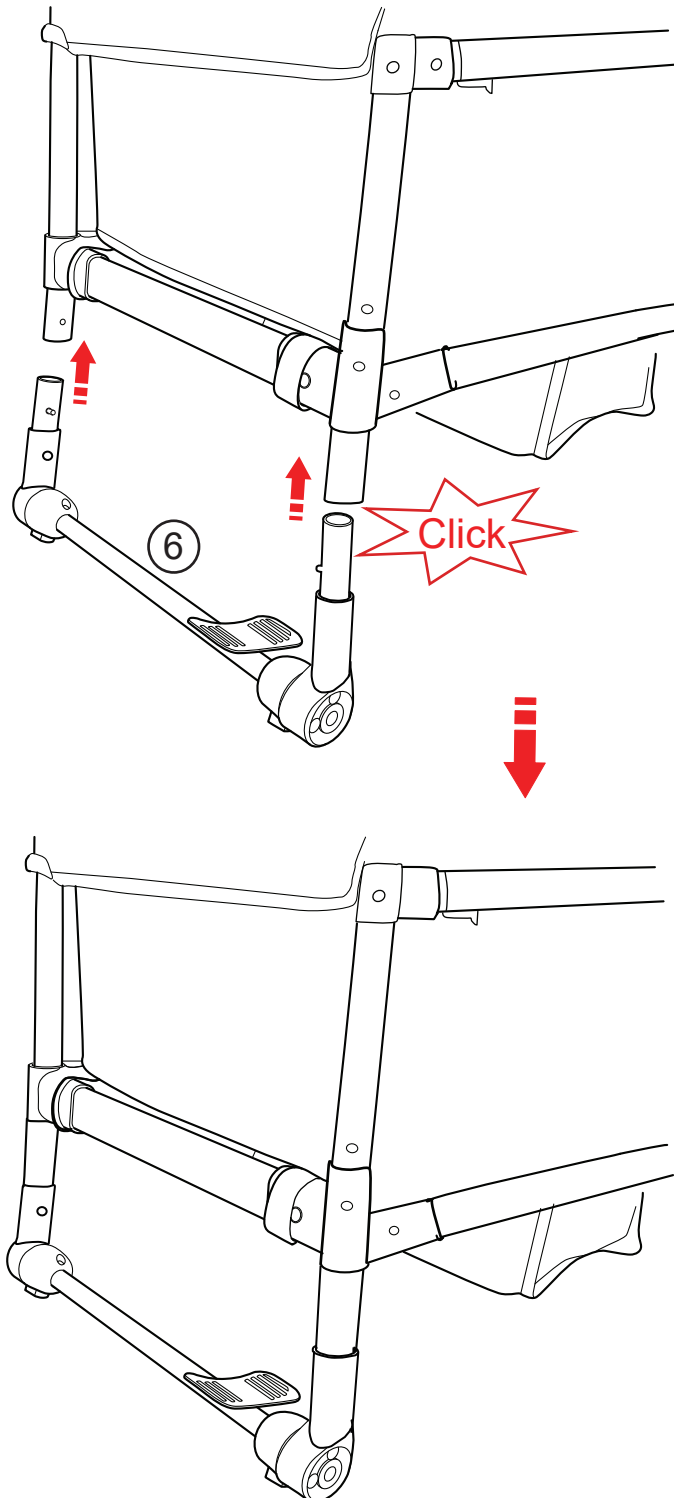


10 Install Rear Wheels

1. Align the rear wheels with the holes as shown in the figure
2. Insert into the hole in the direction of the arrow and hear a "click" sound
3. Gently pull the wheel to prevent it from falling off and ensure proper installation

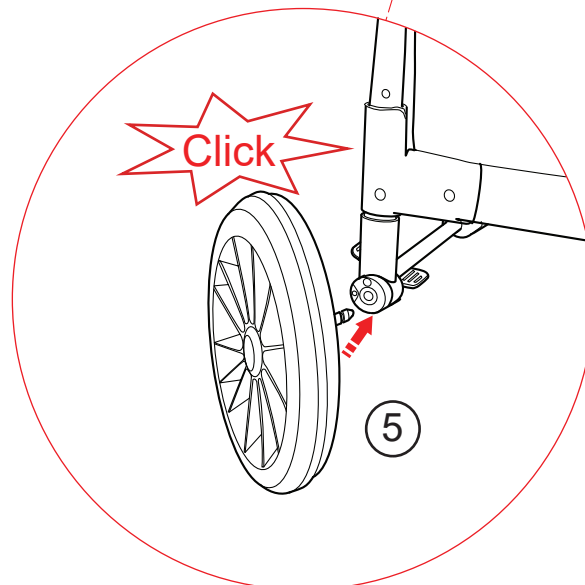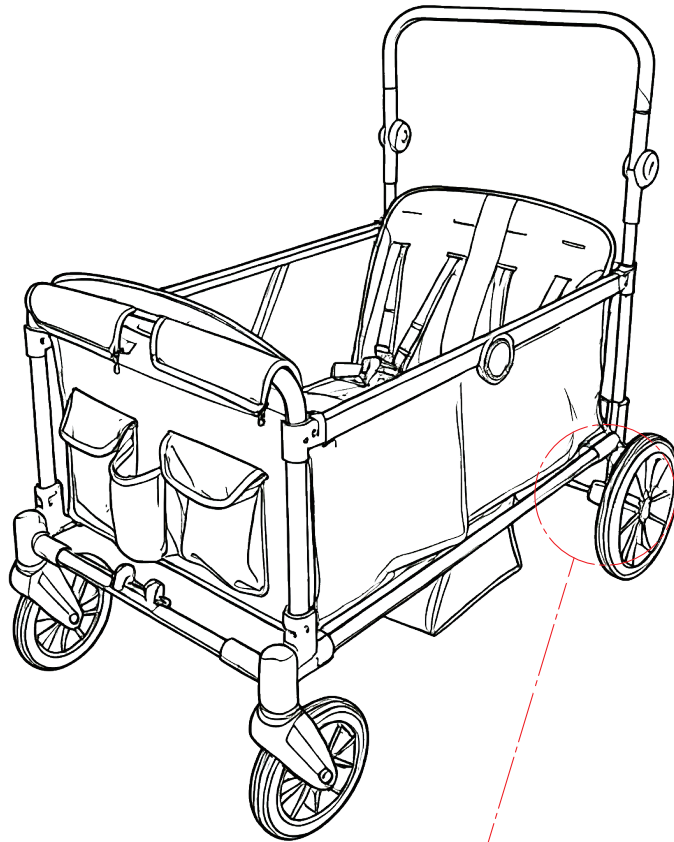


11 Install Canopy

1. Align the canopy with the designated slot on the frame, as shown in the figure

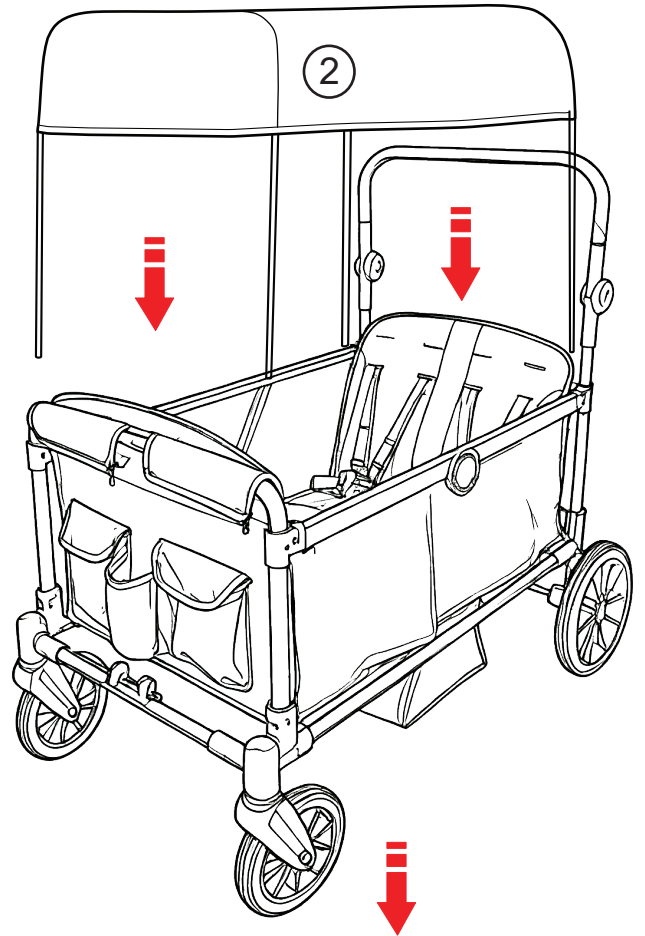



12 Install Pull Rod

1. Place the pull rod buckle (Part C) as shown in the diagram and screw in the screw (B) to secure the buckle (Part C)
2. Push the bolt (Part A) into the pull rod (Part 3) and trailer as shown in the diagram to secure the pull rod
3. Tighten the nut (Part D) and bolt (Part A) as shown in the figure
4. Fix the pull rod onto the pull rod buckle to increase stability

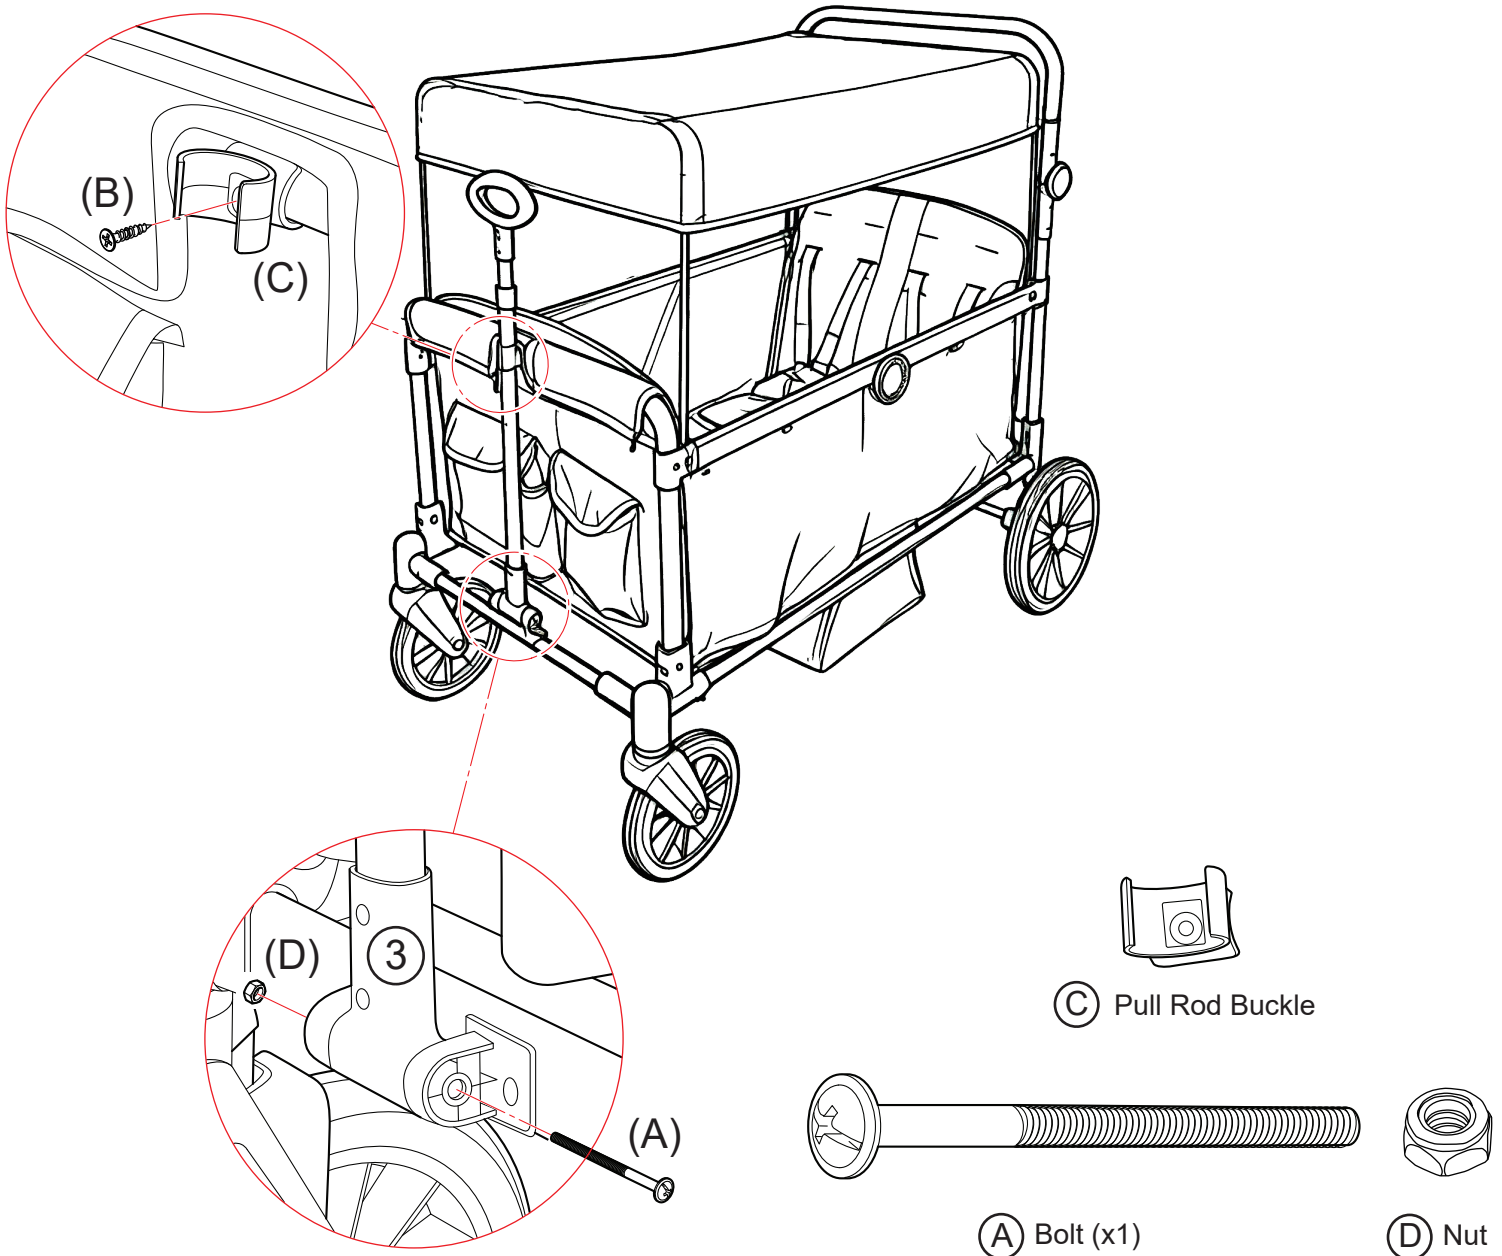

13 Install Plate

1. Insert the plate (Part 7) into place at the connection point shown in the diagram
2. Confirm accurate placement by gently pressing the plate and hearing a "click" sound
3. Simultaneously press the circular buttons on both sides of the bent handle to adjust the push handle

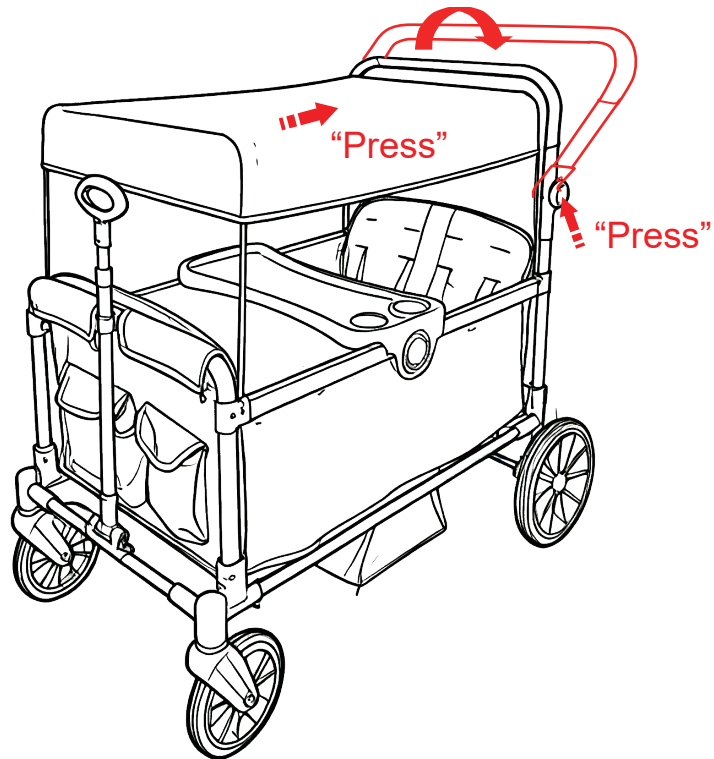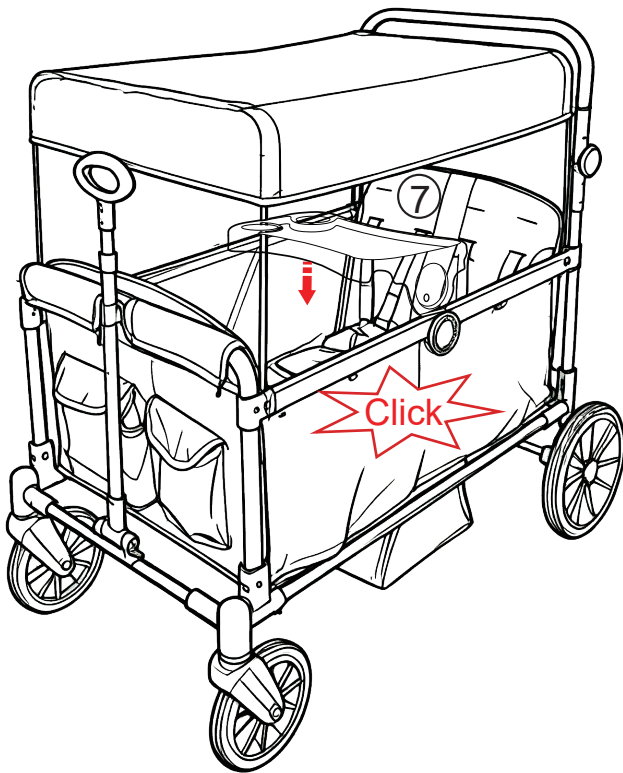


14 Proper Use of Safety Buckles

1. Connect the shoulder strap buckle to the waist strap buckle. Repeat on both sides.
2. Fasten the buckle into the holder until it snaps. Verify that it is firmly fastened.
3. Repeat on the other side.
4. Press the button located in the middle of the buckle to release the child from the harness.
5. Adjust the length of the shoulder and waist straps and move the sliders as indicated.



WARNING

Do not use if harness is not secure.

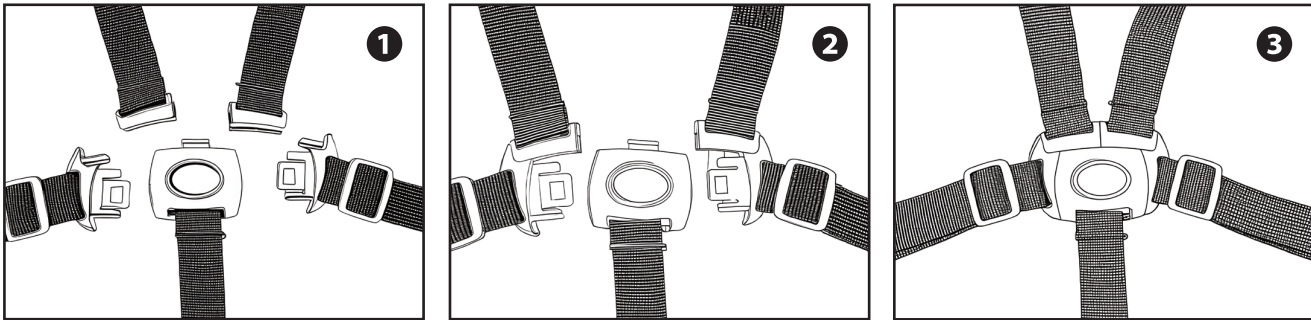


WARNING

- Avoid serious injury or death from falling or sliding out. ALWAYS use child restraint system.
- NEVER leave children unattended. ALWAYS keep children in view while in the product.
- The product is intended for use with one or two children per side.
- After fastening safety harness, adjust safety harness so that they perfectly secure your child. Straps must be positioned exactly as shown.
- Place your child in the wagon stroller, with the crotch strap between the child's legs. Fasten the belt and fasten both buckles. Adjust the waist strap, comfortably around your child.

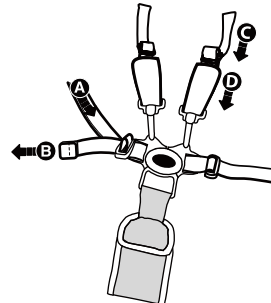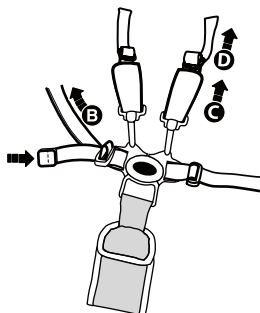


16 Use of the Storage bag

When securing the storage bag to the carhandle, it is necessary to remove the long strap from the storage bag.


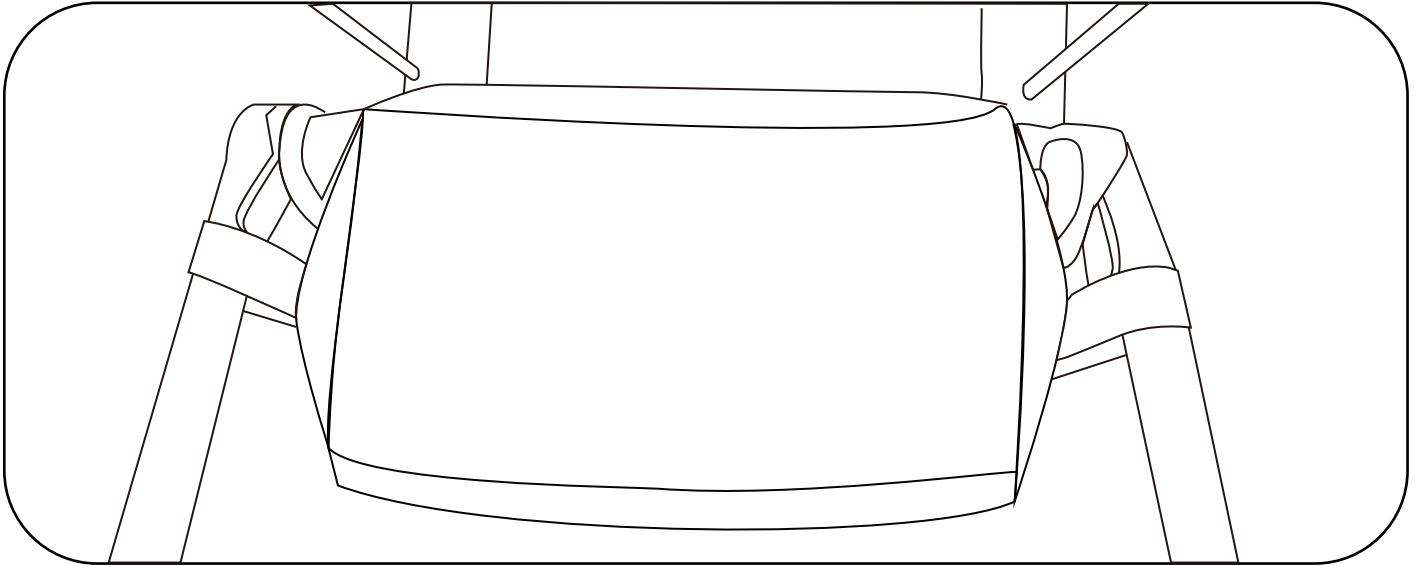


Long hanging belt is only used when hanging the storage bag on the body for adults.

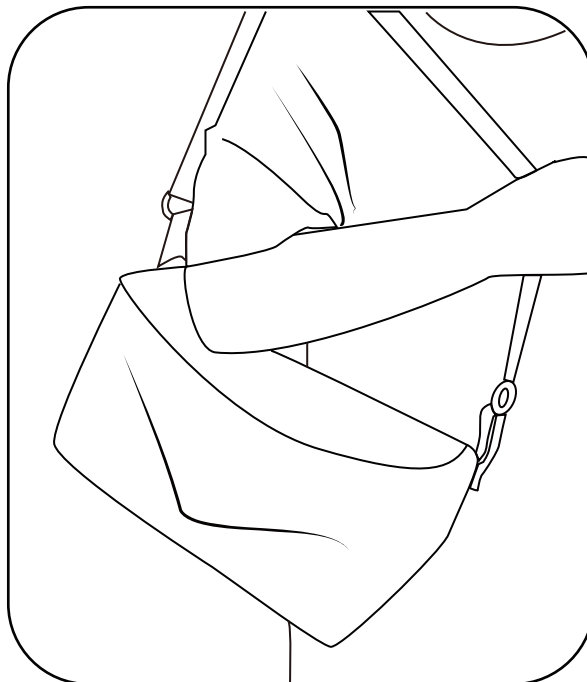


15 Rear Wheel Brake Function

1. Find the brake pedal on the rear wheels axle
2. Press the brake pedal firmly with your foot to activate the brakes
3. Try moving the wagon stroller slightly to check if the brakes are working properly. If the brake is installed correctly, the handcart should remain stationary
4. To deactivate the brake, simply lift the pedal with your foot

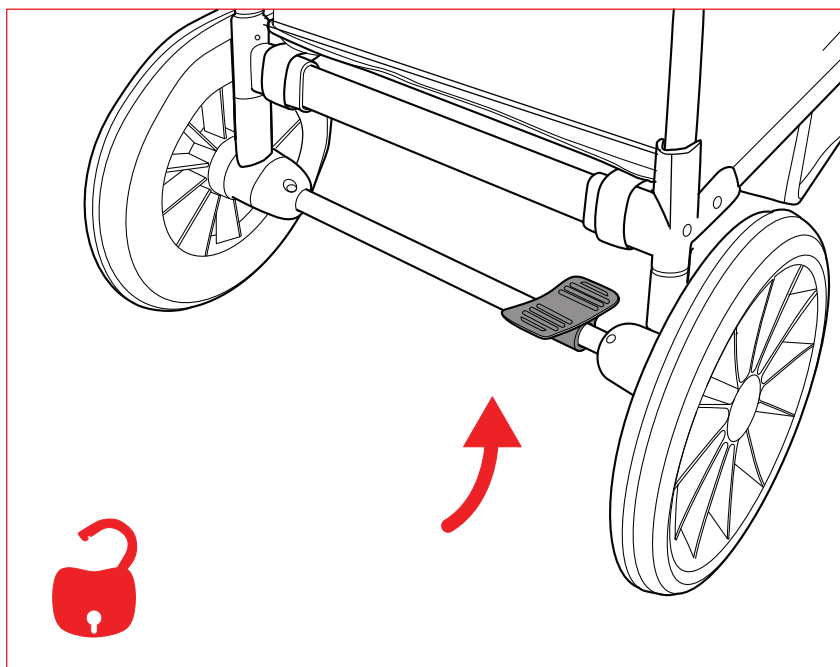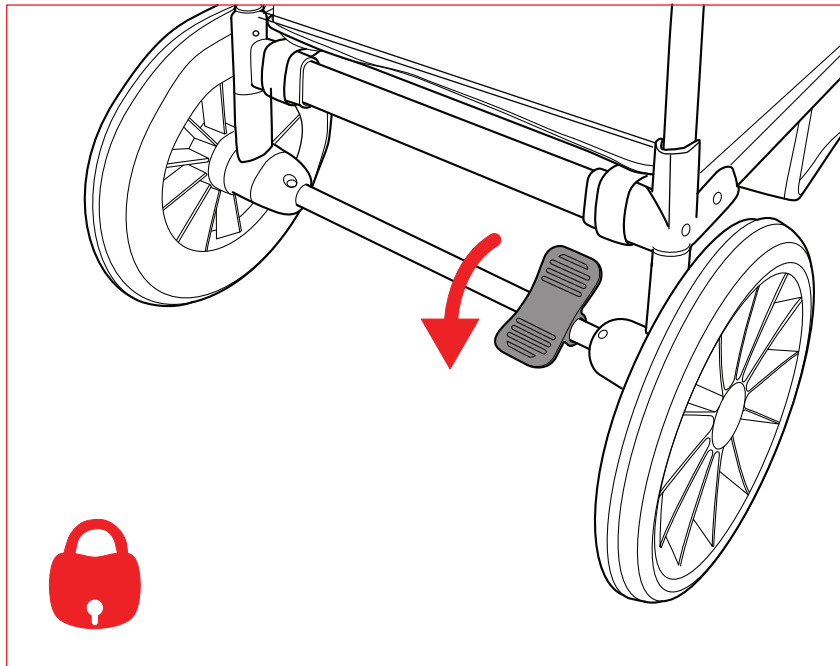

17 Folding Wagon Stroller

1. Pull up the canopy rod in the direction of arrow 1 (4 places in total)
2. Pull up the plate outward first, and then pull it up in the direction of arrow 2 to complete the disassembly
3. Pull the lifting pin in the direction of arrow 3, and then slide it upwards to complete the folding (the other side follows the same sequence)
4. Pull up the front foot tube in the direction of arrow 4 and rotate it in the direction of arrow 5 to complete the folding
5. Pull up the rear foot tube in the direction of arrow 6 and rotate it in the direction of arrow 7 to complete the folding process

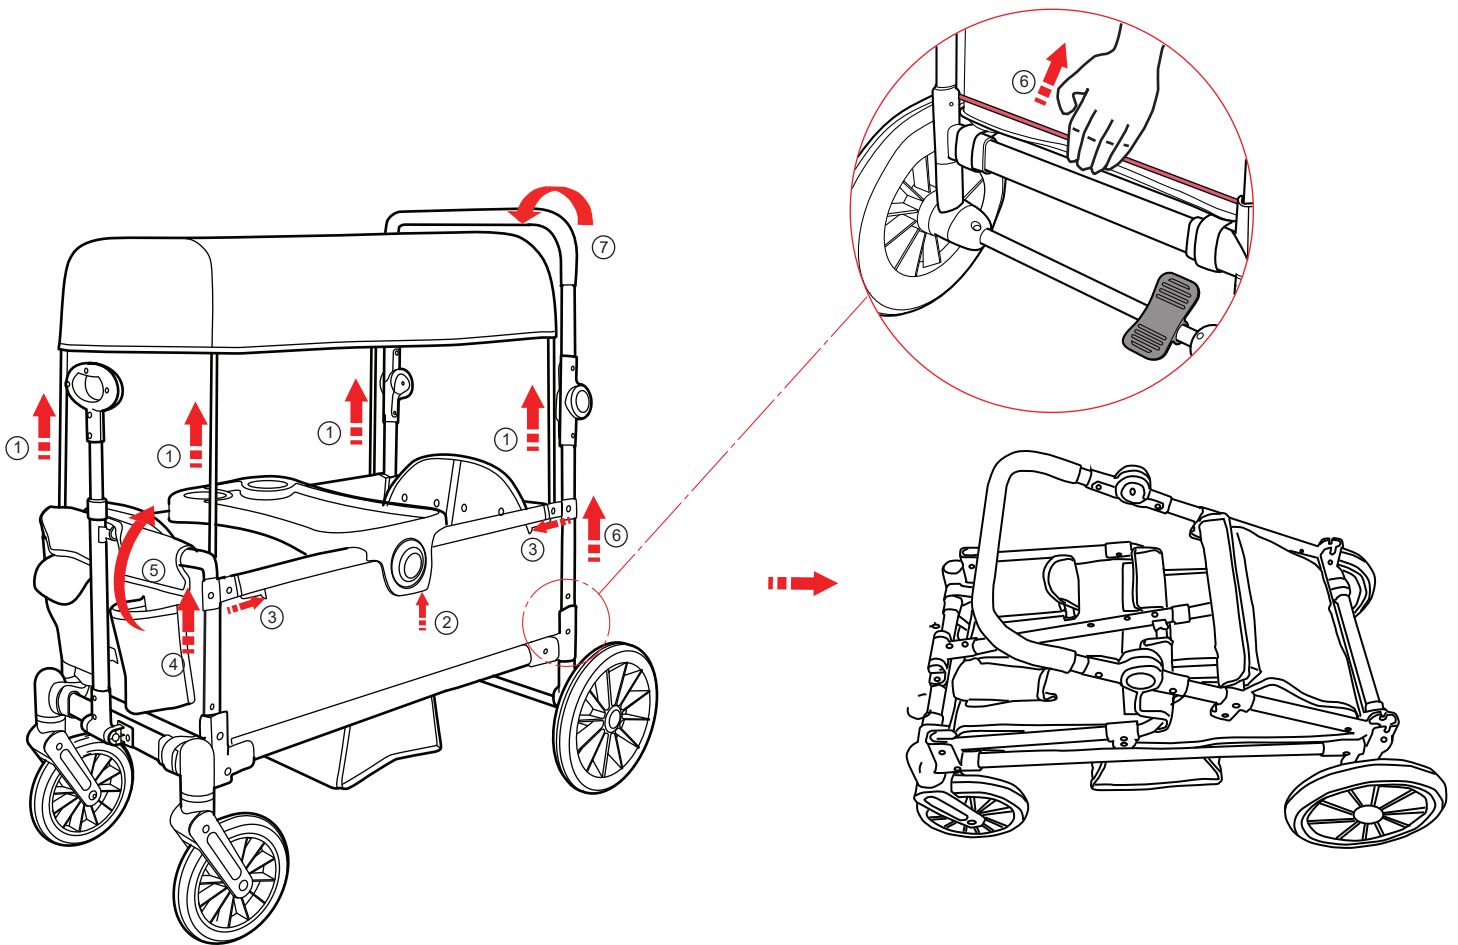

CARE AND MAINTENANCE

Cleaning the Wagon:

- **Frame and Fabric:** Wipe the wagon frame and fabric with a soft, damp cloth.
- **Drying:** Allow all parts to air dry completely before folding or storing to prevent mold and mildew.
- **Canopy** can be removed and hand-washed with mild detergent.

Checking for Wear and Tear:

- **Inspect Regularly:** Periodically check the wagon for loose screws, worn parts, or any damage.
- **Tighten Hardware:** Ensure all bolts, screws, and other fasteners are tight and secure.
- **Wheel and Brake Functionality:** Check the wheels and brake mechanism regularly to ensure they are in good working order.

Storage:

- **Indoor Storage:** Store the wagon in a dry place to prevent rust and wear.
- **Avoid Extreme Temperatures:** Keep the wagon away from direct sunlight and extreme heat or cold to protect the fabric and components.
- **Fold Properly:** Ensure the wagon is properly folded and locked before storing to save space and prevent accidental damage.

YOU DID IT!

It's time to take your little one on a happy, joyful ride in this sturdy, multi-tasking, stylish stroller!

AFTER-SALE SERVICE

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna share your experience with our products?
Share your pictures with us.

Any suggestions? **Contact us!**
We gotcha back!



E-mail: service@replycenter.net