
 


Installation Manual

Components

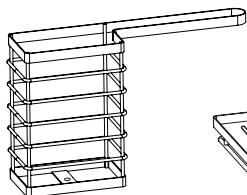


Ax1



Bx1



Cx1

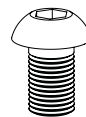

Dx1




Ex1

Installation Guide


Step 1:

Use tool E and screws D to install A/B as show.

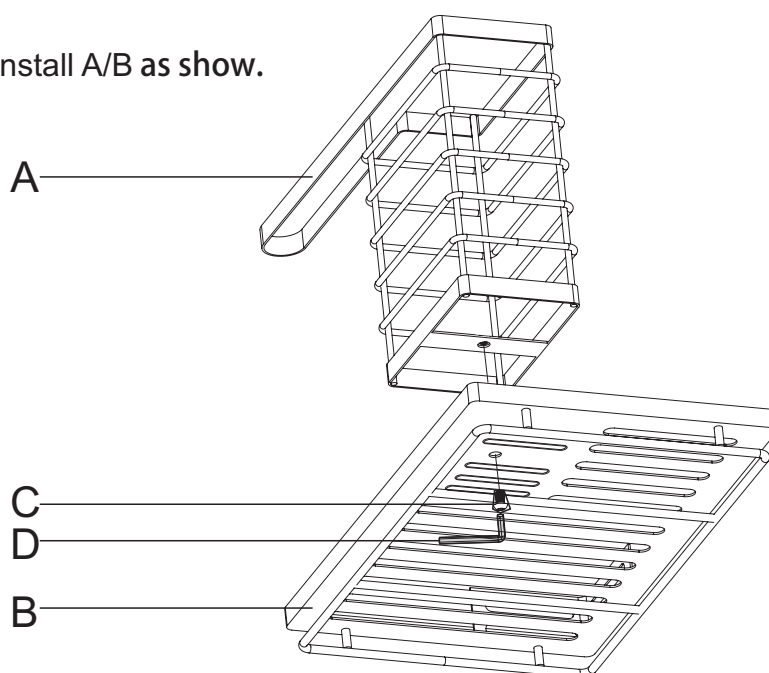

Step 2:

install C as show.

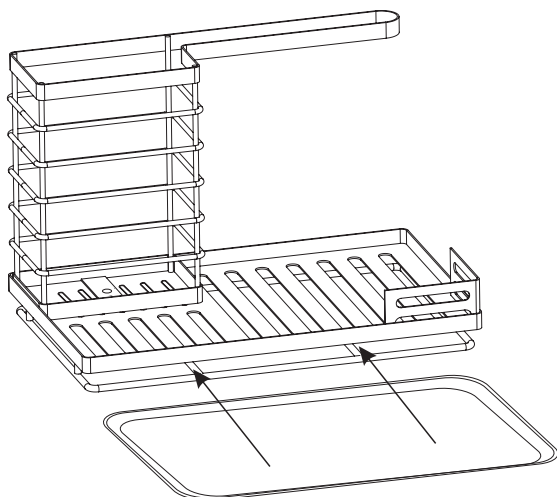

Step 3:

Well installed.

