



ASSEMBLY INSTRUCTION FOR

RISHI DINING TABLE

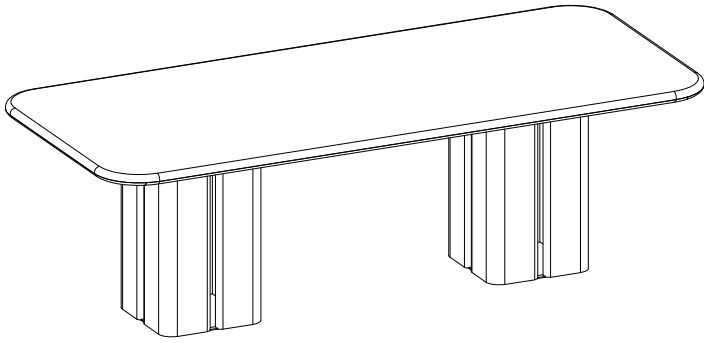


Hardware List

A		Allen Bolt	ø8 x 25 mm	16
B		Allen Bolt	ø6 x 25 mm	16
C		Allen Bolt	ø8 x 20 mm	16
D		Washer	M8 X 20	16
E		Allenkey	M4	01
F		Allenkey	M5	01

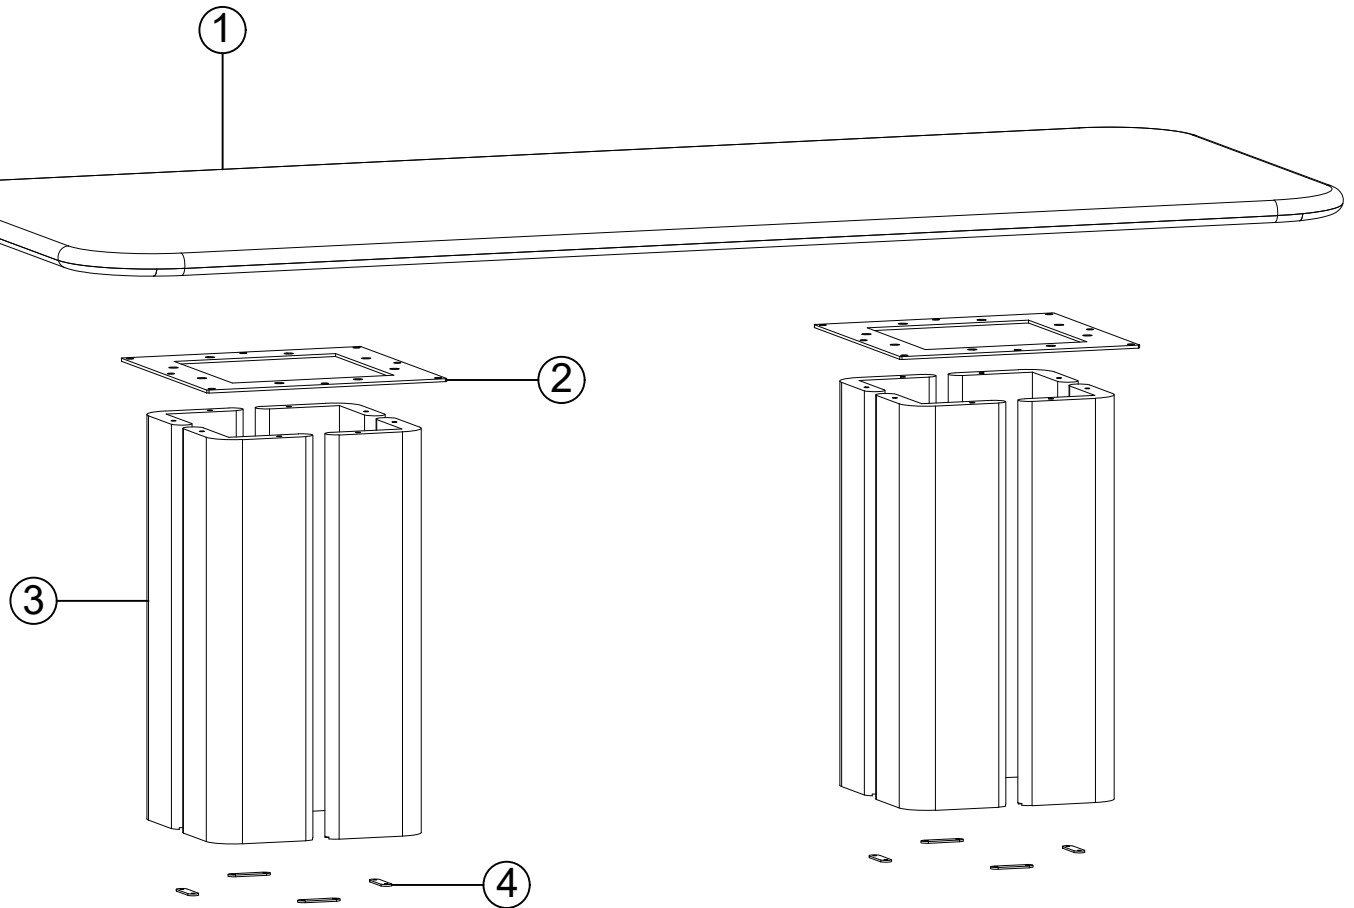

Number of persons required to assemble this product

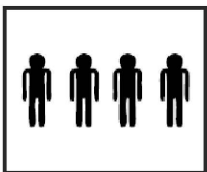


CAUTION : Please assemble with utmost care since the item is very heavy.


CAUTION : Please do not over tighten bolt / Screws

CAUTION : Please assemble on mat or soft surface


Step 1

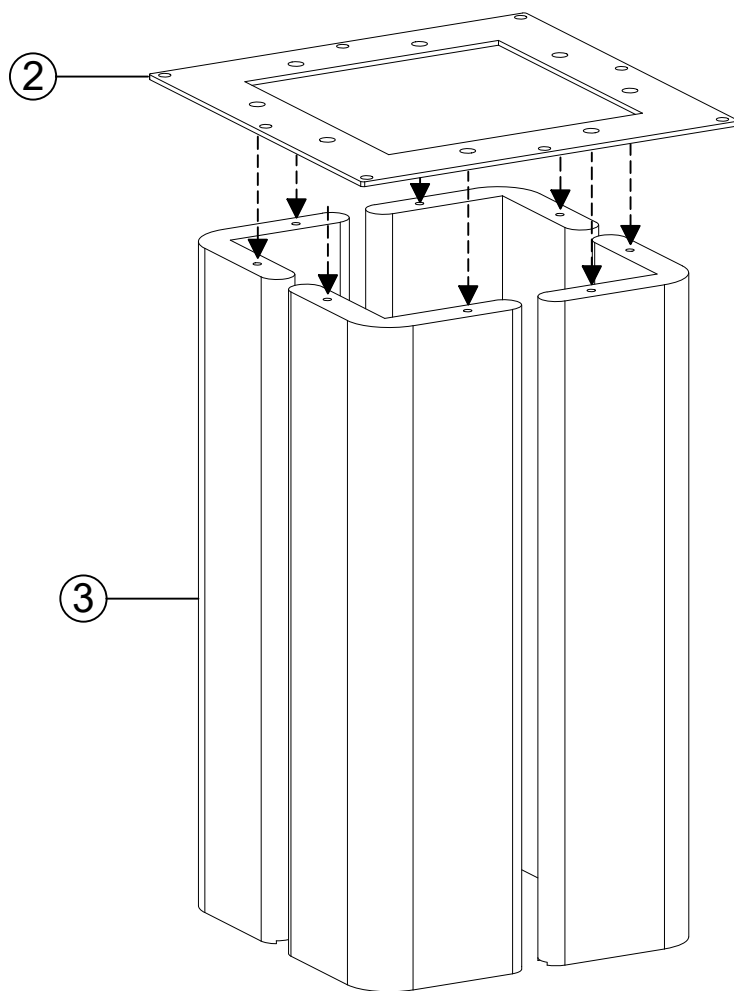


Step 2

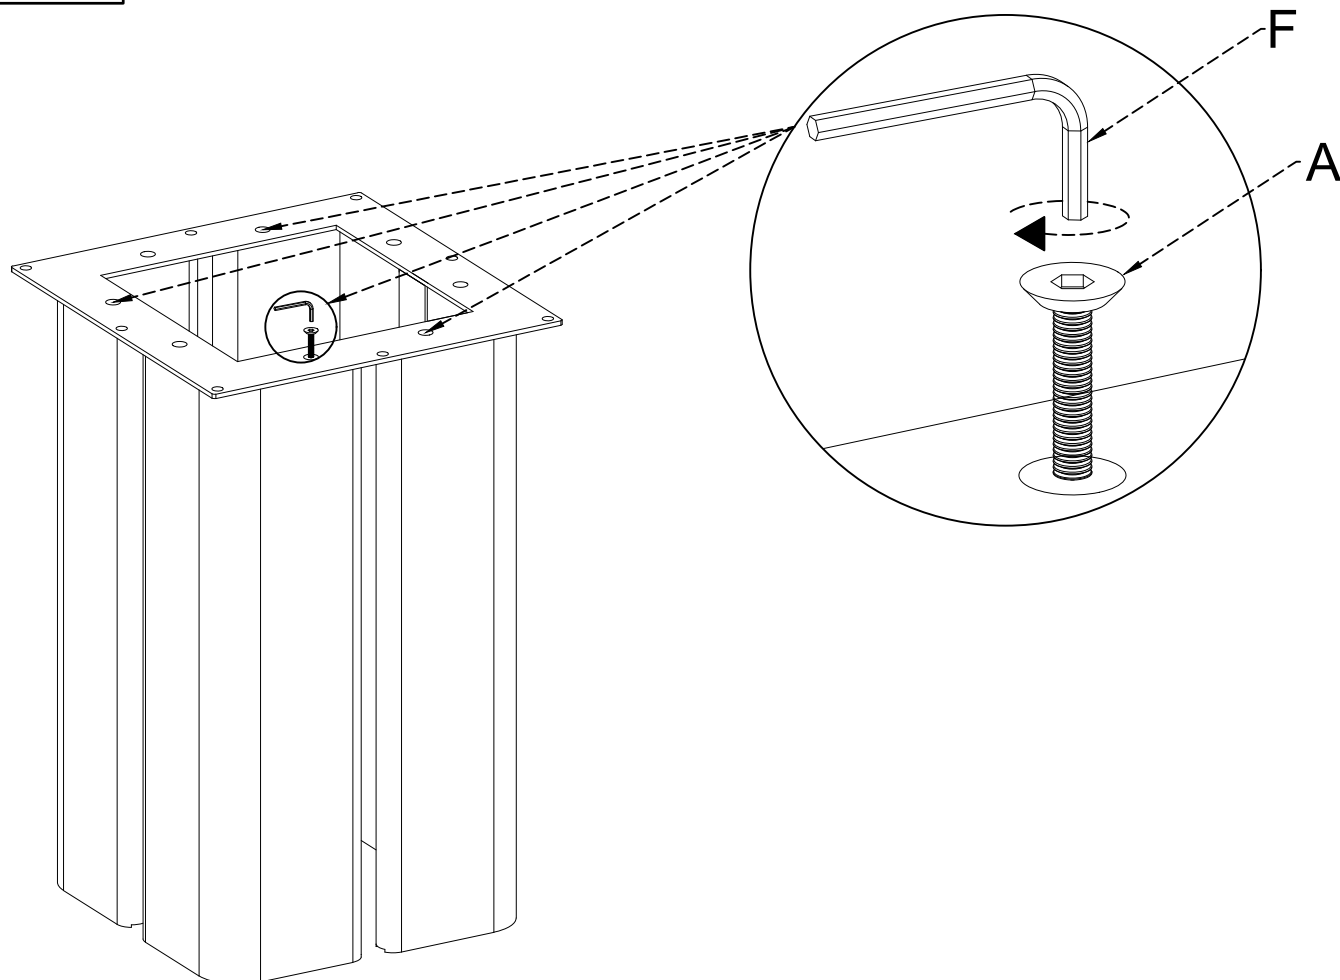


Step 3

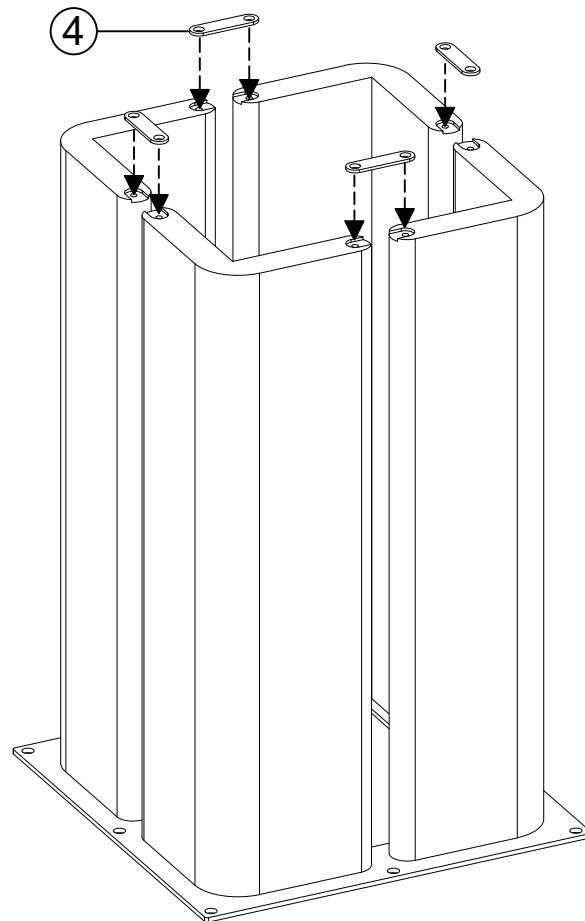


Step 4

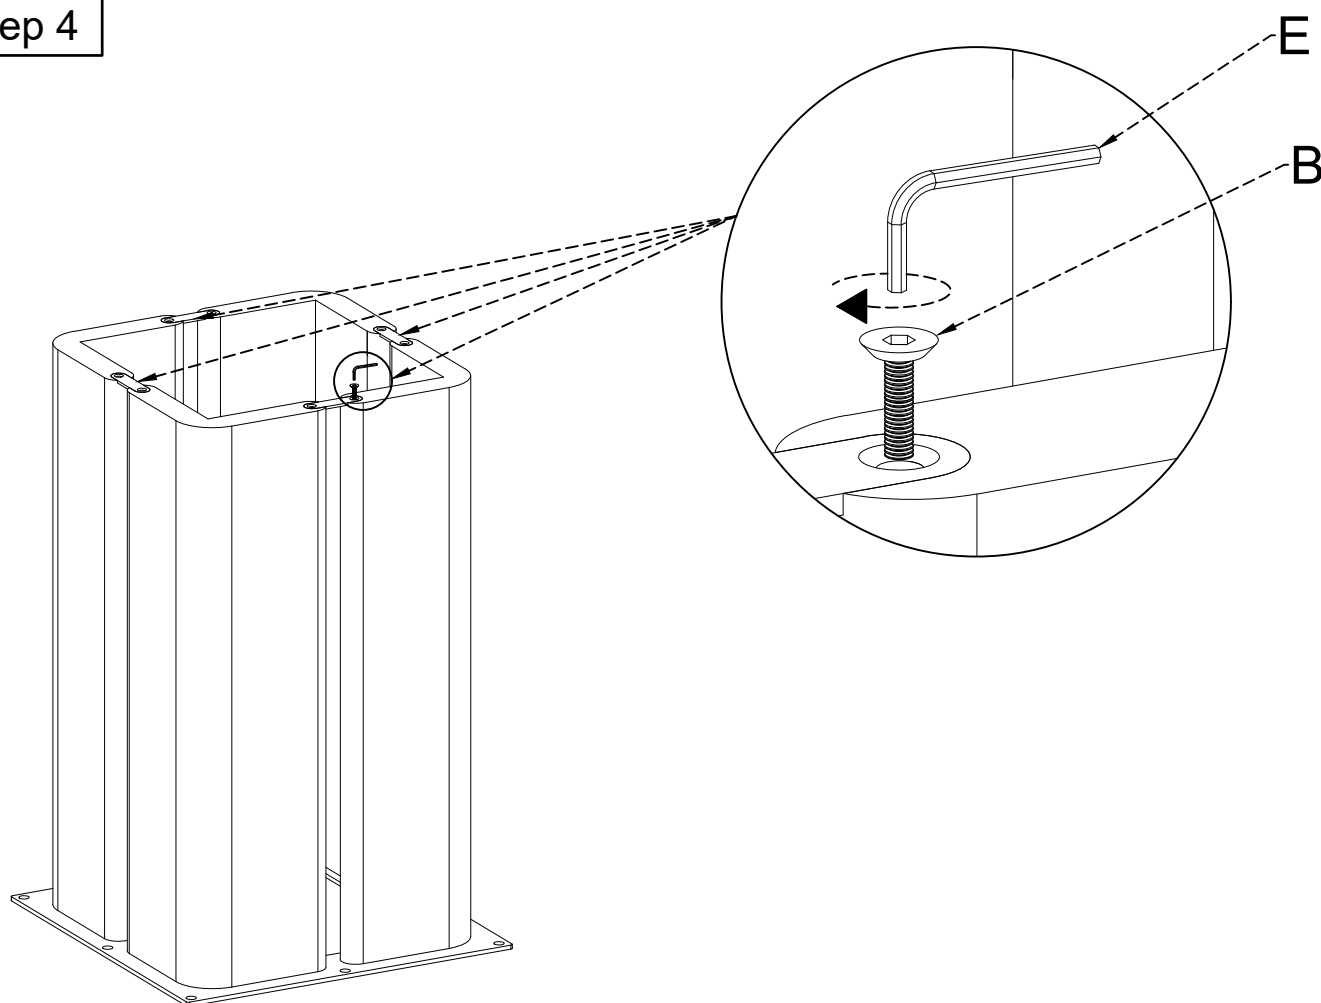

Step 5

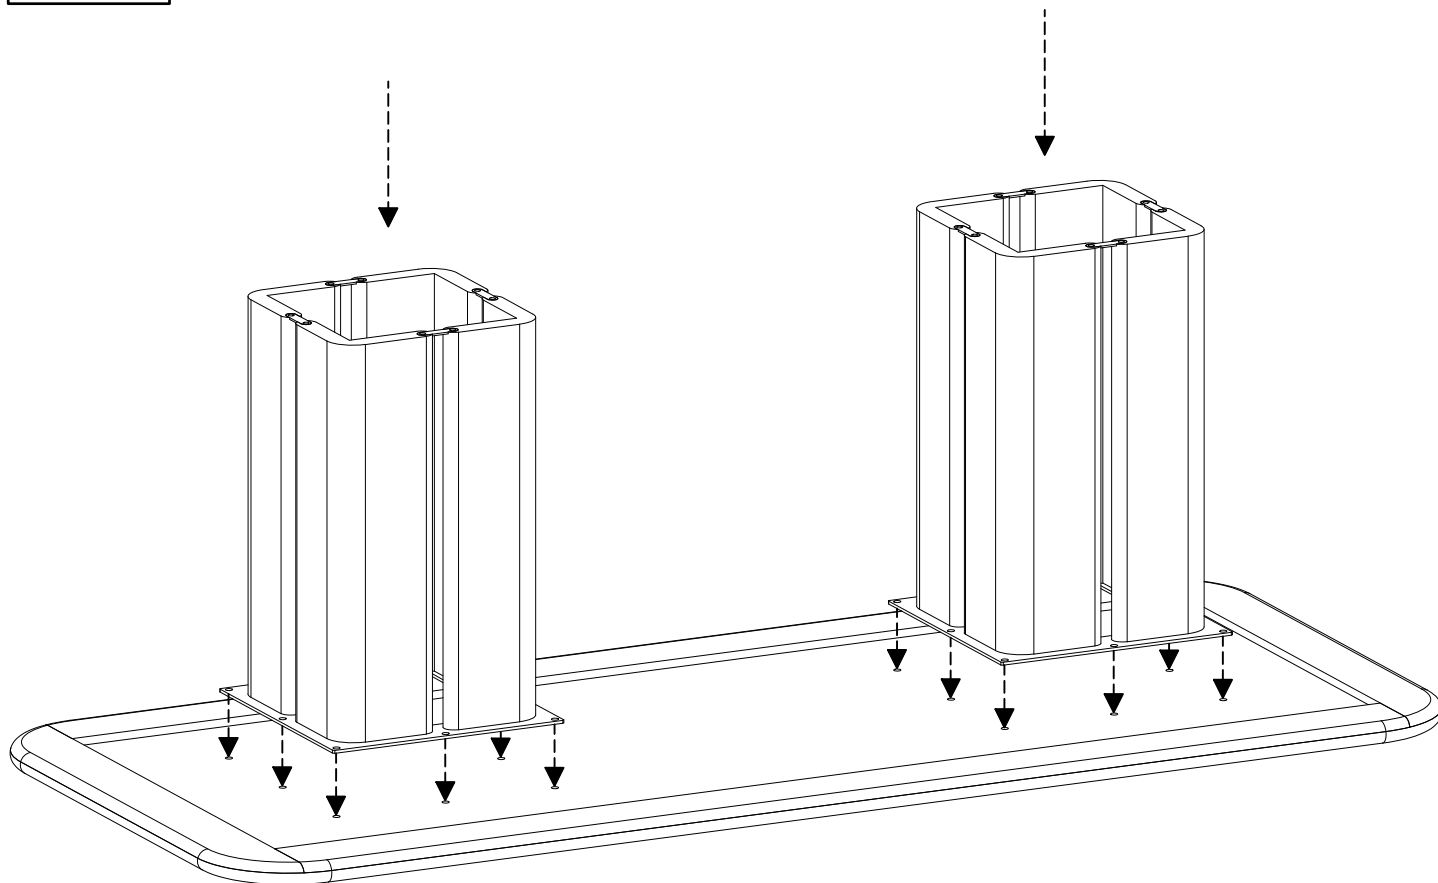

Step 6

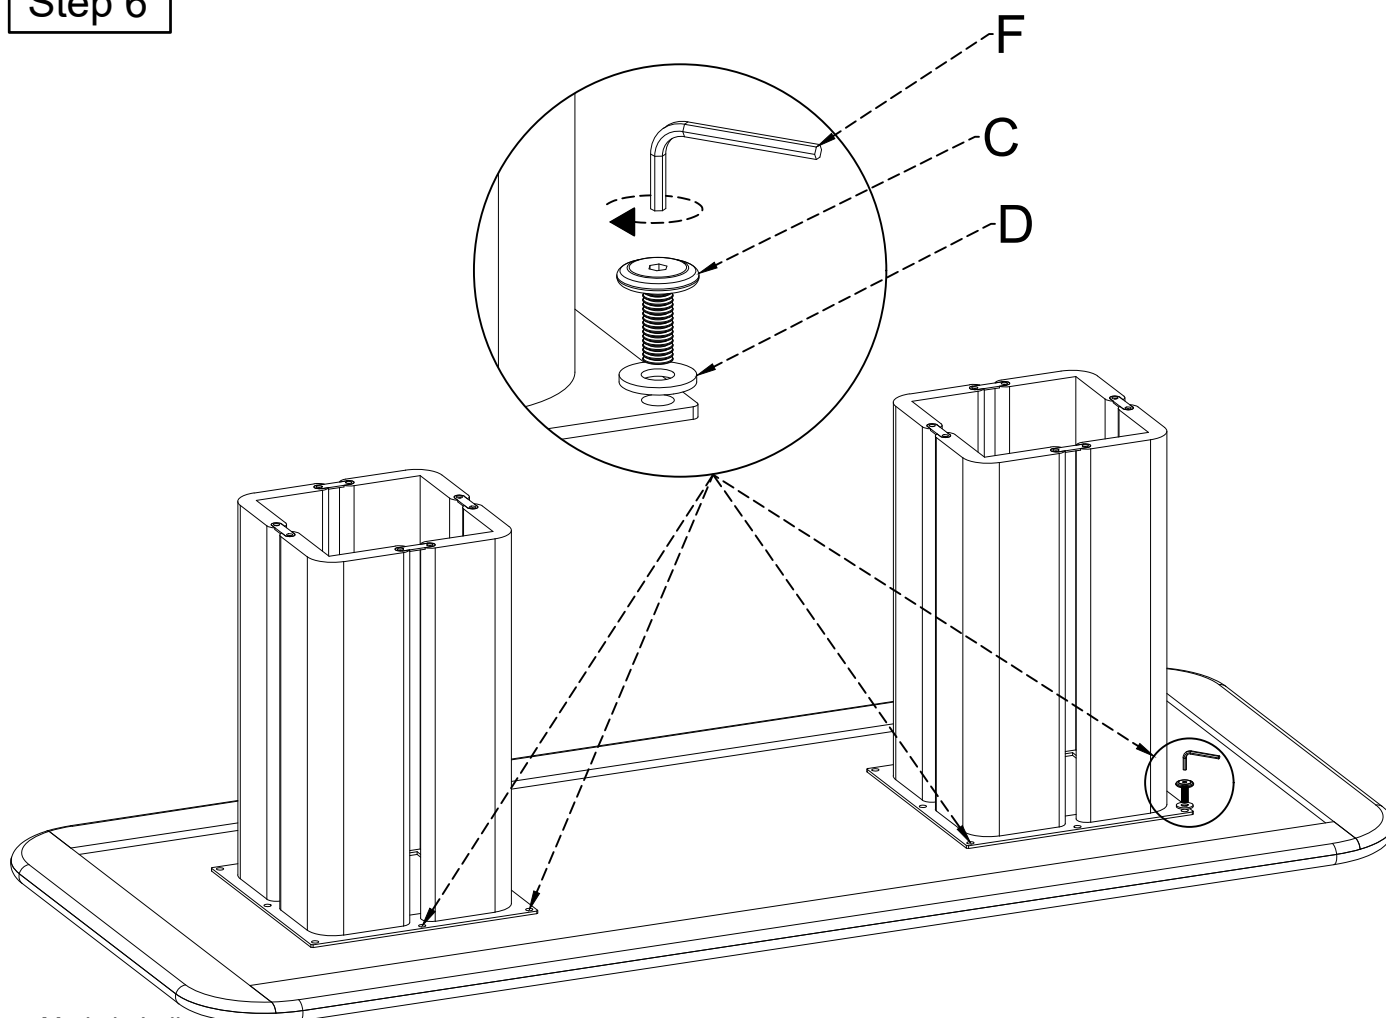

Step 7

Adjusting Floor Levelers

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

Step 1: Adjust the Floor Levelers

Check for Stability – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

