 


ASSEMBLY INSTRUCTION

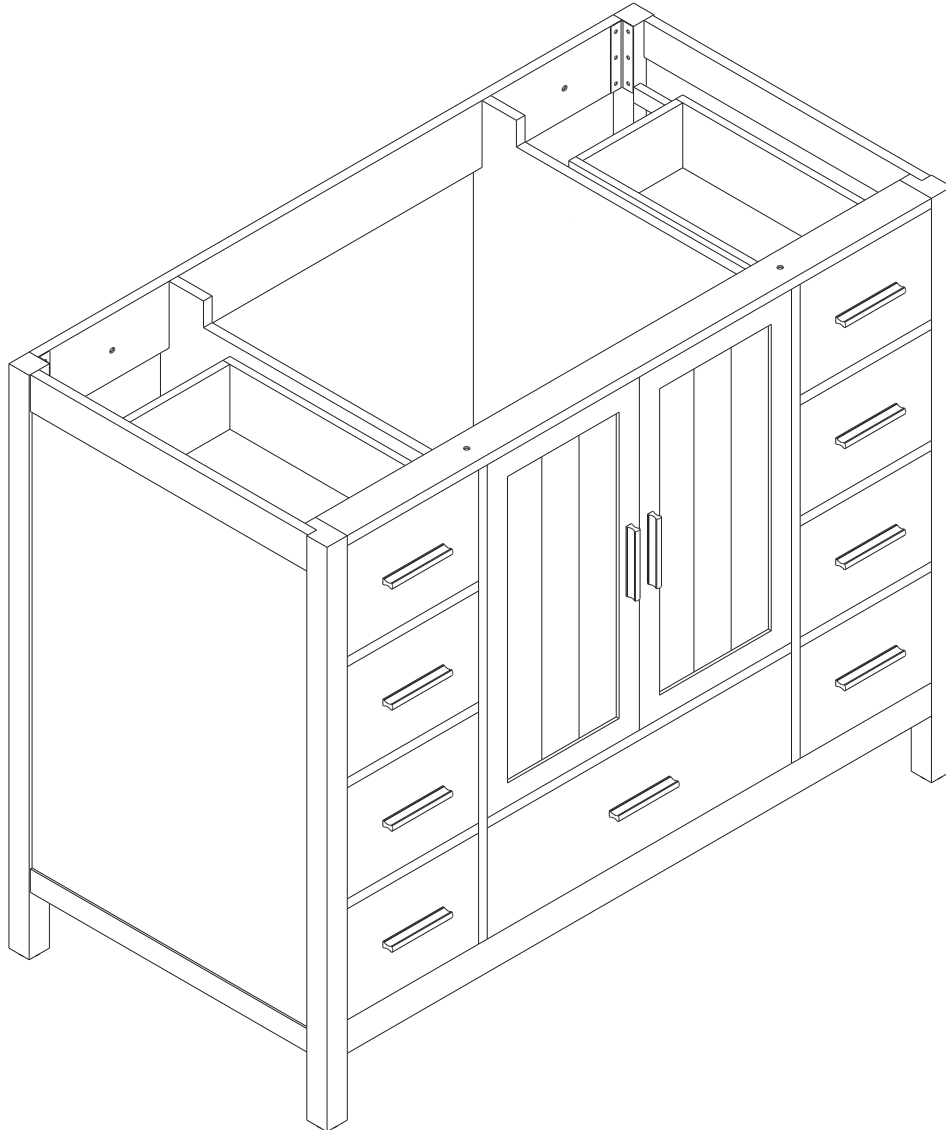

Tips

1. Customer Support

Thanks for your purchase! If your product is damaged, missing parts, or has assembly issues, contact us with clear photos of the problem. We'll provide the best solution quickly.

 
2. Assembly & Maintenance

Match parts to the manual's numbers. If mismatched, check the manual. First loosely align screws with pre-drilled holes, then tighten one by one. Periodically check screw tightness. Keep sharp/corrosive objects away to avoid damage or injury.

3. Assembly Help




It is recommended that two people assemble the product together.

Parts List:



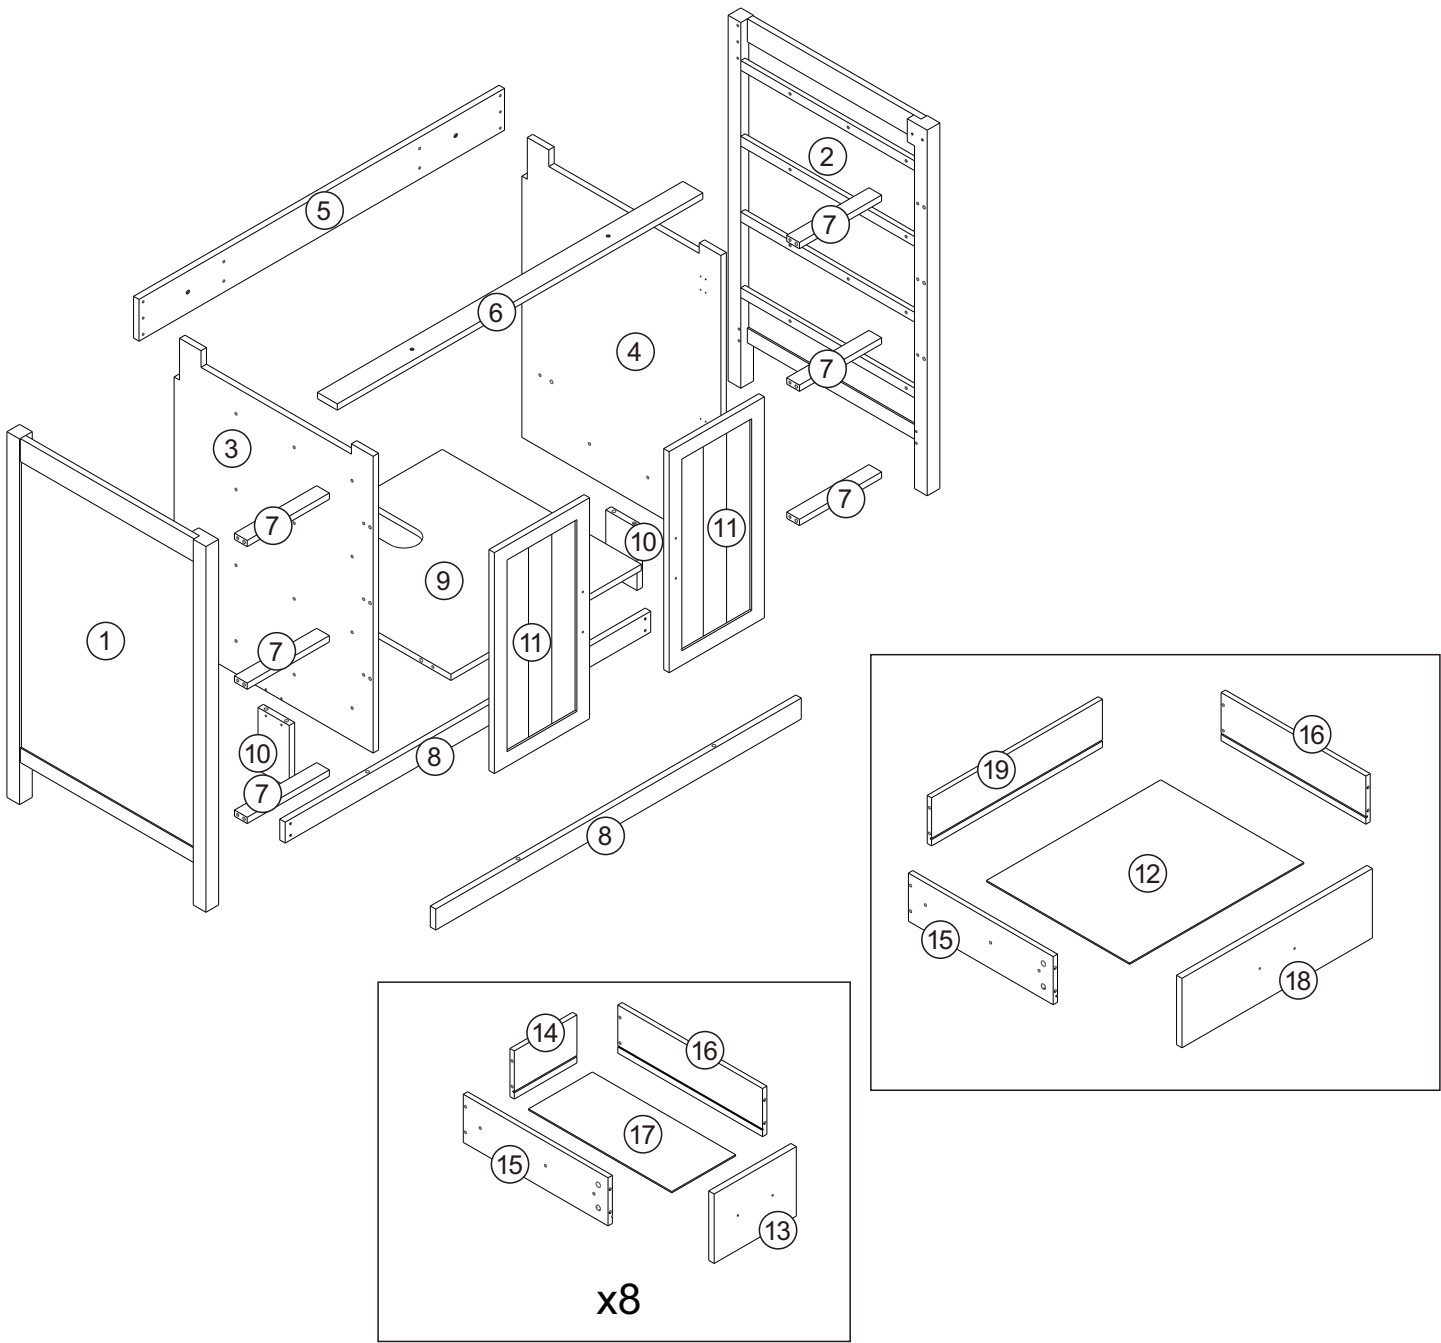


Hardware List:

   Note:The **P** and **E** screws look very similar, Do not mix up the **P** and **E** screws during assembly

 Ax52+2	 Bx52+2	 Cx24+2	 M4x35mm Dx44+2	 M4x12mm Ex132+6	 M4x16mm Fx22
 Gx4	 Hx4	 Ix2	 Jx2	 Kx6	 Lx11
 Mx1	 Nx18	 Ox2	 M4x14m Px44+4		

 1

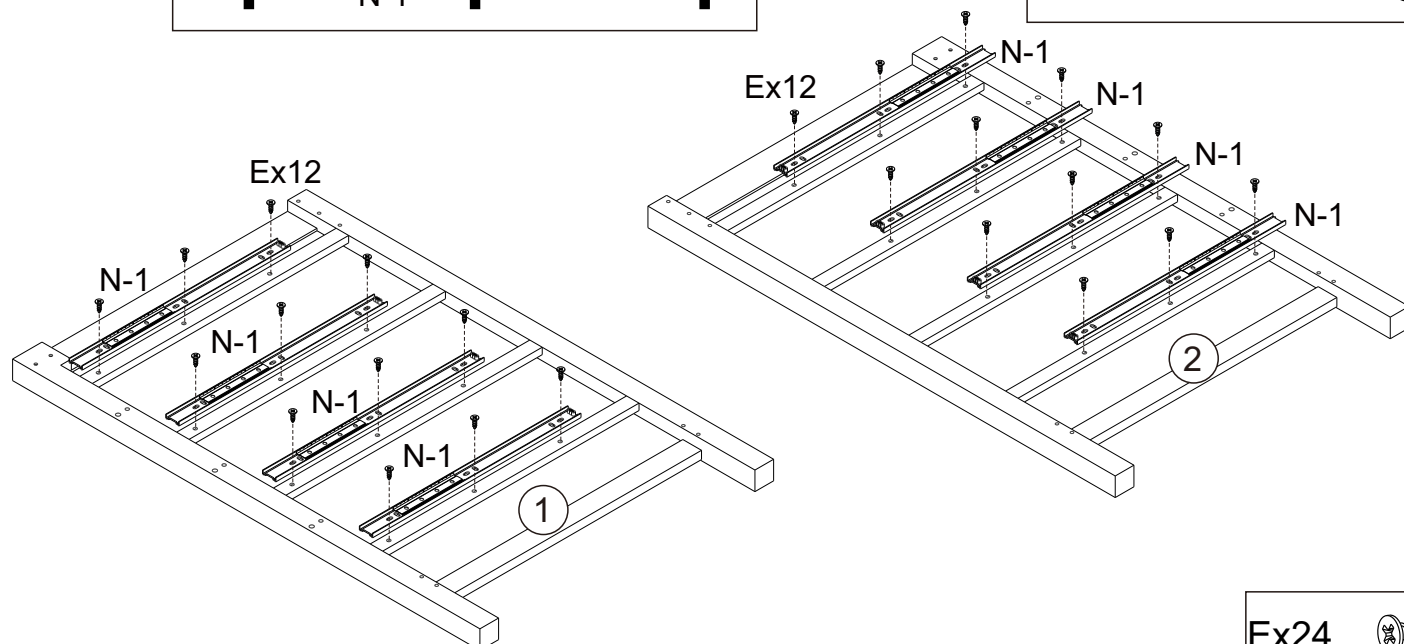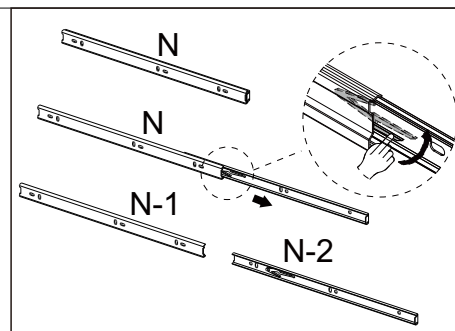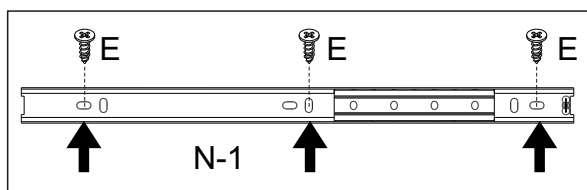




Ex24



Nx8



  2

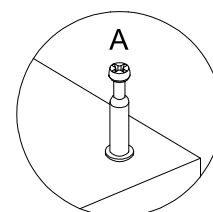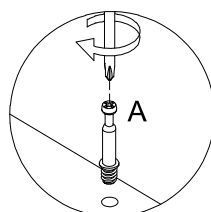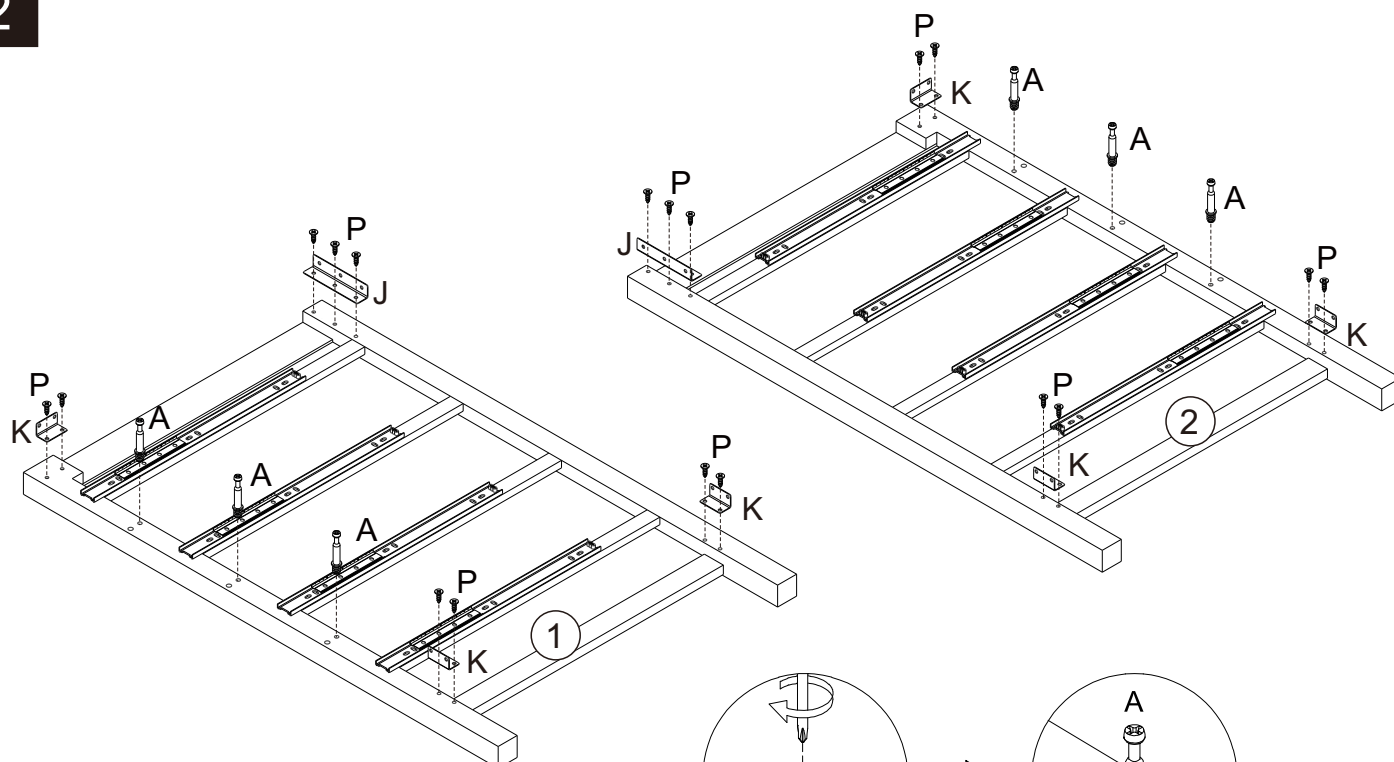

Ax6



Jx2




Kx6



Px18



 3

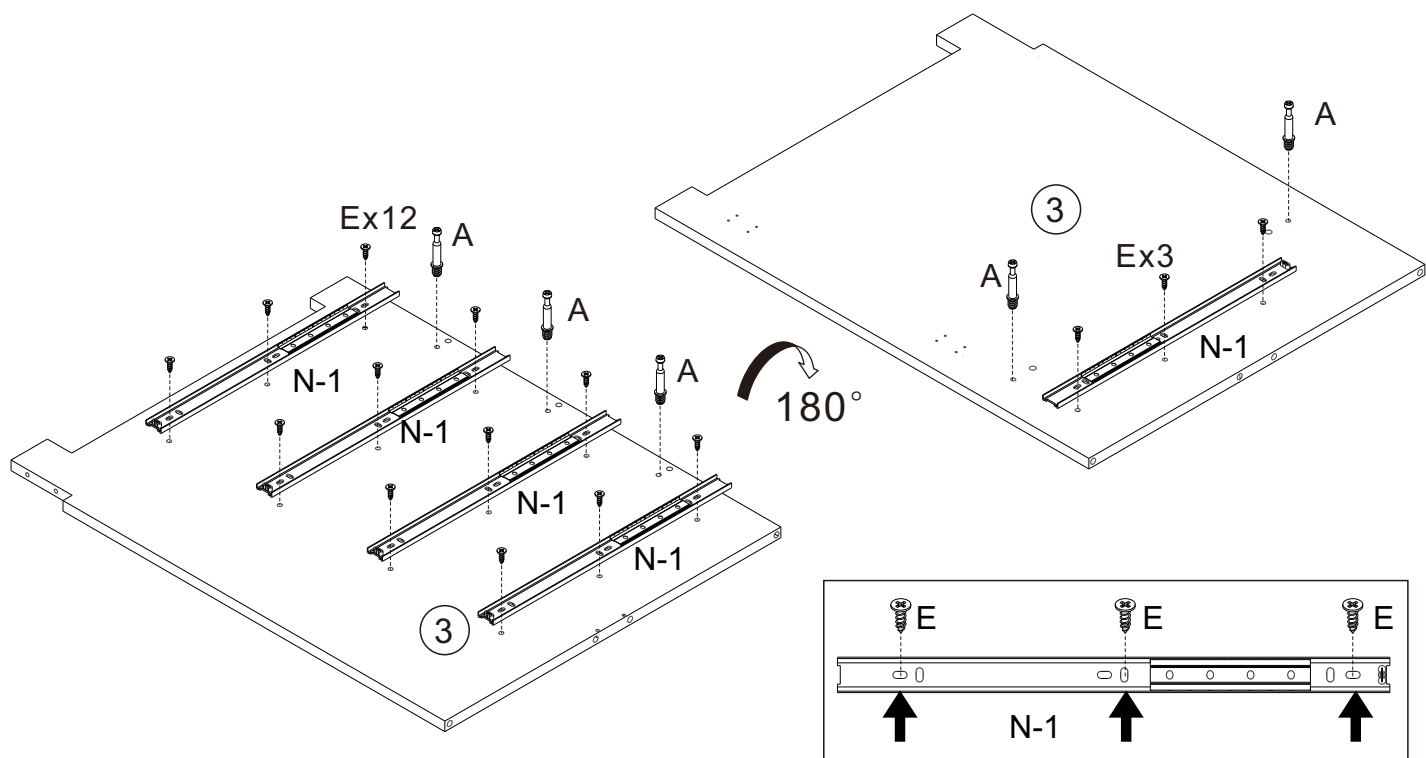

Ax5




Ex15



Nx5



 4

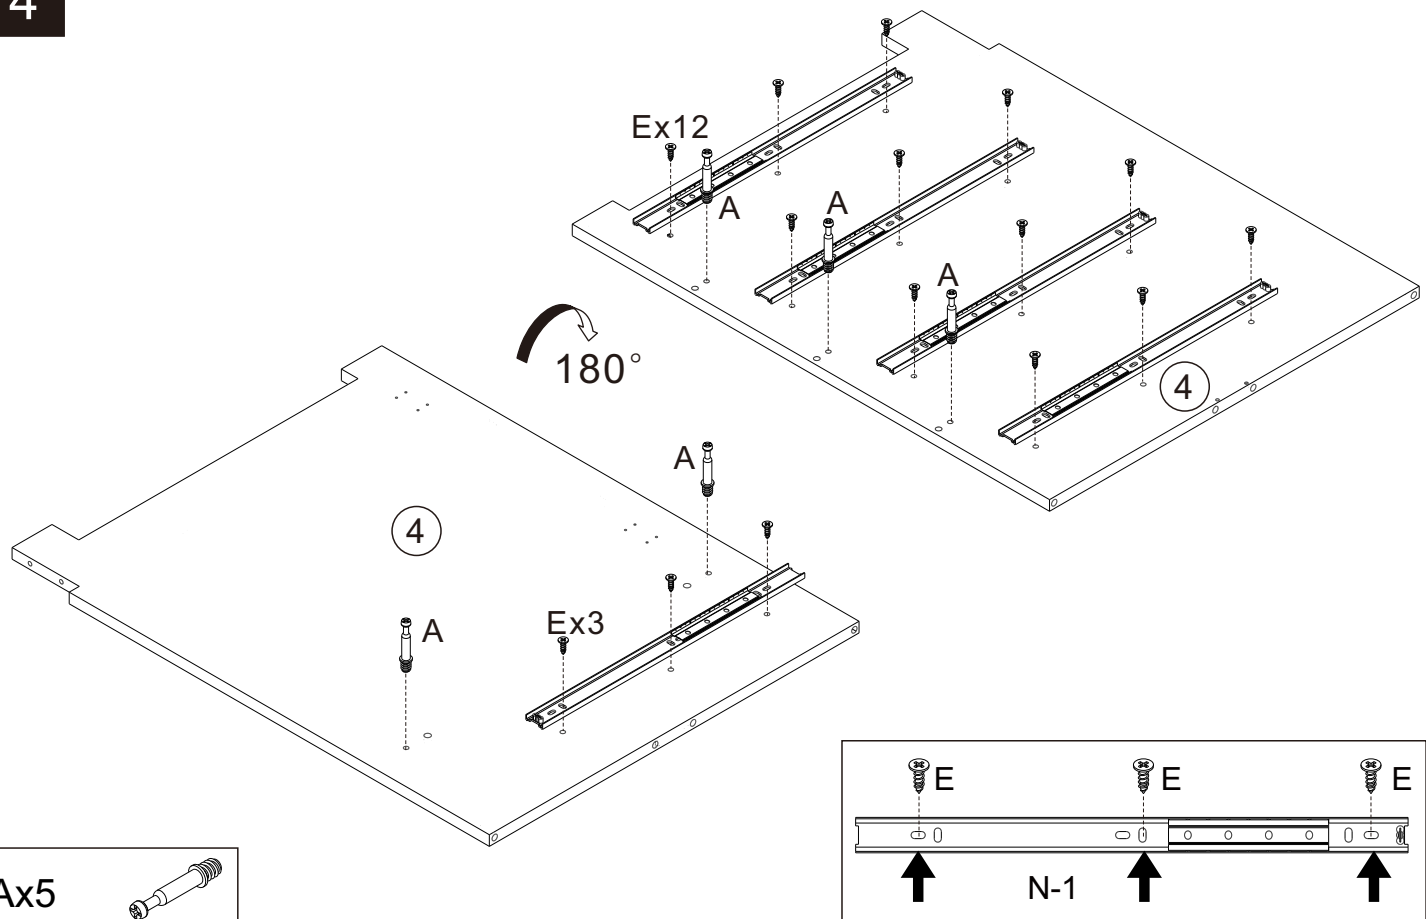


Ax5




Ex15



 Nx5



5

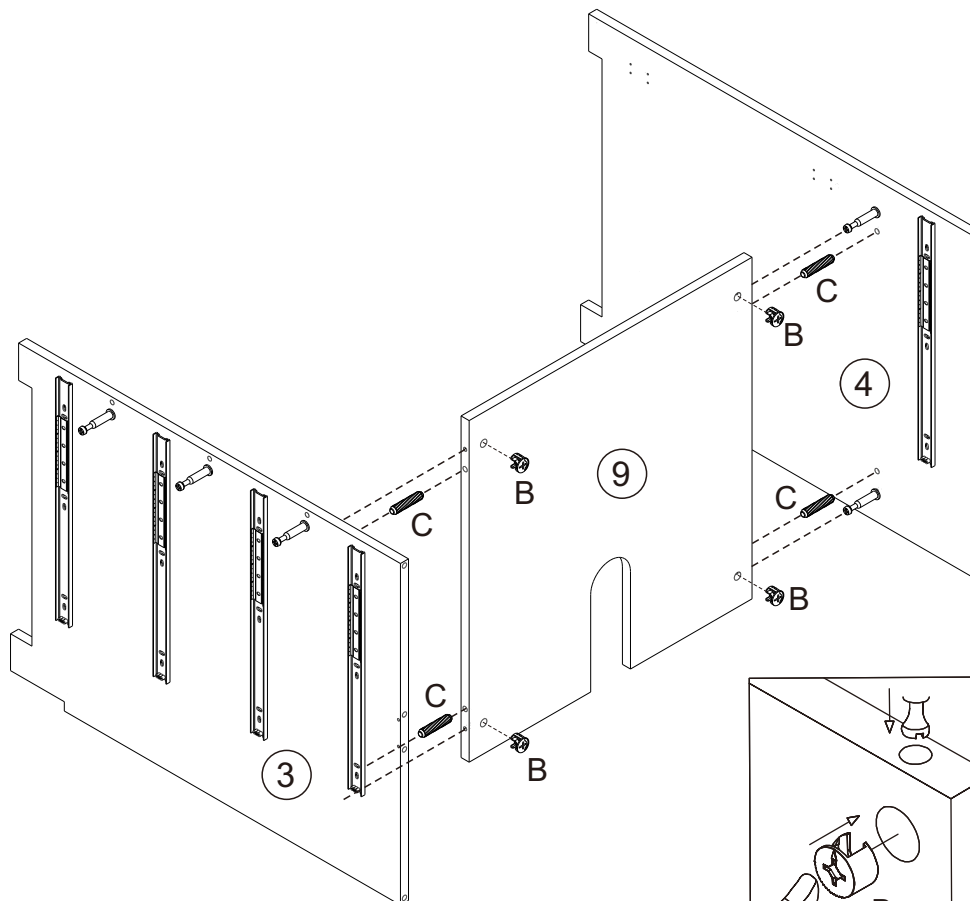 


Bx4



Cx4



 6

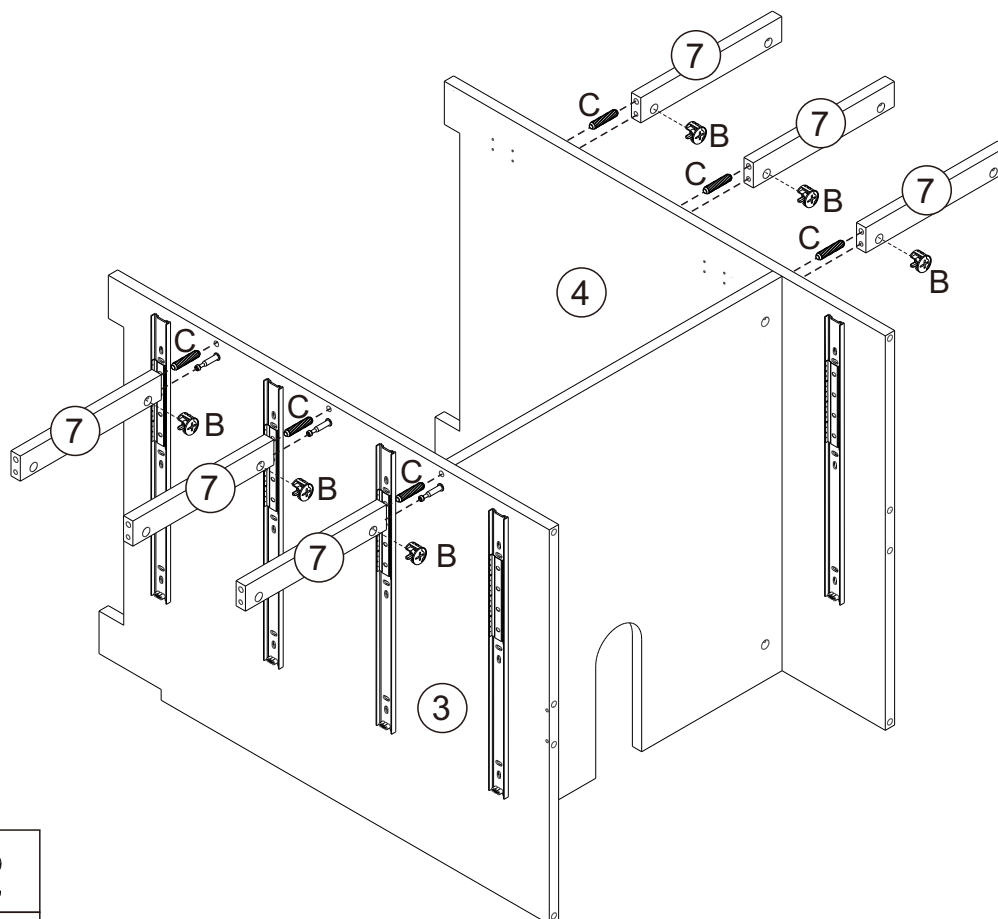


Bx6



Cx6



 7

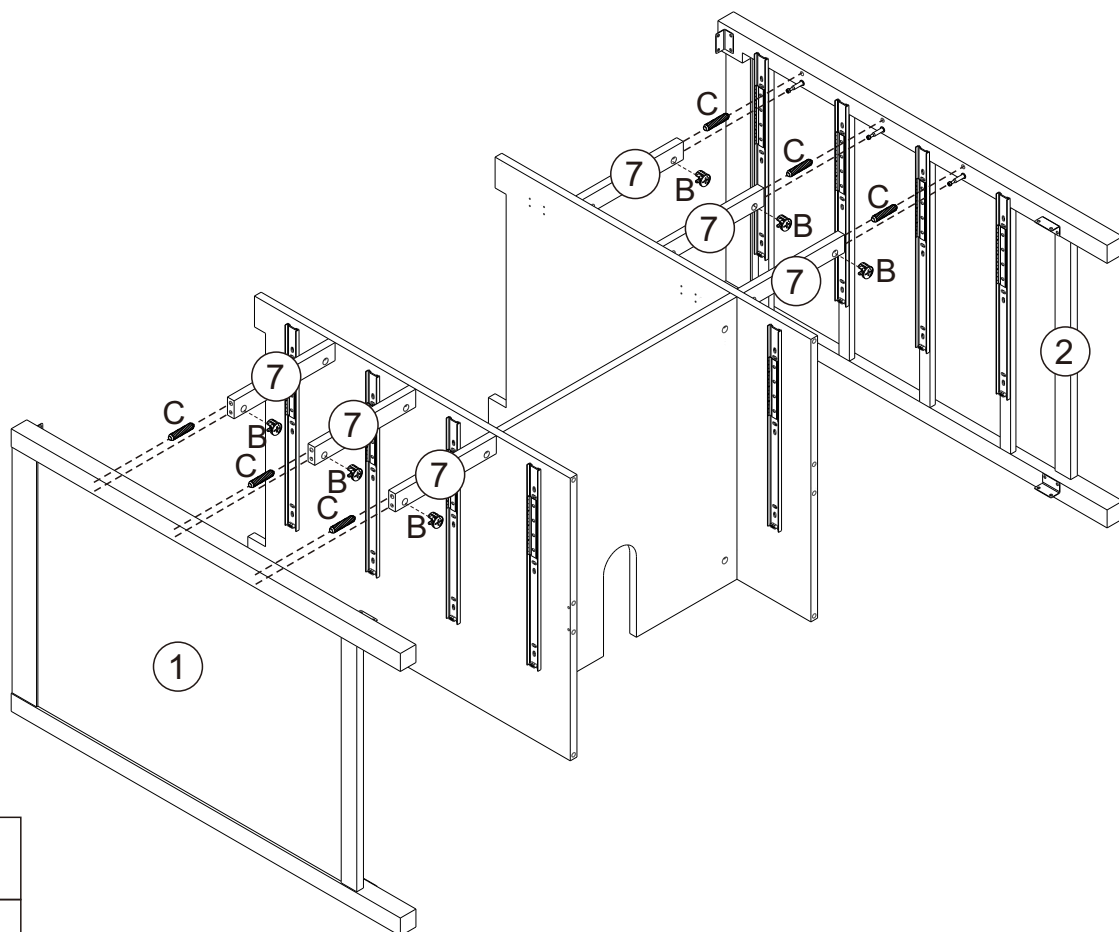


Bx6



Cx6



 
8

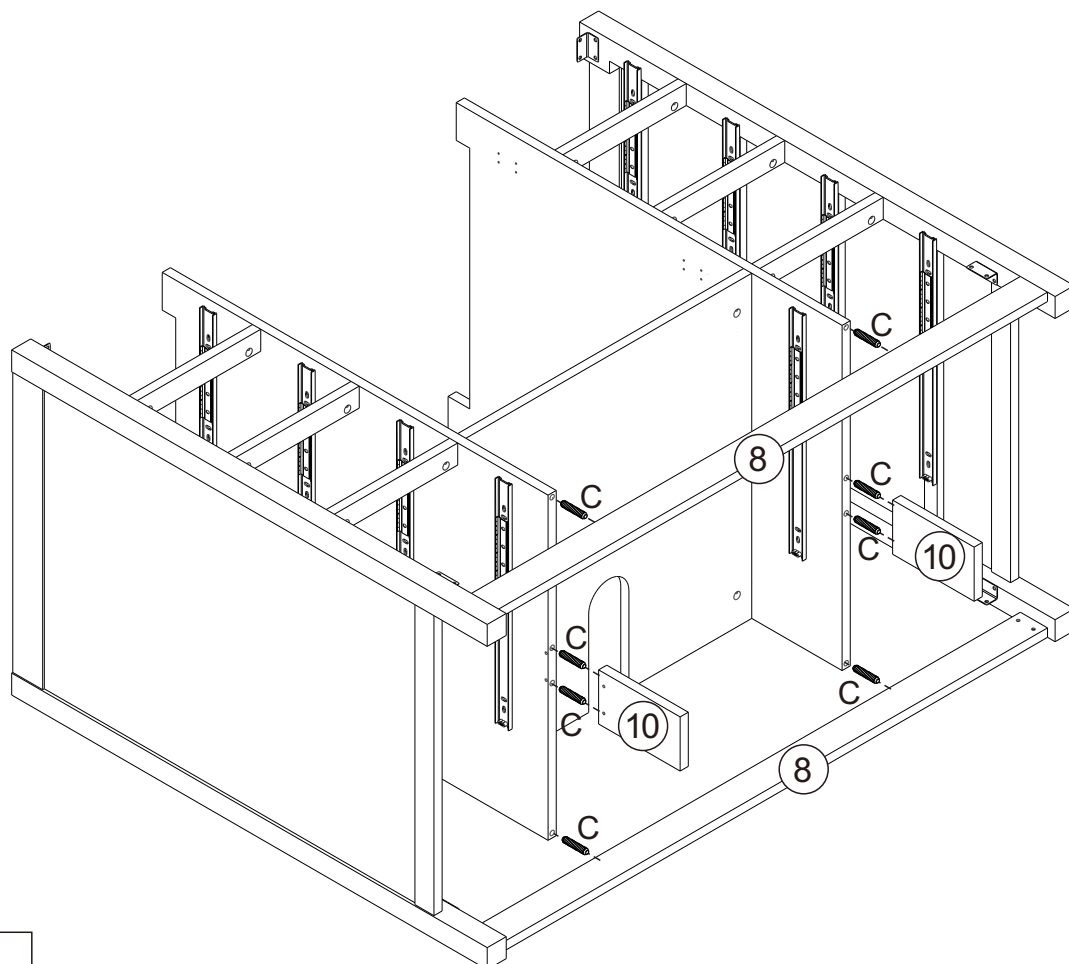


Cx8



 
9

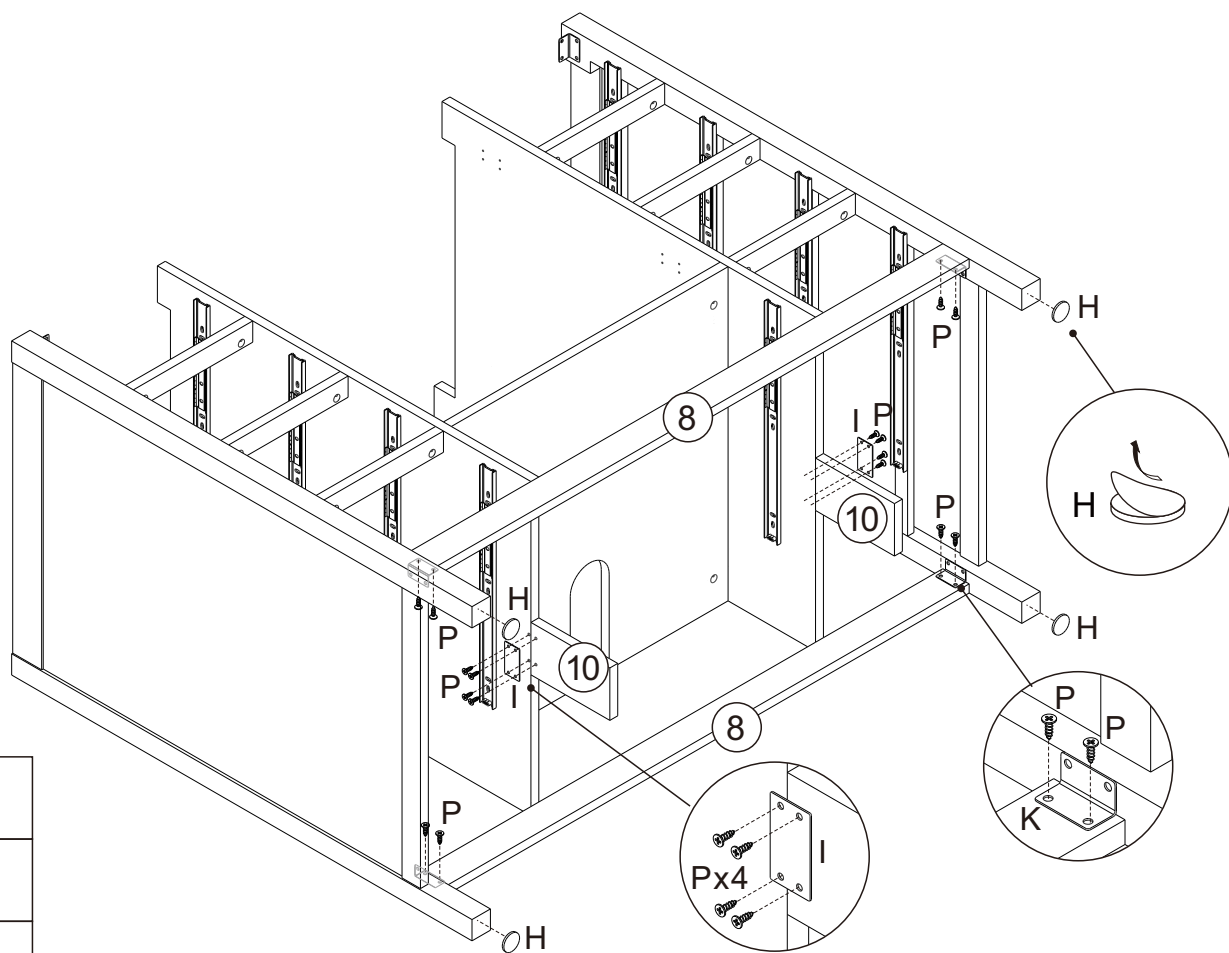

10

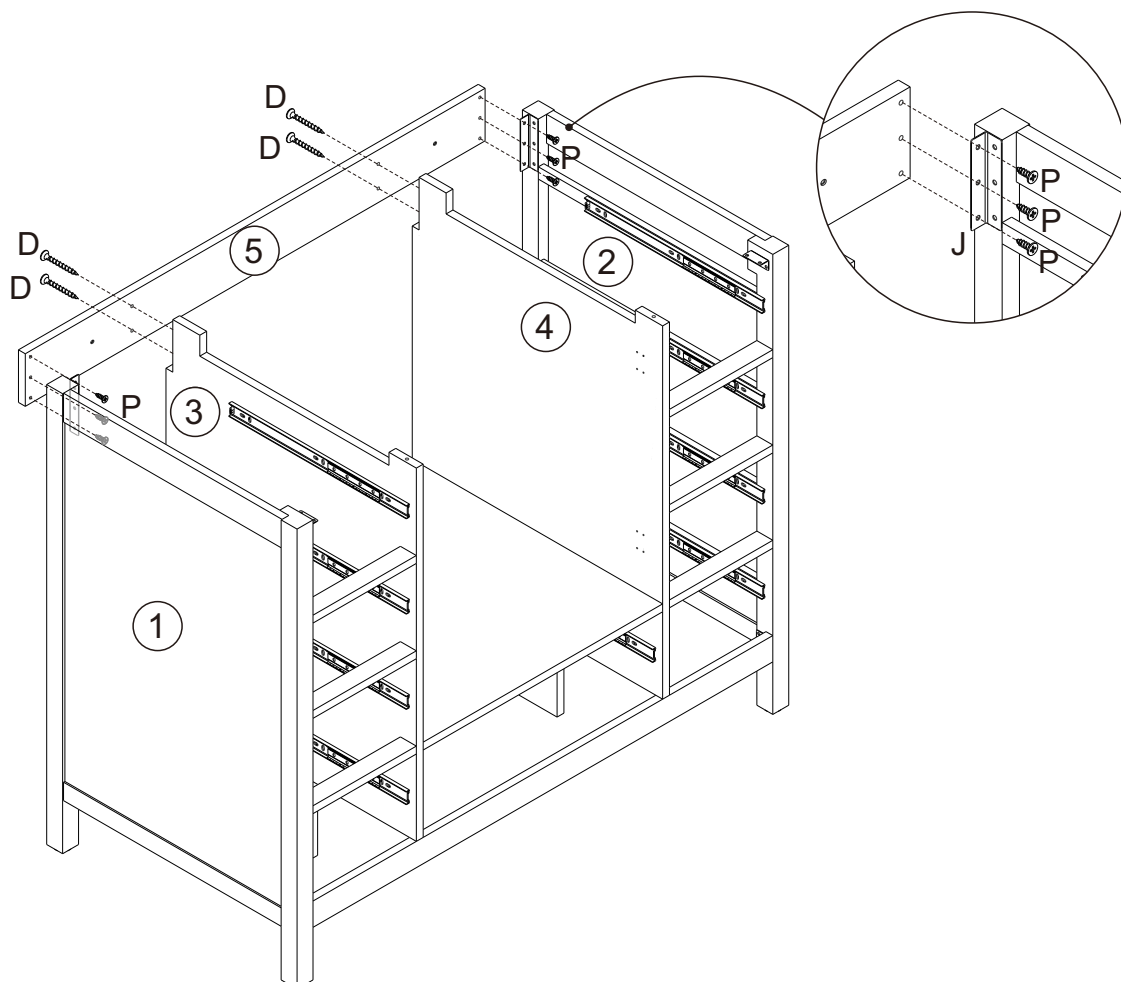 


11

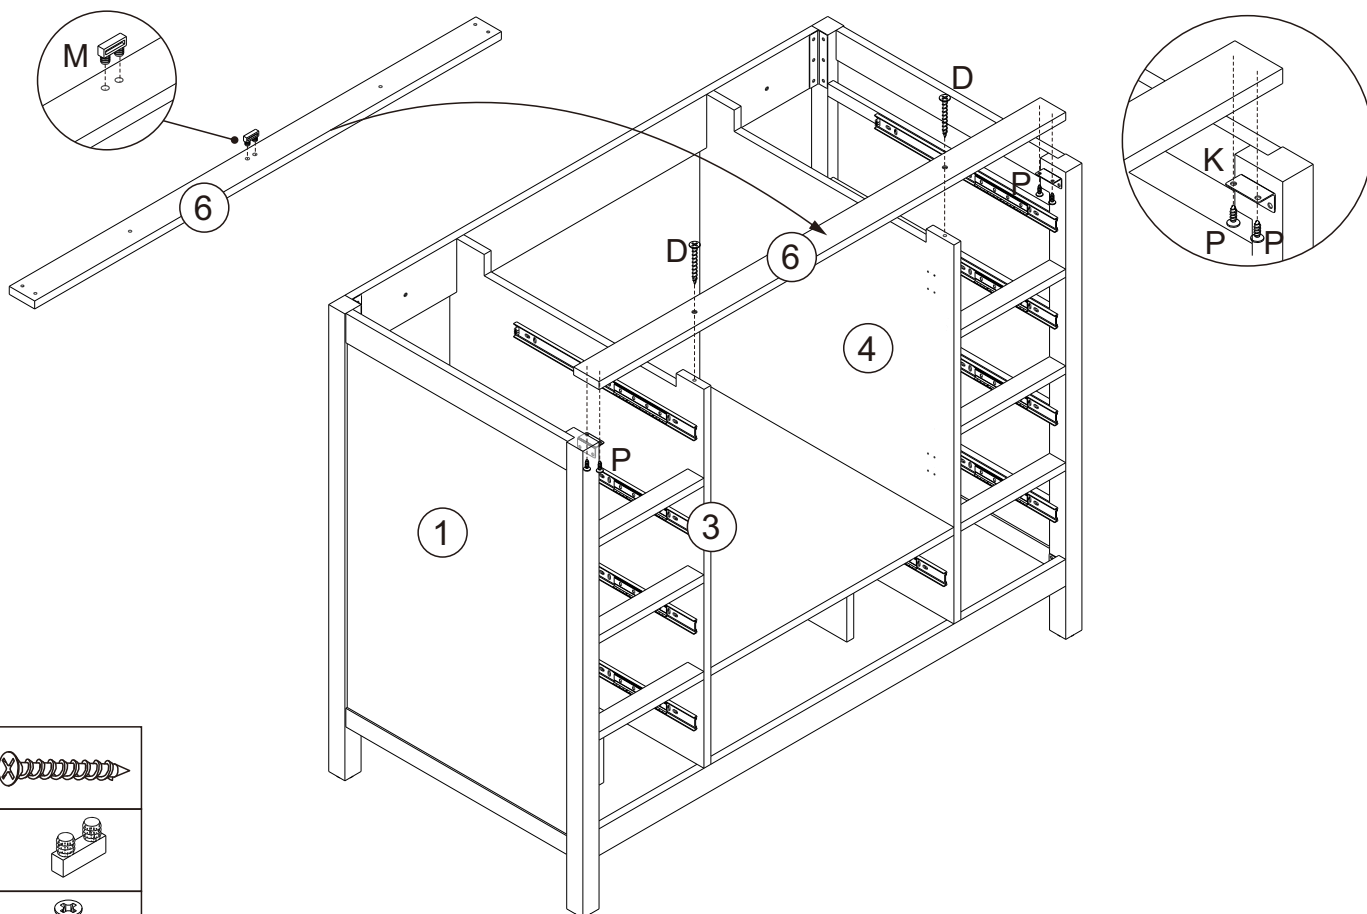 


Dx2	
Mx1	
Px4	

 
12

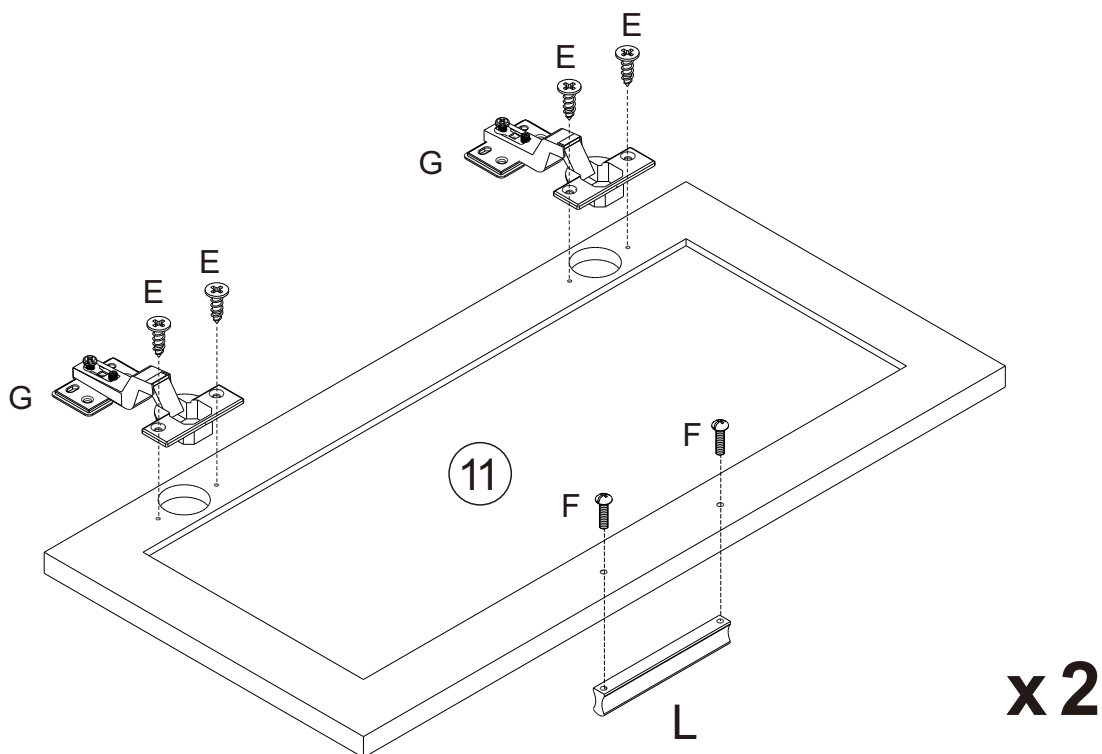

Ex8		Fx4	
Gx4		Lx2	

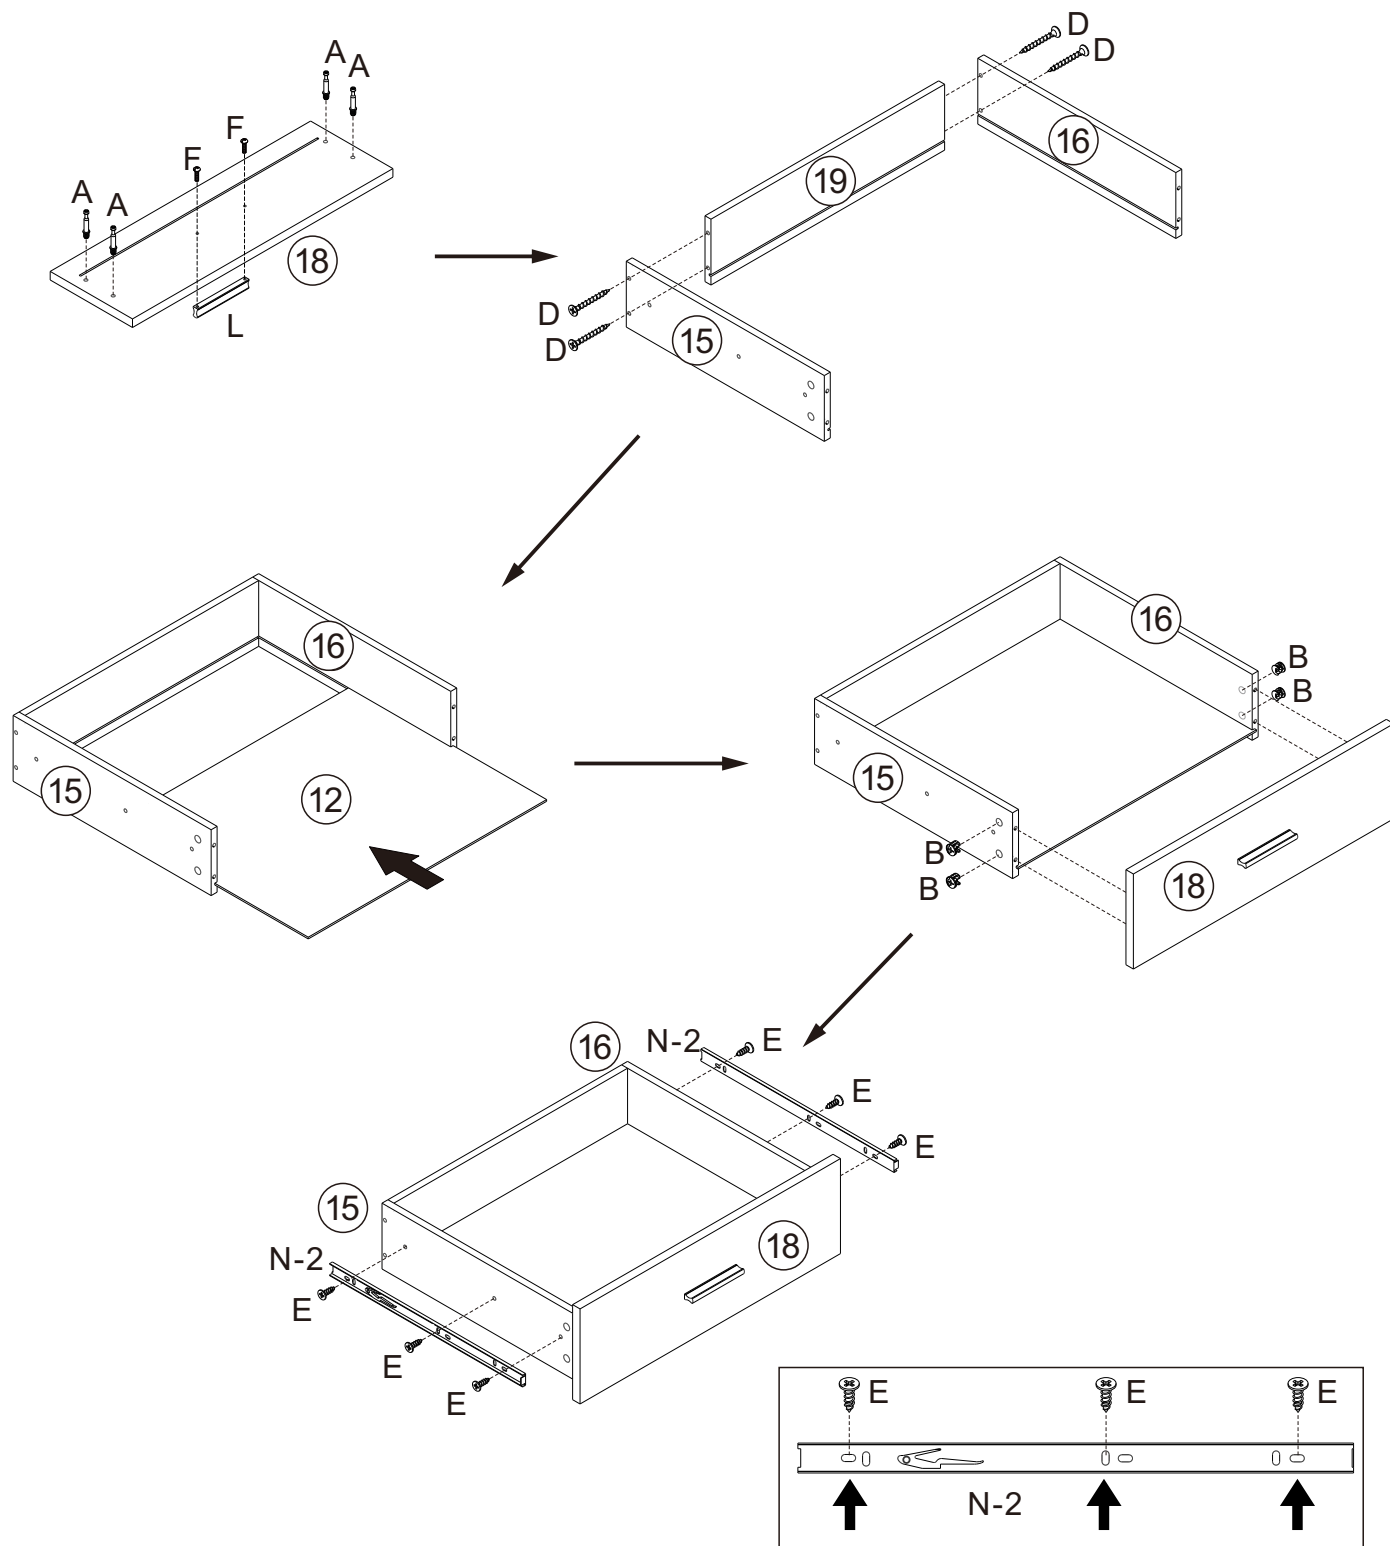 


Ax4		Bx4		Dx4	
Ex6		Nx2		Lx1	
				Fx2	


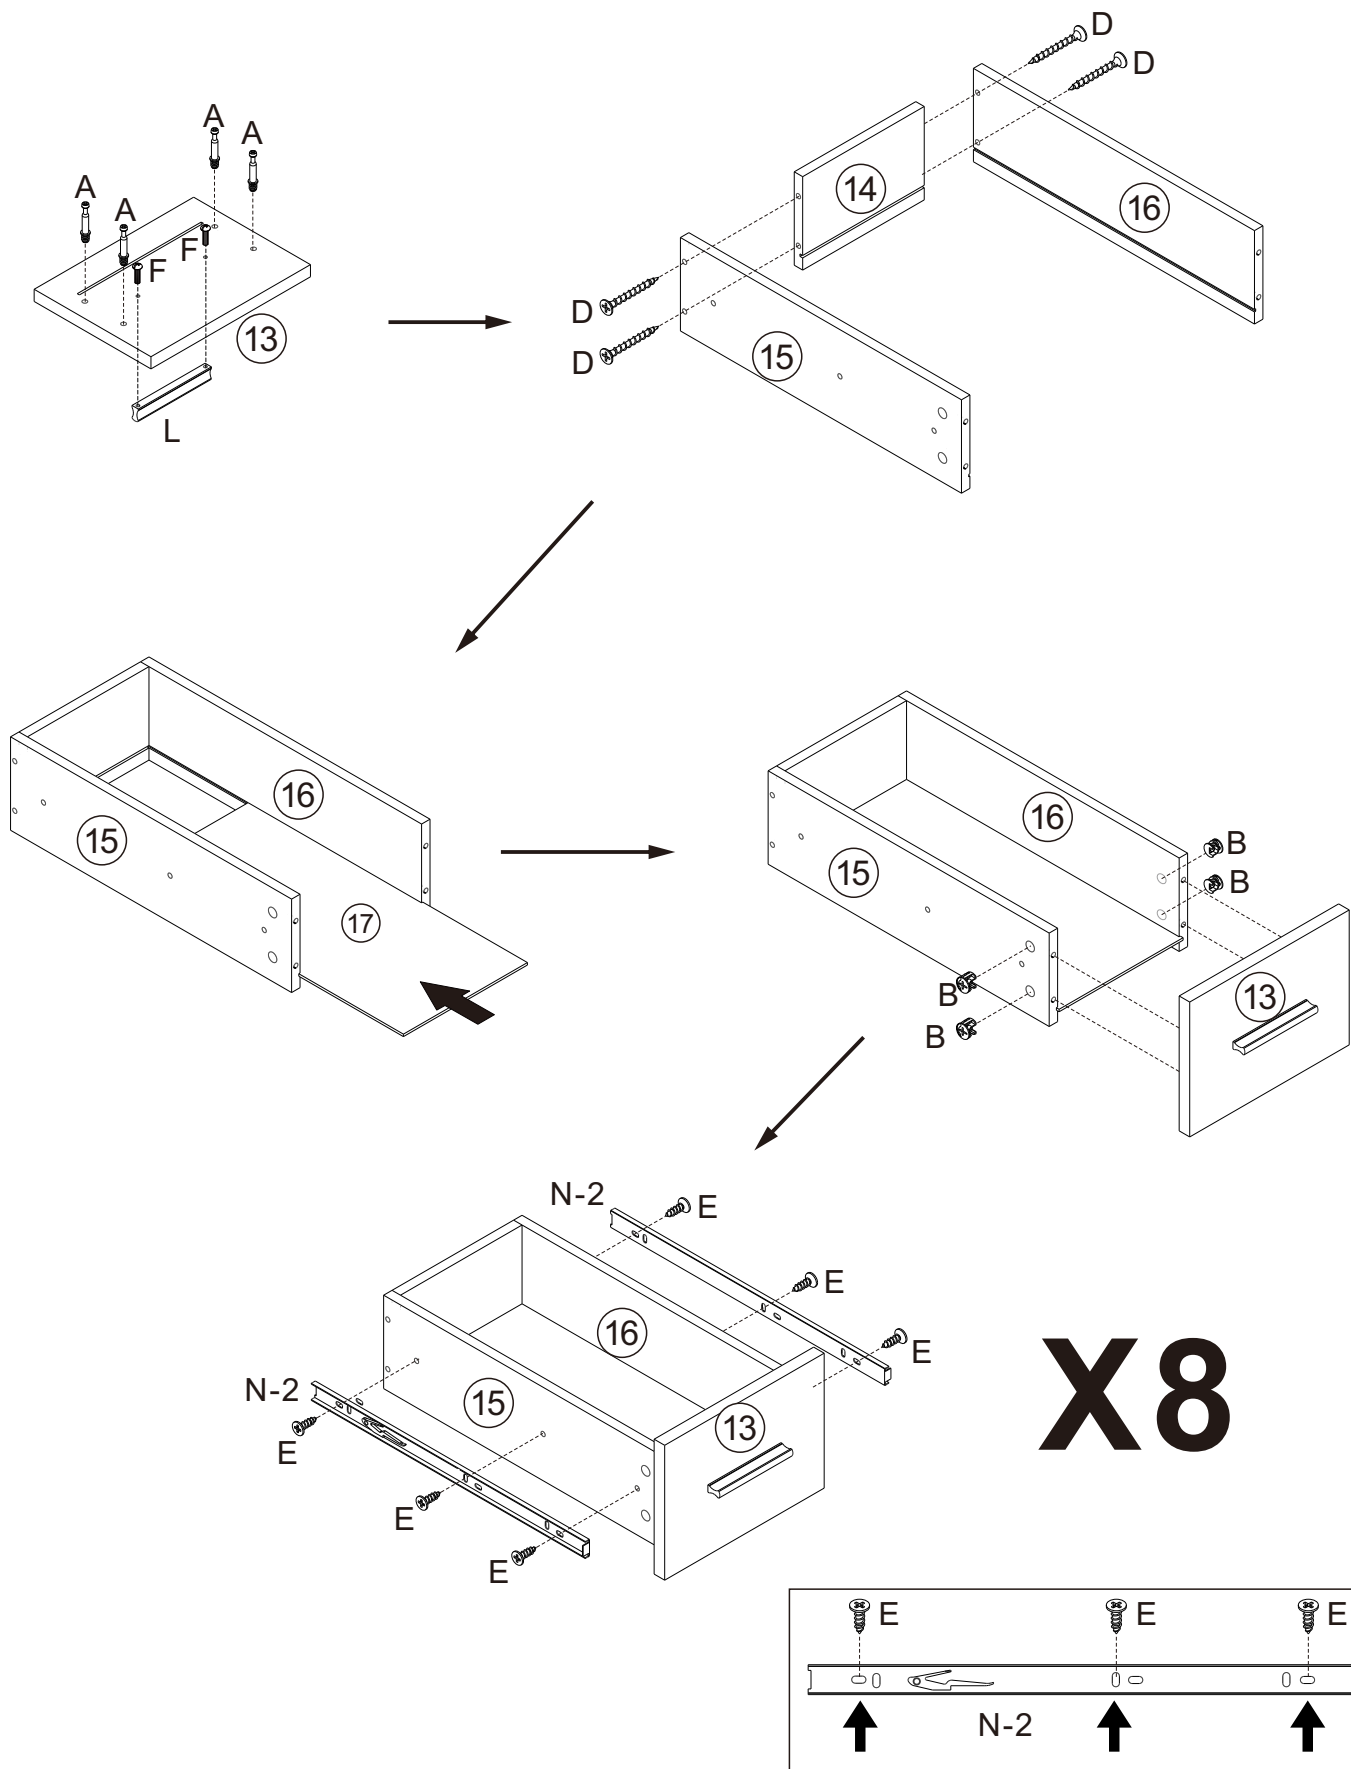 


Ax32		Bx32		Dx32			
Ex48		Nx16		Lx8		Fx16	

 15


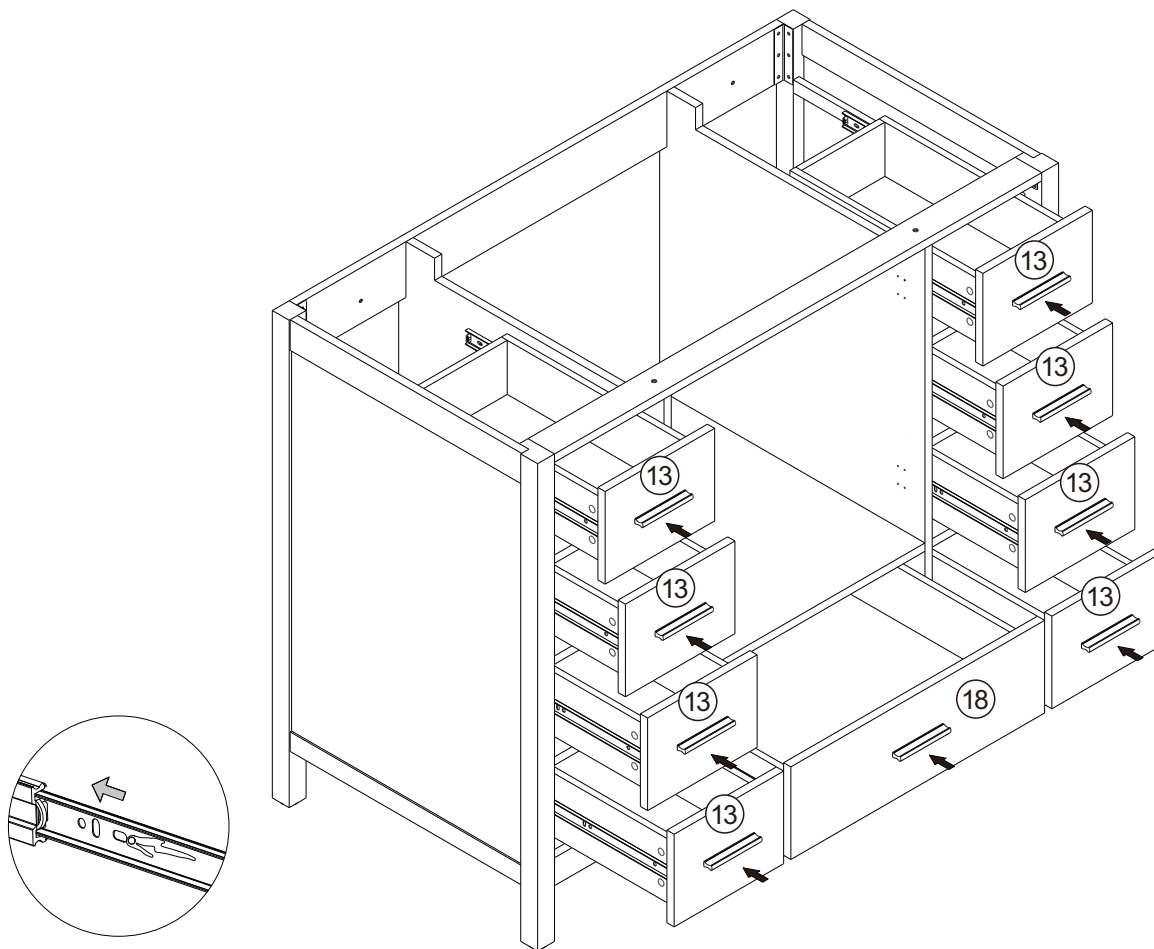


16

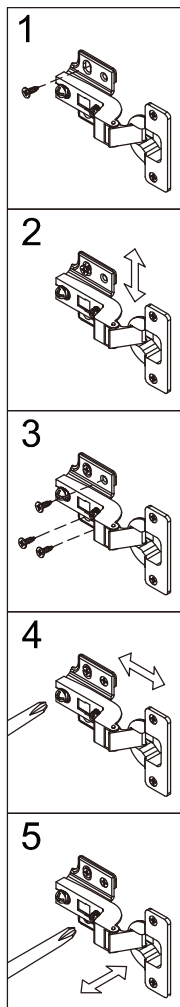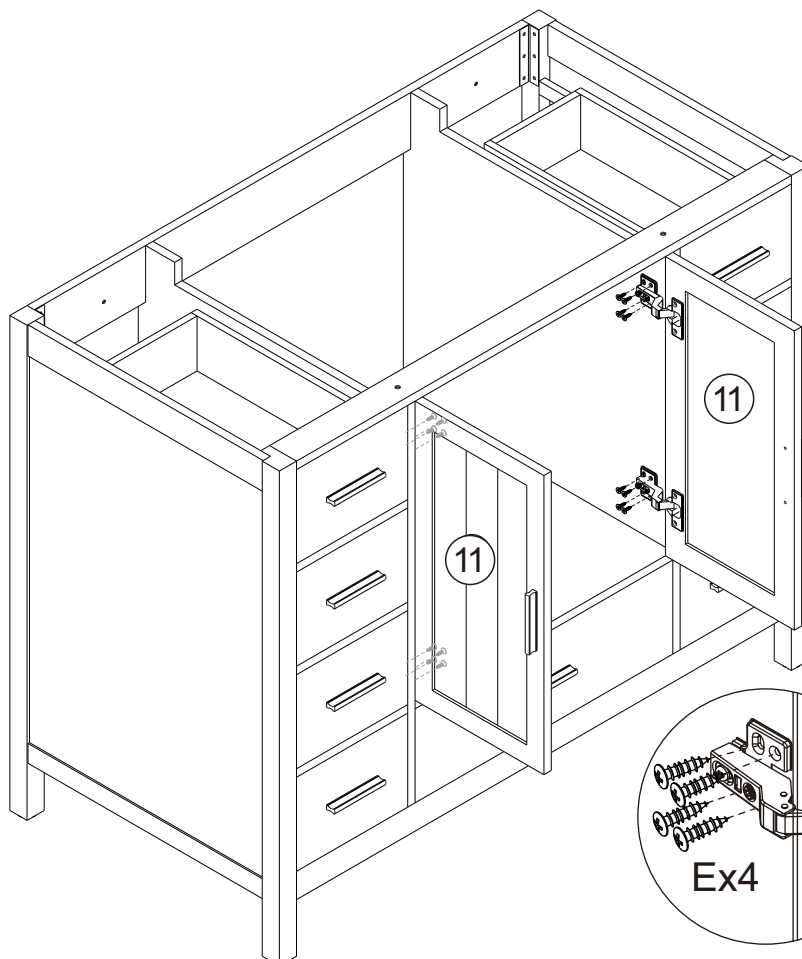  

Ex16



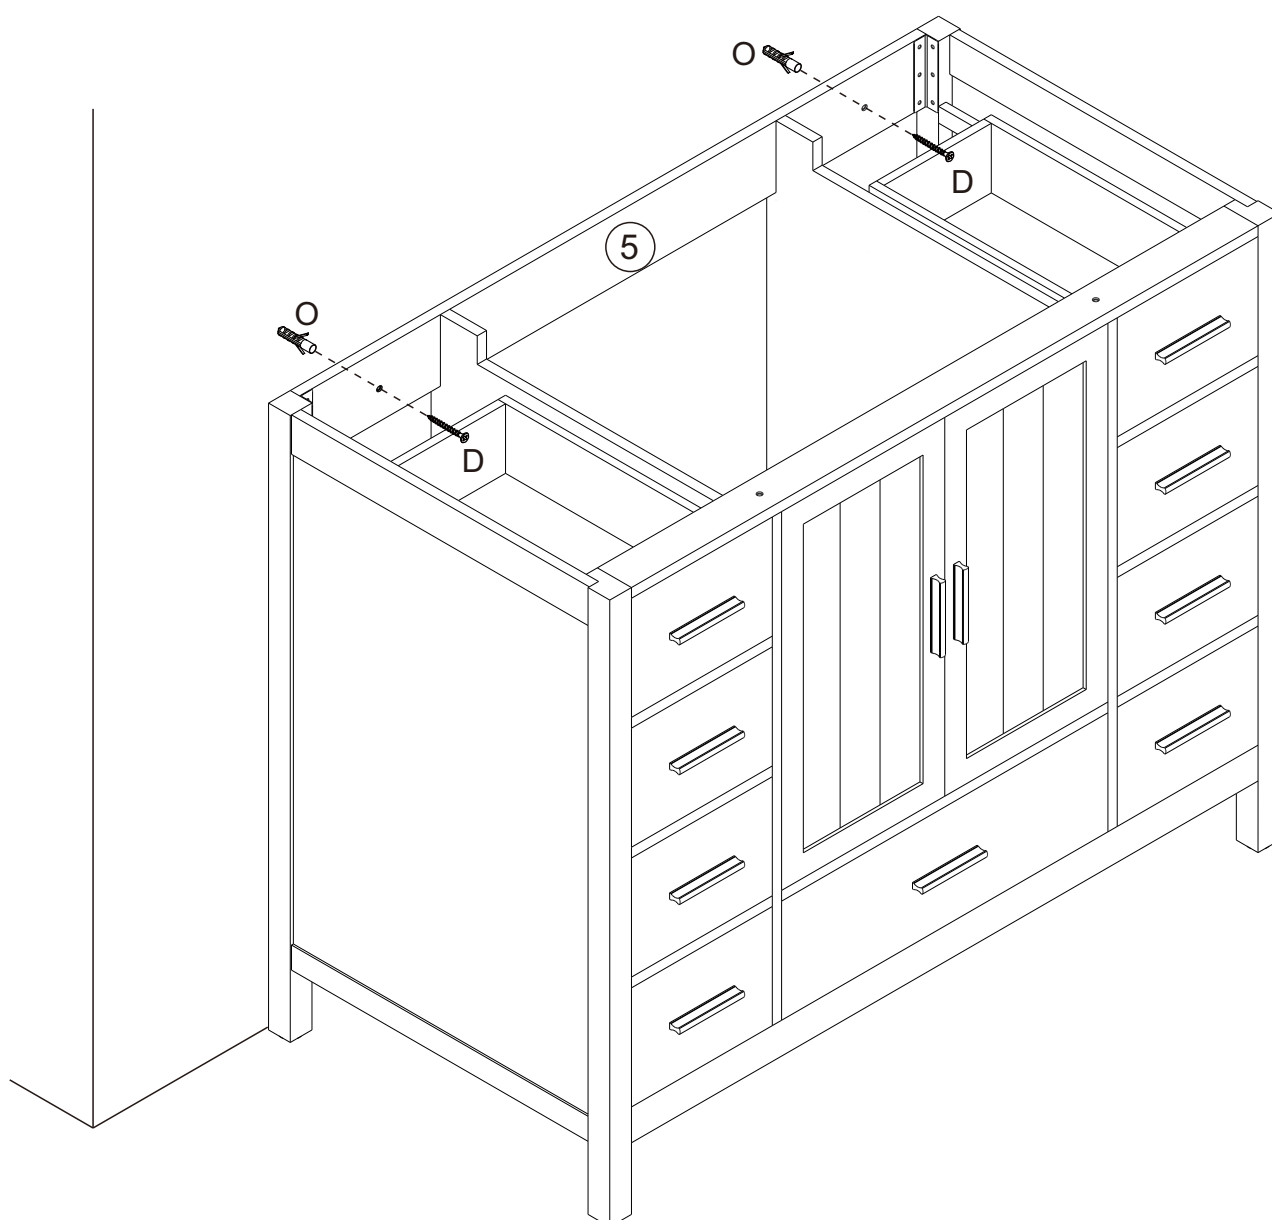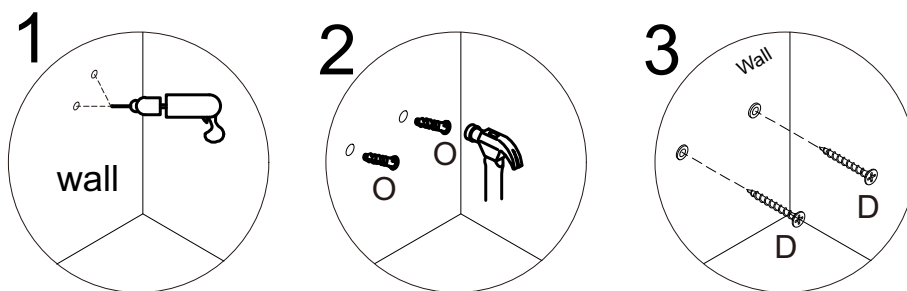  

Dx2 

Ox2 