

# K-MOJO

BLUESTEEL

## USER GUIDE



**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE**

KMIM 10064 26-11-2021 V1 | © 2022 SQ Professional Ltd



**Due to sharp parts and potential hazards, this appliance should not be used by children under 16 years old unless supervised by an adult.**

**Please keep the appliance and mains cable out of the reach of children.**

### **This is not a toy!**

**If used by persons with reduced physical, sensory or mental capabilities, instruction and supervision must be given to understand the use of the appliance and the hazards involved.**

**Always disconnect the appliance from the power socket if it is left unattended and before assembling, disassembling or cleaning.**

**If the mains cable is damaged, it must be replaced by qualified persons in order to avoid any hazards.**

## FEATURES

- 1 Measuring cup
- 2 Lid
- 3 Glass glass blending jug
- 4 Motor unit
- 5 Control panel
- 6 Speed selector
- 7 **PULSE** mode button
- 8 **SMOOTHIE** button
- 9 **ICE CRUSH** button
- 10 Assembled blender
- 11 Grinding mill cover
- 12 Grinding mill base
- 13 Assembled grinding mill
- 14 Assembled grinder



## IMPORTANT SAFEGUARDS

Do not use the appliance in a bathroom, near water, or outdoors. Do not operate the appliance with wet hands or bare feet.

Do not immerse any of the parts (appliance, mains cable, plug) in water or other liquids during use to protect from fire, electric shock and personal injury.

Do not use the appliance if it is damaged or malfunctioning.

Do not leave the appliance unattended whilst in use. Use and store it out of reach of children.

Keep hands and utensils away from the moving parts while juicing to reduce the risk of severe injury to persons or damage to the juicer.

- This appliance is intended for household use only.
- Do not use this appliance for any other purpose than its intended use.
- Ensure that the appliance is always placed on a firm and flat surface, away from any edges of the worktop. Do not place the appliance onto a metal tray or metal surface whilst in use. Do not place the appliance on, or near, a hot gas or electric burner or in a heated oven.
- Keep the appliance and mains cable away from the edges of worktops and out of reach of children. Route the mains cable so it does not overhang, and cannot be tripped over or caught.
- Do not let the mains cable run across an open space, such as between a low power socket and a table, or across any hot area, such as a cooker. Heat may damage the mains cable.
- The connections on both sides of the mains cable (the appliance and the power socket) should never be strained. If the mains cable is damaged it must be

replaced by a qualified person or service to avoid any hazards. This appliance must not be operated by an external timer or a remote control system.

- The base of the glass blending jug **3** should always be kept dry. Before washing and drying disconnect the power supply; ensure that the glass blending jug **3** is completely dry before you reconnect the appliance to power supply.
- Ensure the lid **2** or grinding mill cover **11** are securely in place and the glass blending jug **3** or grinding mill **12** is correctly inserted into the motor unit **4** before operating the appliance. Do not open the lid **2** or grinding mill cover **11** whilst the appliance is running.
- Do not switch on the appliance when it is empty. Ensure there is the at least a minimum amount of liquid or solid ingredients in the glass blending jug **3** or grinding mill **13**.
- Switch off the appliance and unplug from the power socket before changing attachments or approaching parts that move while in use. Unplug the appliance when not in use.
- Ensure that the appliance has come to a complete stop before cleaning and storing away. Keep the attachments, motor unit **4**, mains cable, and plug away from sources of heat. Store in a dry place.
- Use the glass blending jug **3** or grinding mill **12** only with the motor unit **4** supplied (and vice versa) and do not tamper with the connector in any way.
- Keep the attachments, motor unit **4**, mains cable, and plug away from sources of heat. Store in a dry place.
- Read all operating instructions before using the appliance.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

## BEFORE FIRST USE

All parts that come in touch with food are to be thoroughly cleaned before being used for the first time (see the section on Cleaning).

Ensure that the speed selector **6** is in the **OFF** position and plug it into the power socket.

## OPERATING INSTRUCTIONS

- Assemble the blender **10** or grinder **14** and ensure that the speed selector **6** is turned to **OFF**. Remove the lid **2** or the grinding mill cover **11**.
- **BLENDER:** Place the ingredients into the glass blending jug **3** and attach the lid **2** by pressing down firmly. Pour the liquids through the opening in the lid **2** then insert the measuring cup **1** and turn it clockwise until it is locked.
- For best results do not fill the glass glass blending jug **3** above the 1000ml marking, especially if using liquid ingredients.
- **GRINDING MILL:** Turn the grinding mill cover **11** upside down and fill it with ingredients up to the **MAX** mark. Attach the grinding mill base **12** and turn it clockwise until it locks.
- Turn the speed selector **6** to **ON** to switch the appliance on and rotate it clockwise to increase the speed.
- Standard operating period is maximum 2 minutes. After the appliance has been running continuously for 2 minutes turn the speed selector **6** to **OFF** and let it rest for about 10 minutes.

## SPEED SETTINGS

- **ON (stand-by mode)** - appliance is switched on and in stand-by mode. The light on the speed selector **6** is flashing.
- **MIN (low speed)** - for light blending of soft or liquid ingredients
- **MAX (high speed)** - for heavy blending with solid ingredients and thicker liquids.

## BUTTON FUNCTIONS

Before using the function buttons (**PULSE 7**, **SMOOTHIE 8**, **ICE CRUSH 9**) ensure the speed selector **6** is in the **OFF** position otherwise the buttons will not work.

To use the button functions first turn the speed selector **6** to **ON**, ensure the light is flashing, then press the desired button.

- **PULSE 7 (single short burst of very high speed)** - for rough blending of solid ingredients and thicker liquids grinding and short, powerful pulse movements.
- **SMOOTHIE 8** - pre-set speed and duration for perfect smoothie effect and puréeing. The appliance automatically stops after the processing time has elapsed.
- **ICE CRUSH 9** - automated function for crushing ice cubes. The appliance automatically stops after the processing time has elapsed.

## USEFUL TIPS

- If the speed selector **6** is not in the **OFF** position when power is supplied to the appliance, it will not function. Return the speed selector **6** to the **OFF** position before selecting a different speed.
- To achieve the best results when puréeing solid ingredients, place small portions into the glass blending jug **3** one by one instead of placing a large quantity all at once. Do not overload.
- When processing solid ingredients, cut them into small pieces (15mm) first.
- When mixing solid ingredients start off by adding a small amount of liquid. Gradually add more of the liquid through the opening in the lid **2**.
- If blending warm liquids or ingredients always make sure that they are cooled down before blending. Do not fill the glass blending jug **3** over 1000ml / 4 cups mark.
- Always stabilise the glass blending jug **3** or grinding mill **13** by placing your hand on top of the lid **2** or grinding mill cover **11** when operating the appliance.

- For stirring solids or very thick liquid ingredients use the blender **10** in **PULSE 7** mode to prevent the blades from becoming stuck.

## CLEANING

Never immerse the motor unit **4** in water.

- Wipe the motor unit **4** clean with a damp cloth and dry immediately with a soft cloth to avoid scratches and water marks on the surface.

### LIGHT CLEANING

- **BLENDER:** empty the glass blending jug **3** then fill it half way with tepid water and a mild detergent. Place the glass blending jug **3** on the motor unit **4**, turn the speed selector **6** to **OFF** position, then press the **PULSE** mode button **7** several times. Empty the glass blending jug **3**, rinse until clean, then dry.
- **GRINDING MILL:** to clean the grinding mill **13**, detach the grinding mill cover **11** and wipe inside it with a damp cloth or sponge, using a tepid water with some washing up liquid, if necessary. Remove any stuck food remains from the blades with a small dish washing brush and rinse. Dry immediately with a soft cloth.

### THOROUGH CLEANING

Be careful when handling the blade inside the jug. The blades are very sharp.

- Ensure that the grinding mill **13** or glass blending jug **3** is completely empty then remove any stuck food around the blades using a small dish washing brush.
- All parts except the motor unit **4** can be washed by either by hand or in a dishwasher. Do not use harsh scourers and aggressive or abrasive detergents.
- Always ensure that the connectors on the bottom of the glass blending jug **3**, grinding mill base **12** and on top of the motor unit **4** are completely dry before attaching them on the motor unit **4**.

## TROUBLESHOOTING

### PROBLEM

The appliance does not work.

### POSSIBLE CAUSES

- 1 The appliance is not plugged in correctly.  
**SOLUTION:** ensure the power plug is plugged in properly.
- 2 Glass blending jug **3** is not properly attached.  
**SOLUTION:** remove the glass blending jug **3** and attach it according to assembly instructions.
- 3 The speed selector **6** is not turned to appropriate speed.  
**SOLUTION:** plug the appliance in and turn the speed selector **6** clockwise to select the desired speed.

## SPECIFICATIONS

|                              |              |
|------------------------------|--------------|
| Rated Voltage:               | AC 220-240V  |
| Frequency:                   | 50/60Hz      |
| Rated Power:                 | 1200W        |
| Glass blending jug capacity: | 1.5L         |
| Grinding mill capacity:      | 100g approx. |


## ELECTRICAL

The product must not be used without the fuse cover fitted.

Should the power cable or the power plug become damaged, arrange for these to be replaced by Customer Service or a qualified person before continuing to use the appliance. The appliance is fitted with a 13A fuse (BS1362) in a 13A plug (BS1363).

## ENVIRONMENTAL

To reduce environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with the symbol below must not be disposed of with unsorted municipal waste. Please repair, reuse or recycle appropriately.

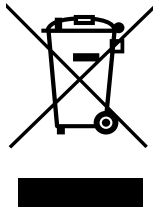

## SERVICE

The product is not user-serviceable. If it is not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it is still not working, consult your retailer.

If that does not solve the problem ring Customer Service – they may be able to offer technical advice. Please have the Model Number to hand, as they will not be able to help you without it.

If you are advised to return the product to us, pack it carefully, include a note with your name, address, day phone number, and description of the problem.

If under a guarantee, say where and when it was purchased and include a valid VAT receipt. Send it to SQ Professional Ltd.



## GUARANTEE

The guarantee for this product is covered by SQ Professional Limited. Any faults with this product arising through a manufacturer defect will be covered for 1 year from the date of purchase, subject to a valid VAT receipt being presented. This does not include faults or damage caused by misuse of general wear and tear. SQ Professional Ltd will not be held liable for general wear and tear, or eventual damages to persons, animals or objects caused by incorrect installation or deriving from improper, erroneous or unreasonable use.

Please contact customer services on **01992 716 070** or send an e-mail to **info@sqprofessional.com**, Monday to Friday from 09:30 - 17:30.

This does not affect your statutory rights.



All images are for illustration purposes only. Actual products may vary.

# K-MOJO

**BLUESTEEL**



Voltage Business Centre, Units 1 - 3  
6 Mollison Avenue, Enfield, EN3 7XQ

T: 01992 716 070 E: info@sqprofessional.com

[www.sqprofessional.com](http://www.sqprofessional.com)